nRF52820

Product Specification

v1.4



Feature list

Features:

- Bluetooth 5.1, IEEE 802.15.4-2006, 2.4 GHz transceiver
 - -95 dBm sensitivity in 1 Mbps Bluetooth Low Energy mode
 - -103 dBm sensitivity in 125 kbps *Bluetooth* ** Low Energy mode (long range)
 - -20 to +8 dBm TX power, configurable in 4 dB steps
 - On-air compatible with nRF52, nRF51, nRF24L, and nRF24AP Series
 - · Supported data rates:
 - Bluetooth

 5.1 2 Mbps, 1 Mbps, 500 kbps, and 125 kbps
 - IEEE 802.15.4-2006 250 kbps
 - Proprietary 2.4 GHz 2 Mbps, 1 Mbps
 - Angle-of-arrival (AoA) and angle-of-departure (AoD) direction finding using
 Bluetoath
 - Single-ended antenna output (on-chip balun)
 - 128-bit AES/ECB/CCM/AAR co-processor (on-the-fly packet encryption)
 - 4.9 mA peak current in TX (0 dBm)
 - 4.7 mA peak current in RX
 - RSSI (1 dB resolution)
- Arm [®] Cortex [®]-M4 32-bit processor, 64 MHz
 - 144 EEMBC CoreMark score running from flash memory
 - 33 μA/MHz running CoreMark from flash memory
 - 33 μA/MHz running CoreMark from RAM
 - Serial wire debug (SWD)
- Flexible power management
 - 1.7 V to 5.5 V supply voltage range
 - On-chip DC/DC and LDO regulators with automated low current modes
 - Automated peripheral power management
 - Fast wake-up using 64 MHz internal oscillator
 - 0.3 μ A at 3 V in System OFF mode, no RAM retention
 - 1.2 μA at 3 V in System ON mode, no RAM retention, wake on RTC

- 256 kB flash and 32 kB RAM
- Advanced on-chip interfaces
 - USB 2.0 full speed (12 Mbps) controller
 - Programmable peripheral interconnect (PPI)
 - 18 general purpose I/O pins
 - EasyDMA automated data transfer between memory and peripherals
- Nordic SoftDevice ready with support for concurrent multiprotocol
- 64 level comparator
- Temperature sensor
- 4x 32-bit timer with Counter mode
- Up to 2x SPI master/slave with EasyDMA
- Up to 2x I²C compatible two-wire master/slave
- UART (CTS/RTS) with EasyDMA
- Quadrature decoder (QDEC)
- 2x real-time counter (RTC)
- Single crystal operation
- Operating temperature from -40 to 105 °C
- Package variants
 - QFN40 package, 5 x 5 mm
 - WLCSP package, 2.531 x 2.531 mm

Applications:

- Advanced computer peripherals and I/O devices
 - Mouse
 - Keyboard
 - Multi-touch trackpad

- Internet of things (IoT)
 - Smart home sensors and controllers
 - Industrial IoT sensors and controllers
- Interactive entertainment devices
 - Remote controls
 - Gaming controllers



Contents

	Feature list.	. ii
1	Revision history.	9
2	About this document.	10
	2.1 Document status	10
		10
	2.2 Peripheral chapters	10
	2.3 Register tables	10
	2.3.1 Fields and values	
	2.3.2 Permissions	
	2.4 Registers	
	2.4.1 DUMMY	11
3	Block diagram.	13
4	Core components.	14
	4.1 CPU	. 14
	4.1.1 CPU and support module configuration	14
	4.1.2 Electrical specification	15
	4.1.2 Electrical specification	
	4.2.1 RAM - Random access memory	16
	4.2.2 Flash - Non-volatile memory	16
	4.2.3 Memory map	
	4.2.4 Instantiation	18
	4.3 NVMC — Non-volatile memory controller	19
	4.3.1 Writing to flash	19
	4.3.2 Erasing a page in flash	19
	4.3.3 Writing to user information configuration registers (UICR)	19
	4.3.4 Erasing user information configuration registers (UICR)	
	4.3.5 Erase all	20
	4.3.6 Access port protection behavior	20
	4.3.7 NVMC power failure protection	20
	4.3.8 Partial erase of a page in flash	
	4.3.9 Registers	
	4.3.10 Electrical specification	
	4.4 FICR — Factory information configuration registers	24
	4.4.1 Registers	
	4.5 UICR — User information configuration registers	33
	4.5.1 Registers	33
	4.6 EasyDMA	37
	4.6.1 EasyDMA error handling	38
	4.6.2 EasyDMA array list	
	4.7 AHB multilayer	39
	4.8 Debug	
	4.8.1 DAP - Debug access port	40
	4.8.2 Access port protection	41
	4.8.3 CTRL-AP - Control access port	43
	4.8.4 Debug Interface mode	45
	4.8.5 Real-time debug	45



5	Power and clock management.	. 47
	5.1 Power management unit (PMU)	. 47
	5.2 Current consumption	
	5.2.1 Electrical specification	
	5.3 POWER — Power supply	
	5.3.1 Main supply	
	5.3.2 USB supply	
	5.3.3 System OFF mode	
	5.3.4 System ON mode	
	5.3.5 RAM power control	
	5.3.6 Reset	
	5.3.7 Registers	
	5.3.8 Electrical specification	
	5.4 CLOCK — Clock control	
	5.4.1 HFCLK controller	
	5.4.2 LFCLK controller	
	5.4.3 Registers	
	5.4.4 Electrical specification	
	·	
6	Peripherals	. 88
	6.1 Peripheral interface	
	6.1.1 Peripheral ID	
	6.1.2 Peripherals with shared ID	
	6.1.3 Peripheral registers	
	6.1.4 Bit set and clear	
	6.1.5 Tasks	
	6.1.6 Events	
	6.1.7 Shortcuts	
	6.1.8 Interrupts	
	6.2 AAR — Accelerated address resolver	
	6.2.1 EasyDMA	
	6.2.2 Resolving a resolvable address	
	6.2.3 Example	
	6.2.4 IRK data structure	
	6.2.5 Registers	
	6.2.6 Electrical specification	
	6.3 ACL — Access control lists	
	6.3.1 Registers	
	6.4 CCM — AES CCM mode encryption	
	6.4.1 Keystream generation	
	6.4.2 Encryption	101
	6.4.3 Decryption	101
	6.4.4 AES CCM and RADIO concurrent operation	
	6.4.5 Encrypting packets on-the-fly in radio transmit mode	
	6.4.6 Decrypting packets on-the-fly in RADIO receive mode	. 103
	6.4.7 CCM data structure	. 104
	6.4.8 EasyDMA and ERROR event	105
	6.4.9 Registers	106
	6.4.10 Electrical specification	
	6.5 COMP — Comparator	. 112
	6.5.1 Differential mode	. 114
	6.5.2 Single-ended mode	
	6.5.3 Registers	
	6.5.4 Electrical specification	. 123



4463_156 v1.4 iv

6.6 ECB — AES electronic codebook mode encryption	124
6.6.1 Shared resources	124
6.6.2 EasyDMA	124
6.6.3 ECB data structure	124
6.6.4 Registers	125
	127
	127
	128
	130
	130
	131
	133
	137
	138
	138
	139
	139
1 6	140
	144
	144
	145
	146
	151
	151
	152
	152
	153
	153
	154
	154
8	165
!	
	165
8	166167
S Comments of the comments of	
9	167
	168
	168
•	169
	171
	172
	172
	173
	173
0	174
•	179
,	188
6	189
· ·	224
8	230
	230
·	231
	231
·	233
6.14 RTC — Real-time counter	233




4463_156 v1.4 V

6.14.1 Clock source	 234
6.14.2 Resolution versus overflow and the PRESCALER	 234
6.14.3 COUNTER register	 235
6.14.4 Overflow features	 235
6.14.5 TICK event	 235
6.14.6 Event control feature	 236
6.14.7 Compare feature	236
6.14.8 TASK and EVENT jitter/delay	238
6.14.9 Reading the COUNTER register	240
6.14.10 Registers	241
6.14.11 Electrical specification	246
6.15 SPI — Serial peripheral interface master	246
6.15.1 Functional description	246
6.15.2 Registers	249
6.15.3 Electrical specification	253
6.16 SPIM — Serial peripheral interface master with EasyDMA	254
6.16.1 SPI master transaction sequence	254
6.16.2 Pin configuration	255
6.16.3 EasyDMA	
6.16.4 Low power	
6.16.5 Registers	
6.16.6 Electrical specification	
6.17 SPIS — Serial peripheral interface slave with EasyDMA	
6.17.1 Shared resources	267
6.17.2 EasyDMA	
6.17.3 SPI slave operation	268
6.17.4 Pin configuration	270
6.17.5 Registers	270
6.17.6 Electrical specification	281
6.18 SWI — Software interrupts	283
6.18.1 Registers	
6.19 TEMP — Temperature sensor	
6.19.1 Registers	
6.19.2 Electrical specification	289
6.20 TWI — I ² C compatible two-wire interface	 290
6.20.1 Functional description	 290
6.20.2 Master mode pin configuration	 290
6.20.3 Shared resources	 291
6.20.4 Master write sequence	 291
6.20.5 Master read sequence	 292
6.20.6 Master repeated start sequence	 293
6.20.7 Low power	 294
6.20.8 Registers	 294
6.20.9 Electrical specification	 301
6.21 TIMER — Timer/counter	302
6.21.1 Capture	304
6.21.2 Compare	304
6.21.3 Task delays	304
6.21.4 Task priority	304
6.21.5 Registers	304
6.21.6 Electrical specification	309
6.22 TWIM -1^2 C compatible two-wire interface master with EasyDMA	309
6.22.1 EasyDMA	311
6.22.2 Master write sequence	
OLELL ITIASICI WILL SEGUCIOCI I I I I I I I I I I I I I I I I I	 -1



4463_156 v1.4 vi

6.22.3 Master read sequence	 312
6.22.4 Master repeated start sequence	 313
6.22.5 Low power	 314
6.22.6 Master mode pin configuration	
6.22.7 Registers	 314
6.22.8 Electrical specification	 325
6.22.9 Pullup resistor	
6.23 TWIS -1^2 C compatible two-wire interface slave with EasyDMA	
6.23.1 EasyDMA	
6.23.2 TWI slave responding to a read command	
6.23.3 TWI slave responding to a write command	
6.23.4 Master repeated start sequence	
6.23.5 Terminating an ongoing TWI transaction	
6.23.6 Low power	
6.23.7 Slave mode pin configuration	
6.23.8 Registers	
6.23.9 Electrical specification	
6.24 UART — Universal asynchronous receiver/transmitter	343
6.24.1 Functional description	343
	343
6.24.2 Pin configuration	344
6.24.3 Shared resources	
6.24.4 Transmission	344
6.24.5 Reception	345
6.24.6 Suspending the UART	345
6.24.7 Error conditions	
6.24.8 Using the UART without flow control	346
6.24.9 Parity and stop bit configuration	346
6.24.10 Registers	346
6.24.11 Electrical specification	
6.25 UARTE — Universal asynchronous receiver/transmitter with EasyDMA	
6.25.1 EasyDMA	
6.25.2 Transmission	
6.25.3 Reception	
6.25.4 Error conditions	
6.25.5 Using the UARTE without flow control	 359
6.25.6 Parity and stop bit configuration	 359
6.25.7 Low power	 359
6.25.8 Pin configuration	 360
6.25.9 Registers	 360
6.25.10 Electrical specification	 373
6.26 USBD — Universal serial bus device	 373
6.26.1 USB device states	 374
6.26.2 USB terminology	 375
6.26.3 USB pins	 376
6.26.4 USBD power-up sequence	376
6.26.5 USB pull-up	377
6.26.6 USB reset	377
6.26.7 USB suspend and resume	378
6.26.8 EasyDMA	379
6.26.9 Control transfers	380
6.26.10 Bulk and interrupt transactions	383
6.26.11 Isochronous transactions	385
6.26.12 USB register access limitations	388
6.26.13 Registers	388
0.20.20 1.66.00000	 500



	6.26.14 Electrical specification	. 413
	6.27 WDT — Watchdog timer	413
	6.27.1 Reload criteria	414
	6.27.2 Temporarily pausing the watchdog	414
	6.27.3 Watchdog reset	414
	6.27.4 Registers	414
	6.27.5 Electrical specification	417
7	Hardware and layout.	418
	7.1 Pin assignments	418
	7.1.1 QFN40 pin assignments	418
	7.1.2 WLCSP ball assignments	420
	7.2 Mechanical specifications	422
	7.2.1 QFN40 5 x 5 mm package	422
	7.2.2 WLCSP 2.531 x 2.531 mm package	423
	7.3 Reference circuitry	423
	7.3.1 Circuit configuration no. 1 for QDAA QFN40	
	7.3.2 Circuit configuration no. 2 for QDAA QFN40	
	7.3.3 Circuit configuration no. 3 for QDAA QFN40	. 428
	7.3.4 Circuit configuration no. 4 for QDAA QFN40	. 430
	7.3.5 Circuit configuration no. 1 for CFAA WLCSP	432
	7.3.6 Circuit configuration no. 2 for CFAA WLCSP	434
	7.3.7 Circuit configuration no. 3 for CFAA WLCSP	436
	7.3.8 Circuit configuration no. 4 for CFAA WLCSP	438
	7.3.9 PCB guidelines	440
	7.3.10 PCB layout example	441
	7.3.11 PMIC support	. 442
	7.4 Package thermal characteristics	443
8	Recommended operating conditions.	444
	8.1 Extended Operating Temperature	444
	8.2 WLCSP light sensitivity	444
9	Absolute maximum ratings.	445
10	Ordering information.	446
	10.1 Device marking	446
	10.2 Box labels	446
	10.3 Order code	447
	10.4 Code ranges and values	448
	10.5 Product options	449
11	Legal notices.	451



4463_156 v1.4 viii

1 Revision history

Date	Version	Description
December 2023	1.4	The following content has been added or updated:
		Reference circuitry on page 423 - Added PMIC support section.
November 2021	1.3	The following content has been added or updated:
		Ordering information on page 446 - Build codes Cxx not recommended for new designs
September 2021	1.2	The following content has been added or updated:
		 Added information for the WLCSP package variant in the following chapters:
		Absolute maximum ratings on page 445FICR
		Ordering information on page 446
		Reference circuitry on page 423Mechanical specifications on page 422
		Pin assignments on page 418Editorial changes
July 2021	1.1	The following content has been added or updated:
		FICR - Updated package descriptions and
		 INFO.VARIANT device variants Debug on page 40 and UICR - Updated
		access port protection
		POWER - Added parameter R _{SOURCE,VBUSVDDH} and changed the value of parameter
		R _{SOURCE,VBUSVDDH} to 6 Ω • CLOCK - Added parameter V _{AMP,IN,XO,LOW}
		CCM - Added HEADERMASK register
		• RADIO - Added parameter P _{ACP,R, IEEE 802.15.4} , and P _{ACP,A, IEEE 802.15.4}
		SPIM - Removed invalid parameter t _{SPIM,VMO,HS}
		 Pin assignments on page 418 - Added note on DEC5
		Reference circuitry on page 423 - Added note for DEC5 and updated USB serial resistor recommended value
		Ordering information on page 446 - Added new product options and updated box labels
		Editorial changes
June 2020	1.0	First release



2 About this document

This document is organized into chapters that are based on the modules and peripherals available in the IC

2.1 Document status

The document status reflects the level of maturity of the document.

Document name	Description	
Objective Product Specification (OPS)	Applies to document versions up to 1.0. This document contains target specifications for product development.	
Product Specification (PS)	Applies to document versions 1.0 and higher. This document contains final product specifications. Nordic Semiconductor ASA reserves the right to make changes at any time without notice in order to improve design and supply the best possible product.	

Table 1: Defined document names

2.2 Peripheral chapters

Every peripheral has a unique capitalized name or an abbreviation of its name, e.g. TIMER, used for identification and reference. This name is used in chapter headings and references, and it will appear in the ARM® Cortex® Microcontroller Software Interface Standard (CMSIS) hardware abstraction layer to identify the peripheral.

The peripheral instance name, which is different from the peripheral name, is constructed using the peripheral name followed by a numbered postfix, starting with 0, for example, TIMERO. A postfix is normally only used if a peripheral can be instantiated more than once. The peripheral instance name is also used in the CMSIS to identify the peripheral instance.

The chapters describing peripherals may include the following information:

- A detailed functional description of the peripheral
- Register configuration for the peripheral
- Electrical specification tables, containing performance data which apply for the operating conditions described in Recommended operating conditions on page 444.

2.3 Register tables

Individual registers are described using register tables. These tables are built up of two sections. The first three colored rows describe the position and size of the different fields in the register. The following rows describe the fields in more detail.



2.3.1 Fields and values

The **Id** (Field Id) row specifies the bits that belong to the different fields in the register. If a field has enumerated values, then every value will be identified with a unique value id in the **Value Id** column.

A blank space means that the field is reserved and read as undefined, and it also must be written as 0 to secure forward compatibility. If a register is divided into more than one field, a unique field name is specified for each field in the **Field** column. The **Value Id** may be omitted in the single-bit bit fields when values can be substituted with a Boolean type enumerator range, e.g. true/false, disable(d)/enable(d), on/off, and so on.

Values are usually provided as decimal or hexadecimal. Hexadecimal values have a 0x prefix, decimal values have no prefix.

The Value column can be populated in the following ways:

- Individual enumerated values, for example 1, 3, 9.
- Range of values, e.g. [0..4], indicating all values from and including 0 and 4.
- Implicit values. If no values are indicated in the **Value** column, all bit combinations are supported, or alternatively the field's translation and limitations are described in the text instead.

If two or more fields are closely related, the **Value Id**, **Value**, and **Description** may be omitted for all but the first field. Subsequent fields will indicate inheritance with '..'.

A feature marked **Deprecated** should not be used for new designs.

2.3.2 Permissions

Different fields in a register might have different access permissions enforced by hardware.

The access permission for each register field is documented in the Access column in the following ways:

Access	Description	Hardware behavior	
RO	Read-only	Field can only be read. A write will be ignored.	
WO	Write-only	Field can only be written. A read will return an undefined value.	
RW	Read-write	Field can be read and written multiple times.	
W1	Write-once	Field can only be written once per reset. Any subsequent write will be ignored. A read will return an undefined value.	
RW1	Read-write-once	Field can be read multiple times, but only written once per reset. Any subsequent write will be ignored.	

Table 2: Register field permission schemes

2.4 Registers

Register	Offset	Description
DUMMY	0x514	Example of a register controlling a dummy feature

Table 3: Register overview

2.4.1 DUMMY

Address offset: 0x514

Example of a register controlling a dummy feature



D.1	1		24 20 20 20 27 26 2	5 24 22 22 24 20 40 40 47 46 45 44 42 42 44 40 0 0 7 6 5	4 2 2 4 0
BIT	number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5	4 3 2 1 0
ID			DDC	D D C C C B	A A
Res	et 0x00050002		0 0 0 0 0 0	0 0 0 0 0 0 0 1 0 1 0 0 0 0 0 0 0 0 0 0	0 0 0 1 0
ID					
Α	RW FIELD_A			Example of a read-write field with several enumerated	
				values	
		Disabled	0	The example feature is disabled	
		NormalMode	1	The example feature is enabled in normal mode	
		ExtendedMode	2	The example feature is enabled along with extra	
				functionality	
В	RW FIELD_B			Example of a deprecated read-write field Deprecated	
		Disabled	0	The override feature is disabled	
		Enabled	1	The override feature is enabled	
С	RW FIELD_C			Example of a read-write field with a valid range of values	
		ValidRange	[27]	Example of allowed values for this field	
D	RW FIELD_D			Example of a read-write field with no restriction on the	
				values	



3 Block diagram

This block diagram illustrates the overall system. Arrows with white heads indicate signals that share physical pins with other signals.

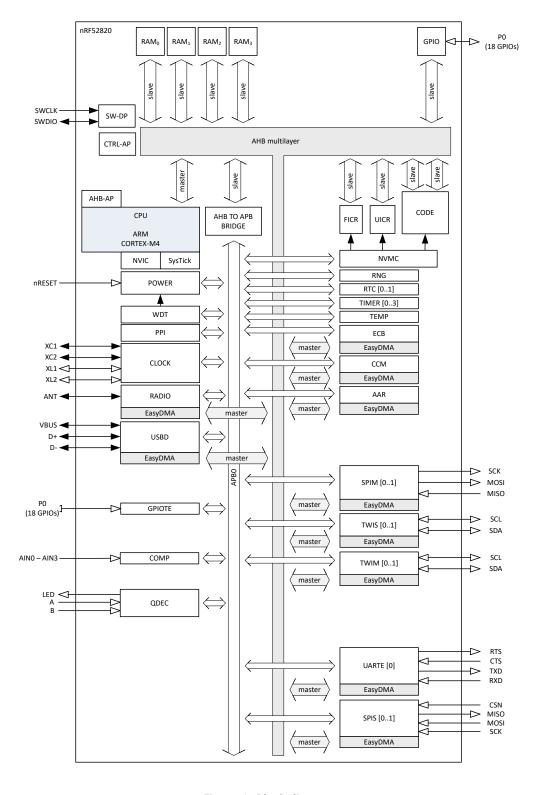


Figure 1: Block diagram



4 Core components

4.1 CPU

The ARM[®] Cortex[®]-M4 processor has a 32-bit instruction set (Thumb[®]-2 technology) that implements a superset of 16- and 32-bit instructions to maximize code density and performance.

This processor implements the following features that enable energy-efficient arithmetic and high-performance signal processing.

- Digital signal processing (DSP) instructions
- Single-cycle multiply and accumulate (MAC) instructions
- · Hardware divide
- 8- and 16-bit single instruction multiple data (SIMD) instructions

The ARM[®] Cortex[®] Microcontroller Software Interface Standard (CMSIS) hardware abstraction layer for the ARM[®] Cortex[®] processor series is implemented and available for the M4 CPU.

Real-time execution is highly deterministic in thread mode, to and from sleep modes, and when handling events at configurable priority levels via the nested vectored interrupt controller (NVIC).

Executing code from flash memory will have a wait state penalty on the nRF52 Series. The Electrical specification on page 15 shows CPU performance parameters including wait states in different modes, CPU current and efficiency, and processing power and efficiency based on the CoreMark[®] benchmark.

The ARM system timer (SysTick) is present on nRF52820. The SysTick's clock will only tick when the CPU is running or when the system is in debug interface mode.

4.1.1 CPU and support module configuration

The ARM® Cortex®-M4 processor has a number of CPU options and support modules implemented on the IC.

Option / Module	Description	Implemented
Core options		
NVIC	Nested vector interrupt controller	48 vectors
PRIORITIES	Priority bits	3
WIC	Wakeup interrupt controller	NO
Endianness	Memory system endianness	Little endian
Bit-banding	Bit banded memory	NO
DWT	Data watchpoint and trace	NO
SysTick	System tick timer	YES
Modules		
MPU	Memory protection unit	YES
FPU	Floating-point unit	NO
DAP	Debug access port	YES
ETM	Embedded trace macrocell	NO
ITM	Instrumentation trace macrocell	NO
TPIU	Trace port interface unit	NO
ETB	Embedded trace buffer	NO
FPB	Flash patch and breakpoint unit	YES
нтм	AMBA [™] AHB trace macrocell	NO



4.1.2 Electrical specification

4.1.2.1 CPU performance

The CPU clock speed is 64 MHz. Current and efficiency data is taken when in System ON and the CPU is executing the CoreMark[®] benchmark. It includes power regulator and clock base currents. All other blocks are IDLE.

Symbol	Description	Min.	Тур.	Max.	Units
W _{FLASH}	CPU wait states, running CoreMark from flash			2	
W_{RAM}	CPU wait states, running CoreMark from RAM			0	
CM_{FLASH}	CoreMark, running CoreMark from flash		144		CoreMark
CM _{FLASH/MHz}	CoreMark per MHz, running CoreMark from flash		2.3		Corel
					MHz
CM _{FLASH/mA}	CoreMark per mA, running CoreMark from flash, DCDC 3V		68.6		CoreMark/
					mA

4.2 Memory

The nRF52820 contains 256 kB of flash memory and 32 kB of RAM that can be used for code and data storage.

The CPU and peripherals with EasyDMA can access memory via the AHB multilayer interconnect. In additon, peripherals are accessed by the CPU via the AHB multilayer interconnect, as shown in the following figure.

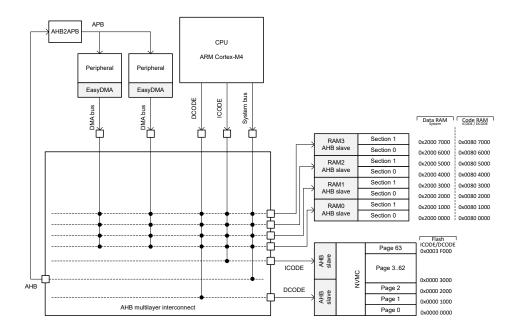


Figure 2: Memory layout



See AHB multilayer on page 39 and EasyDMA on page 37 for more information about the AHB multilayer interconnect and EasyDMA.

The same physical RAM is mapped to both the Data RAM region and the Code RAM region. It is up to the application to partition the RAM within these regions so that one does not corrupt the other.

4.2.1 RAM - Random access memory

The RAM interface is divided into four RAM AHB slaves.

RAM AHB slaves 0 to 3 are connected to two 4 kB RAM sections each, as shown in Memory layout on page 15.

Each RAM section has separate power control for System ON and System OFF mode operation, which is configured via RAM register (see the POWER — Power supply on page 52).

4.2.2 Flash - Non-volatile memory

The CPU can read from flash memory an unlimited number of times, but is restricted in how it writes to flash and the number of writes and erases it can perform.

Writing to flash memory is managed by the non-volatile memory controller (NVMC), see NVMC — Non-volatile memory controller on page 19.

Flash memory is divided into 64 pages of 4 kB each that can be accessed by the CPU via the ICODE and DCODE buses as shown in Memory layout on page 15.

4.2.3 Memory map

The complete memory map for the nRF52820 is shown in the following figure. As described in Memory on page 15, Code RAM and Data RAM are the same physical RAM.



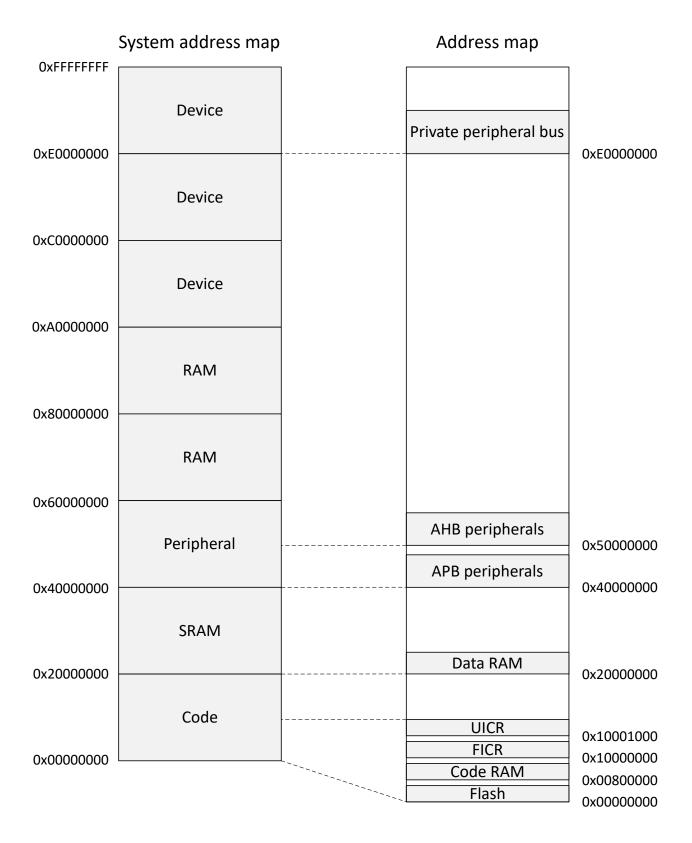


Figure 3: Memory map



4.2.4 Instantiation

ID	Base address	Peripheral	Instance	Description	
0	0x40000000	APPROTECT	APPROTECT	APPROTECT control	
0	0x40000000	CLOCK	CLOCK	Clock control	
0	0x40000000	POWER	POWER	Power control	
0	0x50000000	GPIO	GPIO	General purpose input and output	Deprecated
0	0x50000000	GPIO	PO	General purpose input and output, port 0.	
1	0x40001000	RADIO	RADIO	2.4 GHz radio	
2	0x40002000	UART	UARTO	Universal asynchronous receiver/transmitter	Deprecated
2	0x40002000	UARTE	UARTE0	Universal asynchronous receiver/transmitter with EasyDMA, unit 0	
3	0x40003000	SPI	SPI0	SPI master 0	Deprecated
3	0x40003000	SPIM	SPIM0	SPI master 0	
3	0x40003000	SPIS	SPIS0	SPI slave 0	
3	0x40003000	TWI	TWI0	Two-wire interface master 0	Deprecated
3	0x40003000	TWIM	TWIM0	Two-wire interface master 0	
3	0x40003000	TWIS	TWIS0	Two-wire interface slave 0	
4	0x40004000	SPI	SPI1	SPI master 1	Deprecated
4	0x40004000	SPIM	SPIM1	SPI master 1	
4	0x40004000	SPIS	SPIS1	SPI slave 1	
4	0x40004000	TWI	TWI1	Two-wire interface master 1	Deprecated
4	0x40004000	TWIM	TWIM1	Two-wire interface master 1	
4	0x40004000	TWIS	TWIS1	Two-wire interface slave 1	
6	0x40006000	GPIOTE	GPIOTE	GPIO tasks and events	
8	0x40008000	TIMER	TIMER0	Timer 0	
9	0x40009000	TIMER	TIMER1	Timer 1	
10	0x4000A000	TIMER	TIMER2	Timer 2	
11	0x4000B000	RTC	RTC0	Real-time counter 0	
12	0x4000C000	TEMP	TEMP	Temperature sensor	
13	0x4000D000	RNG	RNG	Random number generator	
14	0x4000E000	ECB	ECB	AES electronic code book (ECB) mode block encryption	
15	0x4000F000	CCM	CCM	AES counter with CBC-MAC (CCM) mode block encryption	
15	0x4000F000	AAR	AAR	Accelerated address resolver	
16	0x40010000	WDT	WDT	Watchdog timer	
17	0x40011000	RTC	RTC1	Real-time counter 1	
18	0x40012000	QDEC	QDEC	Quadrature decoder	
19	0x40013000	COMP	COMP	General purpose comparator	
20	0x40014000	EGU	EGU0	Event generator unit 0	
20	0x40014000	SWI	SWI0	Software interrupt 0	
21	0x40015000	EGU	EGU1	Event generator unit 1	
21	0x40015000	SWI	SWI1	Software interrupt 1	
22	0x40016000	EGU	EGU2	Event generator unit 2	
22	0x40016000	SWI	SWI2	Software interrupt 2	
23	0x40017000	EGU	EGU3	Event generator unit 3	
23	0x40017000	SWI	SWI3	Software interrupt 3	
24	0x40018000	EGU	EGU4	Event generator unit 4	
24	0x40018000	SWI	SWI4	Software interrupt 4	
25	0x40019000	EGU	EGU5	Event generator unit 5	
25	0x40019000	SWI	SWI5	Software interrupt 5	
26	0x4001A000	TIMER	TIMER3	Timer 3	
30	0x4001E000	ACL	ACL	Access control lists	
30	0x4001E000	NVMC	NVMC	Non-volatile memory controller	



ID	Base address	Peripheral	Instance	Description
31	0x4001F000	PPI	PPI	Programmable peripheral interconnect
39	0x40027000	USBD	USBD	Universal serial bus device
N/A	0x10000000	FICR	FICR	Factory information configuration
N/A	0x10001000	UICR	UICR	User information configuration

Table 4: Instantiation table

4.3 NVMC — Non-volatile memory controller

The non-volatile memory controller (NVMC) is used for writing and erasing of the internal flash memory and the UICR (user information configuration registers).

The CONFIG on page 21 is used to enable the NVMC for writing (CONFIG.WEN = Wen) and erasing (CONFIG.WEN = Een).

The CPU must be halted before initiating a NVMC operation from the debug system.

4.3.1 Writing to flash

When write is enabled, full 32-bit words can be written to word-aligned addresses in flash memory.

As illustrated in Memory on page 15, the flash is divided into multiple pages. The same 32-bit word in flash memory can only be written n written n written of times before a page erase must be performed.

The NVMC is only able to write 0 to bits in flash memory that are erased (set to 1). It cannot rewrite a bit back to 1. Only full 32-bit words can be written to flash memory using the NVMC interface. To write less than 32 bits, write the data as a full 32-bit word and set all the bits that should remain unchanged in the word to 1. The restriction on the number of writes (n_{WRITE}) still applies in this case.

Only word-aligned writes are allowed. Byte or half-word-aligned writes will result in a hard fault.

The time it takes to write a word to flash is specified by t_{WRITE} . The CPU is halted if the CPU executes code from the flash while the NVMC is writing to the flash.

NVM writing time can be reduced by using READYNEXT. If this status bit is set to 1, code can perform the next data write to the flash. This write will be buffered and will be taken into account as soon as the ongoing write operation is completed.

4.3.2 Erasing a page in flash

When erase is enabled, the flash memory can be erased page by page using the ERASEPAGE on page 22.

After erasing a flash page, all bits in the page are set to 1. The time it takes to erase a page is specified by $t_{\text{ERASEPAGE}}$. The CPU is halted if the CPU executes code from the flash while the NVMC is writing to the flash

See Partial erase of a page in flash on page 20 for information on dividing the page erase time into shorter chunks.

4.3.3 Writing to user information configuration registers (UICR)

User information configuration registers (UICR) are written in the same way as flash. After UICR has been written, the new UICR configuration will only take effect after a reset.

UICR can only be written n_{WRITE} number of times before an erase must be performed using ERASEUICR on page 23 or ERASEALL on page 22. The time it takes to write a word to UICR is specified by t_{WRITE} . The CPU is halted if the CPU executes code from the flash while the NVMC is writing to the UICR.



4.3.4 Erasing user information configuration registers (UICR)

When erase is enabled, UICR can be erased using the ERASEUICR on page 23.

After erasing UICR, all bits in UICR are set to 1. The time it takes to erase UICR is specified by $t_{\text{ERASEPAGE}}$. The CPU is halted if the CPU executes code from the flash while the NVMC performs the erase operation.

4.3.5 Erase all

When erase is enabled, flash and UICR can be erased completely in one operation by using the ERASEALL on page 22. This operation will not erase the factory information configuration registers (FICR).

The time it takes to perform an ERASEALL command is specified by t_{ERASEALL}. The CPU is halted if the CPU executes code from the flash while the NVMC performs the erase operation.

4.3.6 Access port protection behavior

When access port protection is enabled, parts of the NVMC functionality will be blocked in order to prevent intentional or unintentional erase of UICR.

	CTRL-AP ERASEAL	L NVMC ERASEPAGE	NVMC ERASEPAGE	NVMC ERASEALL	NVMC ERASEUICR
			PARTIAL		
APPROTECT					
Disabled	Allowed	Allowed	Allowed	Allowed	Allowed
Enabled	Allowed	Allowed	Allowed	Allowed	Blocked

Table 5: NVMC Protection

4.3.7 NVMC power failure protection

NVMC power failure protection is possible through use of power-fail comparator that is monitoring power supply.

If the power-fail comparator is enabled, and the power supply voltage is below V_{POF} threshold, the power-fail comparator will prevent the NVMC from performing erase or write operations in non-volatile memory (NVM).

If a power failure warning is present at the start of an NVM erase operation, the NVMC operation will be ignored.

If a power failure warning is present at the start of an NVM write operation, the CPU will hardfault.

4.3.8 Partial erase of a page in flash

Partial erase is a feature in the NVMC to split a page erase time into shorter chunks to prevent longer CPU stalls in time-critical applications. Partial erase is only applicable to the code area in flash memory and does not work with UICR.

When erase is enabled, the partial erase of a flash page can be started by writing to ERASEPAGEPARTIAL on page 23. The duration of a partial erase can be configured in ERASEPAGEPARTIALCFG on page 24. A flash page is erased when its erase time reaches $t_{\text{ERASEPAGE}}$. Use ERASEPAGEPARTIAL N number of times so that N * ERASEPAGEPARTIALCFG $\geq t_{\text{ERASEPAGE}}$, where N * ERASEPAGEPARTIALCFG gives the cumulative (total) erase time. Every time the cumulative erase time reaches $t_{\text{ERASEPAGE}}$, it counts as one erase cycle.

After the erase is complete, all bits in the page are set to 1. The CPU is halted if the CPU executes code from the flash while the NVMC performs the partial erase operation.

The bits in the page are undefined if the flash page erase is incomplete, i.e. if a partial erase has started but the total erase time is less than $t_{\text{ERASEPAGE}}$.



4.3.9 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4001E000	NVMC	NVMC	Non-volatile memory controller	

Table 6: Instances

Register	Offset	Description	
READY	0x400	Ready flag	
READYNEXT	0x408	Ready flag	
CONFIG	0x504	Configuration register	
ERASEPAGE	0x508	Register for erasing a page in code area	
ERASEPCR1	0x508	Register for erasing a page in code area, equivalent to ERASEPAGE	Deprecated
ERASEALL	0x50C	Register for erasing all non-volatile user memory	
ERASEPCR0	0x510	Register for erasing a page in code area, equivalent to ERASEPAGE	Deprecated
ERASEUICR	0x514	Register for erasing user information configuration registers	
ERASEPAGEPARTIAL	0x518	Register for partial erase of a page in code area	
ERASEPAGEPARTIALCFG	0x51C	Register for partial erase configuration	

Table 7: Register overview

4.3.9.1 READY

Address offset: 0x400

Ready flag

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000001		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A R READY			NVMC is ready or busy
	Busy	0	NVMC is busy (on-going write or erase operation)
	Ready	1	NVMC is ready

4.3.9.2 READYNEXT

Address offset: 0x408


Ready flag

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				Α
Rese	t 0x0000001		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	R READYNEXT			NVMC can accept a new write operation
		Busy	0	NVMC cannot accept any write operation
		Ready	1	NVMC is ready

4.3.9.3 CONFIG

Address offset: 0x504 Configuration register




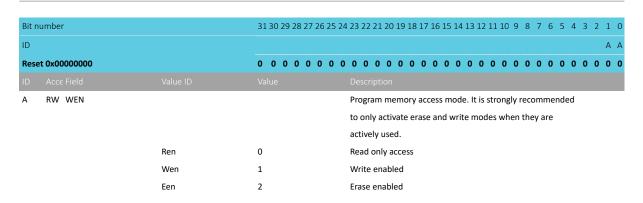

4.3.9.4 ERASEPAGE

Address offset: 0x508


Register for erasing a page in code area

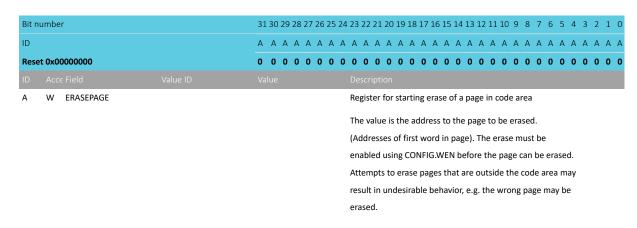

4.3.9.5 ERASEPCR1 (Deprecated)

Address offset: 0x508

Register for erasing a page in code area, equivalent to ERASEPAGE




4.3.9.6 ERASEALL

Address offset: 0x50C

Register for erasing all non-volatile user memory




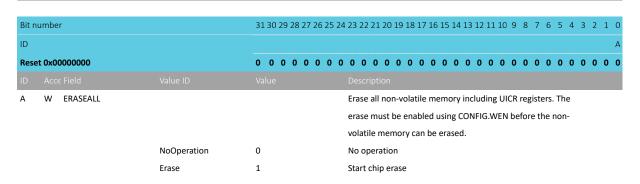

4.3.9.7 ERASEPCRO (Deprecated)

Address offset: 0x510


Register for erasing a page in code area, equivalent to ERASEPAGE



4.3.9.8 ERASEUICR

Address offset: 0x514

Register for erasing user information configuration registers

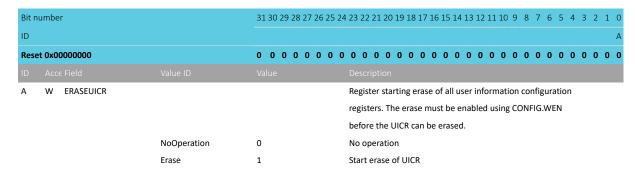

4.3.9.9 ERASEPAGEPARTIAL

Address offset: 0x518

Register for partial erase of a page in code area




Bit nu	um h a	_				21	30 29	2 20	27	20.	ר ר	24.	12.2	י ח	1 20	10	10	17	10	1 -	1 //	12 1	10 1	111	0 0	0	7	_	5	1	2	2	1 (^
	ımbe	ı																									7	_	÷		3	Ζ.	1 (J
ID						A	А А	A	Α	Α	Α .	A	Α.	4 Α	4 A	Α	Α	Α	Α	Α	A	Α	Α.	Α /	4 A	Α	Α	Α	Α	Α	A	Α /	A A	4
Reset	0x0	0000000)			0	0 0	0	0	0	0	0	0	0 0	0 0	0	0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0 (0 (0
																																		ı
Α	W	ERASE	PAGEPART	ΓIAL								1	Reg	iste	r for	sta	rtin	g p	art	ial e	eras	se c	of a	ра	ge ir	co	de a	area	а					
												-	Γhe	val	ue is	the	e ad	ldre	ess	to t	he	pag	ge t	o b	e pa	rtia	lly	eras	sed					
												(ado	dres	s of	the	firs	st w	orc	d in	pa	ge).	. Th	ie e	rase	mu	ıst l	be						
													ena	bled	d usi	ng (CON	IFIC	3.W	/EN	be	for	e ev	very	era	se p	oag	e p	arti	al				
												í	and	dis	able	d us	sing	CC	NF	IG.	WE	N a	fte	r ev	ery	eras	se p	oage	e					
													oart	ial.	Atte	mp	ts t	o e	ras	e pa	age	s th	nat	are	out	side	th	e co	ode					
												é	area	a ma	ay re	sult	t in	und	des	irab	ole	bel	navi	ior,	e.g.	the	wr	ong	3					
													oag	e m	ay b	e er	ase	d.																

4.3.9.10 ERASEPAGEPARTIALCFG

Address offset: 0x51C

Register for partial erase configuration

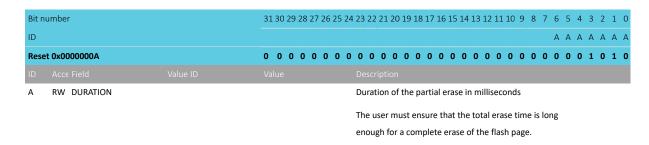

4.3.10 Electrical specification

4.3.10.1 Flash programming

Symbol	Description	Min.	Тур.	Max.	Units
n _{WRITE}	Number of times a 32-bit word can be written before erase			2	
n _{ENDURANCE}	Erase cycles per page	10000			
t _{WRITE}	Time to write one 32-bit word			42.5 ¹	μs
t _{ERASEPAGE}	Time to erase one page			87.5 ¹	ms
t _{ERASEALL}	Time to erase all flash			173 ¹	ms
$t_{ERASEPAGEPARTIAL,acc}$	Accuracy of the partial page erase duration. Total			1.09 ¹	
	execution time for one partial page erase is defined as				
	ERASEPAGEPARTIALCFG * terasepagepartial,acc-				

4.4 FICR — Factory information configuration registers

Factory information configuration registers (FICR) are pre-programmed in factory and cannot be erased by the user. These registers contain chip-specific information and configuration.



 $^{^{\}rm 1}\,$ Applies when HFXO is used. Timing varies according to HFINT accuracy when HFINT is used.

4.4.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x10000000	FICR	FICR	Factory information configuration	

Table 8: Instances

Register	Offset	Description	
CODEPAGESIZE	0x010	Code memory page size	
CODESIZE	0x014	Code memory size	
DEVICEID[0]	0x060	Device identifier	
DEVICEID[1]	0x064	Device identifier	
ER[0]	0x080	Encryption root, word 0	
ER[1]	0x084	Encryption root, word 1	
ER[2]	0x088	Encryption root, word 2	
ER[3]	0x08C	Encryption root, word 3	
IR[0]	0x090	Identity Root, word 0	
IR[1]	0x094	Identity Root, word 1	
IR[2]	0x098	Identity Root, word 2	
IR[3]	0x09C	Identity Root, word 3	
DEVICEADDRTYPE	0x0A0	Device address type	
DEVICEADDR[0]	0x0A4	Device address 0	
DEVICEADDR[1]	0x0A8	Device address 1	
INFO.PART	0x100	Part code	
INFO.VARIANT	0x104	Build code (hardware version and production configuration)	
INFO.PACKAGE	0x108	Package option	
INFO.RAM	0x10C	RAM variant	
INFO.FLASH	0x110	Flash variant	
INFO.UNUSED8[0]	0x114		Reserved
INFO.UNUSED8[1]	0x118		Reserved
INFO.UNUSED8[2]	0x11C		Reserved
PRODTEST[0]	0x350	Production test signature 0	
PRODTEST[1]	0x354	Production test signature 1	
PRODTEST[2]	0x358	Production test signature 2	
TEMP.A0	0x404	Slope definition A0	
TEMP.A1	0x408	Slope definition A1	
TEMP.A2	0x40C	Slope definition A2	
TEMP.A3	0x410	Slope definition A3	
TEMP.A4	0x414	Slope definition A4	
TEMP.A5	0x418	Slope definition A5	
TEMP.B0	0x41C	Y-intercept B0	
TEMP.B1	0x420	Y-intercept B1	
TEMP.B2	0x424	Y-intercept B2	
TEMP.B3	0x428	Y-intercept B3	
TEMP.B4	0x42C	Y-intercept B4	
TEMP.B5	0x430	Y-intercept B5	
TEMP.TO	0x434	Segment end TO	
TEMP.T1	0x438	Segment end T1	
TEMP.T2	0x43C	Segment end T2	
TEMP.T3	0x440	Segment end T3	
TEMP.T4	0x444	Segment end T4	

Table 9: Register overview



4.4.1.1 CODEPAGESIZE

Address offset: 0x010

Code memory page size

A	R CODEPAGES	SIZE		memory page size	e.	
ID	Acce Field	Value ID	Value Desc	ription		
Res	et OxFFFFFFF		1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1	111111	1 1 1 1 1 1 1 1 1 1
ID			A A A A A A A A A	A A A A A	A A A A A A	A A A A A A A A
Bit r	umber		31 30 29 28 27 26 25 24 23 22	21 20 19 18 17 16	6 15 14 13 12 11 10	9 8 7 6 5 4 3 2 1 0

4.4.1.2 CODESIZE

Address offset: 0x014 Code memory size

Α	R CODESIZE		Code memory size in number of pages
ID			
Rese	t OxFFFFFFF	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID		A A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Total code space is: CODEPAGESIZE * CODESIZE

4.4.1.3 DEVICEID[n] (n=0..1)

Address offset: $0x060 + (n \times 0x4)$

Device identifier

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID	Value Description
A R DEVICEID	64 bit unique device identifier

DEVICEID[0] contains the least significant bits of the device identifier. DEVICEID[1] contains the most significant bits of the device identifier.

4.4.1.4 ER[n] (n=0..3)

Address offset: $0x080 + (n \times 0x4)$

Encryption root, word n

ID Acce Field			
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1
ID	A A A A A A A A A	A A A A A A A A A A A A A A A A A A A	A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22	22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5	4 3 2 1 0

4.4.1.5 IR[n] (n=0..3)

Address offset: $0x090 + (n \times 0x4)$



Identity Root, word n



4.4.1.6 DEVICEADDRTYPE

Address offset: 0x0A0

Device address type

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	R DEVICEADDRTYPE			Device address type
		Public	0	Public address
		Random	1	Random address

4.4.1.7 DEVICEADDR[n] (n=0..1)

Address offset: $0x0A4 + (n \times 0x4)$

Device address n

Bit n	umbe	r	31	130	29	28	27	26	25	24	23 :	22 :	21 2	0 1	9 18	3 17	16	15	14	13 1	2 1	1 10	9	8	7	6	5	4	3	2	1 0
ID			Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	A A	\ A	Α	Α	Α	Α	Α	Α .	A A	Α Δ	A	Α	Α	Α	Α	Α	Α.	Α.	A A
Rese	t OxF	FFFFFF	1	1	1	1	1	1	1	1	1	1	1 :	l 1	l 1	1	1	1	1	1	1 1	. 1	1	1	1	1	1	1	1	1	1 1
ID																															
Α	R	DEVICEADDR									48	bit	devi	ce a	add	res	5														
											DE۱	VIC	EAD	DR[[0] d	ont	ain	s th	e le	ast	sigr	nific	ant	bits	s of	:					
											the	de	vice	ad	dre	ss. [DEV	ICE	ADE	DR[:	L] co	onta	ins	the	m	ost					
											sigr	nific	cant	bit	s of	the	de	vice	ad	dre	ss. (Onl	/ bit	ts [1	15:0)] o	f				
											DE۱	VIC	EAD	DR[[1] a	re i	use	d.													

4.4.1.8 INFO.PART

Address offset: 0x100

Part code

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A	A A A A A A A A A A A A A A A A A A A
Reset 0x00052820	0 0 0 0 0 0 0 0	0 0 0 0 0 1 0 1 0 0 1 0 1 0 0 0 0 0 0 0
ID Acce Field Value ID		
A R PART		Part code
N52820	0x52820	nRF52820
N52833	0x52833	nRF52833
N52840	0x52840	nRF52840
Unspecified	0xFFFFFFF	Unspecified





4.4.1.9 INFO.VARIANT

Address offset: 0x104

Build code (hardware version and production configuration)

Bit number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A	A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field			
A R VARIANT			Build code (hardware version and production
			configuration). Encoded as ASCII.
	AABC	0x41414243	AABC
	AAC0	0x41414330	AAC0
	AAC1	0x41414331	AAC1
	AAD0	0x41414430	AAD0
	Unspecified	OxFFFFFFF	Unspecified

4.4.1.10 INFO.PACKAGE

Address offset: 0x108

Package option

Bit nu	umbe	er		31	30 2	29 2	28 2	27 2	6 2	5 2	24 :	23 :	22	21	20	19	18	17	16	15	14	13	12	11 1	.0 9	8	7	6	5	4	3	2 1	. 0
ID				Α	Α	Α	A .	Α ,	Δ ,	Δ.	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	A	Δ Δ	A	Α	Α	Α	Α	Α	A A	A
Rese	t OxF	FFFFFFF		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1	1	1	1	1	1	1	1 1	. 1
ID																																	
	_																																
Α	R	PACKAGE									-	Pac	ka	ge	opt	ior	1																
А	R	PACKAGE	QD	0x2	2007	7								_	opt x5 4			QF	N														
А	R	PACKAGE	QD CF		2003							QD:	xx ·	- 5:	•	10-	pin			CSF	o												

4.4.1.11 INFO.RAM

Address offset: 0x10C

RAM variant

Bit number		31	30 29	28	27	26 2	25 :	24 :	23 :	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6 5	5 4	3	2	1 0
ID		Α	А А	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	A	A ,	Δ.	Α Α	A A	Α	Α	A A
Reset 0xFFFFFFF		1	1 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 1	l 1	1	1	1 1
ID Acce Field																														
A R RAM									RAI	M١	vari	ant	t																	
	K16	0x1	.0						16	kΒ	RAI	M																		
	K32	0x2	.0					:	32	kΒ	RAI	M																		
	K64	0x4	0						64	kΒ	RAI	М																		
	K128	0x8	0						128	3 kE	B RA	٩M	l																	
	K256	0x1	.00						256	5 kE	B RA	٩M	l																	
	Unspecified	0xF	FFFF	FFF					Un:	spe	cifi	ied																		

4.4.1.12 INFO.FLASH

Address offset: 0x110

Flash variant



Bit number		31	30 2	29 2	8 2	7 2	6 25	5 2	4 23	3 2	2 21	1 20	19	18	17	16	15	14	13	12	11 :	10	9	8 7	7 6	5 5	4	3	2	1 0
ID		Α	Α	A A	\	λ Α	A	. 4	A A	. 4	A A	. A	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α.	A A	\ <i>A</i>	\ A	A	Α	Α	A A
Reset OxFFFFFFF		1	1	1 :	L 1	. 1	. 1	. 1	l 1	_ 1	l 1	1	1	1	1	1	1	1	1	1	1	1	1	1 :	L 1	. 1	. 1	1	1	1 1
ID Acce Field																														
A R FLASH									Fl	asł	n va	riar	nt																	
	K128	0x	80						12	28	kB F	LAS	SH																	
	K256	0x	100						25	56	kB F	LAS	SH																	
	K512	0x	200						5:	12	kB F	LAS	SH																	
	K1024	0x4	400						1	MI	B FL	ASF	1																	
	K2048	0x	800						2	М	B FL	.ASF	1																	
	Unspecified	0x	FFFF	FFF	F				U	nsp	oeci	fiec	i																	

4.4.1.13 PRODTEST[n] (n=0..2)

Address offset: $0x350 + (n \times 0x4)$ Production test signature n

Bit number		31 30 29 28	27 26 25 24	4 23 22	21 20	19 18 1	17 16	15 14	13 1	2 11	10 9	8	7	6 5	5 4	3	2 :	L 0
ID		A A A A	A A A A	. A A	A A	Α Α .	А А	А А	A A	A	A A	A	Α	A A	A A	Α	A A	A A
Reset 0xFFFFFF	:FF	1 1 1 1	1 1 1 1	1 1	1 1	1 1	1 1	1 1	1 1	. 1	1 1	1	1	1 1	l 1	1	1 1	l 1
ID Acce Fiel																		
A R PRO	DDTEST			Produ	ction t	test sig	nature	e n										
	Done	0xBB42319F		Produ	ction t	tests do	ne											
	NotDone	0xFFFFFFF		Produ	ction t	tests no	t don	e										

4.4.1.14 TEMP.A0

Address offset: 0x404 Slope definition A0

Bit n	umber	31 30 29 28	27 26 25	24 2	3 22 2	21 20	19 18	17 16	15 1	4 13	12 11	10	9 8	3 7	6	5	4 3	2	1 0
ID											А	Α	A A	A A	Α	Α	А Д	A	АА
Rese	et OxFFFFFFF	1 1 1 1	1 1 1	1 1	1 1	1 1	1 1	1 1	1 :	l 1	1 1	1	1 :	l 1	1	1	1 1	1	1 1
ID																			
Α	R A			Α	(slop	e defi	nition) regi	ster.										

4.4.1.15 TEMP.A1

Address offset: 0x408 Slope definition A1


Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID		A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID	Value	Description

R A (slope definition) register.

4.4.1.16 TEMP.A2

Address offset: 0x40C Slope definition A2





4.4.1.17 TEMP.A3

Address offset: 0x410 Slope definition A3

A R A		A (slope definition) register.
ID Acce Field		
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

4.4.1.18 TEMP.A4

Address offset: 0x414 Slope definition A4

Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field		
A R A		A (slope definition) register.

4.4.1.19 TEMP.A5

Address offset: 0x418 Slope definition A5

Bit number		31 30	29 2	8 27	26 25	5 24	23 2	22 2	1 20	0 19	18 1	17 1	6 15	14 :	L3 12	2 11	10	9	8	7	6 5	5 4	3	2	1 0
ID																Α	Α	Α	A A	١.	Α Δ	A	Α	Α	A A
Reset OxFFFFFFF		1 1	1 1	1 1	1 1	1	1	1 :	1 1	. 1	1	1 1	l 1	1	1 1	1	1	1	1 :	L	1 1	l 1	1	1	1 1
ID Acce Field	Value ID	Value					Des	crip	tior	1															

R A A (slope definition) register.

4.4.1.20 TEMP.B0

Address offset: 0x41C

Y-intercept B0



Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID		Description
A R B		B (y-intercept)

4.4.1.21 TEMP.B1

Address offset: 0x420

Y-intercept B1

Reset 0xFF																	
Reset 0xFI																	
	FFFFFF	1 1 1 1 1 1 1	1 1 1 1	1 1 1	1 1	1 1	1 1	1	1 1	1	1 1	. 1	1	1	1 1	1	1 1
ID								Α	А А	Α	A A	A	Α	Α	A A	A A	A A
Bit numbe		31 30 29 28 27 26 2	5 24 23 2	2 21 20	19 18	17 16	15 14	13	12 11	10	9 8	7	6	5	4 3	3 2	1 0

4.4.1.22 TEMP.B2

Address offset: 0x424

Y-intercept B2

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	1 0
ID		A A A A A A A A A A A A A A A A A A A	A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1
ID Acce Field			
A R B		B (y-intercept)	

4.4.1.23 TEMP.B3

Address offset: 0x428

Y-intercept B3

A R B		B (v-inte	ercept)										
ID Acce Field													
Reset 0xFFFFFFF	1 1 1 1 1 1	11111	1 1 1	1 1 1	1 1	1 1	l 1	1 1	1	1	1 1	1	1 1 1
ID					А	A A	A A	A A	Α.	Α	А А	Α .	4 A A
Bit number	31 30 29 28 27 2	6 25 24 23 22 21	1 20 19 18	17 16 1	5 14 13	3 12 1	1 10	9 8	7	6	5 4	3	2 1 (

4.4.1.24 TEMP.B4

Address offset: 0x42C

Y-intercept B4

A R B		B (y-intercept)					
ID Acce Field							
Reset 0xFFFFFFF	1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1	11111	1 1	1 1 1	l 1 1	1 1
ID			AAAAA	A A A	AAA	A A A	A A
Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14	4 13 12 11 10 9	8 7	6 5 4	1 3 2	1 0



4.4.1.25 TEMP.B5

Address offset: 0x430

Y-intercept B5

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0
ID		A A A A A A A A A	A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1
ID Acce Field			
A R B		B (y-intercept)	

4.4.1.26 TEMP.TO

Address offset: 0x434

Segment end TO

Bit n	umber	31 30	29 :	28 27	7 26 2	25 24	1 23	22	21 2	0 19	18 1	7 16	15	14 1	3 12	11 1	.0 9	8	7	6	5 4	4 3	2	1 ()
ID																			Α	Α	Α /	Δ Δ	A	A A	
Rese	t OxFFFFFFF	1 1	1	1 1	. 1	1 1	1	1	1 :	1 1	1 :	1 1	1	1 1	l 1	1	1 1	1	1	1	1	1 1	1	1 1	Ĺ
ID																									ı
Α	R T						Т (seg	men	t en	d) re	giste	r												

4.4.1.27 TEMP.T1

Address offset: 0x438 Segment end T1

ID	
ID A A A A A	1 1 1
	ААА
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3	2 1 0

4.4.1.28 TEMP.T2

Address offset: 0x43C

Segment end T2

Bit number	31 30 29 28 27 26 25 24 23	22 21 20 19 18 17 16 15 14 13 1	12 11 10 9 8	7 6	5 4	3 2	2 1 0
ID				А А	А А	A A	А А А
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1	1 1	1 1	1 1	1 1 1
ID Acce Field Value ID	Value De	escription					

A R T T (segment end) register

4.4.1.29 TEMP.T3

Address offset: 0x440 Segment end T3








4.4.1.30 TEMP.T4

Address offset: 0x444

Segment end T4



4.5 UICR — User information configuration registers

The user information configuration registers (UICRs) are non-volatile memory (NVM) registers for configuring user-specific settings.

For information on writing UICR registers, see the NVMC — Non-volatile memory controller on page 19 and Memory on page 15 chapters.

4.5.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x10001000	UICR	UICR	User information configuration	

Table 10: Instances

Register	Offset	Description	
UNUSED0	0x000		Reserved
UNUSED1	0x004		Reserved
UNUSED2	0x008		Reserved
UNUSED3	0x010		Reserved
NRFFW[0]	0x014	Reserved for Nordic firmware design	
NRFFW[1]	0x018	Reserved for Nordic firmware design	
NRFFW[2]	0x01C	Reserved for Nordic firmware design	
NRFFW[3]	0x020	Reserved for Nordic firmware design	
NRFFW[4]	0x024	Reserved for Nordic firmware design	
NRFFW[5]	0x028	Reserved for Nordic firmware design	
NRFFW[6]	0x02C	Reserved for Nordic firmware design	
NRFFW[7]	0x030	Reserved for Nordic firmware design	
NRFFW[8]	0x034	Reserved for Nordic firmware design	
NRFFW[9]	0x038	Reserved for Nordic firmware design	
NRFFW[10]	0x03C	Reserved for Nordic firmware design	
NRFFW[11]	0x040	Reserved for Nordic firmware design	
NRFFW[12]	0x044	Reserved for Nordic firmware design	
NRFHW[0]	0x050	Reserved for Nordic hardware design	



Register	Offset	Description
NRFHW[1]	0x054	Reserved for Nordic hardware design
NRFHW[2]	0x058	Reserved for Nordic hardware design
NRFHW[3]	0x05C	Reserved for Nordic hardware design
NRFHW[4]	0x060	Reserved for Nordic hardware design
NRFHW[5]	0x064	Reserved for Nordic hardware design
NRFHW[6]	0x068	Reserved for Nordic hardware design
NRFHW[7]	0x06C	Reserved for Nordic hardware design
NRFHW[8]	0x070	Reserved for Nordic hardware design
NRFHW[9]	0x074	Reserved for Nordic hardware design
NRFHW[10]	0x078	Reserved for Nordic hardware design
NRFHW[11]	0x07C	Reserved for Nordic hardware design
CUSTOMER[0]	0x080	Reserved for customer
CUSTOMER[1]	0x084	Reserved for customer
CUSTOMER[2]	0x088	Reserved for customer
CUSTOMER[3]	0x08C	Reserved for customer
CUSTOMER[4]	0x090	Reserved for customer
CUSTOMER[5]	0x094	Reserved for customer
CUSTOMER[6]	0x098	Reserved for customer
CUSTOMER[7]	0x09C	Reserved for customer
CUSTOMER[8]	0x0A0	Reserved for customer
CUSTOMER[9]	0x0A4	Reserved for customer
CUSTOMER[10]	0x0A8	Reserved for customer
CUSTOMER[11]	0x0AC	Reserved for customer
CUSTOMER[12]	0x0B0	Reserved for customer
CUSTOMER[13]	0x0B4	Reserved for customer
CUSTOMER[14]	0x0B8	Reserved for customer
CUSTOMER[15]	0x0BC	Reserved for customer
CUSTOMER[16]	0x0C0	Reserved for customer
CUSTOMER[17]	0x0C4	Reserved for customer
CUSTOMER[18]	0x0C8	Reserved for customer
CUSTOMER[19]	0x0CC	Reserved for customer
CUSTOMER[20]	0x0D0	Reserved for customer
CUSTOMER[21]	0x0D4	Reserved for customer
CUSTOMER[22]	0x0D8	Reserved for customer
CUSTOMER[23]	0x0DC	Reserved for customer
CUSTOMER[24]	0x0E0	Reserved for customer
CUSTOMER[25]	0x0E4	Reserved for customer
CUSTOMER[26]	0x0E8	Reserved for customer
CUSTOMER[27]	0x0EC	Reserved for customer
CUSTOMER[28]	0x0F0	Reserved for customer
CUSTOMER[29]	0x0F4	Reserved for customer
CUSTOMER[30]	0x0F8	Reserved for customer
CUSTOMER[31]	0x0FC	Reserved for customer
PSELRESET[0]	0x200	Mapping of the nRESET function (see POWER chapter for details)
PSELRESET[1]	0x204	Mapping of the nRESET function (see POWER chapter for details)
APPROTECT	0x208	Access port protection
DEBUGCTRL	0x210	Processor debug control
REGOUT0	0x304	Output voltage from REG0 regulator stage. The maximum output voltage from this stage is
		given as VDDH - V_VDDH-VDD.

Table 11: Register overview



4.5.1.1 NRFFW[n] (n=0..12)

Address offset: $0x014 + (n \times 0x4)$

Reserved for Nordic firmware design

A	RW NRFFW	Reserved for Nordic firmware design	
ID			
Rese	et OxFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1
ID		A A A A A A A A A A A A A A A A A A A	Α
Bit r	number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	0

4.5.1.2 NRFHW[n] (n=0..11)

Address offset: $0x050 + (n \times 0x4)$

Reserved for Nordic hardware design

Α	RW NRFHW	Reserved for Nordic hardware design
ID		
Res	et 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID		A A A A A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

4.5.1.3 CUSTOMER[n] (n=0..31)

Address offset: $0x080 + (n \times 0x4)$

Reserved for customer

	DW CUSTOMED	Description of the systems of	
ID			
Rese	et OxFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1
ID		A A A A A A A A A A A A A A A A A A A	Α
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	0

4.5.1.4 PSELRESET[n] (n=0..1)

Address offset: $0x200 + (n \times 0x4)$

Mapping of the nRESET function (see POWER chapter for details)

All PSELRESET registers have to contain the same value for a pin mapping to be valid. If values are not the same, there will be no nRESET function exposed on a GPIO. As a result, the device will always start independently of the levels present on any of the GPIOs.

Bit r	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	
ID				
Α	RW PIN		18	GPIO pin number onto which nRESET is exposed
С	RW CONNECT			Connection
		Disconnected	1	Disconnect





4.5.1.5 APPROTECT

Address offset: 0x208
Access port protection

Bit n	umber		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A A A A A A
Rese	t OxFFFFFFF		1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PALL			Enable or disable access port protection.
				See Debug on page 40 for more information.
		Disabled	0xFF	Hardware disable of access port protection for devices
				where access port protection is controlled by hardware
		HwDisabled	0x5A	Hardware disable of access port protection for devices
				where access port protection is controlled by hardware and
				software
		Enabled	0x00	Enable

4.5.1.6 DEBUGCTRL

Address offset: 0x210
Processor debug control

Bit r	number		31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B
Res	et OxFFFFFFF		1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
В	RW CPUFPBEN			Configure CPU flash patch and breakpoint (FPB) unit
				behavior
		Enabled	0xFF	Enable CPU FPB unit (default behavior)
		Disabled	0x00	Disable CPU FPB unit. Writes into the FPB registers will be
				ignored.

4.5.1.7 REGOUTO

Address offset: 0x304

Output voltage from REG0 regulator stage. The maximum output voltage from this stage is given as VDDH - $V_VDDH-VDD$.

Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		ААА
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value		
A RW VOUT		Output voltage from REG0 regulator stage.
1V8	0	1.8 V
2V1	1	2.1 V
2V4	2	2.4 V
2V7	3	2.7 V
3V0	4	3.0 V
3V3	5	3.3 V
DEFA	ULT 7	Default voltage: 1.8 V





4.6 EasyDMA

EasyDMA is a module implemented by some peripherals to gain direct access to Data RAM.

EasyDMA is an AHB bus master similar to CPU and is connected to the AHB multilayer interconnect for direct access to Data RAM. EasyDMA is not able to access flash.

A peripheral can implement multiple EasyDMA instances to provide dedicated channels. For example, for reading and writing of data between the peripheral and RAM. This concept is illustrated in EasyDMA example on page 37.

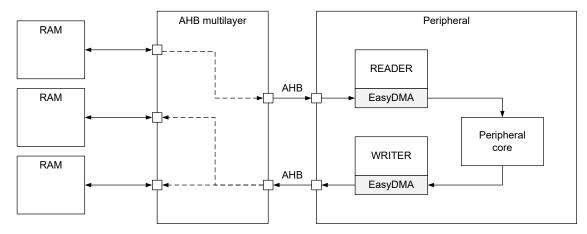


Figure 4: EasyDMA example

An EasyDMA channel is implemented in the following way, but some variations may occur:

```
READERBUFFER_SIZE 5
WRITERBUFFER_SIZE 6

uint8_t readerBuffer[READERBUFFER_SIZE] __at__ 0x20000000;
uint8_t writerBuffer[WRITERBUFFER_SIZE] __at__ 0x20000005;

// Configuring the READER channel
MYPERIPHERAL->READER.MAXCNT = READERBUFFER_SIZE;
MYPERIPHERAL->READER.PTR = &readerBuffer;

// Configure the WRITER channel
MYPERIPHERAL->WRITER.MAXCNT = WRITEERBUFFER_SIZE;
MYPERIPHERAL->WRITER.MAXCNT = &writerBuffer;
```

This example shows a peripheral called MYPERIPHERAL that implements two EasyDMA channels - one for reading called READER, and one for writing called WRITER. When the peripheral is started, it is assumed that the peripheral will perform the following tasks:

- Read 5 bytes from the readerBuffer located in RAM at address 0x20000000
- Process the data
- Write no more than 6 bytes back to the writerBuffer located in RAM at address 0x20000005

The memory layout of these buffers is illustrated in EasyDMA memory layout on page 38.



0x20000000	readerBuffer[0]	readerBuffer[1]	readerBuffer[2]	readerBuffer[3]
0x20000004	readerBuffer[4]	writerBuffer[0]	writerBuffer[1]	writerBuffer[2]
0x20000008	writerBuffer[3]	writerBuffer[4]	writerBuffer[5]	

Figure 5: EasyDMA memory layout

The WRITER.MAXCNT register should not be specified larger than the actual size of the buffer (writerBuffer). Otherwise, the channel would overflow the writerBuffer.

Once an EasyDMA transfer is completed, the AMOUNT register can be read by the CPU to see how many bytes were transferred. For example, CPU can read MYPERIPHERAL->WRITER.AMOUNT register to see how many bytes WRITER wrote to RAM.

Note: The PTR register of a READER or WRITER must point to a valid memory region before use. The reset value of a PTR register is not guaranteed to point to valid memory. See Memory on page 15 for more information about the different memory regions and EasyDMA connectivity.

4.6.1 EasyDMA error handling

Some errors may occur during DMA handling.

If READER.PTR or WRITER.PTR is not pointing to a valid memory region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

If several AHB bus masters try to access the same AHB slave at the same time, AHB bus congestion might occur. An EasyDMA channel is an AHB master. Depending on the peripheral, the peripheral may either stall and wait for access to be granted, or lose data.

4.6.2 EasyDMA array list

EasyDMA is able to operate in Array List mode.

The Array List mode is implemented in channels where the LIST register is available.

The array list does not provide a mechanism to explicitly specify where the next item in the list is located. Instead, it assumes that the list is organized as a linear array where items are located one after the other in RAM.



The EasyDMA Array List can be implemented by using the data structure ArrayList_type as illustrated in the code example below using a READER EasyDMA channel as an example:

```
#define BUFFER_SIZE 4

typedef struct ArrayList
{
   uint8_t buffer[BUFFER_SIZE];
} ArrayList_type;

ArrayList_type ReaderList[3] __at__ 0x20000000;

MYPERIPHERAL->READER.MAXCNT = BUFFER_SIZE;
MYPERIPHERAL->READER.PTR = &ReaderList;
MYPERIPHERAL->READER.LIST = MYPERIPHERAL_READER_LIST_ArrayList;
```

The data structure only includes a buffer with size equal to the size of READER.MAXCNT register. EasyDMA uses the READER.MAXCNT register to determine when the buffer is full.

0x20000000 : ReaderList[0] buffer[0] buffer[1] buffer[2] buffer[3] 0x20000004 : ReaderList[1] buffer[0] buffer[1] buffer[2] buffer[3] 0x20000008 : ReaderList[2] buffer[0] buffer[1] buffer[2] buffer[3]

Figure 6: EasyDMA array list

4.7 AHB multilayer

READER.PTR = &ReaderList

AHB multilayer enables parallel access paths between multiple masters and slaves in a system. Access is resolved using priorities.

Each bus master is connected to all the slave devices using an interconnection matrix. The bus masters are assigned priorities, which are used to resolve access when two (or more) bus masters request access to the same slave device. When that occurs, the following rules apply:

- If two (or more) bus masters request access to the same slave device, the master with the highest priority is granted the access first.
- Bus masters with lower priority are stalled until the higher priority master has completed its transaction.
- If the higher priority master pauses at any point during its transaction, the lower priority master in
 queue is temporarily granted access to the slave device until the higher priority master resumes its
 activity.
- Bus masters that have the same priority are mutually exclusive, thus cannot be used concurrently.

Some peripherals, such as RADIO, do not have a safe stalling mechanism (no internal data buffering, or opportunity to pause incoming data). Being a low priority bus master might cause loss of data for such peripherals upon bus contention. To avoid AHB bus contention when using multiple bus masters, follow these guidelines:



- Avoid situations where more than one bus master is accessing the same slave.
- If more than one bus master is accessing the same slave, make sure that the bus bandwidth is not exhausted.

Below is a list of bus masters in the system and their priorities.

Bus master name	Description
СРИ	
CTRL-AP	
USB	
SPIM1/SPIS1/TWIM1/TWIS1	Same priority and mutually exclusive
RADIO	
CCM/ECB/AAR	Same priority and mutually exclusive
UARTEO	
SPIMO/SPISO/TWIMO/TWISO	Same priority and mutually exclusive

Table 12: AHB bus masters (listed from highest to lowest priority)

Defined bus masters are the CPU and peripherals with implemented EasyDMA. The available slaves are RAM AHB slaves. How the bus masters and slaves are connected using the interconnection matrix is illustrated in Memory on page 15.

4.8 Debug

The debug system offers a flexible and powerful mechanism for non-intrusive debugging.

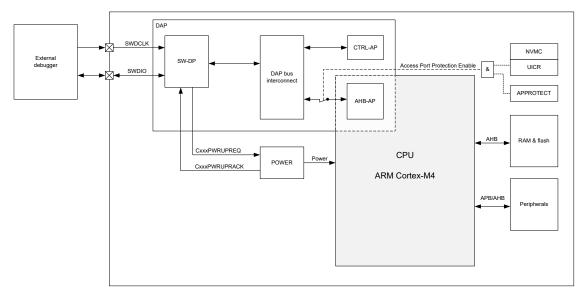


Figure 7: Debug overview

The main features of the debug system are the following:

- Two-pin serial wire debug (SWD) interface
- Flash patch and breakpoint (FPB) unit that supports the following comparators:
 - Two literal comparators
 - Six instruction comparators

4.8.1 DAP - Debug access port

An external debugger can access the device via the DAP.



The debug access port (DAP) implements a standard ARM[®] CoreSight[™] serial wire debug port (SW-DP), which implements the serial wire debug protocol (SWD). SWD is a two-pin serial interface, see SWDCLK and SWDIO in Debug overview on page 40.

In addition to the default access port in CPU (AHB-AP), the DAP includes a custom control access port (CTRL-AP). The CTRL-AP is described in more detail in CTRL-AP - Control access port on page 43.

Note:

- The SWDIO line has an internal pull-up resistor.
- The SWDCLK line has an internal pull-down resistor.

4.8.2 Access port protection

Access port protection blocks the debugger from read and write access to all CPU registers and memory-mapped addresses when enabled.

Access port protection is enabled and disabled differently depending on the build code of the device.

Access port protection controlled by hardware

This information refers to build codes Cxx and earlier.

By default, access port protection is disabled.

Access port protection is enabled by writing UICR.APPROTECT to Enabled and performing any reset. See Reset on page 60 for more information.

Access port protection is disabled by issuing an ERASEALL command via CTRL-AP. This command will erase the flash, UICR, and RAM, including UICR.APPROTECT. Erasing UICR will set UICR.APPROTECT value to Disabled. CTRL-AP is described in more detail in CTRL-AP - Control access port on page 43.

Access port protection controlled by hardware and software

This information refers to build codes Dxx and later.

By default, access port protection is enabled.

Access port protection is disabled by issuing an ERASEALL command via CTRL-AP. Read CTRL-AP.APPROTECTSTATUS to ensure that access port protection is disabled, and repeat the ERASEALL command if needed. This command will erase the flash, UICR, and RAM. CTRL-AP is described in more detail in CTRL-AP - Control access port on page 43. Access port protection will remain disabled until one of the following occurs:

- Pin reset
- Power or brownout reset
- Watchdog reset if not in Debug Interface Mode, see Debug Interface mode on page 45
- Wake from System OFF if not in Emulated System OFF

To keep access port protection disabled, the following actions must be performed:

- Program UICR.APPROTECT to HwDisabled. This disables the hardware part of the access port protection scheme after the first reset of any type. The hardware part of the access port protection will stay disabled as long as UICR.APPROTECT is not overwritten.
- Firmware must write APPROTECT.DISABLE to SwDisable. This disables the software part of the access port protection scheme.

Note: Register APPROTECT.DISABLE is reset after pin reset, power or brownout reset, watchdog reset, or wake from System OFF as mentioned above.



The following figure is an example on how a device with access port protection enabled can be erased, programmed, and configured to allow debugging. Operations sent from debugger as well as registers written by firmware will affect the access port state.

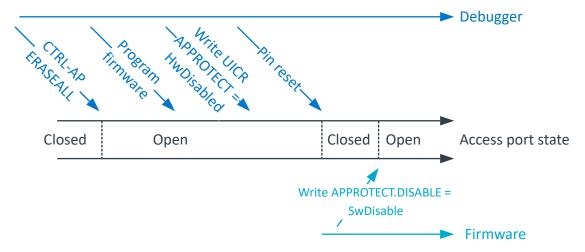


Figure 8: Access port unlocking

Access port protection is enabled when the disabling conditions are not present. For additional security, it is recommended to write <code>Enabled</code> to <code>UICR.APPROTECT</code>, and have firmware write <code>Force</code> to <code>APPROTECT.FORCEPROTECT</code>. This is illustrated in the following figure.

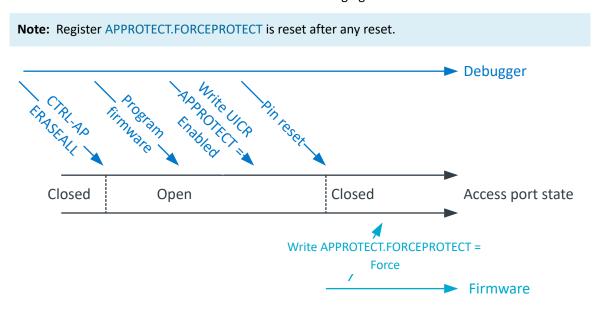


Figure 9: Force access port protection

4.8.2.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40000000	APPROTECT	APPROTECT	APPROTECT control	

Table 13: Instances



Register	Offset	Description
FORCEPROTECT	0x550	Software force enable APPROTECT mechanism until next reset.
DISABLE	0x558	Software disable APPROTECT mechanism

Table 14: Register overview

4.8.2.1.1 FORCEPROTECT

Address offset: 0x550

Software force enable APPROTECT mechanism until next reset.

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A A A A A A
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW1 FORCEPROTECT			Write 0x0 to force enable APPROTECT mechanism
		Force	0x0	Software force enable APPROTECT mechanism

4.8.2.1.2 DISABLE

Address offset: 0x558

Software disable APPROTECT mechanism

		SwDisable	0x5A	Software disable APPROTECT mechanism
Α	RW DISABLE			Software disable APPROTECT mechanism
ID				
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				A A A A A A A
Bit r	number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

4.8.3 CTRL-AP - Control access port

The control access port (CTRL-AP) is a custom access port that enables control of the device when other access ports in the DAP are disabled by the access port protection.

Access port protection is described in more detail in Access port protection on page 41.

Control access port has the following features:

- Soft reset see Reset on page 60 for more information
- Disabling of access port protection device control is allowed through CTRL-AP even when all other access ports in DAP are disabled by access port protection

4.8.3.1 Registers

Register	Offset	Description
RESET	0x000	Soft reset triggered through CTRL-AP
ERASEALL	0x004	Erase all
ERASEALLSTATUS	0x008	Status register for the ERASEALL operation
APPROTECTSTATUS	0x00C	Status register for access port protection
IDR	0x0FC	CTRL-AP identification register, IDR


Table 15: Register overview



4.8.3.1.1 RESET

Address offset: 0x000


Soft reset triggered through CTRL-AP

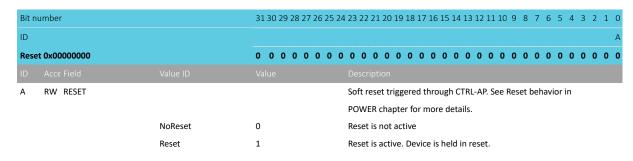

4.8.3.1.2 ERASEALL

Address offset: 0x004


Erase all

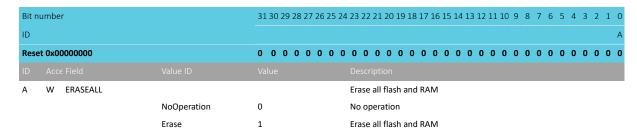

4.8.3.1.3 ERASEALLSTATUS

Address offset: 0x008

Status register for the ERASEALL operation

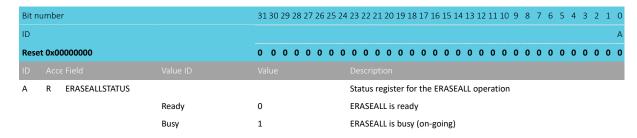


4.8.3.1.4 APPROTECTSTATUS

Address offset: 0x00C

Status register for access port protection



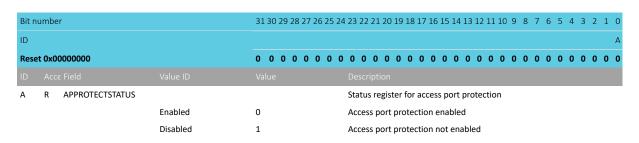

4.8.3.1.5 IDR

Address offset: 0x0FC

CTRL-AP identification register, IDR

Bit n	umbe	er		31	30 2	9 28	27	26 2	5 2	4 23	22	21	20 1	9 1	3 17	16	15 3	14 1	3 12	2 11	10 9	9 8	7	6	5	4	3 2	2 1	0
ID				Ε	E E	E	D	D [) [) С	С	С	С	c c	. c	В	В	В	3				Α	Α	Α	Α ,	۸	A A	Α
Rese	t 0x0	2880000		0	0 (0	0	0 1	L O	1	0	0	0	1 0	0	0	0	0 (0	0	0 (0 0	0	0	0	0 () (0	0
ID																													
Α	R	APID								AF	o id	enti	ficat	ion															
В	R	CLASS								Ac	ces	s po	ort (AP)	clas	S													
			NotDefined	0x	0					No	o de	efine	ed cl	lass															
			MEMAP	0x	8					М	em	ory	acce	ess p	ort														
С	R	JEP106ID								JE	DEC	CJEF	2106	ide	entit	у сс	ode												
D	R	JEP106CONT								JE	DEC	CJEF	2106	5 со	ntin	uati	on o	code	9										
Ε	R	REVISION								Re	visi	ion																	

4.8.3.2 Electrical specification

4.8.3.2.1 Control access port

Symbol	Description	Min.	Тур.	Max.	Units
R _{pull}	Internal SWDIO and SWDCLK pull up/down resistance		13		kΩ
f _{SWDCLK}	SWDCLK frequency	0.125		8	MHz

4.8.4 Debug Interface mode

Before an external debugger can access either CPU's access port (AHB-AP) or the control access port (CTRL-AP), the debugger must first request the device to power up via CxxxPWRUPREQ in the SWJ-DP.

If the device is in System OFF when power is requested via CxxxPWRUPREQ, the system will wake up and the DIF flag in RESETREAS on page 65 will be set. The device is in the Debug Interface mode as long as the debugger is requesting power via CxxxPWRUPREQ. Once the debugger stops requesting power via CxxxPWRUPREQ, the device is back in normal mode. Some peripherals behave differently in Debug Interface mode compared to normal mode. These differences are described in more detail in the chapters of the peripherals that are affected.

When a debug session is over, the external debugger must make sure to put the device back into normal mode since the overall power consumption is higher in Debug Interface mode than in normal mode.

For details on how to use the debug capabilities, read the debug documentation of your IDE.

4.8.5 Real-time debug

The nRF52820 supports real-time debugging.

Real-time debugging allows interrupts to execute to completion in real time when breakpoints are set in Thread mode or lower priority interrupts. This enables developers to set breakpoints and single-step

NORDIC*

through the code without the risk of real-time event-driven threads running at higher priority failing. For example, this enables the device to continue to service the high-priority interrupts of an external controller or sensor without failure or loss of state synchronization while the developer steps through code in a low-priority thread.



5 Power and clock management

5.1 Power management unit (PMU)

Power and clock management in nRF52820 is designed to automatically ensure maximum power efficiency.

The core of the power and clock management system is the power management unit (PMU) illustrated in the following figure.

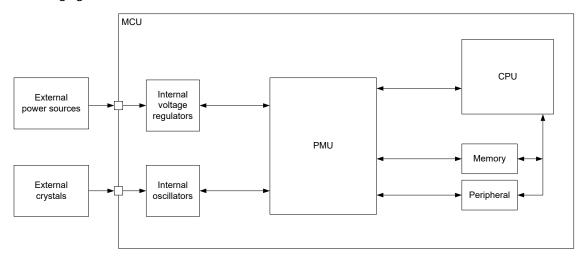


Figure 10: Power management unit

The PMU automatically detects which power and clock resources are required by the different system components at any given time. The PMU will then automatically start/stop and choose operation modes in supply regulators and clock sources, to achieve the lowest power consumption possible.

5.2 Current consumption

Because the system is continually being tuned by the Power management unit (PMU) on page 47, estimating an application's current consumption can be challenging when measurements cannot be directly performed on the hardware. To facilitate the estimation process, a set of current consumption scenarios are provided to show the typical current drawn from the VDD supply.

Each scenario specifies a set of operations and conditions applying to the given scenario. The following table shows a set of common conditions used in all scenarios, unless otherwise stated in the description of a given scenario. All scenarios are listed in Electrical specification on page 48.



Condition	Value
Supply	3 V on VDD/VDDH (Normal voltage mode)
Temperature	25°C
СРИ	WFI (wait for interrupt)/WFE (wait for event) sleep
Peripherals	All idle
Clock	Not running
Regulator	LDO
RAM	In System ON, full 32 kB powered. In System OFF, full 32 kB retention.
Compiler	GCC v7.3.1 20180622 (release) [ARM/embedded-7-branch revision 261907] (GNU Tools for Arm Embedded Processors 7-2018-q3-update). • Compiler flags: -00 -falign-functions=16 -fno-strict-aliasing -mthumb -mcpu=cortex-m4 -mfloat-abi=hard -mfpu=fpv4-sp-d16.
Compiler for CPU Running and Compounded	ARMCC v6.13. Compiler flags: -xc -std=gnu99target=arm-arm-none-eabi -mcpu=cortex-m4 -mfpu=none -mfloat-abi=soft -c -fno-rtti -funsigned-char -gdwarf-3 -fropi -Ofast -ffunction-sections -Omax Linker flags:cpu=Cortex-M4fpu=SoftVFPstrict -Omax
32 MHz crystal ²	SMD 2520, 32 MHz, 10 pF +/- 10 ppm

Table 16: Current consumption scenarios, common conditions

5.2.1 Electrical specification

5.2.1.1 Sleep

Symbol	Description	Min.	Тур.	Max.	Units
I _{ON_RAMOFF_EVENT}	System ON, no RAM retention, wake on any event		0.4		μΑ
I _{ON_RAMON_EVENT}	System ON, full 32 kB RAM retention, wake on any event		0.6		μΑ
I _{ON_RAMON_POF}	System ON, full 32 kB RAM retention, wake on any event,		0.8		μΑ
	power-fail comparator enabled				
I _{ON_RAMON_GPIOTE}	System ON, full 32 kB RAM retention, wake on GPIOTE input		2.5		μΑ
	(event mode)				
I _{ON_RAMON_GPIOTEPO}	_{RT} System ON, full 32 kB RAM retention, wake on GPIOTE PORT		0.6		μΑ
	event				
I _{ON_RAMOFF_RTC}	System ON, no RAM retention, wake on RTC (running from		1.2		μΑ
	LFRC clock)				
I _{ON_RAMON_RTC}	System ON, full 32 kB RAM retention, wake on RTC (running		1.4		μΑ
	from LFRC clock)				
I _{OFF_RAMOFF_RESET}	System OFF, no RAM retention, wake on reset		0.3		μΑ
I _{OFF_RAMON_RESET}	System OFF, full 32 kB RAM retention, wake on reset		0.5		μΑ

² Applies only when HFXO is running



Symbol	Description	Min.	Тур.	Max.	Units
I _{ON_RAMOFF_EVENT_5}	System ON, no RAM retention, wake on any event, 5 V		0.9		μΑ
	supply on VDDH, REGO output = 3.3 V				
I _{OFF_RAMOFF_RESET_5}	, System OFF, no RAM retention, wake on reset, 5 V supply on		0.7		μΑ

VDDH, REGO output = 3.3 V

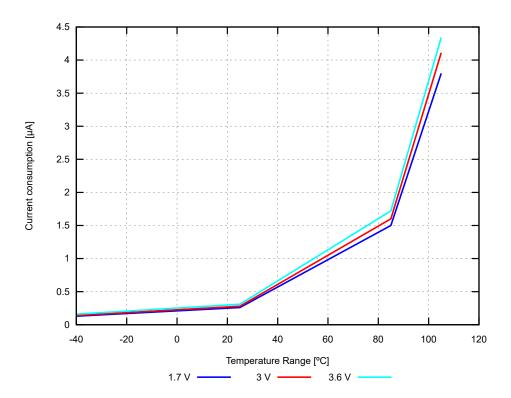


Figure 11: System OFF, no RAM retention, wake on reset (typical values)

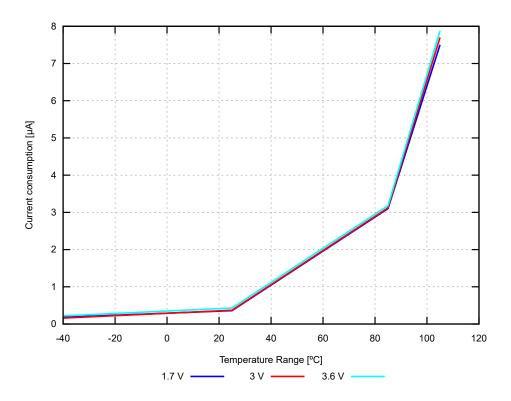


Figure 12: System ON, no RAM retention, wake on any event (typical values)



5.2.1.2 COMP active

Symbol	Description	Min.	Тур.	Max.	Units
I _{COMP,LP}	COMP enabled, low power mode		21.4		μΑ
I _{COMP,NORM}	COMP enabled, normal mode		25.3		μΑ
I _{COMP,HS}	COMP enabled, high-speed mode		33.0		μΑ

5.2.1.3 CPU running

Symbol	Description	Min.	Тур.	Max.	Units
I _{CPU0}	CPU running CoreMark @64 MHz from flash, Clock = HFXO,		2.1		mA
	Regulator = DC/DC				
I _{CPU1}	CPU running CoreMark @64 MHz from flash, Clock = HFXO		3.9		mA
I _{CPU2}	CPU running CoreMark @64 MHz from RAM, Clock = HFXO,		2.1		mA
	Regulator = DC/DC				
I _{CPU3}	CPU running CoreMark @64 MHz from RAM, Clock = HFXO		3.8		mA
I _{CPU4}	CPU running CoreMark @64 MHz from flash, Clock = HFINT,		1.9		mA
	Regulator = DC/DC				

5.2.1.4 Radio transmitting/receiving

Symbol	Description	Min.	Тур.	Max.	Units	
I _{RADIO_TX0}	Radio transmitting @ 8 dBm output power, 1 Mbps		15.0		mA	
	Bluetooth [®] Low Energy (BLE) mode, Clock = HFXO, Regulator					
	= DC/DC					
I _{RADIO_TX1}	Radio transmitting @ 0 dBm output power, 1 Mbps BLE		5.9		mA	
	mode, Clock = HFXO, Regulator = DC/DC					
I _{RADIO_TX2}	Radio transmitting @ -40 dBm output power, 1 Mbps BLE		3.4		mA	
	mode, Clock = HFXO, Regulator = DC/DC					
I _{RADIO_TX3}	Radio transmitting @ 0 dBm output power, 1 Mbps BLE		10.9		mA	
	mode, Clock = HFXO					
I _{RADIO_TX4}	Radio transmitting @ -40 dBm output power, 1 Mbps BLE		5.2		mA	
	mode, Clock = HFXO					
I _{RADIO_TX5}	Radio transmitting @ 0 dBm output power, 250 kbit/s IEE		5.9		mA	
	802.15.4-2006 mode, Clock = HFXO, Regulator = DC/DC					
I _{RADIO_RX0}	Radio receiving @ 1 Mbps BLE mode, Clock = HFXO,		5.8		mA	
	Regulator = DC/DC					
I _{RADIO_RX1}	Radio receiving @ 1 Mbps BLE mode, Clock = HFXO		10.5		mA	
I _{RADIO_RX2}	Radio receiving @ 250 kbit/s IEE 802.15.4-2006 mode, Clock		6.0		mA	
	= HFXO, Regulator = DC/DC					



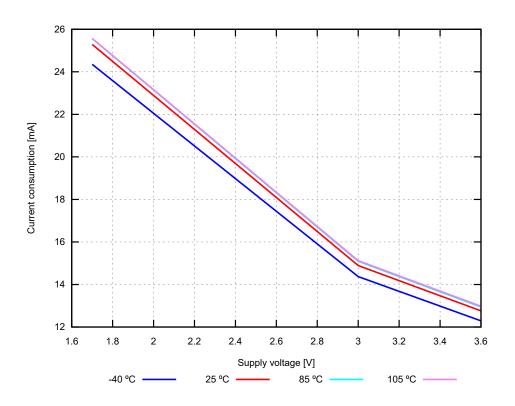


Figure 13: Radio transmitting @ 8 dBm output power, 1 Mbps BLE mode, Clock = HFXO, Regulator = DC/DC (typical values)

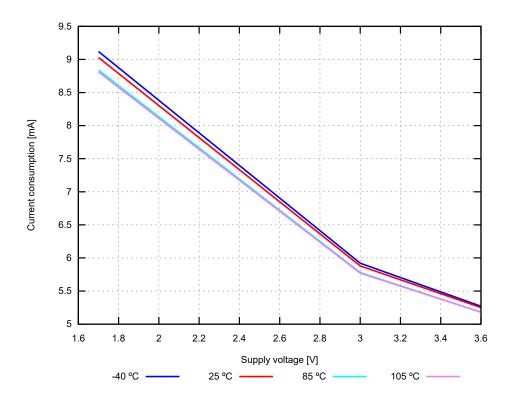


Figure 14: Radio transmitting @ 0 dBm output power, 1 Mbps BLE mode, Clock = HFXO, Regulator = DC/DC (typical values)



5.2.1.5 RNG active

Symbol	Description	Min.	Тур.	Max.	Units
I _{RNG0}	RNG running		471		μА

5.2.1.6 TEMP active

Symbol	Description	Min.	Тур.	Max.	Units
I _{TEMPO}	TEMP started		0.62		mA

5.2.1.7 TIMER running

Symbol	Description	Min.	Тур.	Max.	Units
I _{TIMERO}	One TIMER instance running @ 1 MHz, Clock = HFINT		326		μΑ
I _{TIMER1}	Two TIMER instances running @ 1 MHz, Clock = HFINT		327		μΑ
I _{TIMER2}	One TIMER instance running @ 1 MHz, Clock = HFXO		511		μΑ
I _{TIMER3}	One TIMER instance running @ 16 MHz, Clock = HFINT		426		μΑ
I _{TIMER4}	One TIMER instance running @ 16 MHz, Clock = HFXO		612		μΑ

5.2.1.8 WDT active

Symbol	Description	Min.	Тур.	Max.	Units
I _{WDT,STARTED}	WDT started		1.4		μΑ

5.2.1.9 Compounded

Symbol	Description	Min.	Тур.	Max.	Units
I _{SO}	CPU running CoreMark from flash, Radio transmitting @ 0		7.3		mA
	dBm output power, 1 Mbps <i>Bluetooth</i> [®] Low Energy (BLE)				
	mode, Clock = HFXO, Regulator = DC/DC				
I _{S1}	CPU running CoreMark from flash, Radio receiving @ 1		7.2		mA
	Mbps BLE mode, Clock = HFXO, Regulator = DC/DC				
I _{S2}	CPU running CoreMark from flash, Radio transmitting @ 0		14.1		mA
	dBm output power, 1 Mbps BLE mode, Clock = HFXO				
I _{S3}	CPU running CoreMark from flash, Radio receiving @ 1		13.7		mA
	Mbps BLE mode, Clock = HFXO				

5.3 POWER — Power supply

The power supply consists of a number of LDO and DC/DC regulators that are utilized to maximize the system's power efficiency.

This device has the following power supply features:

- On-chip LDO and DC/DC regulators
- Global System ON/OFF modes
- Individual RAM section power control for all system modes
- Analog or digital pin wakeup from System OFF
- Supervisor hardware to manage power-on reset, brownout, and power failure
- Auto-controlled refresh modes for LDO and DC/DC regulators to maximize efficiency



Separate USB supply

5.3.1 Main supply

The main supply voltage is connected to the VDD/VDDH pins. The system will enter one of two supply voltage modes, Normal or High Voltage mode, depending on how the supply voltage is connected to these pins.

The system enters Normal Voltage mode when the supply voltage is connected to both the VDD and VDDH pins (pin VDD shorted to pin VDDH). For the supply voltage range to connect to both VDD and VDDH pins, see parameter VDD.

The system enters High Voltage mode when the supply voltage is only connected to the VDDH pin and the VDD pin is not connected to any voltage supply. For the supply voltage range to connect to the VDDH pin, see parameter V_{DDH} .

The register MAINREGSTATUS on page 69 can be used to read the current supply voltage mode.

5.3.1.1 Main voltage regulators

The system contains two main supply regulator stages, REGO and REG1.

REG1 regulator stage has the regulator type options of Low-droput regulator (LDO) and Buck regulator (DC/DC). REG0 regulator stage has only the option of Low-dropout regulator (LDO).

In Normal Voltage mode, only the REG1 regulator stage is used, and the REG0 stage is automatically disabled. In High Voltage mode, both regulator stages (REG0 and REG1) are used. The output voltage of REG0 can be configured in register REGOUTO on page 36. This output voltage is connected to VDD and is the input voltage to REG1.

Note: In High Voltage mode, the configured output voltage for REG0 (REGOUT0 on page 36) must not be greater than REG0 input voltage minus the voltage drop in REG0 (VDDH - V_{VDDH-VDD}).

By default, the LDO regulators are enabled and the DC/DC regulator is disabled. Register DCDCEN on page 69 is used to enable the DC/DC regulator for REG1 stage.

When the DC/DC converter is enabled, the corresponding LDO regulator is disabled. External LC filter must be connected for the DC/DC regulator if it is being used. The advantage of using a DC/DC regulator is that the overall power consumption is normally reduced as the efficiency of such a regulator is higher than that of a LDO. The efficiency gained by using a DC/DC regulator is best seen when the regulator voltage drop (difference between input and output voltage) is high. The efficiency of internal regulators vary with the supply voltage and the current drawn from the regulators.

Note: Do not enable the DC/DC regulator without an external LC filter being connected as this will inhibit device operation, including debug access, until an LC filter is connected.

5.3.1.2 GPIO levels

The GPIO high reference voltage is equal to the level on the VDD pin.

In Normal Voltage mode, the GPIO high level equals the voltage supplied to the VDD pin. In High Voltage mode, it equals the level specified in register REGOUTO on page 36.

5.3.1.3 Regulator configuration examples

The voltage regulators can be configured in several ways, depending on the selected supply voltage mode (Normal/High) and the regulator type option for REG1 (LDO or DC/DC).

Four configuration examples are illustrated in the following figures.



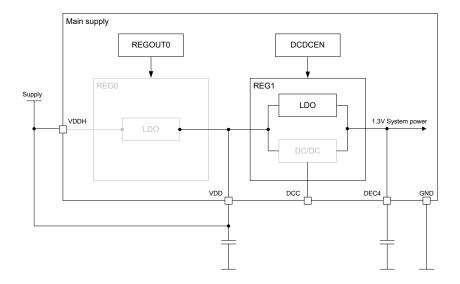


Figure 15: Normal Voltage mode, REG1 LDO

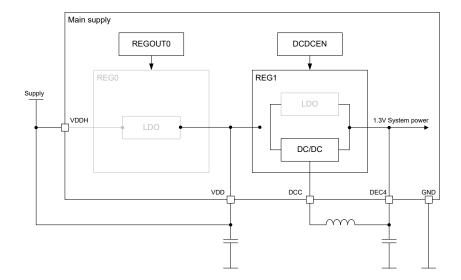


Figure 16: Normal Voltage mode, REG1 DC/DC



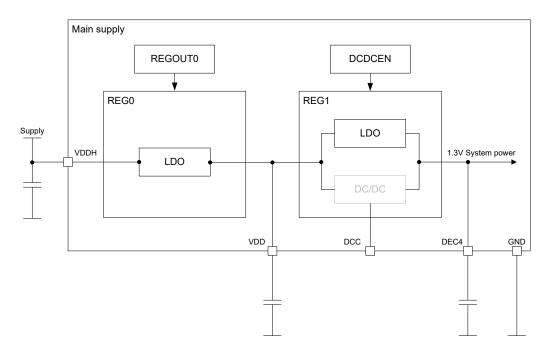


Figure 17: High Voltage mode, REG1 LDO

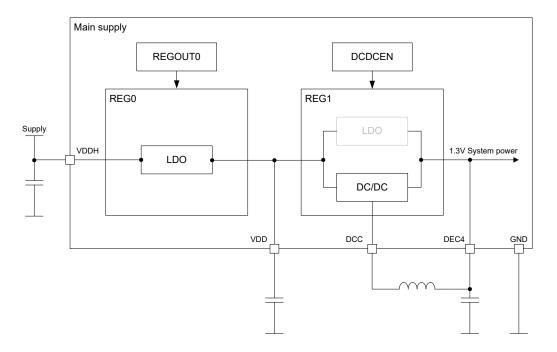


Figure 18: High Voltage mode, REG1 DC/DC

5.3.1.4 Power supply supervisor

4463_156 v1.4


The power supply supervisor enables monitoring of the connected power supply.

The power supply supervisor provides the following functionality:

- Power-on reset signals the circuit when a supply is connected
- An optional power-fail comparator (POF) signals the application when the supply voltages drop below a configured threshold
- A fixed brownout reset detector holds the system in reset when the voltage is too low for safe operation

55 NORDIC*

The power supply supervisor is illustrated in the following figure.

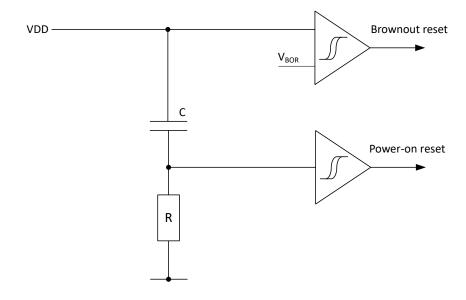

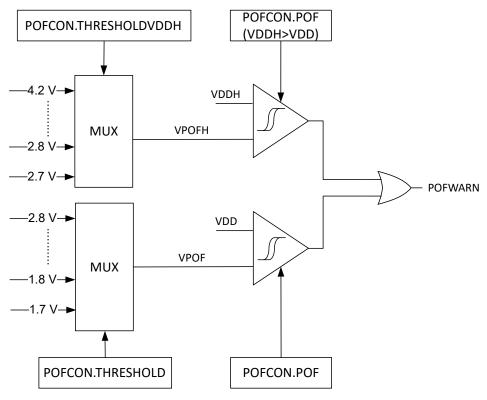


Figure 19: Power supply supervisor

5.3.1.5 Power-fail comparator

Using the power-fail comparator (POF) is optional. When enabled, it can provide an early warning to the CPU of an impending power supply failure.

To enable and configure the power-fail comparator, see the register POFCON on page 67.

When the supply voltage falls below the defined threshold, the power-fail comparator generates an event (POFWARN) that can be used by an application to prepare for power failure. This event is also generated when the supply voltage is already below the threshold at the time the power-fail comparator is enabled, or if the threshold is re-configured to a level above the supply voltage.



If the power failure warning is enabled, and the supply voltage is below the threshold, the power-fail comparator will prevent the NVMC from performing write operations to the flash.

The comparator features a hysteresis of V_{HYST}, as illustrated in the following figure.

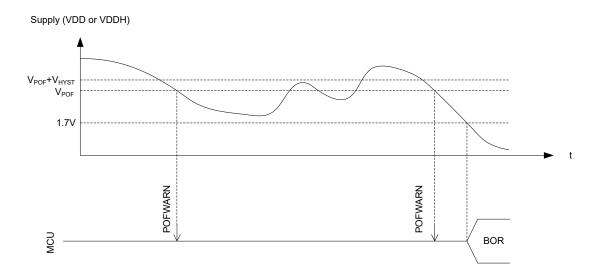


Figure 20: Power-fail comparator (BOR = brownout reset)

To save power, the power-fail comparator is not active in System OFF or System ON when HFCLK is not running.

5.3.2 USB supply

When using the USB peripheral, a 5 V USB supply needs to be provided to the VBUS pin.

The USB peripheral has a dedicated internal voltage regulator for converting the VBUS supply to 3.3 V used by the USB signalling interface (D+ and D- lines, and pull-up on D+). The remainder of the USB peripheral (USBD) is supplied through the main supply like other on-chip features. As a consequence, VBUS and either VDDH or VDD supplies are required for USB peripheral operation.

When VBUS rises into its valid range, the software is notified through a USBDETECTED event. A USBREMOVED event is sent when VBUS goes below its valid range. Use these events to implement the USBD start-up sequence described in the USBD chapter.

When VBUS rises into its valid range while the device is in System OFF, the device resets and transitions to System ON mode. The RESETREAS register will have the VBUS bit set to indicate the source of the wake-up.

See VBUS detection specifications on page 72 for the levels at which the events are sent ($V_{BUS,DETECT}$ and $V_{BUS,REMOVE}$) or at which the system is woken up from System OFF ($V_{BUS,DETECT}$).

When the USBD peripheral is enabled through the ENABLE register, and VBUS is detected, the regulator is turned on. A USBPWRRDY event is sent when the regulator's worst case settling time has elapsed, indicating to the software that it can enable the USB pull-up to signal a USB connection to the host.

The software can read the state of the VBUS detection and regulator output readiness at any time through the USBREGSTATUS register.



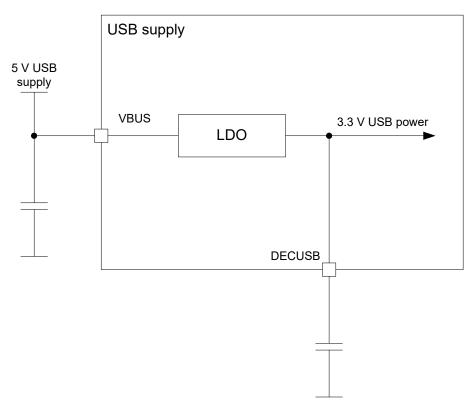


Figure 21: USB voltage regulator

To ensure stability, the input and output of the USB regulator need to be decoupled with a suitable decoupling capacitor. See Reference circuitry on page 423 for the recommended values.

5.3.3 System OFF mode

System OFF is the deepest power saving mode the system can enter. In this mode, the system's core functionality is powered down and all ongoing tasks are terminated.

The device can be put into System OFF mode using the register SYSTEMOFF on page 67. When in System OFF mode, the device can be woken up through one of the following signals:

- The DETECT signal, optionally generated by the GPIO peripheral.
- Detecting a valid USB voltage on the VBUS pin (V_{BUS,DETECT}).
- A reset.

The system is reset when it wakes up from System OFF mode.

One or more RAM sections can be retained in System OFF mode, depending on the settings in the RAM[n].POWER registers. RAM[n].POWER are retained registers. These registers are usually overwritten by the start-up code provided with the nRF application examples.

Before entering System OFF mode, all on-going EasyDMA transactions need to have completed. See peripheral specific chapters for more information about how to acquire the status of EasyDMA transactions.

5.3.3.1 Emulated System OFF mode

If the device is in Debug Interface mode, System OFF will be emulated to secure that all required resources needed for debugging are available during System OFF.

Required resources needed for debugging include the following key components:

- Debug on page 40
- CLOCK Clock control on page 72



- POWER Power supply on page 52
- NVMC Non-volatile memory controller on page 19
- CPU on page 14
- Flash memory
- RAM

See Debug on page 40 for more information.

Because the CPU is kept on in an emulated System OFF mode, it is recommended to add an infinite loop directly after entering System OFF, to prevent the CPU from executing code that normally should not be executed.

5.3.4 System ON mode

System ON is the default state after power-on reset. In System ON mode, all functional blocks such as the CPU or peripherals can be in IDLE or RUN mode, depending on the configuration set by the software and the state of the application executing.

Register RESETREAS on page 65 provides information about the source causing the wakeup or reset.

The system can switch the appropriate internal power sources on and off, depending on the amount of power needed at any given time. The power requirement of a peripheral is directly related to its activity level, and the activity level of a peripheral fluctuates when specific tasks are triggered or events are generated.

5.3.4.1 Sub-power modes

In System ON mode, when the CPU and all peripherals are in IDLE mode, the system can reside in one of the two sub-power modes.

The sub-power modes are:

- Constant Latency
- · Low-power

4463 156 v1.4

In Constant Latency mode, the CPU wakeup latency and the PPI task response are constant and kept at a minimum. This is secured by forcing a set of basic resources to be turned on while in sleep. The cost of constant and predictable latency is increased power consumption. Constant Latency mode is selected by triggering the CONSTLAT task.

In Low-power mode, the automatic power management system described in System ON mode on page 59 ensures that the most efficient supply option is chosen to save power. The cost of having the lowest possible power consumption is a varying CPU wakeup latency and PPI task response. Low-power mode is selected by triggering the LOWPWR task.

When the system enters System ON mode, it is by default in the sub-power mode Low-power.

5.3.5 RAM power control

The RAM power control registers are used for configuring the following:

- The RAM sections to be retained during System OFF
- The RAM sections to be retained and accessible during System ON

In System OFF, retention of a RAM section is configured in the RETENTION field of the corresponding register RAM[n].POWER (n=0..3) on page 69.

In System ON, retention and accessibility of a RAM section is configured in the RETENTION and POWER fields of the corresponding register RAM[n].POWER (n=0..3) on page 69.

The following table summarizes the behavior of these registers.

59 NORDIC

Configuration		RAM section status		
System on/off	RAM[n].POWER.POWER	RAM[n].POWER.RETENTION	Accessible	Retained
Off	х	Off	No	No
Off	х	On	No	Yes
On	Off	Off	No	No
On	Off ³	On	No	Yes
On	On	x	Yes	Yes

Table 17: RAM section configuration

The advantage of not retaining RAM contents is that the overall current consumption is reduced.

See Memory on page 15 for more information on RAM sections.

5.3.6 Reset

Several sources may trigger a reset.

After a reset has occurred, register RESETREAS can be read to determine which source triggered the reset.

5.3.6.1 Power-on reset

The power-on reset generator initializes the system at power-on.

The system is held in reset state until the supply has reached the minimum operating voltage and the internal voltage regulators have started.

5.3.6.2 Pin reset

A pin reset is generated when the physical reset pin on the device is asserted.

Pin reset is configured via both registers PSELRESET[n] (n=0..1) on page 35.

5.3.6.3 Wakeup from System OFF mode reset

The device is reset when it wakes up from System OFF mode.

The debug access port (DAP) is not reset following a wake up from System OFF mode if the device is in Debug Interface mode. See chapter Debug on page 40 for more information.

5.3.6.4 Soft reset

A soft reset is generated when the SYSRESETREQ bit of the application interrupt and reset control register (AIRCR) in the ARM® core is set.

See ARM documentation for more details.

A soft reset can also be generated via the register RESET on page 44 in the CTRL-AP.

5.3.6.5 Watchdog reset

A Watchdog reset is generated when the watchdog times out.

See chapter WDT — Watchdog timer on page 413 for more information.

5.3.6.6 Brownout reset

The brownout reset generator puts the system in a reset state if VDD drops below the brownout reset (BOR) threshold.

See section Power fail comparator on page 71 for more information.

³ Not useful. RAM section power off gives negligible reduction in current consumption when retention is on.



5.3.6.7 Retained registers

A retained register is one that will retain its value in System OFF mode and through a reset, depending on the reset source. See the individual peripheral chapters for information on which of their registers are retained.

5.3.6.8 Reset behavior

The various reset sources and their targets are summarized in the table below.

Reset source	Reset target								
	СРИ	Peripherals	GPIO	Debug ⁴	SWJ-DP	RAM	WDT	Retained registers	RESETREAS
CPU lockup ⁵	х	х	x						
Soft reset	х	х	х						
Wakeup from System OFF	x	x		x ⁶		x ⁷	x		
mode reset									
Watchdog reset ⁸	х	x	x	x		x	x	х	
Pin reset	x	x	x	x		x	x	x	
Brownout reset	x	x	x	x	x	x	x	x	х
Power-on reset	x	х	х	х	х	х	х	х	х

Note: The RAM is never reset, but depending on a reset source the content of RAM may be corrupted.

5.3.7 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40000000	POWER	POWER	Power control	

Table 18: Instances

Register	Offset	Description
TASKS_CONSTLAT	0x78	Enable Constant Latency mode
TASKS_LOWPWR	0x7C	Enable Low-power mode (variable latency)
EVENTS_POFWARN	0x108	Power failure warning
EVENTS_SLEEPENTER	0x114	CPU entered WFI/WFE sleep
EVENTS_SLEEPEXIT	0x118	CPU exited WFI/WFE sleep
EVENTS_USBDETECTED	0x11C	Voltage supply detected on VBUS
EVENTS_USBREMOVED	0x120	Voltage supply removed from VBUS
EVENTS_USBPWRRDY	0x124	USB 3.3 V supply ready
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt

⁴ All debug components excluding SWJ-DP. See Debug on page 40 for more information about the different debug components.



⁵ Reset from CPU lockup is disabled if the device is in Debug Interface mode. CPU lockup is not possible in System OFF.

⁶ The debug components will not be reset if the device is in Debug Interface mode.

⁷ RAM is not reset on wakeup from System OFF mode. RAM, or certain parts of RAM, may not be retained after the device has entered System OFF mode, depending on the settings in the RAM registers.

⁸ Watchdog reset is not available in System OFF.


Register	Offset	Description	
RESETREAS	0x400	Reset reason	
RAMSTATUS	0x428	RAM status register	Deprecated
USBREGSTATUS	0x438	USB supply status	
SYSTEMOFF	0x500	System OFF register	
POFCON	0x510	Power-fail comparator configuration	
GPREGRET	0x51C	General purpose retention register	
GPREGRET2	0x520	General purpose retention register	
DCDCEN	0x578	Enable DC/DC converter for REG1 stage	
MAINREGSTATUS	0x640	Main supply status	
RAM[0].POWER	0x900	RAM0 power control register	
RAM[0].POWERSET	0x904	RAM0 power control set register	
RAM[0].POWERCLR	0x908	RAM0 power control clear register	
RAM[1].POWER	0x910	RAM1 power control register	
RAM[1].POWERSET	0x914	RAM1 power control set register	
RAM[1].POWERCLR	0x918	RAM1 power control clear register	
RAM[2].POWER	0x920	RAM2 power control register	
RAM[2].POWERSET	0x924	RAM2 power control set register	
RAM[2].POWERCLR	0x928	RAM2 power control clear register	
RAM[3].POWER	0x930	RAM3 power control register	
RAM[3].POWERSET	0x934	RAM3 power control set register	
RAM[3].POWERCLR	0x938	RAM3 power control clear register	

Table 19: Register overview

5.3.7.1 TASKS_CONSTLAT

Address offset: 0x78


Enable Constant Latency mode

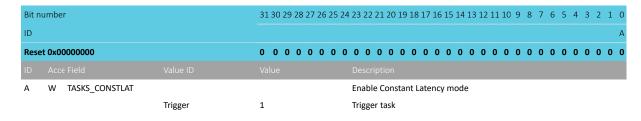

5.3.7.2 TASKS_LOWPWR

Address offset: 0x7C

Enable Low-power mode (variable latency)

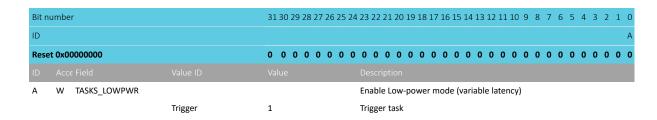

5.3.7.3 EVENTS_POFWARN

Address offset: 0x108 Power failure warning



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_POFWARN			Power failure warning
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.3.7.4 EVENTS_SLEEPENTER

Address offset: 0x114

CPU entered WFI/WFE sleep

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_SLEEPENTER			CPU entered WFI/WFE sleep
	NotGenerated	0	Event not generated
	Generated	1	Event generated

5.3.7.5 EVENTS_SLEEPEXIT

Address offset: 0x118

CPU exited WFI/WFE sleep

Bit n	umber		31 3	0 29	28 2	27 26	5 25	24	23 2	22 2	1 20) 19	18	17 1	6 15	5 14	13	12 1	1 10	9	8	7 6	5 5	4	3	2	1 0
ID																											А
Rese	t 0x00000000		0 0	0	0	0 0	0	0	0	0 (0 0	0	0	0 (0 0	0	0	0 (0	0	0 () (0	0	0	0	0 0
ID									Des																		
Α	RW EVENTS_SLEEPEXIT								CPL	J ex	ited	WF	I/W	FE s	leep)											
		NotGenerated	0					-	Eve	nt r	not g	gene	erate	d													
		Generated	1					-	Eve	nt g	gene	rate	ed														

5.3.7.6 EVENTS_USBDETECTED

Address offset: 0x11C

Voltage supply detected on VBUS

Bit n	umber		31	30	29	28 2	27 2	6 25	5 24	4 23	3 2:	2 2:	1 20	19	18	17 1	6 1	5 1	4 13	12	11	10 9	9 8	7	6	5	4	3	2	1 0
ID																														Α
Rese	et 0x00000000		0	0	0	0	0 (0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0 (0	0	0	0	0	0	0 (0 0
ID																														
Α	RW EVENTS_USBDETECTED									V	olta	age	sup	ply	det	ecte	ed c	n V	BUS	5										
		NotGenerated	0							E١	/en	nt no	ot g	ene	rate	d														
		Generated	1							E١	/en	nt ge	ene	rate	d															

63

5.3.7.7 EVENTS_USBREMOVED

Address offset: 0x120

Voltage supply removed from VBUS



Reset 0x000000000	0 0
	0 0
ID Acce Field Value ID Value Description	
A RW EVENTS_USBREMOVED Voltage supply removed from VBUS	
NotGenerated 0 Event not generated	
Generated 1 Event generated	

5.3.7.8 EVENTS_USBPWRRDY

Address offset: 0x124
USB 3.3 V supply ready

Bit number		313	0 29	9 28	27	26	25	24 :	23 2	22 :	21 2	20 :	19 1	18 :	17 1	16 :	15 :	14 :	13 1	L2 1	1 10	9	8	7	6	5	4	3	2	1 0
ID																														Α
Reset 0x00000000		0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0 (0 0
ID Acce Field									Des																					
A RW EVENTS_USBPWRRDY									USE	3 3.	.3 V	su	ppl	y re	ead	у														
I	NotGenerated	0							Eve	nt	not	ge	ner	ate	d															
	Generated	1							Eve	nt	gen	era	itec	ı																

5.3.7.9 INTENSET

Address offset: 0x304 Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW POFWARN			Write '1' to enable interrupt for event POFWARN
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW SLEEPENTER			Write '1' to enable interrupt for event SLEEPENTER
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW SLEEPEXIT			Write '1' to enable interrupt for event SLEEPEXIT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW USBDETECTED			Write '1' to enable interrupt for event USBDETECTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ε	RW USBREMOVED			Write '1' to enable interrupt for event USBREMOVED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW USBPWRRDY			Write '1' to enable interrupt for event USBPWRRDY
		Set	1	Enable
		Disabled	0	Read: Disabled



Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 1	.8 17 16 15	14 13 12	11 10 9	8 7	7 6	5	4 3 :	2 1 0
ID						F	E [С	В	,	Д
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0	0 0 0 0	0 0 0	0 0 0	0 (0	0	0 0 (0 0 0
ID Acce Field											
	Enabled	1	Read: Enabled								

5.3.7.10 INTENCLR

Address offset: 0x308

Disable interrupt

Reset 0x000000000 Acce Field Value ID Value Description
RW POFWARN Clear Disabled Enabled Disabled
RW POFWARN Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Brabled 0 Read: Disable interrupt for event SLEEPENTER Clear 1 Disable Disabled 0 Read: Disable interrupt for event SLEEPENTER Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disable Enabled 1 Read: Enabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Enabled 0 Read: Disable Enabled 1 Read: Enabled Enabled 1 Read: Enabled Read: Enabled Disable Read: Disable
Clear 1 RW SLEEPEXIT Clear 1 Disabled Enabled 1 Read: Enabled Enabled 0 Read: Enabled Clear 1 Disable Enabled 0 Read: Enabled Disable 0 Read: Enabled Clear 1 Disable Enabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Clear 1 Disable Clear 1 Disable Enabled 0 Read: Disable interrupt for event SLEEPEXIT Clear 1 Disable Disable 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPENTER Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPENTER Clear 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Enabled 1 Read: Enabled Read: Enabled Write '1' to disable interrupt for event SLEEPENTER Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
RW SLEEPENTER Clear Disable Disabled Enabled Enabled Disabled Clear Disabled Enabled Disabled Clear Disabled Enabled Disabled Clear Disabled Clear Disabled Read: Enabled Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Write '1' to disable interrupt for event SLEEPEXIT Disabled Disabled Read: Disabled Write '1' to disable interrupt for event USBDETECTED Clear Disabled Disabled Disabled Read: Disabled
Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disable 0 Read: Disable
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event SLEEPEXIT Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
C RW SLEEPEXIT Clear Disable Disabled Enabled Disabled Enabled The company of the company
Clear 1 Disable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Enabled 1 Read: Enabled O RW USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Write '1' to disable interrupt for event USBDETECTED Clear 1 Disable Disabled 0 Read: Disabled
Clear 1 Disable Disabled 0 Read: Disabled
Disabled 0 Read: Disabled
5 11 1
Enabled 1 Read: Enabled
RW USBREMOVED Write '1' to disable interrupt for event USBREMOVED
Clear 1 Disable
Disabled 0 Read: Disabled
Enabled 1 Read: Enabled
RW USBPWRRDY Write '1' to disable interrupt for event USBPWRRDY
Clear 1 Disable
Disabled 0 Read: Disabled
Enabled 1 Read: Enabled

5.3.7.11 RESETREAS

Address offset: 0x400

Reset reason

Unless cleared, the RESETREAS register will be cumulative. A field is cleared by writing '1' to it. If none of the reset sources are flagged, this indicates that the chip was reset from the on-chip reset generator, which will indicate a power-on-reset or a brownout reset.




Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				I G E D C B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW RESETPIN			Reset from pin-reset detected
		NotDetected	0	Not detected
		Detected	1	Detected
В	RW DOG			Reset from watchdog detected
		NotDetected	0	Not detected
		Detected	1	Detected
С	RW SREQ			Reset from soft reset detected
		NotDetected	0	Not detected
		Detected	1	Detected
D	RW LOCKUP			Reset from CPU lock-up detected
		NotDetected	0	Not detected
		Detected	1	Detected
Е	RW OFF			Reset due to wake up from System OFF mode when wakeup
				is triggered from DETECT signal from GPIO
		NotDetected	0	Not detected
		Detected	1	Detected
G	RW DIF			Reset due to wake up from System OFF mode when wakeup
				is triggered from entering into debug interface mode
		NotDetected	0	Not detected
		Detected	1	Detected
I	RW VBUS			Reset due to wake up from System OFF mode by VBUS rising
				into valid range
		NotDetected	0	Not detected
		Detected	1	Detected

5.3.7.12 RAMSTATUS (Deprecated)

Address offset: 0x428 RAM status register

Since this register is deprecated the following substitutions have been made: RAM block 0 is equivalent to a block comprising RAM0.S0 and RAM1.S0. RAM block 1 is equivalent to a block comprising RAM2.S0 and RAM3.S0. A RAM block field will indicate ON as long as any of the RAM sections associated with a block

are on.

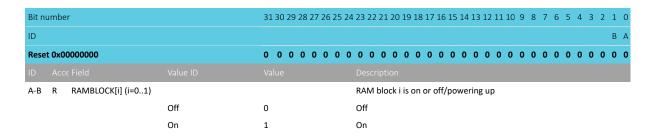

5.3.7.13 USBREGSTATUS

Address offset: 0x438

USB supply status



Bit n	umbe	r		31 30 2	29 28 2	27 2	6 25	24	23	3 22	2 21	20	19	18	17 :	16	15 1	4 1	.3 1	2 1:	1 10	9	8	7	6	5	4	3	2	1	D
ID																														В	4
Rese	t 0x0	0000000		0 0	0 0	0 (0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0	D
ID																															ı
Α	R	VBUSDETECT							VB	3US	S inp	out	det	ect	ion	sta	itus	(US	SBD	ETE	CTE	D a	nd								
									US	SBF	REM	OV	'ED	eve	ents	ar	e de	rive	ed f	ron	n th	s ir	nfor	ma	tior	1)					
			NoVbus	0					VB	3U	S vo	ltag	ge b	elo	wv	alio	d th	resl	nolo	ł											
			VbusPresent	1					VB	3U	S vo	ltag	ge al	bo	ve v	alio	d th	resh	nolo	l											
В	R	OUTPUTRDY							US	SB :	sup	ply	out	pu	t set	tlii	ng ti	me	ela	pse	ed										
			NotReady	0					US	SBF	REG	ou'	tput	se	ttlir	ng t	ime	no	t el	aps	ed										
			Ready	1					US	SBF	REG	ou'	tput	se	ttlir	ng t	ime	ela	apse	ed (sam	ie ii	nfor	ma	itio	n a	s				
									US	SBF	PWR	RD	Y ev	/en	t)																

5.3.7.14 SYSTEMOFF

Address offset: 0x500 System OFF register

Bit n	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				Α
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W SYSTEMOFF			Enable System OFF mode
		Enter	1	Enable System OFF mode

5.3.7.15 POFCON

Address offset: 0x510

Power-fail comparator configuration

Bit r	number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0		
ID				D D D D B B B B A		
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		
ID						
Α	RW POF			Enable or disable power failure warning		
		Disabled	0	Disable		
		Enabled	1	Enable		
В	RW THRESHOLD			Power-fail comparator threshold setting. This setting applies		
				both for normal voltage mode (supply connected to both		
	VDD and VDDH) and high voltage mode (supply connected					
		to VDDH only). Values 0-3 set threshold below 1.7 V and				
				should not be used as brown out detection will be activated		
				before power failure warning on such low voltages.		
		V17	4	Set threshold to 1.7 V		
		V18	5	Set threshold to 1.8 V		
		V19	6	Set threshold to 1.9 V		
		V20	7	Set threshold to 2.0 V		
		V21	8	Set threshold to 2.1 V		
		V22	9	Set threshold to 2.2 V		
		V23	10	Set threshold to 2.3 V		
		V24	11	Set threshold to 2.4 V		
		V25	12	Set threshold to 2.5 V		
		V26	13	Set threshold to 2.6 V		



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D D D D B B B B A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
		V27	14	Set threshold to 2.7 V
		V28	15	Set threshold to 2.8 V
D	RW THRESHOLDVDDH			Power-fail comparator threshold setting for high voltage
				mode (supply connected to VDDH only). This setting does
				not apply for normal voltage mode (supply connected to
				both VDD and VDDH).
		V27	0	Set threshold to 2.7 V
		V28	1	Set threshold to 2.8 V
		V29	2	Set threshold to 2.9 V
		V30	3	Set threshold to 3.0 V
		V31	4	Set threshold to 3.1 V
		V32	5	Set threshold to 3.2 V
		V33	6	Set threshold to 3.3 V
		V34	7	Set threshold to 3.4 V
		V35	8	Set threshold to 3.5 V
		V36	9	Set threshold to 3.6 V
		V37	10	Set threshold to 3.7 V
		V38	11	Set threshold to 3.8 V
		V39	12	Set threshold to 3.9 V
		V40	13	Set threshold to 4.0 V
		V41	14	Set threshold to 4.1 V
		V42	15	Set threshold to 4.2 V

5.3.7.16 GPREGRET

Address offset: 0x51C

General purpose retention register

Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14	1 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A
Res	et 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
Α	RW GPREGRET	General purpose retention reg	gister

This register is a retained register

5.3.7.17 GPREGRET2

Address offset: 0x520

General purpose retention register

Α	RW GPREGRET		General purpose retention reg	gister						
ID										
Rese	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	00000	0 0	0 (0 0	0	0 0	0
ID					Α	A /	4 A	А	A A	Α
Bit r	umber	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14	4 13 12 11 10 9 8	3 7	6 5	5 4	3	2 1	0

This register is a retained register






5.3.7.18 DCDCEN


Address offset: 0x578

Enable DC/DC converter for REG1 stage

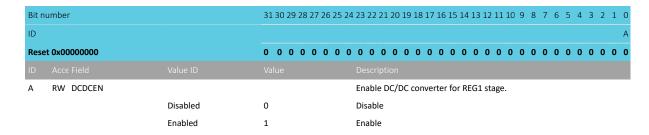

5.3.7.19 MAINREGSTATUS

Address offset: 0x640 Main supply status

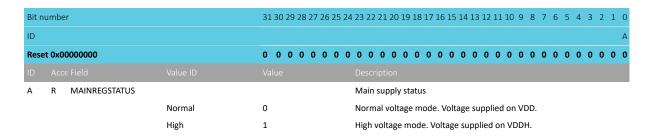

5.3.7.20 RAM[n].POWER (n=0..3)

Address offset: $0x900 + (n \times 0x10)$

RAMn power control register


Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0			
ID		D C				
Reset 0x0000FFFF		0 0 0 0 0	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $			
ID Acce Field			Description			
A-B RW S[i]POWER (i=01)			Keep RAM section Si on or off in System ON mode.			
			RAM sections are always retained when on, but can			
			also be retained when off depending on the settings in			
			SIRETENTION. All RAM sections will be off in System OFF			
			mode.			
	Off	0	Off			
	On	1	On			
C-D RW S[i]RETENTION (i=0	1)		Keep retention on RAM section Si when RAM section is off			
	Off	0	Off			
	On	1	On			

5.3.7.21 RAM[n].POWERSET (n=0..3)

Address offset: $0x904 + (n \times 0x10)$ RAMn power control set register




When read, this register will return the value of the POWER register.

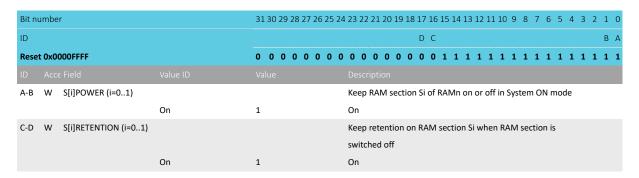

5.3.7.22 RAM[n].POWERCLR (n=0..3)

Address offset: $0x908 + (n \times 0x10)$ RAMn power control clear register

When read, this register will return the value of the POWER register.

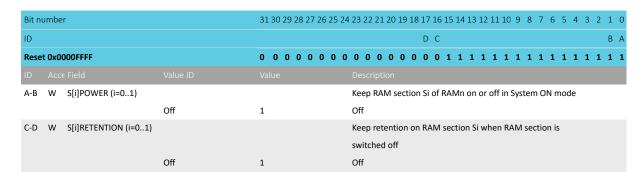

5.3.8 Electrical specification

5.3.8.1 Regulator operating conditions

Symbol	Description	Min.	Тур.	Max.	Units
V _{DD,POR}	VDD supply voltage needed during power-on reset	1.75			V
V_{DD}	Normal voltage mode operating voltage	1.7	3.0	3.6	V
V_{DDH}	High voltage mode operating voltage	2.5	3.7	5.5	V
C _{VDD}	Effective decoupling capacitance on the VDD pin	2.7	4.7	5.5	μF
C _{DEC4}	Effective decoupling capacitance on the DEC4 pin	0.7	1	1.3	μF

5.3.8.2 Regulator specifications, REGO stage

Symbol	Description	Min.	Тур.	Max.	Units
V _{REGOOUT}	REGO output voltage	1.8		3.3	V
V _{REGOOUT,ERR}	REGO output voltage error (deviation from setting in	-10		5	%
	REGOUTO on page 36)				
$V_{REGOOUT,ERR,EXT}$	REGO output voltage error (deviation from setting in	-10		7	%
	REGOUTO on page 36), extended temperature range				
$V_{VDDH-VDD}$	Required difference between input voltage (VDDH) and	0.3			V
	output voltage (VDD, configured in REGOUTO on page 36),				
	VDDH > VDD				





5.3.8.3 Device startup times

Symbol	Description	Min.	Тур.	Max.	Units
t _{POR}	Time in power-on reset after supply reaches minimum				
	operating voltage, depending on supply rise time				
$t_{POR,10\mu s}$	VDD rise time 10 μs^9		1	10	ms
t _{POR,10ms}	VDD rise time 10 ms ⁹		9		ms
t _{POR,60ms}	VDD rise time 60 ms ⁹		23	110	ms
t _{RISE,REGOOUT}	REGO output (VDD) rise time after VDDH reaches minimum				
	VDDH supply voltage ⁹				
t _{RISE,REG0OUT,10μs}	VDDH rise time 10 μs^9		0.22	1.55	ms
t _{RISE,REGOOUT,10ms}	VDDH rise time 10 ms ⁹		5		ms
t _{RISE,REGOOUT,100ms}	VDDH rise time 100 ms ⁹	30	50	80	ms
t _{PINR}	Reset time when using pin reset, depending on pin				
	capacitance				
t _{PINR,500nF}	500 nF capacitance at reset pin			32.5	ms
$t_{PINR,10\mu F}$	10 μF capacitance at reset pin			650	ms
t _{R2ON}	Time from power-on reset to System ON				
t _{R2ON,NOTCONF}	If reset pin not configured	tPOR			ms
t _{R2ON,CONF}	If reset pin configured	tPOR+			ms
		tPINR			
t _{OFF2ON}	Time from OFF to CPU execute		16.5		μs
t _{IDLE2CPU}	Time from IDLE to CPU execute		3.0		μs
t _{EVTSET,CL1}	Time from HW event to PPI event in Constant Latency		0.0625		μs
	System ON mode				
t _{EVTSET,CLO}	Time from HW event to PPI event in Low Power System ON		0.0625		μs
	mode				

5.3.8.4 Power fail comparator

	Min.	Тур.	Max.	Units
ominal power level warning thresholds (falling supply	1.7		2.8	V
ltage) in Normal voltage mode (supply on VDD). Levels are				
nfigurable between Min. and Max. in 100 mV increments				
ominal power level warning thresholds (falling supply	2.7		4.2	V
ltage) in High voltage mode (supply on VDDH). Levels are				
nfigurable in 100 mV increments				
reshold voltage tolerance (applies in both Normal voltage	-5		5	%
ode and High voltage mode)				
reshold voltage hysteresis (applies in both Normal voltage	40	50	60	mV
ode and High voltage mode)				
ownout reset voltage range System OFF mode. Brownout	1.2		1.62	V
ly applies to the voltage on VDD				
ownout reset voltage range System ON mode. Brownout	1.57	1.6	1.63	V
ly applies to the voltage on VDD				
li r	tage) in Normal voltage mode (supply on VDD). Levels are infigurable between Min. and Max. in 100 mV increments minal power level warning thresholds (falling supply tage) in High voltage mode (supply on VDDH). Levels are infigurable in 100 mV increments reshold voltage tolerance (applies in both Normal voltage de and High voltage mode) reshold voltage hysteresis (applies in both Normal voltage de and High voltage mode) whould reset voltage range System OFF mode. Brownout by applies to the voltage on VDD whould reset voltage range System ON mode. Brownout	tage) in Normal voltage mode (supply on VDD). Levels are infigurable between Min. and Max. in 100 mV increments minal power level warning thresholds (falling supply 2.7 tage) in High voltage mode (supply on VDDH). Levels are infigurable in 100 mV increments reshold voltage tolerance (applies in both Normal voltage de and High voltage mode) reshold voltage hysteresis (applies in both Normal voltage 40 de and High voltage mode) reshold voltage mode)	tage) in Normal voltage mode (supply on VDD). Levels are infigurable between Min. and Max. in 100 mV increments minal power level warning thresholds (falling supply 2.7 tage) in High voltage mode (supply on VDDH). Levels are infigurable in 100 mV increments reshold voltage tolerance (applies in both Normal voltage de and High voltage mode) reshold voltage hysteresis (applies in both Normal voltage de and High voltage mode) voltage mode) voltage mode voltage range System OFF mode. Brownout 1.2 y applies to the voltage ange System ON mode. Brownout 1.57 1.6	tage) in Normal voltage mode (supply on VDD). Levels are infigurable between Min. and Max. in 100 mV increments minal power level warning thresholds (falling supply 2.7 4.2 tage) in High voltage mode (supply on VDDH). Levels are infigurable in 100 mV increments reshold voltage tolerance (applies in both Normal voltage de and High voltage mode) reshold voltage hysteresis (applies in both Normal voltage de and High voltage mode) vershold voltage mode)



⁹ See Recommended operating conditions on page 444 for more information.

5.3.8.5 USB operating conditions

Symbol	Description	Min.	Тур.	Max.	Units
V_{BUS}	Supply voltage on VBUS pin	4.35	5	5.5	V
V_{DPDM}	Voltage on D+ and D- lines	VSS - 0.	VSS - 0.3		V
				+ 0.3	

5.3.8.6 USB regulator specifications

Symbol	Description	Min.	Тур.	Max.	Units
I _{USB,QUIES}	USB regulator quiescent current drawn from VBUS (USBD		170		μΑ
	enabled)				
t _{USBPWRRDY}	Time from USB enabled to USBPWRRDY event triggered,		1		ms
	V _{BUS} supply provided				
V _{USB33}	On voltage at the USB regulator output (DECUSB pin)	3.0	3.3	3.6	V
R _{SOURCE,VBUS}	Maximum source resistance on VBUS, including cable, when			6	Ω
	VDDH is not connected to VBUS				
R _{SOURCE,VBUSVDDH}	Maximum source resistance on VBUS, including cable, when			3.8	Ω
	VDDH is connected to VBUS				
C_{DECUSB}	Decoupling capacitor on the DECUSB pin	2.35	4.7	5.5	μF

5.3.8.7 VBUS detection specifications

Symbol	Description	Min.	Тур.	Max.	Units
V _{BUS,DETECT}	Voltage at which rising VBUS gets reported by USBDETECTED	3.4	4.0	4.3	V
V _{BUS,REMOVE}	Voltage at which decreasing VBUS gets reported by	3.0	3.6	3.9	V
	USBREMOVED				

5.4 CLOCK — Clock control

The clock control system can source the system clocks from a range of internal or external high and low frequency oscillators and distribute them to modules based upon a module's individual requirements. Clock distribution is automated and grouped independently by module to limit current consumption in unused branches of the clock tree.

Listed here are the main features for CLOCK:

- 64 MHz on-chip oscillator
- 64 MHz crystal oscillator, using external 32 MHz crystal
- 32.768 kHz +/-500 ppm RC oscillator
- 32.768 kHz crystal oscillator, using external 32.768 kHz crystal
- 32.768 kHz oscillator synthesized from 64 MHz oscillator
- Firmware (FW) override control of crystal oscillator activity for low latency start up
- Automatic internal oscillator and clock control, and distribution for ultra-low power



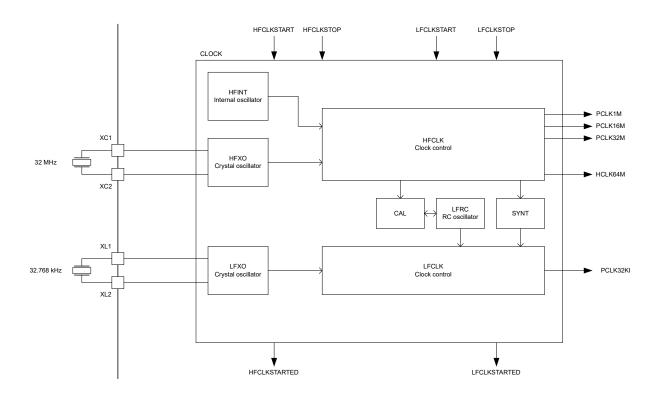


Figure 22: Clock control

5.4.1 HFCLK controller

The HFCLK controller provides several clock signals in the system.

These are as follows:

- HCLK64M: 64 MHz CPU clock
- PCLK1M: 1 MHz peripheral clock
- PCLK16M: 16 MHz peripheral clock
- PCLK32M: 32 MHz peripheral clock

The HFCLK controller uses the following high frequency clock (HFCLK) sources:

- 64 MHz internal oscillator (HFINT)
- 64 MHz crystal oscillator (HFXO)

For illustration, see Clock control on page 73.

The HFCLK controller will automatically provide the clock(s) requested by the system. If the system does not request any clocks from the HFCLK controller, the controller will enter a power saving mode.

The HFINT source will be used when HFCLK is requested and HFXO has not been started.

The HFXO is started by triggering the HFCLKSTART task and stopped by triggering the HFCLKSTOP task. When the HFCLKSTART task is triggered, the HFCLKSTARTED event is generated once the HFXO startup time has elapsed. The HFXO startup time is given as the sum of the following:

- HFXO power-up time, as specified in 64 MHz crystal oscillator (HFXO) on page 85.
- HFXO debounce time, as specified in register HFXODEBOUNCE on page 84.

The HFXO must be running to use the RADIO or the calibration mechanism associated with the 32.768 kHz RC oscillator.



5.4.1.1 64 MHz crystal oscillator (HFXO)

The 64 MHz crystal oscillator (HFXO) is controlled by a 32 MHz external crystal.

The crystal oscillator is designed for use with an AT-cut quartz crystal in parallel resonant mode. To achieve correct oscillation frequency, the load capacitance must match the specification in the crystal data sheet.

Circuit diagram of the 64 MHz crystal oscillator on page 74 shows how the 32 MHz crystal is connected to the 64 MHz crystal oscillator.

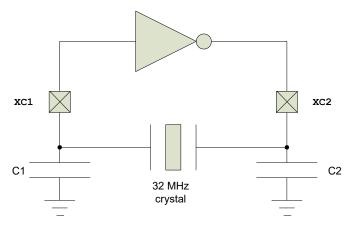


Figure 23: Circuit diagram of the 64 MHz crystal oscillator

The load capacitance (CL) is the total capacitance seen by the crystal across its terminals and is given by:

$$CL = \frac{\left(C1' \cdot C2'\right)}{\left(C1' + C2'\right)}$$

$$C1' = C1 + C_{pcb1} + C_{pin}$$

 $C2' = C2 + C_{pcb2} + C_{pin}$

C1 and C2 are ceramic SMD capacitors connected between each crystal terminal and ground. For more information, see Reference circuitry on page 423. C_{pcb1} and C_{pcb2} are stray capacitances on the PCB. C_{pin} is the pin input capacitance on the XC1 and XC2 pins. See table 64 MHz crystal oscillator (HFXO) on page 85. The load capacitors C1 and C2 should have the same value.

For reliable operation, the crystal load capacitance, shunt capacitance, equivalent series resistance, and drive level must comply with the specifications in table 64 MHz crystal oscillator (HFXO) on page 85. It is recommended to use a crystal with lower than maximum load capacitance and/or shunt capacitance. A low load capacitance will reduce both start up time and current consumption.

5.4.2 LFCLK controller

The system supports several low frequency clock sources.

As illustrated in Clock control on page 73, the system supports the following low frequency clock sources:

- 32.768 kHz RC oscillator (LFRC)
- 32.768 kHz crystal oscillator (LFXO)
- 32.768 kHz synthesized from HFCLK (LFSYNT)

The LFCLK controller and all of the LFCLK clock sources are always switched off when in System OFF mode.



The LFCLK clock is started by first selecting the preferred clock source in register LFCLKSRC on page 84 and then triggering the LFCLKSTART task. If the LFXO is selected as the clock source, the LFCLK will initially start running from the 32.768 kHz LFRC while the LFXO is starting up and automatically switch to using the LFXO once this oscillator is running. The LFCLKSTARTED event will be generated when the LFXO has been started.

The register LFXODEBOUNCE on page 84 is used to configure the LFXO debounce time. The register must be modified if operating in the Extended Operating Conditions temperature range, see Recommended operating conditions on page 444. The LFXO start up time will be increased as a result.

The LFCLK clock is stopped by triggering the LFCLKSTOP task.

Register LFCLKSRC on page 84 controls the clock source, and its allowed swing. The truth table for various situations is as follows:

SRC	EXTERNAL	BYPASS	Comment
0	0	0	Normal operation, LFRC is source
0	0	1	DO NOT USE
0	1	Χ	DO NOT USE
1	0	0	Normal XTAL operation
1	1	0	Apply external low swing signal to XL1, ground XL2
1	1	1	Apply external full swing signal to XL1, leave XL2 grounded or unconnected
1	0	1	DO NOT USE
2	0	0	Normal operation, LFSYNT is source
2	0	1	DO NOT USE
2	1	Χ	DO NOT USE

Table 20: LFCLKSRC configuration depending on clock source

It is not allowed to write to register LFCLKSRC on page 84 when the LFCLK is running.

A LFCLKSTOP task will stop the LFCLK oscillator. However, the LFCLKSTOP task can only be triggered after the STATE field in register LFCLKSTAT on page 83 indicates LFCLK running state.

The synthesized 32.768 kHz clock depends on the HFCLK to run. If high accuracy is required for the LFCLK running off the synthesized 32.768 kHz clock, the HFCLK must running from the HFXO source.

5.4.2.1 32.768 kHz RC oscillator (LFRC)

The default source of the low frequency clock (LFCLK) is the 32.768 kHz RC oscillator (LFRC).

The LFRC oscillator does not require additional external components.

The LFRC frequency will be affected by variation in temperature. The LFRC oscillator can be calibrated to improve accuracy by using the HFXO as a reference oscillator during calibration.

5.4.2.2 Calibrating the 32.768 kHz RC oscillator

After the LFRC oscillator is started and running, it can be calibrated by triggering the CAL task.

The LFRC oscillator will then temporarily request the HFCLK to be used as a reference for the calibration. A DONE event will be generated when calibration has finished. The HFCLK crystal oscillator has to be started (by triggering the HFCLKSTART task) in order for the calibration mechanism to work.

It is not allowed to stop the LFRC during an ongoing calibration.

5.4.2.3 Calibration timer

The calibration timer can be used to time the calibration interval of the 32,768 kHz RC oscillator.

The calibration timer is started by triggering the CTSTART task and stopped by triggering the CTSTOP task. The calibration timer will always start counting down from the value specified in CTIV (Retained) on page

NORDIC*

85 and generate a CTTO event when it reaches 0. The calibration timer will automatically stop when it reaches 0.




Figure 24: Calibration timer

After a CTSTART task has been triggered, the calibration timer will ignore further tasks until it has returned the CTSTARTED event. Likewise, after a CTSTOP task has been triggered, the calibration timer will ignore further tasks until it has returned a CTSTOPPED event. Triggering CTSTART while the calibration timer is running will immediately return a CTSTARTED event. Triggering CTSTOP when the calibration timer is stopped will immediately return a CTSTOPPED event.

5.4.2.4 32.768 kHz crystal oscillator (LFXO)

For higher LFCLK accuracy (when better than +/- 500 ppm accuracy is required), the low frequency crystal oscillator (LFXO) must be used.

The following external clock sources are supported:

- Low swing clock signal applied to the XL1 pin. The XL2 pin shall then be grounded.
- Rail-to-rail clock signal applied to the XL1 pin. The XL2 pin shall then be grounded or left unconnected.

To achieve correct oscillation frequency, the load capacitance must match the specification in the crystal data sheet. Circuit diagram of the 32.768 kHz crystal oscillator on page 76 shows the LFXO circuitry.

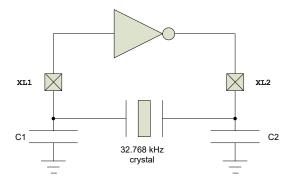


Figure 25: Circuit diagram of the 32.768 kHz crystal oscillator

The load capacitance (CL) is the total capacitance seen by the crystal across its terminals and is given by:

$$CL = \frac{\left(C1' \cdot C2'\right)}{\left(C1' + C2'\right)}$$

$$C1' = C1 + C_{pcb1} + C_{pin}$$

 $C2' = C2 + C_{pcb2} + C_{pin}$

C1 and C2 are ceramic SMD capacitors connected between each crystal terminal and ground. C_{pcb1} and C_{pcb2} are stray capacitances on the PCB. C_{pin} is the pin input capacitance on the XC1 and XC2 pins (see Low frequency crystal oscillator (LFXO) on page 86). The load capacitors C1 and C2 should have the same value.



For more information, see Reference circuitry on page 423.

5.4.2.5 32.768 kHz synthesized from HFCLK (LFSYNT)

LFCLK can also be synthesized from the HFCLK clock source. The accuracy of LFCLK will then be the accuracy of the HFCLK.

Using the LFSYNT clock avoids the requirement for a 32.768 kHz crystal, but increases average power consumption as the HFCLK will need to be requested in the system.

5.4.3 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40000000	CLOCK	CLOCK	Clock control		

Table 21: Instances

TASKS HFCLKSTART			
INDING_III CENGIANI	0x000	Start HFXO crystal oscillator	
TASKS_HFCLKSTOP	0x004	Stop HFXO crystal oscillator	
TASKS_LFCLKSTART	0x008	Start LFCLK	
TASKS_LFCLKSTOP	0x00C	Stop LFCLK	
TASKS_CAL	0x010	Start calibration of LFRC	
TASKS_CTSTART	0x014	Start calibration timer	
TASKS_CTSTOP	0x018	Stop calibration timer	
EVENTS_HFCLKSTARTED	0x100	HFXO crystal oscillator started	
EVENTS_LFCLKSTARTED	0x104	LFCLK started	
EVENTS_DONE	0x10C	Calibration of LFRC completed	
EVENTS_CTTO	0x110	Calibration timer timeout	
EVENTS_CTSTARTED	0x128	Calibration timer has been started and is ready to process new tasks	
EVENTS_CTSTOPPED	0x12C	Calibration timer has been stopped and is ready to process new tasks	
INTENSET	0x304	Enable interrupt	
INTENCLR	0x308	Disable interrupt	
HFCLKRUN	0x408	Status indicating that HFCLKSTART task has been triggered	
HFCLKSTAT	0x40C	HFCLK status	
LFCLKRUN	0x414	Status indicating that LFCLKSTART task has been triggered	
LFCLKSTAT	0x418	LFCLK status	
LFCLKSRCCOPY	0x41C	Copy of LFCLKSRC register, set when LFCLKSTART task was triggered	
LFCLKSRC	0x518	Clock source for the LFCLK	
HFXODEBOUNCE	0x528	HFXO debounce time. The HFXO is started by triggering the TASKS_HFCLKSTART task.	
LFXODEBOUNCE	0x52C	${\it LFXO \ debounce \ time. \ The \ LFXO \ is \ started \ by \ triggering \ the \ TASKS_LFCLKSTART \ task \ when \ the}$	
		LFCLKSRC register is configured for Xtal.	
CTIV	0x538	Calibration timer interval	Retained

Table 22: Register overview

5.4.3.1 TASKS_HFCLKSTART

Address offset: 0x000

Start HFXO crystal oscillator



Bit no	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_HFCLKSTAR	Т		Start HFXO crystal oscillator
		Trigger	1	Trigger task

5.4.3.2 TASKS_HFCLKSTOP

Address offset: 0x004

Stop HFXO crystal oscillator

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_HFCLKSTOP			Stop HFXO crystal oscillator
		Trigger	1	Trigger task

5.4.3.3 TASKS_LFCLKSTART

Address offset: 0x008


Start LFCLK

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value I	D Value	Description
A W TASKS_LFCLKSTART		Start LFCLK
Trigger	1	Trigger task

5.4.3.4 TASKS_LFCLKSTOP

Address offset: 0x00C

Stop LFCLK

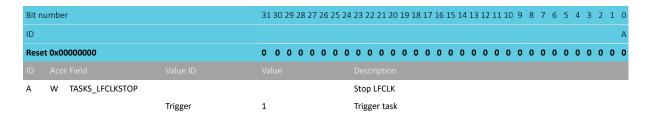

5.4.3.5 TASKS_CAL

Address offset: 0x010
Start calibration of LFRC



Bit nu	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Reset	t 0x00000000		0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID				Description
Α	W TASKS_CAL			Start calibration of LFRC
		Trigger	1	Trigger task

5.4.3.6 TASKS_CTSTART

Address offset: 0x014 Start calibration timer

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_CTSTART			Start calibration timer
		Trigger	1	Trigger task

5.4.3.7 TASKS_CTSTOP

Address offset: 0x018 Stop calibration timer

Bit number		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_CTSTOP			Stop calibration timer
	Trigger	1	Trigger task

5.4.3.8 EVENTS_HFCLKSTARTED

Address offset: 0x100

HFXO crystal oscillator started

Bit n	umber		313	0 29	28 2	7 26	25	24 2	23 2	22 2	1 20	19	18	17 1	6 15	5 14	13	12 1	1 10	9	8	7 (5 5	4	3	2	1 0
ID																											Α
Rese	t 0x00000000		0 (0 0	0 (0 0	0	0	0	0 (0 0	0	0	0 (0	0	0	0 (0	0	0	0 () (0	0	0	0 0
ID																											
Α	RW EVENTS_HFCLKSTARTED							-	HFX	(О с	rysta	al os	scilla	ator	star	ted											
		NotGenerated	0					1	Eve	nt n	ot g	ene	rate	ed													
		Generated	1					-	Eve	nt g	gene	rate	d														

5.4.3.9 EVENTS_LFCLKSTARTED

Address offset: 0x104

LFCLK started



Bit n	umber		31 30 29 28 27 26	5 25 24	23 2	22 2	1 20	19 18	17 1	6 15	14 13	3 12 1	11 10	9 8	3 7	6	5	4	3 2	1	0
ID																					Α
Rese	t 0x00000000		0 0 0 0 0 0	0 0	0	0 (0 0	0 0	0 0	0 (0 0	0	0 0	0 (0	0	0	0	0	0	0
ID																					
Α	RW EVENTS_LFCLKSTARTED				LFC	LK s	tarte	d													
		NotGenerated	0		Eve	nt n	not ge	enerat	ed												
		Generated	1		Eve	nt g	gener	ated													

5.4.3.10 EVENTS_DONE

Address offset: 0x10C


Calibration of LFRC completed

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_DONE			Calibration of LFRC completed
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.4.3.11 EVENTS_CTTO

Address offset: 0x110

Calibration timer timeout

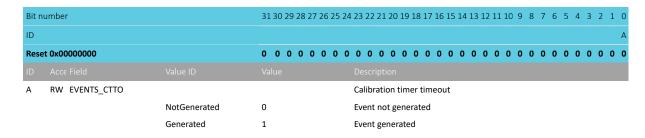

5.4.3.12 EVENTS_CTSTARTED

Address offset: 0x128

Calibration timer has been started and is ready to process new tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_CTSTARTED			Calibration timer has been started and is ready to process
				new tasks
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.4.3.13 EVENTS_CTSTOPPED

Address offset: 0x12C

Calibration timer has been stopped and is ready to process new tasks



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_CTSTOPPED			Calibration timer has been stopped and is ready to process
				new tasks
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.4.3.14 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
Α	RW HFCLKSTARTED			Write '1' to enable interrupt for event HFCLKSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW LFCLKSTARTED			Write '1' to enable interrupt for event LFCLKSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW DONE			Write '1' to enable interrupt for event DONE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW CTTO			Write '1' to enable interrupt for event CTTO
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ε	RW CTSTARTED			Write '1' to enable interrupt for event CTSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW CTSTOPPED			Write '1' to enable interrupt for event CTSTOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

5.4.3.15 INTENCLR

Address offset: 0x308 Disable interrupt

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 1	14 13 12 11 10 9 8 7	7 6 5 4	3 2 1 0
ID			F E	D	С В А
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0	0000
ID Acce Field Value ID					

RW HFCLKSTARTED Write '1' to disable interrupt for event HFCLKSTARTED






Bit r	number		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW LFCLKSTARTED			Write '1' to disable interrupt for event LFCLKSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW DONE			Write '1' to disable interrupt for event DONE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW CTTO			Write '1' to disable interrupt for event CTTO
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW CTSTARTED			Write '1' to disable interrupt for event CTSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW CTSTOPPED			Write '1' to disable interrupt for event CTSTOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

5.4.3.16 HFCLKRUN

Address offset: 0x408

Status indicating that HFCLKSTART task has been triggered

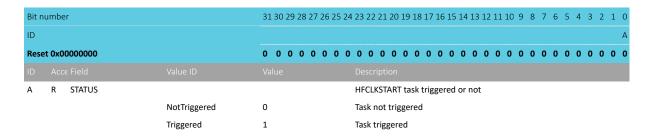


5.4.3.17 HFCLKSTAT

Address offset: 0x40C

HFCLK status




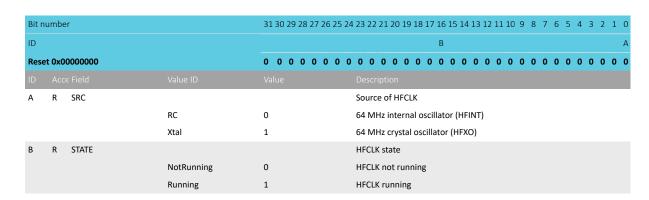

5.4.3.18 LFCLKRUN

Address offset: 0x414


Status indicating that LFCLKSTART task has been triggered

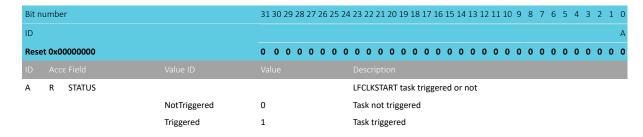

5.4.3.19 LFCLKSTAT

Address offset: 0x418

LFCLK status

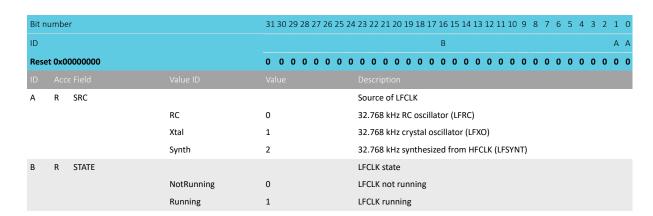

5.4.3.20 LFCLKSRCCOPY

Address offset: 0x41C

Copy of LFCLKSRC register, set when LFCLKSTART task was triggered



Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A R SRC			Clock source
	RC	0	32.768 kHz RC oscillator (LFRC)
	RC Xtal	0 1	32.768 kHz RC oscillator (LFRC) 32.768 kHz crystal oscillator (LFXO)

5.4.3.21 LFCLKSRC

Address offset: 0x518

Clock source for the LFCLK

Bit r	number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0									
ID				C B A A									
Res	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0									
Α	RW SRC			Clock source									
		RC	0	32.768 kHz RC oscillator (LFRC)									
		Xtal	1	32.768 kHz crystal oscillator (LFXO)									
		Synth	2	32.768 kHz synthesized from HFCLK (LFSYNT)									
В	RW BYPASS			Enable or disable bypass of LFCLK crystal oscillator with									
				external clock source									
		Disabled	0	Disable (use with Xtal or low-swing external source)									
		Enabled	1	Enable (use with rail-to-rail external source)									
С	RW EXTERNAL			Enable or disable external source for LFCLK									
		Disabled	0	Disable external source (use with Xtal)									
		Enabled	1	Enable use of external source instead of Xtal (SRC needs to									
				be set to Xtal)									

5.4.3.22 HFXODEBOUNCE

Address offset: 0x528

HFXO debounce time. The HFXO is started by triggering the TASKS_HFCLKSTART task.

The EVENTS_HFCLKSTARTED event is generated after the HFXO power up time + the HFXO debounce time has elapsed. It is not allowed to change the value of this register while the HFXO is starting.

Bit r	number		313	30 29	9 28	27	26 2	5 24	4 23	3 2:	2 2:	1 20	19	18	17 :	16	15 1	4 1	.3 1	2 1:	1 10	9	8	7	6	5	4	3	2	1 0
ID																								Α	Α	Α	Α	Α	Α.	А А
Rese	et 0x00000010		0	0 0	0	0	0 (0 0	0	0	0	0	0	0	0	0	0 () (0 0	0	0	0	0	0	0	0	1	0	0	0 0
ID																														
Α	RW HFXODEBOUNCE		0x0	10	ĸFF				Н	FXC	O de	ebo	unc	e ti	me.	De	bou	ınc	e tir	ne	= H	FXO	DEB	Οι	JNC	E *	*			
									16	6 μ	ıs.																			
		Db256us	0x1	.0					25	56	μs c	deb	oun	ce t	time	. R	eco	mn	nen	dec	d fo	r 1.6	mn	n x	2.0	m	m			
									cr	yst	tals	and	d lar	ger																
		Db1024us	0x4	0					10	024	4 μs	del	bou	nce	tin	ie.	Rec	om	mei	nde	ed fo	or 1.	.6 m	m	x 1.	2				
									m	nm	cry	stals	s an	d sı	mal	er.														

5.4.3.23 LFXODEBOUNCE

Address offset: 0x52C



LFXO debounce time. The LFXO is started by triggering the TASKS_LFCLKSTART task when the LFCLKSRC register is configured for Xtal.

The EVENTS_LFCLKSTARTED event is generated after the LFXO debounce time has elapsed. It is not allowed to change the value of this register while the LFXO is starting.




5.4.3.24 CTIV (Retained)

Address offset: 0x538

This register is a retained register

Calibration timer interval



5.4.4 Electrical specification

5.4.4.1 64 MHz internal oscillator (HFINT)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_HFINT}	Nominal output frequency		64		MHz
f _{TOL_HFINT}	Frequency tolerance		±1.5	±8	%
f _{TOL_HFINT,EXT}	Frequency tolerance, extended temperature range			±9	%

5.4.4.2 64 MHz crystal oscillator (HFXO)

	Min.	Тур.	Max.	Units
frequency		64		MHz
requency		32		MHz
ance requirement for 2.4 GHz proprietary			±60	ppm
is				
ance requirement, Bluetooth low energy			±40	ppm
ket length ≤ 200 bytes				
ance requirement, Bluetooth low energy			±30	ppm
ket length > 200 bytes				
2			12	pF
f	frequency frequency ance requirement for 2.4 GHz proprietary as ance requirement, Bluetooth low energy cket length ≤ 200 bytes ance requirement, Bluetooth low energy cket length > 200 bytes	frequency frequency ance requirement for 2.4 GHz proprietary as ance requirement, Bluetooth low energy cket length ≤ 200 bytes ance requirement, Bluetooth low energy cket length > 200 bytes	frequency 64 frequency 32 ance requirement for 2.4 GHz proprietary ans ance requirement, Bluetooth low energy cket length ≤ 200 bytes ance requirement, Bluetooth low energy cket length > 200 bytes	frequency 64 frequency 32 ance requirement for 2.4 GHz proprietary ±60 as ance requirement, Bluetooth low energy ±40 cket length ≤ 200 bytes ance requirement, Bluetooth low energy ±30 cket length > 200 bytes



Symbol	Description	Min.	Тур.	Max.	Units
C _{0_HFXO}	Shunt capacitance			7	pF
R _{S_HFXO_7PF}	Equivalent series resistance 3 pF < C0 ≤ 7 pF			60	Ω
R _{S_HFXO_3PF}	Equivalent series resistance C0 ≤ 3 pF			100	Ω
P _{D_HFXO}	Drive level			100	μW
C _{PIN_HFXO}	Input capacitance XC1 and XC2		3		pF
I _{STBY_X32M}	Core standby current for various crystals				
I _{STBY_X32M_X0}	Typical parameters for a given 2.5mm x 2.0mm crystal:		65		μΑ
	CL_HFXO = 8 pF, CO_HFXO = 1 pF, LM_HFXO = 7 mH,				
	$RS_HFXO = 20 \Omega$				
I _{STBY_X32M_X1}	Typical parameters for a given 1.6mm x 1.2mm crystal:		110		μΑ
	CL_HFXO = 8 pF, C0_HFXO = 0.4 pF, LM_HFXO = 20 mH,				
	RS_HFXO = 40Ω				
I _{START_X32M}	Average startup current for various crystals, first 1 ms				
I _{START_X32M_X0}	Typical parameters for a given 2.5mm x 2.0mm crystal:		360		μΑ
	CL_HFXO = 8 pF, CO_HFXO = 1 pF, LM_HFXO = 7 mH,				
	$RS_HFXO = 20 \Omega$				
I _{START_X32M_X1}	Typical parameters for a given 1.6mm x 1.2mm crystal:		785		μΑ
	CL_HFXO = 8 pF, C0_HFXO = 0.4 pF, LM_HFXO = 20 mH,				
	RS_HFXO = 40Ω				
t _{POWERUP_X32M}	Power-up time for various crystals				
t _{POWERUP_X32M_X0}	Typical parameters for a given 2.5mm x 2.0mm crystal:		60		μs
	CL_HFXO = 8 pF, C0_HFXO = 1 pF, LM_HFXO = 7 mH,				
	RS_HFXO = 20Ω				
t _{POWERUP_X32M_X1}	Typical parameters for a given 1.6mm x 1.2mm crystal:		200		μs
	CL_HFXO = 8 pF, C0_HFXO = 0.4 pF, LM_HFXO = 20 mH,				
	RS HFXO = 40Ω				
	-				

5.4.4.3 Low frequency crystal oscillator (LFXO)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFXO}	Crystal frequency		32.768		kHz
f _{TOL_LFXO_BLE}	Frequency tolerance requirement for BLE stack			±500	ppm
$f_{TOL_LFXO_ANT}$	Frequency tolerance requirement for ANT stack			±50	ppm
C _{L_LFXO}	Load capacitance			12.5	pF
C _{0_LFXO}	Shunt capacitance			2	pF
R _{S_LFXO}	Equivalent series resistance			100	kΩ
P_{D_LFXO}	Drive level			0.5	μW
C _{pin}	Input capacitance on XL1 and XL2 pads		4		pF
I _{LFXO}	Run current for 32.768 kHz crystal oscillator		0.23		μΑ
t_{START_LFXO}	Startup time for 32.768 kHz crystal oscillator		0.25		S
$t_{START_LFXO_EXT}$	Startup time for 32.768 kHz crystal oscillator when		0.5		S
	CLOCK.LFXODEBOUNCE configured for Extended debounce				
	time				
$V_{AMP,IN,XO,LOW}$	Peak to peak amplitude for external low swing clock. Input	200		1000	mV
	signal must not swing outside supply rails.				

5.4.4.4 Low frequency RC oscillator (LFRC)



Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFRC}	Nominal frequency		32.768		kHz
f_{TOL_LFRC}	Frequency tolerance, uncalibrated			±5	%
$f_{TOL_CAL_LFRC}$	Frequency tolerance after calibration 10			±500	ppm
I _{LFRC}	Run current		0.7		μΑ
t _{START LFRC}	Startup time		1000		μs

5.4.4.5 Synthesized low frequency clock (LFSYNT)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFSYNT}	Nominal frequency		32.768		kHz



Constant temperature within ± 0.5 °C, calibration performed at least every 8 seconds, averaging interval > 7.5 ms, defined as 3 sigma

6 Peripherals

6.1 Peripheral interface

Peripherals are controlled by the CPU by writing to configuration registers and task registers. Peripheral events are indicated to the CPU by event registers and interrupts if they are configured for a given event.

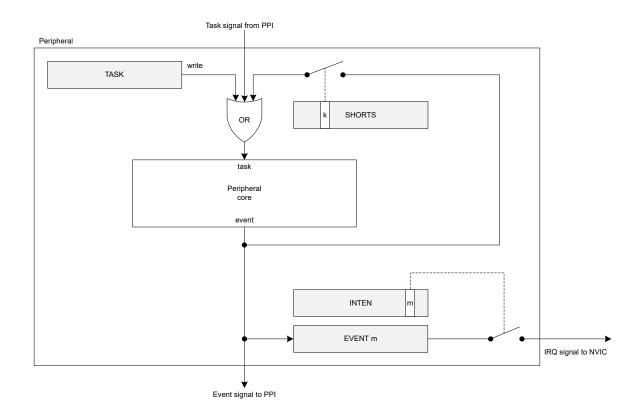


Figure 26: Tasks, events, shortcuts, and interrupts

6.1.1 Peripheral ID

Every peripheral is assigned a fixed block of 0x1000 bytes of address space, which is equal to 1024 x 32 bit registers.

See Instantiation on page 18 for more information about which peripherals are available and where they are located in the address map.

There is a direct relationship between peripheral ID and base address. For example, a peripheral with base address 0x40000000 is assigned ID=0, a peripheral with base address 0x40001000 is assigned ID=1, and a peripheral with base address 0x4001F000 is assigned ID=31.

Peripherals may share the same ID, which may impose one or more of the following limitations:

- Some peripherals share some registers or other common resources.
- Operation is mutually exclusive. Only one of the peripherals can be used at a time.
- Switching from one peripheral to another must follow a specific pattern (disable the first, then enable the second peripheral).



6.1.2 Peripherals with shared ID

In general (with the exception of ID 0), peripherals sharing an ID and base address may not be used simultaneously. The user can only enable one peripheral at the time on this specific ID.

When switching between two peripherals sharing an ID, the user should do the following to prevent unwanted behavior:

- 1. Disable the previously used peripheral.
- 2. Remove any programmable peripheral interconnect (PPI) connections set up for the peripheral that is being disabled.
- 3. Clear all bits in the INTEN register, i.e. INTENCLR = 0xFFFFFFFF.
- **4.** Explicitly configure the peripheral that you are about to enable and do not rely on configuration values that may be inherited from the peripheral that was disabled.
- 5. Enable the now configured peripheral.

See which peripherals are sharing ID in Instantiation on page 18.

6.1.3 Peripheral registers

Most peripherals feature an ENABLE register. Unless otherwise specified in the relevant chapter, the peripheral registers (in particular the PSEL registers) must be configured before enabling the peripheral.

The peripheral must be enabled before tasks and events can be used.

6.1.4 Bit set and clear

Registers with multiple single-bit bit fields may implement the set-and-clear pattern. This pattern enables firmware to set and clear individual bits in a register without having to perform a read-modify-write operation on the main register.

This pattern is implemented using three consecutive addresses in the register map, where the main register is followed by dedicated SET and CLR registers (in that exact order).

The SET register is used to set individual bits in the main register while the CLR register is used to clear individual bits in the main register. Writing $\mathbb 1$ to a bit in SET or CLR register will set or clear the same bit in the main register respectively. Writing $\mathbb 0$ to a bit in SET or CLR register has no effect. Reading the SET or CLR register returns the value of the main register.

Note: The main register may not be visible and hence not directly accessible in all cases.

6.1.5 Tasks

Tasks are used to trigger actions in a peripheral, for example to start a particular behavior. A peripheral can implement multiple tasks with each task having a separate register in that peripheral's task register group.

A task is triggered when firmware writes 1 to the task register, or when the peripheral itself or another peripheral toggles the corresponding task signal. See Tasks, events, shortcuts, and interrupts on page 88.

6.1.6 Events

Events are used to notify peripherals and the CPU about events that have happened, for example a state change in a peripheral. A peripheral may generate multiple events with each event having a separate register in that peripheral's event register group.

An event is generated when the peripheral itself toggles the corresponding event signal, and the event register is updated to reflect that the event has been generated. See Tasks, events, shortcuts, and interrupts on page 88. An event register is only cleared when firmware writes 0 to it.



Events can be generated by the peripheral even when the event register is set to 1.

6.1.7 Shortcuts

A shortcut is a direct connection between an event and a task within the same peripheral. If a shortcut is enabled, the associated task is automatically triggered when its associated event is generated.

Using a shortcut is the equivalent to making the same connection outside the peripheral and through the PPI. However, the propagation delay through the shortcut is usually shorter than the propagation delay through the PPI.

Shortcuts are predefined, which means their connections cannot be configured by firmware. Each shortcut can be individually enabled or disabled through the shortcut register, one bit per shortcut, giving a maximum of 32 shortcuts for each peripheral.

6.1.8 Interrupts

All peripherals support interrupts. Interrupts are generated by events.

A peripheral only occupies one interrupt, and the interrupt number follows the peripheral ID. For example, the peripheral with ID=4 is connected to interrupt number 4 in the nested vectored interrupt controller (NVIC).

Using the INTEN, INTENSET, and INTENCLR registers, every event generated by a peripheral can be configured to generate that peripheral's interrupt. Multiple events can be enabled to generate interrupts simultaneously. To resolve the correct interrupt source, the event registers in the event group of peripheral registers will indicate the source.

Some peripherals implement only INTENSET and INTENCLR registers, and the INTEN register is not available on those peripherals. See the individual peripheral chapters for details. In all cases, reading back the INTENSET or INTENCLR register returns the same information as in INTEN.

Each event implemented in the peripheral is associated with a specific bit position in the INTEN, INTENSET, and INTENCLR registers.

The relationship between tasks, events, shortcuts, and interrupts is shown in Tasks, events, shortcuts, and interrupts on page 88.

Interrupt clearing

Clearing an interrupt by writing 0 to an event register, or disabling an interrupt using the INTENCLR register, can take up to four CPU clock cycles to take effect. This means that an interrupt may reoccur immediately, even if a new event has not come, if the program exits an interrupt handler after the interrupt is cleared or disabled but before four clock cycles have passed.

Note: To avoid an interrupt reoccurring before a new event has come, the program should perform a read from one of the peripheral registers. For example, the event register that has been cleared, or the INTENCLR register that has been used to disable the interrupt. This will cause a one to three-cycle delay and ensure the interrupt is cleared before exiting the interrupt handler.

Care should be taken to ensure the compiler does not remove the read operation as an optimization. If the program can guarantee a four-cycle delay after an event is cleared or an interrupt is disabled, then a read of a register is not required.



6.2 AAR — Accelerated address resolver

Accelerated address resolver is a cryptographic support function for implementing the Resolvable Private Address Resolution procedure described in *Bluetooth Core Specification* v4.0. Resolvable Private Address generation should be achieved using ECB and is not supported by AAR.

The procedure allows two devices that share a secret key to generate and resolve a hash based on their device address. The AAR block enables real-time address resolution on incoming packets when configured as described in this chapter. This allows real-time packet filtering (whitelisting) using a list of known shared keys (Identity Resolving Keys (IRK) in *Bluetooth*).

6.2.1 EasyDMA

AAR implements EasyDMA for reading and writing to RAM. EasyDMA will have finished accessing RAM when the END, RESOLVED, and NOTRESOLVED events are generated.

If the IRKPTR on page 96, ADDRPTR on page 96, and the SCRATCHPTR on page 96 is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

6.2.2 Resolving a resolvable address

A private resolvable address is composed of six bytes according to the Bluetooth Core Specification.




Figure 27: Resolvable address

To resolve an address, the register ADDRPTR on page 96 must point to the start of the packet. The resolver is started by triggering the START task. A RESOLVED event is generated when AAR manages to resolve the address using one of the Identity Resolving Keys (IRK) found in the IRK data structure. AAR will use the IRK specified in the register IRKO to IRK15 starting from IRKO. The register NIRK on page 95 specifies how many IRKs should be used. The AAR module will generate a NOTRESOLVED event if it is not able to resolve the address using the specified list of IRKs.

AAR will go through the list of available IRKs in the IRK data structure and for each IRK try to resolve the address according to the Resolvable Private Address Resolution Procedure described in the *Bluetooth Core specification* v4.0 [Vol 3] chapter 10.8.2.3. The time it takes to resolve an address varies due to the location in the list of the resolvable address. The resolution time will also be affected by RAM accesses performed by other peripherals and the CPU. See the Electrical specifications for more information about resolution time.

AAR only compares the received address to those programmed in the module without checking the address type.

AAR will stop as soon as it has managed to resolve the address, or after trying to resolve the address using NIRK number of IRKs from the IRK data structure. AAR will generate an END event after it has stopped.



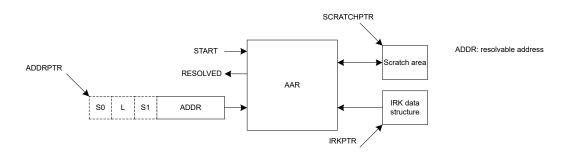


Figure 28: Address resolution with packet preloaded into RAM

6.2.3 Example

The following example shows how to chain RADIO packet reception with address resolution using AAR.

AAR may be started as soon as the 6 bytes required by AAR have been received by RADIO and stored in RAM. The ADDRPTR pointer must point to the start of packet.

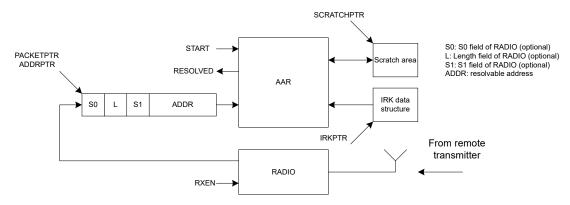


Figure 29: Address resolution with packet loaded into RAM by RADIO

6.2.4 IRK data structure

The IRK data structure is located in RAM at the memory location specified by the IRKPTR register.

Property	Address offset	Description
IRKO	0	IRK number 0 (16 bytes)
IRK1	16	IRK number 1 (16 bytes)
IRK15	240	IRK number 15 (16 bytes)

Table 23: IRK data structure overview

6.2.5 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000F000	AAR	AAR	Accelerated address resolver	

Table 24: Instances

Register	Offset	Description
TASKS_START	0x000	Start resolving addresses based on IRKs specified in the IRK data structure
TASKS_STOP	0x008	Stop resolving addresses
EVENTS END	0x100	Address resolution procedure complete



Register	Offset	Description
EVENTS_RESOLVED	0x104	Address resolved
EVENTS_NOTRESOLVED	0x108	Address not resolved
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
STATUS	0x400	Resolution status
ENABLE	0x500	Enable AAR
NIRK	0x504	Number of IRKs
IRKPTR	0x508	Pointer to IRK data structure
ADDRPTR	0x510	Pointer to the resolvable address
SCRATCHPTR	0x514	Pointer to data area used for temporary storage

Table 25: Register overview

6.2.5.1 TASKS_START


Address offset: 0x000

Start resolving addresses based on IRKs specified in the IRK data structure

Bit number			31 30	29	28 2	7 26	25 2	4 2	3 22	21	20 1	19 1	8 17	16	15	14 1	3 12	2 11	10	9 8	3 7	6	5	4	3	2 1	. 0
ID																											Α
Reset 0x000	00000		0 0	0	0 (0 0	0 (0	0	0	0	0 0	0	0	0	0	0 0	0	0	0 0	0	0	0	0	0	0 (0
ID Acce f																											
A W	TASKS_START							S	tart	resc	olvin	ng ac	ddre	sses	s ba	sed	on	IRKs	spe	cifie	d ir	the	e IR	K			
								d	ata	stru	ctur	e															
		Trigger	1					Т	rigge	er ta	sk																

6.2.5.2 TASKS_STOP


Address offset: 0x008 Stop resolving addresses

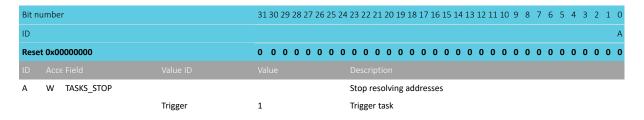

6.2.5.3 EVENTS_END

Address offset: 0x100

Address resolution procedure complete

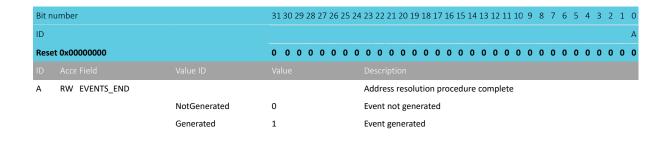




6.2.5.4 EVENTS_RESOLVED


Address offset: 0x104

Address resolved

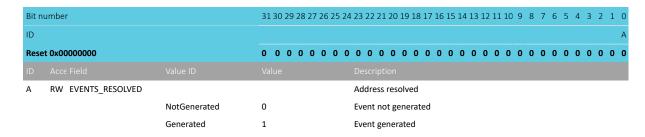

6.2.5.5 EVENTS_NOTRESOLVED

Address offset: 0x108
Address not resolved

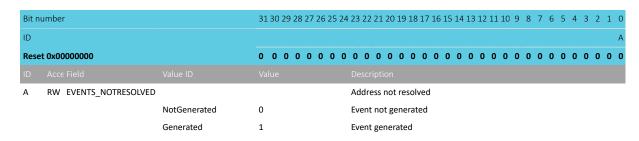

6.2.5.6 INTENSET

Address offset: 0x304 Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW END			Write '1' to enable interrupt for event END
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RESOLVED			Write '1' to enable interrupt for event RESOLVED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW NOTRESOLVED			Write '1' to enable interrupt for event NOTRESOLVED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.2.5.7 INTENCLR

Address offset: 0x308

Disable interrupt



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RESOLVED			Write '1' to disable interrupt for event RESOLVED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW NOTRESOLVED			Write '1' to disable interrupt for event NOTRESOLVED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.2.5.8 STATUS

Address offset: 0x400 Resolution status

A R STATUS	[015]	The IRK that was used last time an address was resolved
ID Acce Field		Description
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		АААА
Bit number	31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.2.5.9 ENABLE

Address offset: 0x500

Enable AAR

Bit number		31 30 29 28 27	² 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			АА
Reset 0x00000000		0 0 0 0 0	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $
ID Acce Field			Description
A RW ENABLE			Enable or disable AAR
	Disabled	0	Disable
	Enabled	3	Enable

6.2.5.10 NIRK

Address offset: 0x504

Number of IRKs


			structure
Α	RW NIRK	[116]	Number of Identity Root Keys available in the IRK data
Res	et 0x00000001	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A
Bit	number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0



6.2.5.11 IRKPTR

Address offset: 0x508


Pointer to IRK data structure



6.2.5.12 ADDRPTR

Address offset: 0x510


Pointer to the resolvable address



6.2.5.13 SCRATCHPTR

Address offset: 0x514

Pointer to data area used for temporary storage

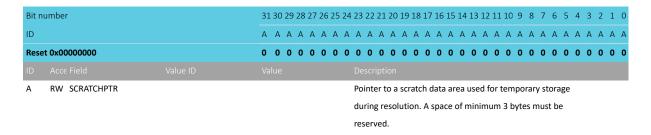

6.2.6 Electrical specification

6.2.6.1 AAR Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{AAR}	Address resolution time per IRK. Total time for several IRKs	6	μs		
	is given as (1 μs + n * t_AAR), where n is the number of IRKs.				
	(Given priority to the actual destination RAM block).				
t _{AAR,8}	Time for address resolution of 8 IRKs. (Given priority to the			49	μs
	actual destination RAM block).				

6.3 ACL — Access control lists

The Access control lists (ACL) peripheral is designed to assign and enforce access permission schemes for different regions of the on-chip flash memory map.





Flash memory regions can be assigned individual ACL permission schemes. The following registers are involved:

- PERM register configures permission schemes
- ADDR register defines the flash page start address (word-aligned)
- SIZE register determines the size of the region where the permission schemes are applied

Note: The size of the region is restricted to a multiple of the flash page size, measured in bytes. The maximum region is limited to half the size of the flash page. See Memory on page 15 for more information.

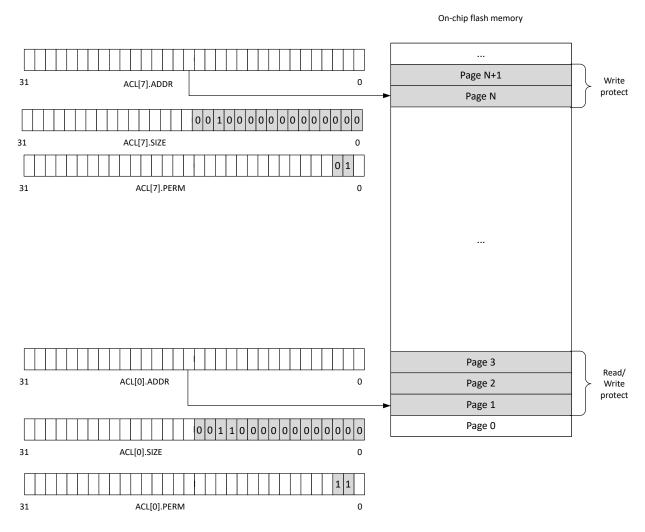


Figure 30: On-chip flash memory protected regions

There are four defined ACL permission schemes, each with different combinations of read/write permissions, as shown in the following table.



Read	Write	Protection description			
0	0	No protection. Entire region can be executed, read, written to, or erased.			
0	1	Region can be executed and read, but not written to or erased.			
1	0	Region can be written to and erased, but not executed or read.			
1	1	Region is locked for all access until next reset.			

Table 26: ACL permission schemes

Note: If a permission violation to a protected region is detected by the ACL peripheral, the request is blocked and a Bus Fault exception is triggered.

Access control to a configured region is enforced by the hardware. This goes into effect two CPU clock cycles after the ADDR, SIZE, and PERM registers for an ACL instance are written successfully. There are two dependencies for protection to be enforced. First, a valid start address for the flash page boundary must be written to the ADDR register. Second, the SIZE and PERM registers cannot be zero.

The ADDR, SIZE, and PERM registers can only be written once. All ACL configuration registers are cleared on reset by resetting the device from a reset source. This is the only way of clearing the configuration registers. To ensure that the ACL peripheral always enforces the desired permission schemes, the device boot sequence must perform the necessary configuration.

Debugger read access to a read-protected region will be Read-As-Zero (RAZ), while debugger write access to a write-protected region will be Write-Ignored (WI).

6.3.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4001E000	ACL	ACL	Access control lists	

Table 27: Instances

Register	Offset	Description	
ACL[0].ADDR	0x800	Start address of region to protect. The start address must be word-aligned.	
ACL[0].SIZE	0x804	Size of region to protect counting from address ACL[0].ADDR. Writing a '0' has no effect.	
ACL[0].PERM	0x808	Access permissions for region 0 as defined by start address ACL[0].ADDR and size ACL[0].SIZE	
ACL[0].UNUSED0	0x80C		Reserved
ACL[1].ADDR	0x810	Start address of region to protect. The start address must be word-aligned.	
ACL[1].SIZE	0x814	Size of region to protect counting from address ACL[1].ADDR. Writing a '0' has no effect.	
ACL[1].PERM	0x818	Access permissions for region 1 as defined by start address ACL[1].ADDR and size ACL[1].SIZE	
ACL[1].UNUSED0	0x81C		Reserved
ACL[2].ADDR	0x820	Start address of region to protect. The start address must be word-aligned.	
ACL[2].SIZE	0x824	Size of region to protect counting from address ACL[2].ADDR. Writing a '0' has no effect.	
ACL[2].PERM	0x828	Access permissions for region 2 as defined by start address ACL[2].ADDR and size ACL[2].SIZE	
ACL[2].UNUSED0	0x82C		Reserved
ACL[3].ADDR	0x830	Start address of region to protect. The start address must be word-aligned.	
ACL[3].SIZE	0x834	Size of region to protect counting from address ACL[3].ADDR. Writing a '0' has no effect.	
ACL[3].PERM	0x838	Access permissions for region 3 as defined by start address ACL[3].ADDR and size ACL[3].SIZE	
ACL[3].UNUSED0	0x83C		Reserved
ACL[4].ADDR	0x840	Start address of region to protect. The start address must be word-aligned.	
ACL[4].SIZE	0x844	Size of region to protect counting from address ACL[4].ADDR. Writing a '0' has no effect.	
ACL[4].PERM	0x848	Access permissions for region 4 as defined by start address ACL[4].ADDR and size ACL[4].SIZE	
ACL[4].UNUSED0	0x84C		Reserved



Register	Offset	Description	
ACL[5].ADDR	0x850	Start address of region to protect. The start address must be word-aligned.	
ACL[5].SIZE	0x854	Size of region to protect counting from address ACL[5].ADDR. Writing a '0' has no effect.	
ACL[5].PERM	0x858	Access permissions for region 5 as defined by start address ACL[5].ADDR and size ACL[5].SIZE	
ACL[5].UNUSED0	0x85C		Reserved
ACL[6].ADDR	0x860	Start address of region to protect. The start address must be word-aligned.	
ACL[6].SIZE	0x864	Size of region to protect counting from address ACL[6].ADDR. Writing a '0' has no effect.	
ACL[6].PERM	0x868	Access permissions for region 6 as defined by start address ACL[6].ADDR and size ACL[6].SIZE	
ACL[6].UNUSED0	0x86C		Reserved
ACL[7].ADDR	0x870	Start address of region to protect. The start address must be word-aligned.	
ACL[7].SIZE	0x874	Size of region to protect counting from address ACL[7].ADDR. Writing a '0' has no effect.	
ACL[7].PERM	0x878	Access permissions for region 7 as defined by start address ACL[7].ADDR and size ACL[7].SIZE	
ACL[7].UNUSED0	0x87C		Reserved


Table 28: Register overview

6.3.1.1 ACL[n].ADDR (n=0..7)

Address offset: $0x800 + (n \times 0x10)$

Start address of region to protect. The start address must be word-aligned.

This register can only be written once.




to a flash page boundary.

6.3.1.2 ACL[n].SIZE (n=0..7)

Address offset: $0x804 + (n \times 0x10)$

Size of region to protect counting from address ACL[n].ADDR. Writing a '0' has no effect.

This register can only be written once.



Size of flash region n in bytes. Must be a multiple of the flash page size.

6.3.1.3 ACL[n].PERM (n=0..7)

Address offset: $0x808 + (n \times 0x10)$

Access permissions for region n as defined by start address ACL[n].ADDR and size ACL[n].SIZE

This register can only be written once.



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВ
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
В	RW1 WRITE			Configure write and erase permissions for region n. Writing
				a '0' has no effect.
		Enable	0	Allow write and erase instructions to region n.
		Disable	1	Block write and erase instructions to region n.
С	RW1 READ			Configure read permissions for region n. Writing a '0' has no
				effect.
		Enable	0	Allow read instructions to region n.
		Disable	1	Block read instructions to region n.

6.4 CCM — AES CCM mode encryption

Cipher block chaining - message authentication code (CCM) mode is an authenticated encryption algorithm designed to provide both authentication and confidentiality during data transfer. CCM combines counter mode encryption and CBC-MAC authentication. The CCM terminology "Message authentication code (MAC)" is called the "Message integrity check (MIC)" in *Bluetooth* terminology and also in this document.

The CCM block generates an encrypted keystream that is applied to input data using the XOR operation and generates the four byte MIC field in one operation. CCM and RADIO can be configured to work synchronously. CCM will encrypt in time for transmission and decrypt after receiving bytes into memory from the radio. All operations can complete within the packet RX or TX time. CCM on this device is implemented according to *Bluetooth* requirements and the algorithm as defined in IETF RFC3610, and depends on the AES-128 block cipher. A description of the CCM algorithm can also be found in NIST Special Publication 800-38C. The *Bluetooth* specification describes the configuration of counter mode blocks and encryption blocks to implement compliant encryption for Bluetooth Low Energy.

The CCM block uses EasyDMA to load key counter mode blocks (including the nonce required), and to read/write plain text and cipher text.

The AES CCM peripheral supports three operations: keystream generation, packet encryption, and packet decryption. These operations are performed in compliance with the *Bluetooth* AES CCM 128 bit block encryption, see *Bluetooth Core specification Version 4.0*.

The following figure illustrates keystream generation followed by encryption or decryption. The shortcut is optional.




Figure 31: Keystream generation

6.4.1 Keystream generation

A new keystream needs to be generated before a new packet encryption or packet decryption operation can start.

A keystream is generated by triggering the KSGEN task. An ENDKSGEN event is generated after the keystream has been generated.



Keystream generation, packet encryption, and packet decryption operations utilize the configuration specified in the data structure pointed to by CNFPTR on page 110. It is necessary to configure this pointer and its underlying data structure, and register MODE on page 110 before the KSGEN task is triggered.

The keystream will be stored in the AES CCM peripheral's temporary memory area, specified by the SCRATCHPTR on page 111, where it will be used in subsequent encryption and decryption operations.

For default length packets (MODE.LENGTH = Default), the size of the generated keystream is 27 bytes. When using extended length packets (MODE.LENGTH = Extended), register MAXPACKETSIZE on page 111 specifies the length of the keystream to be generated. The length of the generated keystream must be greater or equal to the length of the subsequent packet payload to be encrypted or decrypted. The maximum length of the keystream in extended mode is 251 bytes, which means that the maximum packet payload size is 251.

If a shortcut is used between the ENDKSGEN event and CRYPT task, pointer INPTR on page 110 and the pointers OUTPTR on page 111 must also be configured before the KSGEN task is triggered.

6.4.2 Encryption

The AES CCM periheral is able to read an unencrypted packet, encrypt it, and append a four byte MIC field to the packet.

During packet encryption, the AES CCM peripheral performs the following:

- Reads the unencrypted packet located in RAM address specified in the INPTR pointer
- Encrypts the packet
- Appends a four byte long Message Integrity Check (MIC) field to the packet

Encryption is started by triggering the CRYPT task with register MODE on page 110 set to ENCRYPTION. An ENDCRYPT event is generated when packet encryption is completed.

The AES CCM peripheral will also modify the length field of the packet to adjust for the appended MIC field. It adds four bytes to the length and stores the resulting packet in RAM at the address specified in pointer OUTPTR on page 111, see Encryption on page 101.

Empty packets (length field is set to 0) will not be encrypted but instead moved unmodified through the AES CCM peripheral.

AES CCM supports different widths of the LENGTH field in the data structure for encrypted packets. This is configured in register MODE on page 110.

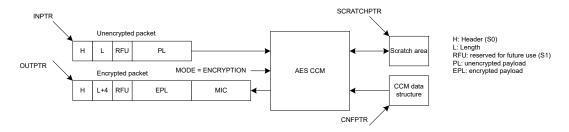


Figure 32: Encryption

6.4.3 Decryption

The AES CCM peripheral is able to read an encrypted packet, decrypt it, authenticate the MIC field, and generate an appropriate MIC status.

During packet decryption, the AES CCM peripheral performs the following:

- Reads the encrypted packet located in RAM at the address specified in the INPTR pointer
- Decrypts the packet



- · Authenticates the packet's MIC field
- Generates the appropriate MIC status

The packet header (S0) and payload are included in the MIC authentication. Bits in the packet header can be masked away by configuring register HEADERMASK on page 112.

Decryption is started by triggering the CRYPT task with register MODE on page 110 set to DECRYPTION. An ENDCRYPT event is generated when packet decryption is completed.

The AES CCM peripheral modifies the length field of the packet to adjust for the MIC field. It subtracts four bytes from the length and stores the decrypted packet in RAM at the address specified in the pointer OUTPTR, see Decryption on page 102.

CCM is only able to decrypt packet payloads that are at least five bytes long (one byte or more encrypted payload (EPL) and four bytes of MIC). CCM will therefore generate a MIC error for packets where the length field is set to 1, 2, 3, or 4.

Empty packets (length field is set to 0) will not be decrypted but instead moved unmodified through the AES CCM peripheral. These packets will always pass the MIC check.

CCM supports different widths of the LENGTH field in the data structure for decrypted packets. This is configured in register MODE on page 110.

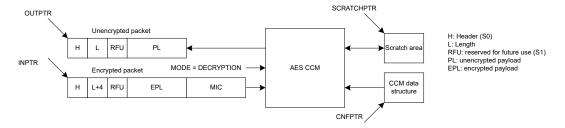


Figure 33: Decryption

6.4.4 AES CCM and RADIO concurrent operation

The CCM peripheral is able to encrypt/decrypt data synchronously to data being transmitted or received on the radio.

In order for CCM to run synchronously with the radio, the data rate setting in register MODE on page 110 needs to match the radio data rate. The settings in this register apply whenever either the KSGEN or CRYPT tasks are triggered.

The data rate setting of register MODE on page 110 can also be overridden on-the-fly during an ongoing encrypt/decrypt operation by the contents of register RATEOVERRIDE on page 112. The data rate setting in this register applies whenever the RATEOVERRIDE task is triggered. This feature can be useful in cases where the radio data rate is changed during an ongoing packet transaction.

6.4.5 Encrypting packets on-the-fly in radio transmit mode

When the AES CCM peripheral encrypts a packet on-the-fly while RADIO is transmitting it, RADIO must read the encrypted packet from the same memory location that the AES CCM peripheral is writing to.

The OUTPTR on page 111 pointer in the AES CCM must point to the same memory location as the PACKETPTR pointer in the radio, see Configuration of on-the-fly encryption on page 103.



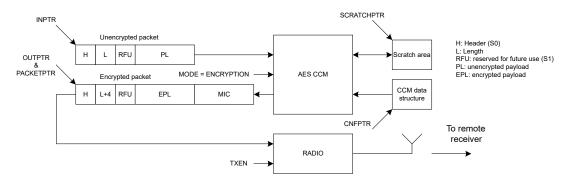


Figure 34: Configuration of on-the-fly encryption

In order to match RADIO's timing, the KSGEN task must be triggered early enough to allow the keystream generation to complete before packet encryption begins.

For short packets (MODE.LENGTH = Default), the KSGEN task must be triggered before or at the same time as the START task in RADIO is triggered. In addition, the shortcut between the ENDKSGEN event and the CRYPT task must be enabled. This use-case is illustrated in On-the-fly encryption of short packets (MODE.LENGTH = Default) using a PPI connection on page 103. It uses a PPI connection between the READY event in RADIO and the KSGEN task in the AES CCM peripheral.

For long packets (MODE.LENGTH = Extended), the keystream generation needs to start earlier, such as when the TXEN task in RADIO is triggered.

Refer to Timing specification on page 112 for information about the time needed for generating a keystream.

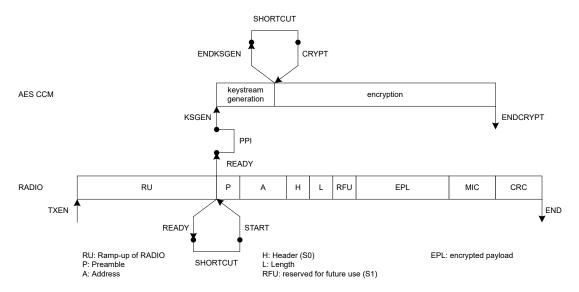


Figure 35: On-the-fly encryption of short packets (MODE.LENGTH = Default) using a PPI connection

6.4.6 Decrypting packets on-the-fly in RADIO receive mode

When the AES CCM peripheral decrypts a packet on-the-fly while RADIO is receiving it, the AES CCM peripheral must read the encrypted packet from the same memory location that RADIO is writing to.

The INPTR on page 110 pointer in the AES CCM must point to the same memory location as the PACKETPTR pointer in RADIO, see Configuration of on-the-fly decryption on page 104.



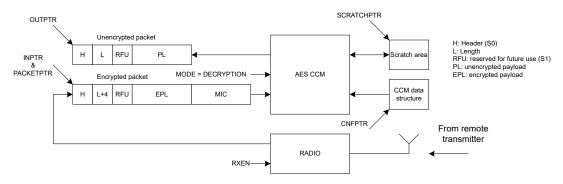


Figure 36: Configuration of on-the-fly decryption

In order to match RADIO's timing, the KSGEN task must be triggered early enough to allow the keystream generation to complete before the decryption of the packet shall start.

For short packets (MODE.LENGTH = Default) the KSGEN task must be triggered no later than when the START task in RADIO is triggered. In addition, the CRYPT task must be triggered no earlier than when the ADDRESS event is generated by RADIO.

If the CRYPT task is triggered exactly at the same time as the ADDRESS event is generated by RADIO, the AES CCM peripheral will guarantee that the decryption is completed no later than when the END event in RADIO is generated.

This use-case is illustrated in On-the-fly decryption of short packets (MODE.LENGTH = Default) using a PPI connection on page 104 using a PPI connection between the ADDRESS event in RADIO and the CRYPT task in the AES CCM peripheral. The KSGEN task is triggered from the READY event in RADIO through a PPI connection.

For long packets (MODE.LENGTH = Extended) the keystream generation will need to start even earlier, such as when the RXEN task in RADIO is triggered.

Refer to Timing specification on page 112 for information about the time needed for generating a keystream.

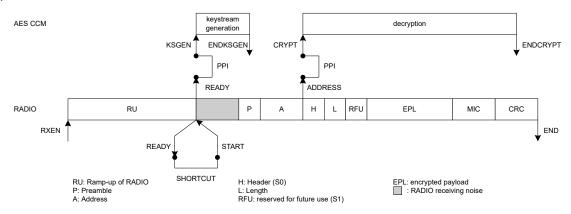


Figure 37: On-the-fly decryption of short packets (MODE.LENGTH = Default) using a PPI connection

6.4.7 CCM data structure

The CCM data structure is located in Data RAM at the memory location specified by the CNFPTR pointer register.



Property	Address offset	Description
KEY	0	16 byte AES key
PKTCTR	16	Octet0 (LSO) of packet counter
	17	Octet1 of packet counter
	18	Octet2 of packet counter
	19	Octet3 of packet counter
	20	Bit 6 – Bit 0: Octet4 (7 most significant bits of packet counter, with Bit 6 being the most
		significant bit) Bit7: Ignored
	21	Ignored
	22	Ignored
	23	Ignored
	24	Bit 0: Direction bit Bit 7 – Bit 1: Zero padded
IV	25	8 byte initialization vector (IV) Octet0 (LSO) of IV, Octet1 of IV,, Octet7 (MSO) of IV

Table 29: CCM data structure overview

The NONCE vector (as specified by the *Bluetooth* Core Specification) will be generated by hardware based on the information specified in the CCM data structure from CCM data structure overview on page 105.

Property	Address offset	Description
HEADER	0	Packet Header
LENGTH	1	Number of bytes in unencrypted payload
RFU	2	Reserved Future Use
PAYLOAD	3	Unencrypted payload

Table 30: Data structure for unencrypted packet

Property	Address offset	Description
HEADER	0	Packet Header
LENGTH	1	Number of bytes in encrypted payload including length of MIC
		LENGTH will be 0 for empty packets since the MIC is not added to empty packets
RFU	2	Reserved Future Use
PAYLOAD	3	Encrypted payload
MIC	3 + payload length	ENCRYPT: 4 bytes encrypted MIC
		MIC is not added to empty packets

Table 31: Data structure for encrypted packet

6.4.8 EasyDMA and ERROR event

CCM implements an EasyDMA mechanism for reading and writing to RAM.

When the CPU and EasyDMA enabled peripherals access the same RAM block at the same time, increased bus collisions might disrupt on-the-fly encryption. This will generate an ERROR event.

EasyDMA stops accessing RAM when the ENDKSGEN and ENDCRYPT events are generated.

If the CNFPTR, SCRATCHPTR, INPTR, and the OUTPTR are not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.



6.4.9 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000F000	CCM	CCM	AES counter with CBC-MAC (CCM) mode	
			block encryption	

Table 32: Instances


Register	Offset	Description	
TASKS_KSGEN	0x000	Start generation of keystream. This operation will stop by itself when completed.	
TASKS_CRYPT	0x004	Start encryption/decryption. This operation will stop by itself when completed.	
TASKS_STOP	0x008	Stop encryption/decryption	
TASKS_RATEOVERRIDE	0x00C	Override DATARATE setting in MODE register with the contents of the RATEOVERRIDE register	
		for any ongoing encryption/decryption	
EVENTS_ENDKSGEN	0x100	Keystream generation complete	
EVENTS_ENDCRYPT	0x104	Encrypt/decrypt complete	
EVENTS_ERROR	0x108	CCM error event	Deprecated
SHORTS	0x200	Shortcuts between local events and tasks	
INTENSET	0x304	Enable interrupt	
INTENCLR	0x308	Disable interrupt	
MICSTATUS	0x400	MIC check result	
ENABLE	0x500	Enable	
MODE	0x504	Operation mode	
CNFPTR	0x508	Pointer to data structure holding the AES key and the NONCE vector	
INPTR	0x50C	Input pointer	
OUTPTR	0x510	Output pointer	
SCRATCHPTR	0x514	Pointer to data area used for temporary storage	
MAXPACKETSIZE	0x518	Length of keystream generated when MODE.LENGTH = Extended	
RATEOVERRIDE	0x51C	Data rate override setting.	
HEADERMASK	0x520	Header (S0) mask.	

Table 33: Register overview

6.4.9.1 TASKS_KSGEN

Address offset: 0x000

Start generation of keystream. This operation will stop by itself when completed.

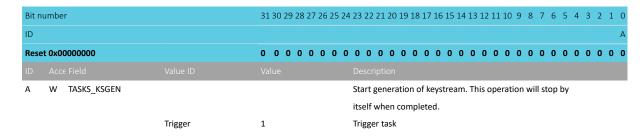

6.4.9.2 TASKS_CRYPT

Address offset: 0x004

Start encryption/decryption. This operation will stop by itself when completed.



Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_CRYPT			Start encryption/decryption. This operation will stop by
			itself when completed.
T	Trigger	1	Trigger task

6.4.9.3 TASKS_STOP

Address offset: 0x008

Stop encryption/decryption

Bit no	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_STOP			Stop encryption/decryption
		Trigger	1	Trigger task

6.4.9.4 TASKS_RATEOVERRIDE

Address offset: 0x00C

Override DATARATE setting in MODE register with the contents of the RATEOVERRIDE register for any ongoing encryption/decryption

Bit n	umber		31 30 29 28 27 2	6 25 24	23 22	21 20	0 19	18	17 1	6 1	5 14	113	12	11 10	9	8	7	6 !	5 4	3	2	1 0
ID																						Α
Rese	t 0x0000000		0 0 0 0 0	0 0	0 0	0 0	0	0	0 (0	0	0	0	0 0	0	0	0	0 (0 0	0	0	0 0
ID																						
Α	W TASKS	RATEOVERRIDE			Over	ide D	ATA	RAT	E se	ttin	g in	MC	DE	regis	ter	with	th	е				
					conte	nts o	f the	RA	TEO	VER	RID	E re	gist	er fo	or an	y oı	ngo	ing				
					encry	ption	/ded	cryp	tion	ı												
		Trigger	1		Trigge	er tasl	k															

6.4.9.5 EVENTS_ENDKSGEN

Address offset: 0x100

Keystream generation complete

Bit n	umber		31	30	29	28 2	27 2	26 2	5 2	24 2	3 2	22 2	21 2	0 1	9 1	3 17	16	15	14	13	12 :	11 1	10 9	8	7	6	5	4	3	2	1 0
ID																															Α
Rese	et 0x00000000		0	0	0	0	0	0 (0	0 (0	0	0 () (0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 0
ID																															
Α	RW EVENTS_ENDKSGEN									K	(ey	stre	eam	ge	ner	atic	n c	om	ple	te											
		NotGenerated	0							E	ve	nt r	not	ger	nera	ted															
		Generated	1							E	ve	nt g	gene	erat	ted																

6.4.9.6 EVENTS_ENDCRYPT

Address offset: 0x104

Encrypt/decrypt complete



Bit number	31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_ENDCRYPT		Encrypt/decrypt complete
NotGeneral	red 0	Event not generated
Generated	1	Event generated

6.4.9.7 EVENTS_ERROR (Deprecated)

Address offset: 0x108

CCM error event

Bit n	umber		313	30 29	9 28	27 2	26 25	24	23 2	2 2:	1 20	19 1	18 1	7 16	15	14 1	3 12	11 1	.0 9	8	7	6	5	4	3 2	2 1	0
ID																											Α
Rese	t 0x00000000		0	0 0	0	0 (0 0	0	0 (0 0	0	0	0 0	0	0	0 0	0	0	0 0	0	0	0	0	0	0 0	0	0
ID									Desc																		
Α	RW EVENTS_ERROR								CCIV	1 eri	ror e	even	t											1	Оер	reca	ed
		NotGenerated	0						Ever	nt no	ot ge	ener	ated	l													
		Generated	1						Ever	nt ge	ener	atec	i														

6.4.9.8 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW ENDKSGEN_CRYPT			Shortcut between event ENDKSGEN and task CRYPT
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.4.9.9 INTENSET

Address offset: 0x304 Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	. 0
ID				C B	ВА
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0
ID					
Α	RW ENDKSGEN			Write '1' to enable interrupt for event ENDKSGEN	
		Set	1	Enable	
		Disabled	0	Read: Disabled	
		Enabled	1	Read: Enabled	
В	RW ENDCRYPT			Write '1' to enable interrupt for event ENDCRYPT	
		Set	1	Enable	
		Disabled	0	Read: Disabled	
		Enabled	1	Read: Enabled	
С	RW ERROR			Write '1' to enable interrupt for event ERROR Depreca	ated





Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			СВА
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled		Read: Enabled

6.4.9.10 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x00000000		0 0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID				Description
Α	RW ENDKSGEN			Write '1' to disable interrupt for event ENDKSGEN
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDCRYPT			Write '1' to disable interrupt for event ENDCRYPT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ERROR			Write '1' to disable interrupt for event ERROR Deprecated
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.4.9.11 MICSTATUS

Address offset: 0x400 MIC check result

Bit n	umbe	er		31	30 2	29 2	8 27	7 26	25	24	23	22	21 2	20 1	9 18	3 17	' 16	15	14	13 :	L2 1	1 10	9	8	7	6	5	4	3 2	1	0
ID																															Α
Rese	et OxO	0000000		0	0	0 (0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0 (0	0	0	0	0	0	0 (0	0	0
ID																															
Α	R	MICSTATUS									The	e re	sult	of	the	MI	C ch	eck	ре	rfor	me	d du	ring	the	e pı	revi	ious	;			
											ded	cryp	ptio	n op	oera	tioi	า														
			CheckFailed	0							MI	C cl	hecl	c fai	led																
			CheckPassed	1							MI	C cl	hecl	к ра	sse	d															

6.4.9.12 ENABLE

Address offset: 0x500

Enable



Bit number		31 30 29 28 27 26 25 24	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			АА
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENABLE			Enable or disable CCM
	Disabled	0	Disable
	Enabled	2	Enable

6.4.9.13 MODE

Address offset: 0x504 Operation mode

Bit r	umber		31 30 29 28 27 26 2	5 24	23 22 2	1 20	0 19 1	8 1	7 16	15	14	13 1	12	11 1	.0 9	8	7	6	5	4	3	2	1 (O
ID				С				В	В														,	Δ
Rese	et 0x0000001		0 0 0 0 0 0	0 0	0 0 0	0 0	0 (0 0	0	0	0	0	0	0 () (0	0	0	0	0	0	0	0 :	1
Α	RW MODE				The mo	de (of op	erat	ion	to b	e u	sed	. Se	ettir	ngs	in tl	nis	regi	iste	r				
					apply w	her	never	eith	ner t	he I	KSC	ŝΕΝ	tas	sk o	r th	e CF	RYP	T ta	sk	is				
					triggere	ed.																		
		Encryption	0		AES CCI	Мр	acket	end	cryp	tion	m	ode												
		Decryption	1		AES CCI	Мр	acket	ded	cryp	tion	m	ode												
В	RW DATARATE				Radio d	lata	rate 1	that	the	CCI	M s	hall	l ru	ın sy	nch	nror	ou	s wi	ith					
		1Mbit	0		1 Mbps	;																		
		2Mbit	1		2 Mbps	;																		
		125Kbps	2		125 kbp	os																		
		500Kbps	3		500 kbp	os																		
С	RW LENGTH				Packet l	leng	gth co	nfig	urat	tion														
		Default	0		Default	len	gth. E	ffec	tive	len	gth	of	LEN	NGT	H fi	eld	in							
					encrypt	ted/	decry	/pte	d pa	acke	t is	5 b	its.	. A k	eys	trea	m	for						
					packet	pay	loads	up	to 2	7 by	/tes	s wil	ll b	e ge	ner	rate	d.							
		Extended	1		Extende	ed le	ength	. Eff	fecti	ve l	eng	gth c	of L	ENC	ЭТН	l fie	ld ii	n						
					encrypt	ted/	decry	/pte	d pa	acke	t is	8 b	its.	. A k	eys	trea	m	for						
					packet	pay	loads	up	to N	ИΑХ	PAC	CKET	TSIZ	ZE b	yte	s wi	ll b	e						
					generat	ted.																		

6.4.9.14 CNFPTR

Address offset: 0x508

Pointer to data structure holding the AES key and the NONCE vector

Bit	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A	
Res	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			Description
Α	RW CNFPTR		Pointer to the data structure holding the AES key and the

Pointer to the data structure holding the AES key and the CCM NONCE vector (see table CCM data structure overview)

6.4.9.15 INPTR

Address offset: 0x50C

Input pointer



Reset 0x000000000	0 0 0 0 0 0 0
<u> </u>	0 0 0 0 0 0 0
A A A A A A A A A A A A A A A A A A A	
	A A A A A A A
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8	7 6 5 4 3 2 1

6.4.9.16 OUTPTR

Address offset: 0x510

Output pointer

ID	
ID A A A A A A A A A A A A A A A A A A A	0 0 0 0 0 0 0 0 0 0 0 0 0
	A A A A A A A A A A A A
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14	12 11 10 9 8 7 6 5 4 3 2 1 0

6.4.9.17 SCRATCHPTR

Address offset: 0x514

Pointer to data area used for temporary storage

Bit n	umber	31	1 30 2	9 28	8 27	7 26	25	24	23 2	2 21	. 20	19	18 :	17 1	16	15 1	14 1	3 12	11	10	9	8	7	6	5	4	3 2	1	L O
ID		Α	A A	A	A	Α	Α	Α	A A	4 A	Α	Α	Α	A	Α	Α.	ΑА	A	Α	Α	Α	Α	Α	Α	Α	A	Α Δ		A A
Rese	t 0x00000000	0	0 (0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0	0 0	() 0
									Desc																				
Α	RW SCRATCHPTR								duri encr The duri Whe requ = Ex	ng k rypti scra ng k en N uired tenc	eysion/ tch eysion IOD I for Ided,	trea 'dec' are trea E.LE	m g ryp a is m g ENG s te	gene use gene GTH	era n. ed f era = [for tion	tem n and ault,	pora d en a sp age.	ary ncry pac	stor ption	rage on.	and e of by	d f da tes E.LI	ata ; is					

6.4.9.18 MAXPACKETSIZE

Address offset: 0x518

Length of keystream generated when MODE.LENGTH = Extended

Bit r	umber	31 30	0 29	28 2	27 26	5 25	24	23	3 22	21	20	19 1	8 17	7 16	15	14	13 1	2 1	1 10	9	8 7	7 6	5 5	4	3	2	1	0
ID																					A	\ <i>A</i>	A	Α	Α	Α	Α	Α
Res	et 0x000000FB	0 0	0	0	0 0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0 (0	0	0 1	. 1	1	1	1	0	1	1
ID																												
Α	RW MAXPACKETSIZE	[0x0	01B	.0x0	0FB]		Le	ngt	h o	f ke	ystr	eam	gei	nera	ateo	d wh	en	MOI	DE.L	ENG	TH	=					
								Ex	ten	dec	d. Tl	his v	alue	mı	ıst l	be g	grea	ter	than	or e	equa	l to	the	е				
								su	ıbse	que	ent	pacl	ket p	ayl	oad	l to	be e	encr	ypte	d/d	ecry	pte	d.					






6.4.9.19 RATEOVERRIDE

Address offset: 0x51C

Data rate override setting.

Override value to be used instead of the setting of MODE.DATARATE. This override value applies when the RATEOVERRIDE task is triggered.

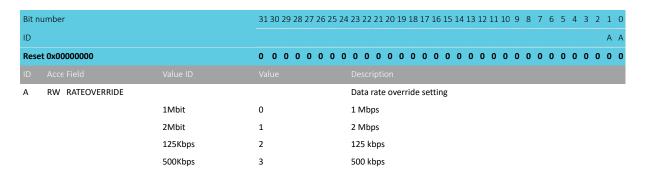


6.4.9.20 HEADERMASK

Address offset: 0x520

Header (S0) mask.

Bitmask for packet header (S0) before MIC generation/authentication.



6.4.10 Electrical specification

6.4.10.1 Timing specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{kgen}	Time needed for keystream generation (given priority access			50	μs
	to destination RAM block)				

6.5 COMP — Comparator

The comparator (COMP) compares an input voltage (VIN+) against a second input voltage (VIN-). VIN+ can be derived either from an analog input pin (AIN0-AIN6) or VDDH/5. VIN- can be derived from multiple sources depending on the operation mode of the comparator.

The main features of COMP are the following:

- Input range from 0 V to VDD
- Single-ended mode
 - Fully flexible hysteresis using a 64-level reference ladder
- Differential mode



- · Configurable hysteresis
- Reference inputs (VREF):
 - VDD
 - External reference from AINO to AIN7 (between 0 V and VDD)
 - Internal references 1.2 V, 1.8 V, and 2.4 V
- Three speed/power consumption modes:
 - Low-power
 - Normal
 - High-speed
- · Event generation on output changes
 - UP event on VIN- > VIN+
 - DOWN event on VIN- < VIN+
 - CROSS event on VIN+ and VIN- crossing
 - READY event on core and internal reference (if used) ready

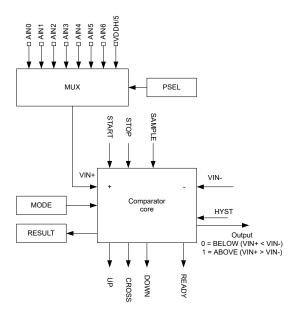


Figure 38: Comparator overview

Once enabled (using the ENABLE register), the comparator is started by triggering the START task and stopped by triggering the STOP task. The comparator will generate a READY event to indicate when it is ready for use and the output is correct. The delay between START and READY is t_{INT_REF,START} if an internal reference is selected, or t _{COMP,START} if an external reference is used. When the COMP module is started, events will be generated every time VIN+ crosses VIN-.

Operation modes

The comparator can be configured to operate in two main operation modes: differential mode and single-ended mode. See the MODE register for more information. In both operation modes, the comparator can operate in different speed and power consumption modes (low-power, normal and high-speed). High-speed mode will consume more power compared to low-power mode, and low-power mode will result in slower response time compared to high-speed mode.



Use the PSEL register to select any of the AINO-AIN6 pins (or VDDH/5) as VIN+ input, regardless of the operation mode selected for the comparator. The source of VIN- depends on which of the following operation mode are used:

- Differential mode Derived directly from AINO to AIN7
- Single-ended mode Derived from VREF. VREF can be derived from VDD, AINO-AIN7 or internal 1.2 V, 1.8 V and 2.4 V references.

The selected analog pins will be acquired by the comparator once it is enabled.

An optional hysteresis on VIN+ and VIN- can be enabled when the module is used in differential mode through the HYST register. In single-ended mode, VUP and VDOWN thresholds can be set to implement a hysteresis using the reference ladder (see Comparator in single-ended mode on page 115). This hysteresis is in the order of magnitude of V_{DIFFHYST}, and shall prevent noise on the signal to create unwanted events. See Hysteresis example where VIN+ starts below VUP on page 116 for an illustration of the effect of an active hysteresis on a noisy input signal.

An upward crossing will generate an UP event and a downward crossing will generate a DOWN event. The CROSS event will be generated every time there is a crossing, independent of direction.

The immediate value of the comparator can be sampled to RESULT register by triggering the SAMPLE task.

6.5.1 Differential mode

In differential mode, the reference input VIN- is derived directly from one of the AINx pins.

Before enabling the comparator via the ENABLE register, the following registers must be configured for the differential mode:

- PSEL
- MODE
- EXTREFSEL

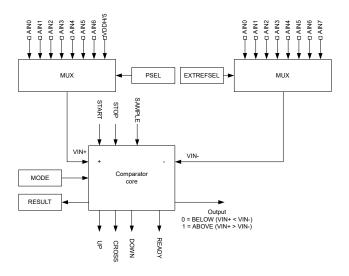


Figure 39: Comparator in differential mode

Note: Depending on the device, not all the analog inputs may be available for each MUX. See definitions for PSEL and EXTREFSEL for more information about which analog pins are available on a particular device.

When the HYST register is turned on during this mode, the output of the comparator and associated events do the following:



- Change from ABOVE to BELOW when VIN+ drops below VIN- (VDIFFHYST/2)
- Change from BELOW to ABOVE when VIN+ raises above VIN- + (VDIFFHYST/2)

This behavior is illustrated in the following figure.

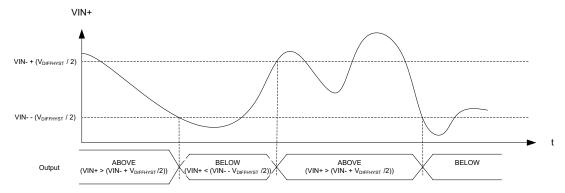


Figure 40: Hysteresis enabled in differential mode

6.5.2 Single-ended mode

In single-ended mode, VIN- is derived from the reference ladder.

Before enabling the comparator via the ENABLE register, the following registers must be configured for the single-ended mode:

- PSEL
- MODE
- REFSEL
- EXTREFSEL
- TH

The reference ladder uses the reference voltage (VREF) to derive two new voltage references, VUP and VDOWN. VUP and VDOWN are configured using THUP and THDOWN respectively in the TH register. VREF can be derived from any of the available reference sources, configured using the EXTREFSEL and REFSEL registers as shown in the following figure. When AREF is selected in the REFSEL register, the EXTREFSEL register is used to select one of the AINO-AIN7 analog input pins as reference input. The selected analog pins will be acquired by the comparator once it is enabled.

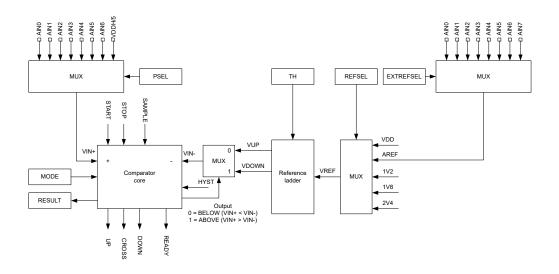


Figure 41: Comparator in single-ended mode



Note: Depending on the device, not all the analog inputs may be available for each MUX. See definitions for PSEL and EXTREFSEL for more information about which analog pins are available on a particular device.

When the comparator core detects that VIN+ > VIN-, i.e. ABOVE as per the RESULT register, VIN- will switch to VDOWN. When VIN+ falls below VIN- again, VIN- will be switched back to VUP. By specifying VUP larger than VDOWN, a hysteresis can be generated as illustrated in the following figures.

Writing to HYST has no effect in single-ended mode, and the content of this register is ignored.

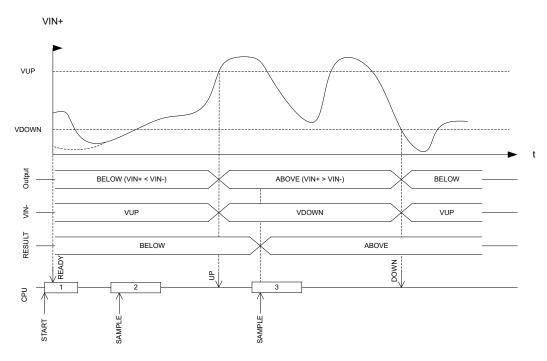


Figure 42: Hysteresis example where VIN+ starts below VUP

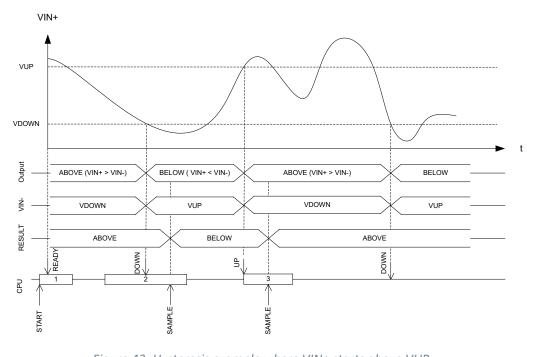


Figure 43: Hysteresis example where VIN+ starts above VUP



6.5.3 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40013000	COMP	COMP	General purpose comparator	

Table 34: Instances

Register	Offset	Description
TASKS_START	0x000	Start comparator
TASKS_STOP	0x004	Stop comparator
TASKS_SAMPLE	0x008	Sample comparator value
EVENTS_READY	0x100	COMP is ready and output is valid
EVENTS_DOWN	0x104	Downward crossing
EVENTS_UP	0x108	Upward crossing
EVENTS_CROSS	0x10C	Downward or upward crossing
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
RESULT	0x400	Compare result
ENABLE	0x500	COMP enable
PSEL	0x504	Pin select
REFSEL	0x508	Reference source select for single-ended mode
EXTREFSEL	0x50C	External reference select
TH	0x530	Threshold configuration for hysteresis unit
MODE	0x534	Mode configuration
HYST	0x538	Comparator hysteresis enable

Table 35: Register overview

6.5.3.1 TASKS_START

Address offset: 0x000 Start comparator

	77 77 77 77 77 77 77 77 77 77 77 77 77		·
Α	W TASKS START		Start comparator
ID .			
Reset	0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A
Bit nur	mber	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.5.3.2 TASKS_STOP

Address offset: 0x004 Stop comparator



Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOP			Stop comparator
	Trigger	1	Trigger task

6.5.3.3 TASKS_SAMPLE

Address offset: 0x008
Sample comparator value

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_SAMPLE			Sample comparator value
		Trigger	1	Trigger task

6.5.3.4 EVENTS_READY

Address offset: 0x100

COMP is ready and output is valid

Bit r	number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_READY			COMP is ready and output is valid
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.5.3.5 EVENTS_DOWN

Address offset: 0x104

Downward crossing


Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_DOWN			Downward crossing
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.5.3.6 EVENTS_UP

Address offset: 0x108

Upward crossing



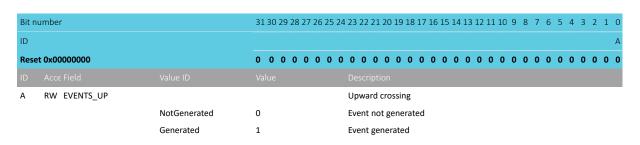

6.5.3.7 EVENTS_CROSS

Address offset: 0x10C

Downward or upward crossing

Bit r	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_CROSS			Downward or upward crossing
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.5.3.8 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW READY_SAMPLE			Shortcut between event READY and task SAMPLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW READY_STOP			Shortcut between event READY and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
С	RW DOWN_STOP			Shortcut between event DOWN and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
D	RW UP_STOP			Shortcut between event UP and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Ε	RW CROSS_STOP			Shortcut between event CROSS and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.5.3.9 INTEN

Address offset: 0x300

Enable or disable interrupt



Bit r	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW READY			Enable or disable interrupt for event READY
		Disabled	0	Disable
		Enabled	1	Enable
В	RW DOWN			Enable or disable interrupt for event DOWN
		Disabled	0	Disable
		Enabled	1	Enable
С	RW UP			Enable or disable interrupt for event UP
		Disabled	0	Disable
		Enabled	1	Enable
D	RW CROSS			Enable or disable interrupt for event CROSS
		Disabled	0	Disable
		Enabled	1	Enable

6.5.3.10 INTENSET

Address offset: 0x304 Enable interrupt

Bit n	umber		31	1 30	29 :	28 2	27 2	26 2	25 2	4 2	3 2	22 2	1 2	0 1	9 18	3 1	7 16	6 1	5 1	4 1	3 12	2 11	10	9	8	7	6	5	4	3 2	2 1	0
ID																														D (В	Α
Rese	et 0x00000000		0	0	0	0	0	0 (0 (0) (0 (0 () (0	0	0	(0	0	0	0	0	0	0	0	0	0	0	0 (0	0
ID																																
Α	RW READY									٧	Vri	te '	1' to	o er	abl	le i	nte	rru	pt 1	or	eve	nt I	REA	ΟY								
		Set	1							Ε	na	ble																				
		Disabled	0							R	lea	d: [Disa	ble	d																	
		Enabled	1							R	lea	d: E	nal	bled	ł																	
В	RW DOWN									٧	Vri	te '	1' to	o er	abl	le i	nte	rru	pt 1	or	eve	nt [oov	۷N								
		Set	1							Ε	na	ble																				
		Disabled	0							R	lea	d: [Disa	ble	d																	
		Enabled	1							R	lea	d: E	nal	bled	ł																	
С	RW UP									٧	Vri	te '	1' to	o er	abl	le i	nte	rru	pt 1	or	eve	nt l	JP									
		Set	1							Е	na	ble																				
		Disabled	0							R	lea	d: [Disa	ble	d																	
		Enabled	1							R	lea	d: E	nal	bled	i																	
D	RW CROSS									٧	Vri	te '	1' to	o er	abl	le i	nte	rru	pt 1	or	eve	nt (CRO	SS								
		Set	1							Ε	na	ble																				
		Disabled	0							R	lea	d: [Disa	ble	d																	
		Enabled	1							R	lea	d: E	nal	bled	i																	

6.5.3.11 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17	16 15 14 13	12 11 10 9	8 7	65	4 3	2 1	0
ID							D	СВ	Α
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 0 0	0 0 0 0	0 0	0 0	0 0	0 0	0
ID Acce Field									

A RW READY Write '1' to disable interrupt for event READY



Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			D C B A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
B RW DOWN			Write '1' to disable interrupt for event DOWN
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
C RW UP			Write '1' to disable interrupt for event UP
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
D RW CROSS			Write '1' to disable interrupt for event CROSS
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.5.3.12 RESULT

Address offset: 0x400 Compare result

Bit n	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	R RESULT			Result of last compare. Decision point SAMPLE task.
		Below	0	Input voltage is below the threshold (VIN+ < VIN-)
		Above	1	Input voltage is above the threshold (VIN+ > VIN-)

6.5.3.13 ENABLE

Address offset: 0x500

COMP enable


Bit n	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				АА
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW ENABLE			Enable or disable COMP
		Disabled	0	Disable
		Enabled	2	Enable

6.5.3.14 PSEL

Address offset: 0x504

Pin select



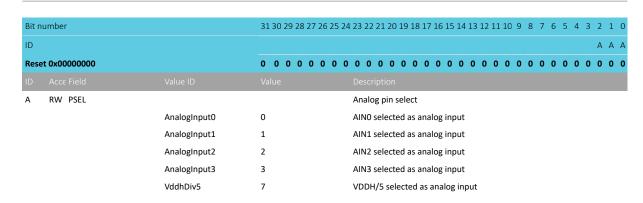

6.5.3.15 REFSEL


Address offset: 0x508

Reference source select for single-ended mode

Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			ААА
Reset 0x00000004		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW REFSEL			Reference select
	Int1V2	0	VREF = internal 1.2 V reference (VDD >= 1.7 V)
	Int1V8	1	VREF = internal 1.8 V reference (VDD >= VREF + 0.2 V)
	Int2V4	2	VREF = internal 2.4 V reference (VDD >= VREF + 0.2 V)
	VDD	4	VREF = VDD
	ARef	5	VREF = AREF

6.5.3.16 EXTREFSEL

Address offset: 0x50C
External reference select

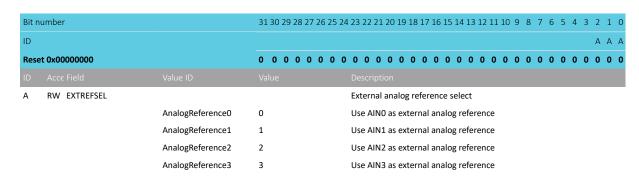

6.5.3.17 TH

Address offset: 0x530

Threshold configuration for hysteresis unit



Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	1 0
ID		B B B B B B A A A	АА
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0
ID			
Α	RW THDOWN	[63:0] VDOWN = (THDOWN+1)/64*VREF	
В	RW THUP	[63:0] VUP = (THUP+1)/64*VREF	

6.5.3.18 MODE

Address offset: 0x534 Mode configuration

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B A A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW SP			Speed and power modes
		Low	0	Low-power mode
		Normal	1	Normal mode
		High	2	High-speed mode
В	RW MAIN			Main operation modes
		SE	0	Single-ended mode
		Diff	1	Differential mode

6.5.3.19 HYST

Address offset: 0x538

Comparator hysteresis enable

Bit number	31 30	0 29 28 27 26 25 24 2	3 22 21 20 19 18	3 17 16 15 1	4 13 12 1	1 10 9	8 7	6 5	4	3 2	1 0
ID											А
Reset 0x00000000	0 0	0000000	00000	0 0 0 0	000	0 0	0 0	0 0	0	0 0	0 0
ID Acce Field Va											
A RW HYST		С	omparator hyste	eresis							
No	oHyst 0	С	omparator hyste	eresis disabl	led						
ну	rst50mV 1	С	omparator hyste	eresis enabl	ed						

6.5.4 Electrical specification

6.5.4.1 COMP Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{PROPDLY,LP}	Propagation delay, Low-power mode ¹¹		0.6		μs
t _{PROPDLY,N}	Propagation delay, Normal mode ¹¹		0.2		μs
t _{PROPDLY,HS}	Propagation delay, High-speed mode ¹¹		0.1		μs
$V_{DIFFHYST}$	Optional hysteresis applied to differential input	2	30	90	mV
$V_{VDD\text{-}VREF}$	Required difference between VDD and a selected VREF, VDD	0.3			V
	> VREF				
t _{INT_REF,START}	Startup time for the internal bandgap reference		50	80	μs

¹¹ Propagation delay is with 10 mV overdrive.



Symbol	Description	Min.	Тур.	Max.	Units
E _{INT_REF}	Internal bandgap reference error	-3		3	%
E _{VDDH_DIV5}	VddhDiv5 resistor ladder tolerance		±1		%
V _{INPUTOFFSET}	Input offset	-15		15	mV
t _{COMP,START}	Startup time for the comparator core		3		μs

6.6 ECB — AES electronic codebook mode encryption

The AES electronic codebook mode encryption (ECB) can be used for a range of cryptographic functions like hash generation, digital signatures, and keystream generation for data encryption/decryption. The ECB encryption block supports 128 bit AES encryption (encryption only, not decryption).

AES ECB operates with EasyDMA access to system Data RAM for in-place operations on cleartext and ciphertext during encryption. ECB uses the same AES core as the CCM and AAR blocks, and is an asynchronous operation which may not complete if the AES core is busy.

AES ECB features:

- 128 bit AES encryption
- Supports standard AES ECB block encryption
- Memory pointer support
- DMA data transfer

AES ECB performs a 128 bit AES block encrypt. At the STARTECB task, data and key is loaded into the algorithm by EasyDMA. When output data has been written back to memory, the ENDECB event is triggered.

AES ECB can be stopped by triggering the STOPECB task.

6.6.1 Shared resources

The ECB, CCM, and AAR share the same AES module. The ECB will always have lowest priority, and if there is a sharing conflict during encryption, the ECB operation will be aborted and an ERRORECB event will be generated.

6.6.2 EasyDMA

The ECB implements an EasyDMA mechanism for reading and writing to the Data RAM. This DMA cannot access the program memory or any other parts of the memory area except RAM.

If the ECBDATAPTR is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The EasyDMA will have finished accessing the Data RAM when the ENDECB or ERRORECB is generated.

6.6.3 ECB data structure

Block encrypt input and output is stored in the same data structure. ECBDATAPTR should point to this data structure before STARTECB is initiated.

Property	Address offset	Description
KEY	0	16 byte AES key
CLEARTEXT	16	16 byte AES cleartext input block
CIPHERTEXT	32	16 byte AES ciphertext output block

Table 36: ECB data structure overview



6.6.4 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x4000E000	ECB	ECB	AES electronic code book (ECB) mode		
			block encryption		

Table 37: Instances


Register	Offset	Description
TASKS_STARTECB	0x000	Start ECB block encrypt
TASKS_STOPECB	0x004	Abort a possible executing ECB operation
EVENTS_ENDECB	0x100	ECB block encrypt complete
EVENTS_ERRORECB	0x104	ECB block encrypt aborted because of a STOPECB task or due to an error
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ECBDATAPTR	0x504	ECB block encrypt memory pointers

Table 38: Register overview

6.6.4.1 TASKS_STARTECB

Address offset: 0x000 Start ECB block encrypt

If a crypto operation is already running in the AES core, the STARTECB task will not start a new encryption and an ERRORECB event will be triggered.

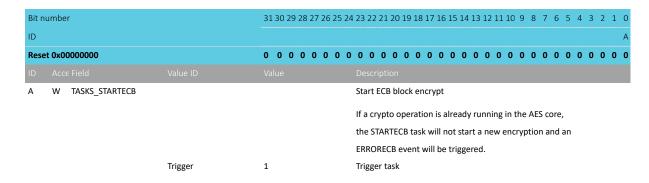


6.6.4.2 TASKS_STOPECB

Address offset: 0x004

4463_156 v1.4

Abort a possible executing ECB operation

If a running ECB operation is aborted by STOPECB, the ERRORECB event is triggered.

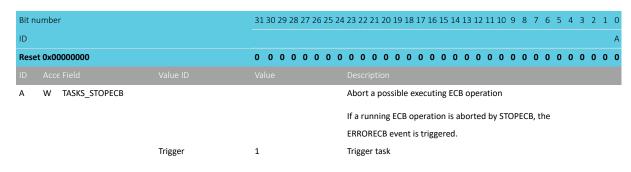




6.6.4.3 EVENTS_ENDECB

Address offset: 0x100


ECB block encrypt complete

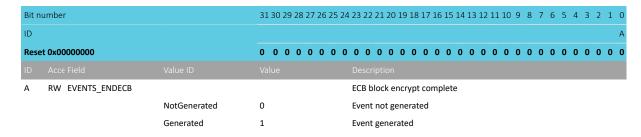

6.6.4.4 EVENTS_ERRORECB

Address offset: 0x104

ECB block encrypt aborted because of a STOPECB task or due to an error

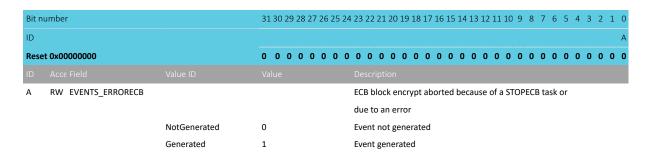

6.6.4.5 INTENSET

Address offset: 0x304 Enable interrupt

Bit r	umber		31 30 29 28 27 26	25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					B A
Res	et 0x00000000		0 0 0 0 0 0	0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
					Description
Α	RW ENDECB				Write '1' to enable interrupt for event ENDECB
		Set	1		Enable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
В	RW ERRORECB				Write '1' to enable interrupt for event ERRORECB
		Set	1		Enable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled

6.6.4.6 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number		21 20 20 20 27 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
bit number		31 30 29 28 27 20	
ID			B A
Reset 0x00000000		0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID Acce Field			Description
A RW ENDECB			Write '1' to disable interrupt for event ENDECB
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
B RW ERRORECB			Write '1' to disable interrupt for event ERRORECB
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.6.4.7 ECBDATAPTR

Address offset: 0x504

ECB block encrypt memory pointers

		Pointer to the ECB data structure (see Table 1 ECB data
ID		
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

Pointer to the ECB data structure (see Table 1 ECB dat structure overview)

6.6.5 Electrical specification

6.6.5.1 ECB Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{ECB}	Run time per 16 byte block in all modes			7.2	μs

6.7 EGU — Event generator unit

Event generator unit (EGU) provides support for interlayer signaling. This means providing support for atomic triggering of both CPU execution and hardware tasks, from both firmware (by CPU) and hardware (by PPI). This feature can be used for triggering CPU execution at a lower priority execution from a higher priority execution, or to handle a peripheral's interrupt service routine (ISR) execution at a lower priority for some of its events. However, triggering any priority from any priority is possible.

Listed here are the main EGU features:

- · Software-enabled interrupt triggering
- Separate interrupt vectors for every EGU instance
- Up to 16 separate event flags per interrupt for multiplexing

Each instance of EGU implements a set of tasks which can individually be triggered to generate the corresponding event. For example, the corresponding event for TASKS_TRIGGER[n] is EVENTS_TRIGGERED[n]. See Instances on page 128 for a list of EGU instances.



6.7.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40014000	EGU	EGU0	Event generator unit 0	
0x40015000	EGU	EGU1	Event generator unit 1	
0x40016000	EGU	EGU2	Event generator unit 2	
0x40017000	EGU	EGU3	Event generator unit 3	
0x40018000	EGU	EGU4	Event generator unit 4	
0x40019000	EGU	EGU5	Event generator unit 5	

Table 39: Instances

Register	Offset	Description
TASKS_TRIGGER[0]	0x000	Trigger 0 for triggering the corresponding TRIGGERED[0] event
TASKS_TRIGGER[1]	0x004	Trigger 1 for triggering the corresponding TRIGGERED[1] event
TASKS_TRIGGER[2]	0x008	Trigger 2 for triggering the corresponding TRIGGERED[2] event
TASKS_TRIGGER[3]	0x00C	Trigger 3 for triggering the corresponding TRIGGERED[3] event
TASKS_TRIGGER[4]	0x010	Trigger 4 for triggering the corresponding TRIGGERED[4] event
TASKS_TRIGGER[5]	0x014	Trigger 5 for triggering the corresponding TRIGGERED[5] event
TASKS_TRIGGER[6]	0x018	Trigger 6 for triggering the corresponding TRIGGERED[6] event
TASKS_TRIGGER[7]	0x01C	Trigger 7 for triggering the corresponding TRIGGERED[7] event
TASKS_TRIGGER[8]	0x020	Trigger 8 for triggering the corresponding TRIGGERED[8] event
TASKS_TRIGGER[9]	0x024	Trigger 9 for triggering the corresponding TRIGGERED[9] event
TASKS_TRIGGER[10]	0x028	Trigger 10 for triggering the corresponding TRIGGERED[10] event
TASKS_TRIGGER[11]	0x02C	Trigger 11 for triggering the corresponding TRIGGERED[11] event
TASKS_TRIGGER[12]	0x030	Trigger 12 for triggering the corresponding TRIGGERED[12] event
TASKS_TRIGGER[13]	0x034	Trigger 13 for triggering the corresponding TRIGGERED[13] event
TASKS_TRIGGER[14]	0x038	Trigger 14 for triggering the corresponding TRIGGERED[14] event
TASKS_TRIGGER[15]	0x03C	Trigger 15 for triggering the corresponding TRIGGERED[15] event
EVENTS_TRIGGERED[0]	0x100	Event number 0 generated by triggering the corresponding TRIGGER[0] task
EVENTS_TRIGGERED[1]	0x104	Event number 1 generated by triggering the corresponding TRIGGER[1] task
EVENTS_TRIGGERED[2]	0x108	Event number 2 generated by triggering the corresponding TRIGGER[2] task
EVENTS_TRIGGERED[3]	0x10C	Event number 3 generated by triggering the corresponding TRIGGER[3] task
EVENTS_TRIGGERED[4]	0x110	Event number 4 generated by triggering the corresponding TRIGGER[4] task
EVENTS_TRIGGERED[5]	0x114	Event number 5 generated by triggering the corresponding TRIGGER[5] task
EVENTS_TRIGGERED[6]	0x118	Event number 6 generated by triggering the corresponding TRIGGER[6] task
EVENTS_TRIGGERED[7]	0x11C	Event number 7 generated by triggering the corresponding TRIGGER[7] task
EVENTS_TRIGGERED[8]	0x120	Event number 8 generated by triggering the corresponding TRIGGER[8] task
EVENTS_TRIGGERED[9]	0x124	Event number 9 generated by triggering the corresponding TRIGGER[9] task
EVENTS_TRIGGERED[10]	0x128	Event number 10 generated by triggering the corresponding TRIGGER[10] task
EVENTS_TRIGGERED[11]	0x12C	Event number 11 generated by triggering the corresponding TRIGGER[11] task
EVENTS_TRIGGERED[12]	0x130	Event number 12 generated by triggering the corresponding TRIGGER[12] task
EVENTS_TRIGGERED[13]	0x134	Event number 13 generated by triggering the corresponding TRIGGER[13] task
EVENTS_TRIGGERED[14]	0x138	Event number 14 generated by triggering the corresponding TRIGGER[14] task
EVENTS_TRIGGERED[15]	0x13C	Event number 15 generated by triggering the corresponding TRIGGER[15] task
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt


Table 40: Register overview

6.7.1.1 TASKS_TRIGGER[n] (n=0..15)

Address offset: $0x000 + (n \times 0x4)$



Trigger n for triggering the corresponding TRIGGERED[n] event

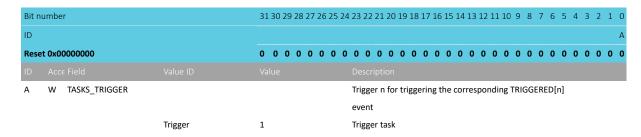

6.7.1.2 EVENTS_TRIGGERED[n] (n=0..15)

Address offset: $0x100 + (n \times 0x4)$

Event number n generated by triggering the corresponding TRIGGER[n] task

Bit n	umber		31 30	29 28	27 2	26 2	5 24	1 23	3 22	21	. 20	19	18 1	.7 1	6 1	5 14	13	12	11 1	0 9	8	7	6	5	4 3	2	1	0
ID																												Α
Rese	et 0x00000000		0 0	0 0	0	0 (0	0	0	0	0	0	0	0 (0	0	0	0	0 (0	0	0	0	0	0 0	0	0	0
ID																												
Α	RW EVENTS_TRIGGERED							Ev	vent	t nu	ımb	er r	n ge	ner	ated	d by	trig	ger	ing t	he o	corr	esp	ond	ding				
								TF	RIGO	GER	₹[n]	tas	k															
		NotGenerated	0					Ev	vent	t no	ot ge	enei	rate	d														
		Generated	1					Εv	/ent	t ge	ner	ate	d															

6.7.1.3 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		PONMLKJIHGFEDCBA
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-P RW TRIGGERED[i] (i=015)		Enable or disable interrupt for event TRIGGERED[i]
Disabled	0	Disable
Enabled	1	Enable

6.7.1.4 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	0
ID				PONMLKJIHGFEDCB	Α
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0
ID					
A-P	RW TRIGGERED[i] (i=015)			Write '1' to enable interrupt for event TRIGGERED[i]	
		Set	1	Enable	
		Disabled	0	Read: Disabled	






6.7.1.5 INTENCLR

Address offset: 0x308

Disable interrupt

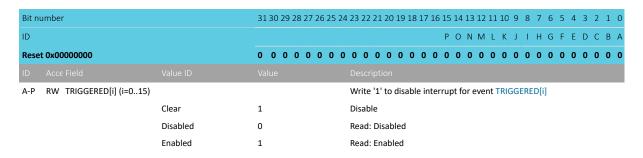

6.7.2 Electrical specification

6.7.2.1 EGU Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{EGU,EVT}	Latency between setting an EGU event flag and the system		1		cycles
	setting an interrupt				

6.8 GPIO — General purpose input/output

The general purpose input/output pins (GPIOs) are grouped as one or more ports, with each port having up to 32 GPIOs.

The number of ports and GPIOs per port varies with product variant and package. Refer to Registers on page 133 and Pin assignments on page 418 for more information about the number of GPIOs that are supported.

GPIO has the following user-configurable features:

- Up to 32 GPIO pins per GPIO port
- Output drive strength
- Internal pull-up and pull-down resistors
- Wake-up from high or low level triggers on all pins
- Trigger interrupt on state changes on any pin
- All pins can be used by the PPI task/event system
- One or more GPIO outputs can be controlled through the PPI and GPIOTE channels
- Any pin can be mapped to a peripheral for layout flexibility
- GPIO state changes captured on the SENSE signal can be stored by the LATCH register

The GPIO port peripheral implements up to 32 pins, PIN0 through PIN31. Each of these pins can be individually configured in the PIN_CNF[n] registers (n=0..31).

The following parameters can be configured through these registers:

- Direction
- Drive strength
- Enabling of pull-up and pull-down resistors
- Pin sensing
- Input buffer disconnect



· Analog input (for selected pins)

The PIN_CNF registers are retained registers. See POWER — Power supply on page 52 for more information about retained registers.

6.8.1 Pin configuration

Pins can be individually configured through the SENSE field in the PIN_CNF[n] register to detect either a high or low level input.

When the correct level is detected on a configured pin, the sense mechanism will set the DETECT signal high. Each pin has a separate DETECT signal. Default behavior, defined by the DETECTMODE register, combines all DETECT signals from the pins in the GPIO port into one common DETECT signal and routes it through the system to be utilized by other peripherals. This mechanism is functional in both System ON and System OFF mode. See GPIO port and the GPIO pin details on page 131.

The following figure illustrates the GPIO port containing 32 individual pins, where PINO is shown in more detail for reference. All signals on the left side of the illustration are used by other peripherals in the system and therefore not directly available to the CPU.

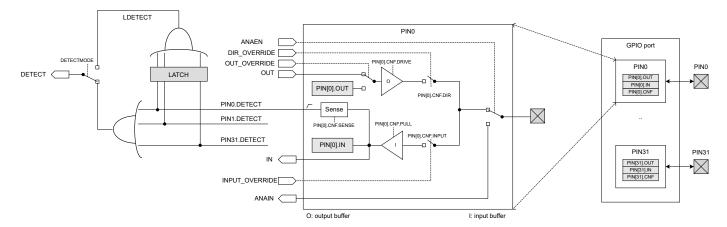


Figure 44: GPIO port and the GPIO pin details

Pins should be in a level that cannot trigger the sense mechanism before being enabled. If the SENSE condition configured in the PIN_CNF registers is met when the sense mechanism is enabled, the DETECT signal will immediately go high. A PORT event is triggered if the DETECT signal was low before enabling the sense mechanism. See GPIOTE — GPIO tasks and events on page 138.

See the following peripherals for more information about how the DETECT signal is used:

- POWER Power supply on page 52 uses the DETECT signal to exit from System OFF mode.
- GPIOTE GPIO tasks and events on page 138 uses the DETECT signal to generate the PORT event.

When a pin's PINx.DETECT signal goes high, a flag is set in the LATCH register. For example, when the PINO.DETECT signal goes high, bit 0 in the LATCH register is set to 1. If the CPU performs a clear operation on a bit in the LATCH register when the associated PINx.DETECT signal is high, the bit in the LATCH register will not be cleared. The LATCH register will only be cleared if the CPU explicitly clears it by writing a 1 to the bit that shall be cleared, i.e. the LATCH register will not be affected by a PINx.DETECT signal being set low.

The LDETECT signal will be set high when one or more bits in the LATCH register are 1. The LDETECT signal will be set low when all bits in the LATCH register are successfully cleared to 0.

If one or more bits in the LATCH register are 1 after the CPU has performed a clear operation on the LATCH register, a rising edge will be generated on the LDETECT signal. This is illustrated in DETECT signal behavior on page 132.



Note: The CPU can read the LATCH register at any time to check if a SENSE condition has been met on any of the GPIO pins. This is still valid if that condition is no longer met at the time the CPU queries the LATCH register. This mechanism will work even if the LDETECT signal is not used as the DETECT signal.

The LDETECT signal is by default not connected to the GPIO port's DETECT signal, but via the DETECTMODE register. It is possible to change from default behavior to the DETECT signal that is derived directly from the LDETECT signal. See GPIO port and the GPIO pin details on page 131. The following figure illustrates the DETECT signal behavior for these two alternatives.

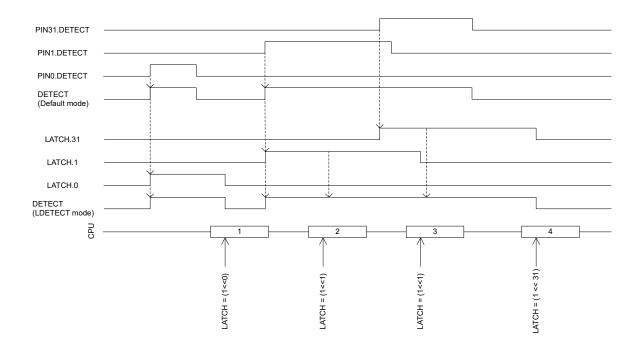


Figure 45: DETECT signal behavior

A GPIO pin input buffer can be disconnected from the pin to enable power savings when the pin is not used as an input, see GPIO port and the GPIO pin details on page 131. Input buffers must be connected to get a valid input value in the IN register, and for the sense mechanism to get access to the pin.

Other peripherals in the system can connect to GPIO pins and override their output value and configuration, or read their analog or digital input value. See GPIO port and the GPIO pin details on page 131

Selected pins also support analog input signals, see ANAIN in GPIO port and the GPIO pin details on page 131. The assignment of the analog pins can be found in Pin assignments on page 418.

Note: When a pin is configured as digital input, increased current consumption occurs when the input voltage is between V_{IL} and V_{IH} . It is good practice to ensure that the external circuitry does not drive that pin to levels between V_{IL} and V_{IH} for a long period of time.



6.8.2 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x50000000	GPIO	GPIO	General purpose input and output		Deprecated
0x50000000	GPIO	PO	General purpose input and output, port	P0.00 - P0.08, P0.14 - P0.18, P0.20, and	
			0.	P0.28 - P0.30 implemented	

Table 41: Instances

Register	Offset	Description
OUT	0x504	Write GPIO port
OUTSET	0x508	Set individual bits in GPIO port
OUTCLR	0x50C	Clear individual bits in GPIO port
IN	0x510	Read GPIO port
DIR	0x514	Direction of GPIO pins
DIRSET	0x518	DIR set register
DIRCLR	0x51C	DIR clear register
LATCH	0x520	Latch register indicating what GPIO pins that have met the criteria set in the PIN_CNF[n].SENSE
		registers
DETECTMODE	0x524	Select between default DETECT signal behavior and LDETECT mode
PIN_CNF[0]	0x700	Configuration of GPIO pins
PIN_CNF[1]	0x704	Configuration of GPIO pins
PIN_CNF[2]	0x708	Configuration of GPIO pins
PIN_CNF[3]	0x70C	Configuration of GPIO pins
PIN_CNF[4]	0x710	Configuration of GPIO pins
PIN_CNF[5]	0x714	Configuration of GPIO pins
PIN_CNF[6]	0x718	Configuration of GPIO pins
PIN_CNF[7]	0x71C	Configuration of GPIO pins
PIN_CNF[8]	0x720	Configuration of GPIO pins
PIN_CNF[9]	0x724	Configuration of GPIO pins
PIN_CNF[10]	0x728	Configuration of GPIO pins
PIN_CNF[11]	0x72C	Configuration of GPIO pins
PIN_CNF[12]	0x730	Configuration of GPIO pins
PIN_CNF[13]	0x734	Configuration of GPIO pins
PIN_CNF[14]	0x738	Configuration of GPIO pins
PIN_CNF[15]	0x73C	Configuration of GPIO pins
PIN_CNF[16]	0x740	Configuration of GPIO pins
PIN_CNF[17]	0x744	Configuration of GPIO pins
PIN_CNF[18]	0x748	Configuration of GPIO pins
PIN_CNF[19]	0x74C	Configuration of GPIO pins
PIN_CNF[20]	0x750	Configuration of GPIO pins
PIN_CNF[21]	0x754	Configuration of GPIO pins
PIN_CNF[22]	0x758	Configuration of GPIO pins
PIN_CNF[23]	0x75C	Configuration of GPIO pins
PIN_CNF[24]	0x760	Configuration of GPIO pins
PIN_CNF[25]	0x764	Configuration of GPIO pins
PIN_CNF[26]	0x768	Configuration of GPIO pins
PIN_CNF[27]	0x76C	Configuration of GPIO pins
PIN_CNF[28]	0x770	Configuration of GPIO pins
PIN_CNF[29]	0x774	Configuration of GPIO pins
PIN_CNF[30]	0x778	Configuration of GPIO pins

133



Register	Offset	Description
PIN_CNF[31]	0x77C	Configuration of GPIO pins

Table 42: Register overview

6.8.2.1 OUT

Address offset: 0x504

Write GPIO port

Bit no	ımber		31	30 2	29 2	8 2	7 26	25	24	23	22	21	. 20	19	18	17 1	.6 1	5 14	4 13	12	11	10 9	9 8	3 7	6	5	4	3	2	1 0	
ID			f	e	d (c b	а	Z	Υ	Χ	W	V	U	Т	S	R	Q F	, c	N	М	L	Κ.	J	Н	G	F	Ε	D	С	ВА	ĺ
Rese	t 0x00000000		0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0 0	
ID																															ı
A-f	RW PIN[i] (i=031)									Piı	n i																				
		Low	0							Piı	n d	rive	er is	lov	v																
		High	1							Piı	n d	rive	er is	hig	h																

6.8.2.2 OUTSET

Address offset: 0x508

Set individual bits in GPIO port

Read: reads value of OUT register.

Bit n	umber		31	30	29	28	27	26	25	5 2	4 2	23 :	22	21	20	19	18	3 17	' 16	5 15	5 14	11	3 1	2 1	1 1	0 9	9 8	3 7	7 (5 5	5 4	4 3	3 2	1	0
ID			f	e	d	С	b	а	Z	,	Y	Χ	W	٧	U	Т	S	R	a	P	С) N	I	1		Ć.	J	H	1 (3 I	F	Ξ () (: B	Α
Rese	t 0x00000000		0	0	0	0	0	0	0	()	0	0	0	0	0	0	0	0	0	0	C	() () () (0 () () () (0 (0	0	0	0
ID																																			
A-f	RW PIN[i] (i=031)										F	Pin	i																						
		Low	0								F	Rea	ad:	niq	n d	riv	er i	s lo	w																
		High	1								F	Rea	ad:	niq	n d	riv	er i	s hi	gh																

6.8.2.3 OUTCLR

Address offset: 0x50C

Clear individual bits in GPIO port

Read: reads value of OUT register.


Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcba	Z Y X W V U T S R Q P O N M L K J I H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A-f RW PIN[i] (i=031)			Pin i
	Low	0	Read: pin driver is low
	High	1	Read: pin driver is high
	Clear	1	Write: a '1' sets the pin low; a '0' has no effect

6.8.2.4 IN

Address offset: 0x510



Read GPIO port

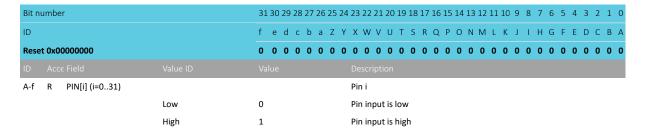

6.8.2.5 DIR

Address offset: 0x514 Direction of GPIO pins

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fed c b a Z	Y X W V U T S R Q P O N M L K J I H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A-f RW PIN[i] (i=031)			Pin i
	Input	0	Pin set as input
	Output	1	Pin set as output

6.8.2.6 DIRSET

Address offset: 0x518

DIR set register

Read: reads value of DIR register.

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x00000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Value Description
A-f RW PIN[i] (i=031)		Set as output pin i
	Input	0 Read: pin set as input
	Output	1 Read: pin set as output
	Set	1 Write: a '1' sets pin to output; a '0' has no effect

6.8.2.7 DIRCLR

Address offset: 0x51C DIR clear register

Read: reads value of DIR register.



Bit number		31	30 2	9 28	8 27	7 26	25	24	23	22	21	20 :	19 1	18 1	.7 1	6 15	5 14	13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID		f	e d	l c	b	а	Z	Υ	Χ	W	٧	U	Т	S I	R C) P	0	N	М	L	K	J	1	Н	G	F	Ε	D	С	ВА
Reset 0x00000000		0	0 (0	0	0	0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID Acce Field																														
A-f RW PIN[i] (i=031)									Se	t as	inp	out	pin	i																
	Input	0							Re	ad:	pin	set	t as	inp	ut															
	Output	1							Re	ad:	pin	set	t as	out	tput	t														
	Clear	1							Wı	ite:	: a '	1' s	ets	pin	to i	inpu	ut; a	'0'	ha	s no	ef	fect	t							

6.8.2.8 LATCH

Address offset: 0x520

Latch register indicating what GPIO pins that have met the criteria set in the PIN_CNF[n].SENSE registers

Bit n	ımber		31	30	29	28	27 :	26	25	24	23	22	21	20	19	18 :	17	16	15	14	13	12	11	10	9	8	7	6 !	5 4	1 3	2	1	0
ID			f	e	d	С	b	а	Z	Υ	Χ	W	٧	U	Т	S	R	Q	Р	0	N	М	L	K	J	l I	Н	G I	F E	D	С	В	Α
Rese	0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0	0	0	0
ID																																	
A-f	RW PIN[i] (i=031)										Sta	tus	on	wł	neth	ner	PII	Ni h	nas	me	et c	rite	ria	set	in								
											PIN	1_C	NF	.SE	NSI	E re	gis	ter	. W	rite	e '1	' to	cle	ar.									
		NotLatched	0								Cri	ter	ia h	as ı	not	be	en	me	t														
		Latched									٠.		:- 1-	1	bee																		

6.8.2.9 DETECTMODE

Address offset: 0x524


Select between default DETECT signal behavior and LDETECT mode

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW DETECTMODE			Select between default DETECT signal behavior and
				LDETECT mode
		Default	0	DETECT directly connected to PIN DETECT signals
		LDETECT	1	Use the latched LDETECT behavior

6.8.2.10 PIN_CNF[n] (n=0..31)

Address offset: $0x700 + (n \times 0x4)$

Configuration of GPIO pins

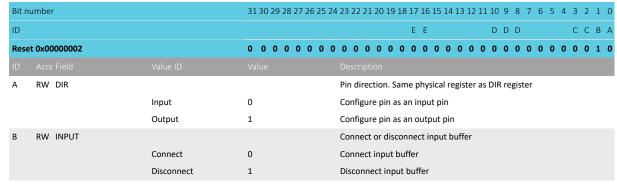





Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		E E DDD CCBA
Reset 0x00000002	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
C RW PULL		Pull configuration
Disabled	0	No pull
Pulldown	1	Pull down on pin
Pullup	3	Pull up on pin
D RW DRIVE		Drive configuration
S0S1	0	Standard '0', standard '1'
H0S1	1	High drive '0', standard '1'
S0H1	2	Standard '0', high drive '1'
H0H1	3	High drive '0', high 'drive '1"
D0S1	4	Disconnect '0' standard '1' (normally used for wired-or
		connections)
D0H1	5	Disconnect '0', high drive '1' (normally used for wired-or
		connections)
S0D1	6	Standard '0'. disconnect '1' (normally used for wired-and
		connections)
HOD1	7	High drive '0', disconnect '1' (normally used for wired-and
		connections)
E RW SENSE		Pin sensing mechanism
Disabled	0	Disabled
High	2	Sense for high level
Low	3	Sense for low level

6.8.3 Electrical specification

6.8.3.1 GPIO Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
V _{IH}	Input high voltage	0.7 x		VDD	V
		VDD			
V_{IL}	Input low voltage	VSS		0.3 x	V
				VDD	
$V_{OH,SD}$	Output high voltage, standard drive, 0.5 mA, VDD \geq 1.7	VDD	- 0.4	VDD	V
V _{OH,HDH}	Output high voltage, high drive, 5 mA, VDD \geq 2.7 V	VDD	- 0.4	VDD	V
$V_{OH,HDL}$	Output high voltage, high drive, 3 mA, VDD \geq 1.7 V	VDD	- 0.4	VDD	V
$V_{OL,SD}$	Output low voltage, standard drive, 0.5 mA, VDD ≥ 1.7	VSS		VSS + 0).4 V
$V_{OL,HDH}$	Output low voltage, high drive, 5 mA, VDD \geq 2.7 V	VSS		VSS + 0).4 V
$V_{OL,HDL}$	Output low voltage, high drive, 3 mA, VDD ≥ 1.7 V	VSS		VSS + 0).4 V
$I_{OL,SD}$	Current at VSS+0.4 V, output set low, standard drive, VDD \geq	1	2	4	mA
	1.7				
I _{OL,HDH}	Current at VSS+0.4 V, output set low, high drive, VDD \geq 2.7 V	6	10	15	mA
I _{OL,HDL}	Current at VSS+0.4 V, output set low, high drive, VDD \geq 1.7 V	3			mA
I _{OH,SD}	Current at VDD-0.4 V, output set high, standard drive, VDD	1	2	4	mA
	≥ 1.7				
I _{OH,HDH}	Current at VDD-0.4 V, output set high, high drive, VDD \geq 2.7	6	9	14	mA
	V				
I _{OH,HDL}	Current at VDD-0.4 V, output set high, high drive, VDD \geq 1.7	3			mA
	V				



Symbol	Description	Min.	Тур.	Max.	Units
t _{RF,15pF}	Rise/fall time, standard drive mode, 10-90%, 15 pF load ¹²		9		ns
t _{RF,25pF}	Rise/fall time, standard drive mode, 10-90%, 25 pF load ¹²		13		ns
t _{RF,50pF}	Rise/fall time, standard drive mode, 10-90%, 50 pF load ¹²		25		ns
t _{HRF,15pF}	Rise/Fall time, high drive mode, 10-90%, 15 pF load ¹²		4		ns
t _{HRF,25pF}	Rise/Fall time, high drive mode, 10-90%, 25 pF load ¹²		5		ns
t _{HRF,50pF}	Rise/Fall time, high drive mode, 10-90%, 50 pF load ¹²		8		ns
R _{PU}	Pull-up resistance	11	13	16	kΩ
R_{PD}	Pull-down resistance	11	13	16	kΩ
C _{PAD}	Pad capacitance		3		pF

6.9 GPIOTE — GPIO tasks and events

The GPIO tasks and events (GPIOTE) module provides functionality for accessing GPIO pins using tasks and events. Each GPIOTE channel can be assigned to one pin.

A GPIOTE block enables GPIOs to generate events on pin state change which can be used to carry out tasks through the PPI system. A GPIO can also be driven to change state on system events using the PPI system. Tasks and events are briefly introduced in Peripheral interface on page 88, and GPIO is described in more detail in GPIO — General purpose input/output on page 130.

Low power detection of pin state changes is possible when in System ON or System OFF.

Instance	Number of GPIOTE channels
GPIOTE	8

Table 43: GPIOTE properties

Up to three tasks can be used in each GPIOTE channel for performing write operations to a pin. Two tasks are fixed (SET and CLR), and one (OUT) is configurable to perform following operations:

- Set
- Clear
- Toggle

An event can be generated in each GPIOTE channel from one of the following input conditions:

- Rising edge
- Falling edge
- Any change

6.9.1 Pin events and tasks

The GPIOTE module has a number of tasks and events that can be configured to operate on individual GPIO pins.

The tasks SET[n], CLR[n], and OUT[n] can write to individual pins, and events IN[n] can be generated from input changes of individual pins.

The SET task will set the pin selected in GPIOTE.CONFIG[n].PSEL to high. The CLR task will set the pin low.

The effect of the OUT task on the pin is configurable in CONFIG[n].POLARITY. It can set the pin high, set it low, or toggle it.

NORDIC*

¹² Rise and fall times based on simulations

Tasks and events are configured using the CONFIG[n] registers. One CONFIG[n] register is associated with a set of SET[n], CLR[n], and OUT[n] tasks and IN[n] events.

As long as a SET[n], CLR[n], and OUT[n] task or an IN[n] event is configured to control pin **n**, the pin's output value will only be updated by the GPIOTE module. The pin's output value, as specified in the GPIO, will be ignored as long as the pin is controlled by GPIOTE. Attempting to write to the pin as a normal GPIO pin will have no effect. When the GPIOTE is disconnected from a pin, the associated pin gets the output and configuration values specified in the GPIO module, see MODE field in CONFIG[n] register.

When conflicting tasks are triggered simultaneously (i.e. during the same clock cycle) in one channel, the priority of the tasks is as described in the following table.

Priority	Task
1	оит
2	CLR
3	SET

Table 44: Task priorities

When setting the CONFIG[n] registers, MODE=Disabled does not have the same effect as MODE=Task and POLARITY=None. In the latter case, a CLR or SET task occurring at the exact same time as OUT will end up with no change on the pin, based on the priorities described in the table above.

When a GPIOTE channel is configured to operate on a pin as a task, the initial value of that pin is configured in the OUTINIT field of CONFIG[n].

6.9.2 Port event

PORT is an event that can be generated from multiple input pins using the GPIO DETECT signal.

The event will be generated on the rising edge of the DETECT signal. See GPIO — General purpose input/output on page 130 for more information about the DETECT signal.

The GPIO DETECT signal will not wake the system up again if the system is put into System ON IDLE while the DETECT signal is high. Clear all DETECT sources before entering sleep. If the LATCH register is used as a source, a new rising edge will be generated on DETECT if any bit in LATCH is still high after clearing all or part of the register. This could occur if one of the PINx.DETECT signals is still high, for example. See Pin configuration on page 131 for more information.

Setting the system to System OFF while DETECT is high will cause a wakeup from System OFF reset.

This feature is always enabled even if the peripheral itself appears to be IDLE, meaning no clocks or other power intensive infrastructure have to be requested to keep this feature enabled. This feature can therefore be used to wake up the CPU from a WFI or WFE type sleep in System ON when all peripherals and the CPU are idle, meaning the lowest power consumption in System ON mode.

In order to prevent spurious interrupts from the PORT event while configuring the sources, the following must be performed:

- **1.** Disable interrupts on the PORT event (through INTENCLR.PORT).
- 2. Configure the sources (PIN CNF[n].SENSE).
- 3. Clear any potential event that could have occurred during configuration (write '0' to EVENTS PORT).
- 4. Enable interrupts (through INTENSET.PORT).

6.9.3 Tasks and events pin configuration

Each GPIOTE channel is associated with one physical GPIO pin through the CONFIG.PSEL field.

When Event mode is selected in CONFIG.MODE, the pin specified by CONFIG.PSEL will be configured as an input, overriding the DIR setting in GPIO. Similarly, when Task mode is selected in CONFIG.MODE,



the pin specified by CONFIG.PSEL will be configured as an output overriding the DIR setting and OUT value in GPIO. When Disabled is selected in CONFIG.MODE, the pin specified by CONFIG.PSEL will use its configuration from the PIN[n].CNF registers in GPIO.

Note: A pin can only be assigned to one GPIOTE channel at a time. Failing to do so may result in unpredictable behavior.

6.9.4 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40006000	GPIOTE	GPIOTE	GPIO tasks and events	

Table 45: Instances

Register	Offset	Description
TASKS_OUT[0]	0x000	Task for writing to pin specified in CONFIG[0].PSEL. Action on pin is configured in
		CONFIG[0].POLARITY.
TASKS_OUT[1]	0x004	Task for writing to pin specified in CONFIG[1].PSEL. Action on pin is configured in
		CONFIG[1].POLARITY.
TASKS_OUT[2]	0x008	Task for writing to pin specified in CONFIG[2]. PSEL. Action on pin is configured in
		CONFIG[2].POLARITY.
TASKS_OUT[3]	0x00C	Task for writing to pin specified in CONFIG[3].PSEL. Action on pin is configured in
		CONFIG[3].POLARITY.
TASKS_OUT[4]	0x010	Task for writing to pin specified in CONFIG[4]. PSEL. Action on pin is configured in
		CONFIG[4].POLARITY.
TASKS_OUT[5]	0x014	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is configured in
		CONFIG[5].POLARITY.
TASKS_OUT[6]	0x018	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is configured in
		CONFIG[6].POLARITY.
TASKS_OUT[7]	0x01C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is configured in
		CONFIG[7].POLARITY.
TASKS_SET[0]	0x030	Task for writing to pin specified in CONFIG[0].PSEL. Action on pin is to set it high.
TASKS_SET[1]	0x034	Task for writing to pin specified in CONFIG[1].PSEL. Action on pin is to set it high.
TASKS_SET[2]	0x038	Task for writing to pin specified in CONFIG[2].PSEL. Action on pin is to set it high.
TASKS_SET[3]	0x03C	Task for writing to pin specified in CONFIG[3].PSEL. Action on pin is to set it high.
TASKS_SET[4]	0x040	Task for writing to pin specified in CONFIG[4].PSEL. Action on pin is to set it high.
TASKS_SET[5]	0x044	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is to set it high.
TASKS_SET[6]	0x048	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is to set it high.
TASKS_SET[7]	0x04C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is to set it high.
TASKS_CLR[0]	0x060	Task for writing to pin specified in CONFIG[0].PSEL. Action on pin is to set it low.
TASKS_CLR[1]	0x064	Task for writing to pin specified in CONFIG[1].PSEL. Action on pin is to set it low.
TASKS_CLR[2]	0x068	Task for writing to pin specified in CONFIG[2].PSEL. Action on pin is to set it low.
TASKS_CLR[3]	0x06C	Task for writing to pin specified in CONFIG[3].PSEL. Action on pin is to set it low.
TASKS_CLR[4]	0x070	Task for writing to pin specified in CONFIG[4].PSEL. Action on pin is to set it low.
TASKS_CLR[5]	0x074	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is to set it low.
TASKS_CLR[6]	0x078	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is to set it low.
TASKS_CLR[7]	0x07C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is to set it low.
EVENTS_IN[0]	0x100	Event generated from pin specified in CONFIG[0].PSEL
EVENTS_IN[1]	0x104	Event generated from pin specified in CONFIG[1].PSEL
EVENTS_IN[2]	0x108	Event generated from pin specified in CONFIG[2].PSEL
EVENTS_IN[3]	0x10C	Event generated from pin specified in CONFIG[3].PSEL
EVENTS_IN[4]	0x110	Event generated from pin specified in CONFIG[4].PSEL
EVENTS_IN[5]	0x114	Event generated from pin specified in CONFIG[5].PSEL




Register	Offset	Description
EVENTS_IN[6]	0x118	Event generated from pin specified in CONFIG[6].PSEL
EVENTS_IN[7]	0x11C	Event generated from pin specified in CONFIG[7].PSEL
EVENTS_PORT	0x17C	Event generated from multiple input GPIO pins with SENSE mechanism enabled
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
CONFIG[0]	0x510	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[1]	0x514	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[2]	0x518	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[3]	0x51C	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[4]	0x520	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[5]	0x524	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[6]	0x528	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[7]	0x52C	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event

Table 46: Register overview

6.9.4.1 TASKS_OUT[n] (n=0..7)

Address offset: $0x000 + (n \times 0x4)$


Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is configured in CONFIG[n].POLARITY.

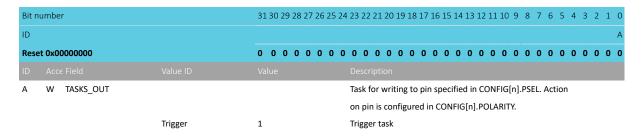

6.9.4.2 TASKS_SET[n] (n=0..7)

Address offset: $0x030 + (n \times 0x4)$

Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is to set it high.

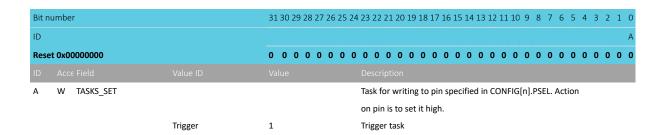

6.9.4.3 TASKS_CLR[n] (n=0..7)

Address offset: $0x060 + (n \times 0x4)$

Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is to set it low.



Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_CLR			Task for writing to pin specified in CONFIG[n].PSEL. Action
			on pin is to set it low.
	Trigger	1	Trigger task

6.9.4.4 EVENTS_IN[n] (n=0..7)

Address offset: $0x100 + (n \times 0x4)$

Event generated from pin specified in CONFIG[n].PSEL

Bit r	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_IN			Event generated from pin specified in CONFIG[n].PSEL
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.9.4.5 EVENTS_PORT

Address offset: 0x17C

Event generated from multiple input GPIO pins with SENSE mechanism enabled

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_PORT			Event generated from multiple input GPIO pins with SENSE
				mechanism enabled
		NotGenerated	0	Event not generated

6.9.4.6 INTENSET

Address offset: 0x304

Enable interrupt

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		1	HGFEDCBA
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A-H RW IN[i] (i=07)			Write '1' to enable interrupt for event IN[i]
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
I RW PORT			Write '1' to enable interrupt for event PORT
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled





6.9.4.7 INTENCLR

Address offset: 0x308

Disable interrupt



6.9.4.8 CONFIG[n] (n=0..7)

Address offset: $0x510 + (n \times 0x4)$

Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event

Bit r	number		31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				E DD BBBB A
Res	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW MODE			Mode
		Disabled	0	Disabled. Pin specified by PSEL will not be acquired by the
				GPIOTE module.
		Event	1	Event mode
				The pin specified by PSEL will be configured as an input and
				the IN[n] event will be generated if operation specified in
				POLARITY occurs on the pin.
		Task	3	Task mode
				The GPIO specified by PSEL will be configured as an output
				and triggering the SET[n], CLR[n] or OUT[n] task will
				perform the operation specified by POLARITY on the pin.
				When enabled as a task the GPIOTE module will acquire the
				pin and the pin can no longer be written as a regular output
				pin from the GPIO module.
В	RW PSEL		[031]	GPIO number associated with SET[n], CLR[n], and OUT[n]
				tasks and IN[n] event
D	RW POLARITY			When In task mode: Operation to be performed on output
				when OUT[n] task is triggered. When In event mode:
				Operation on input that shall trigger IN[n] event.
		None	0	Task mode: No effect on pin from OUT[n] task. Event mode:
				no IN[n] event generated on pin activity.
		LoToHi	1	Task mode: Set pin from OUT[n] task. Event mode: Generate
				IN[n] event when rising edge on pin.
		HiToLo	2	Task mode: Clear pin from OUT[n] task. Event mode:
				Generate IN[n] event when falling edge on pin.





Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			E DD BBBBB AA
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
	Toggle	3	Task mode: Toggle pin from OUT[n]. Event mode: Generate
			IN[n] when any change on pin.
E RW OUTINIT			When in task mode: Initial value of the output when the
			GPIOTE channel is configured. When in event mode: No
			effect.
	Low	0	Task mode: Initial value of pin before task triggering is low
			

6.9.5 Electrical specification

6.10 PPI — Programmable peripheral interconnect

The programmable peripheral interconnect (PPI) enables peripherals to interact autonomously with each other using tasks and events independent of the CPU. The PPI allows precise synchronization between peripherals when real-time application constraints exist and eliminates the need for CPU activity to implement behavior which can be predefined using PPI.

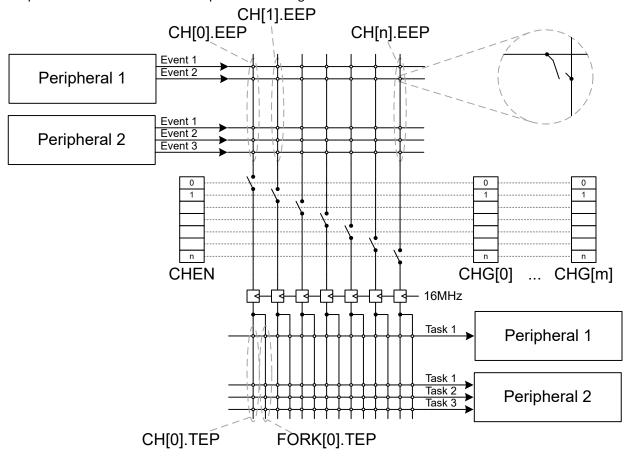


Figure 46: PPI block diagram

The PPI system has, in addition to the fully programmable peripheral interconnections, a set of channels where the event end point (EEP) and task end points (TEP) are fixed in hardware. These fixed channels can be individually enabled, disabled, or added to PPI channel groups (see CHG[n] registers), in the same way as ordinary PPI channels.



Instance	Channel	Number of channels
PPI	0-19	20
PPI (fixed)	20-31	12

Table 47: Configurable and fixed PPI channels

The PPI provides a mechanism to automatically trigger a task in one peripheral as a result of an event occurring in another peripheral. A task is connected to an event through a PPI channel. The PPI channel is composed of three end point registers, one EEP, and two TEPs. A peripheral task is connected to a TEP using the address of the task register associated with the task. Similarly, a peripheral event is connected to an EEP using the address of the event register associated with the event.

On each PPI channel, the signals are synchronized to the 16 MHz clock to avoid any internal violation of setup and hold timings. As a consequence, events that are synchronous to the 16 MHz clock will be delayed by one clock period, while other asynchronous events will be delayed by up to one 16 MHz clock period.

Note: Shortcuts (as defined in the SHORTS register in each peripheral) are not affected by this 16 MHz synchronization, and are therefore not delayed.

Each TEP implements a fork mechanism that enables a second task to be triggered at the same time as the task specified in the TEP is triggered. This second task is configured in the task end point register in the FORK registers groups, e.g. FORK.TEP[0] is associated with PPI channel CH[0].

There are two ways of enabling and disabling PPI channels:

- Enable or disable PPI channels individually using the CHEN, CHENSET, and CHENCLR registers.
- Enable or disable PPI channels in PPI channel groups through the groups' ENABLE and DISABLE tasks. Prior to these tasks being triggered, the PPI channel group must be configured to define which PPI channels belong to which groups.

Note: When a channel belongs to two groups m and n, and the tasks CHG[m].EN and CHG[n].DIS occur simultaneously (m and n can be equal or different), the CHG[m].EN on that channel has priority.

PPI tasks (for example, CHG[0].EN) can be triggered through the PPI like any other task, which means they can be hooked to a PPI channel as a TEP. One event can trigger multiple tasks by using multiple channels and one task can be triggered by multiple events in the same way.

6.10.1 Pre-programmed channels

Some of the PPI channels are pre-programmed. These channels cannot be configured by the CPU, but can be added to groups and enabled and disabled like the general purpose PPI channels. The FORK TEP for these channels are still programmable and can be used by the application.

For a list of pre-programmed PPI channels, see the following table.



Channel	EEP	TEP
20	TIMERO->EVENTS_COMPARE[0]	RADIO->TASKS_TXEN
21	TIMERO->EVENTS_COMPARE[0]	RADIO->TASKS_RXEN
22	TIMERO->EVENTS_COMPARE[1]	RADIO->TASKS_DISABLE
23	RADIO->EVENTS_BCMATCH	AAR->TASKS_START
24	RADIO->EVENTS_READY	CCM->TASKS_KSGEN
25	RADIO->EVENTS_ADDRESS	CCM->TASKS_CRYPT
26	RADIO->EVENTS_ADDRESS	TIMERO->TASKS_CAPTURE[1]
27	RADIO->EVENTS_END	TIMERO->TASKS_CAPTURE[2]
28	RTC0->EVENTS_COMPARE[0]	RADIO->TASKS_TXEN
29	RTC0->EVENTS_COMPARE[0]	RADIO->TASKS_RXEN
30	RTC0->EVENTS_COMPARE[0]	TIMERO->TASKS_CLEAR
31	RTC0->EVENTS_COMPARE[0]	TIMERO->TASKS_START

Table 48: Pre-programmed channels

6.10.2 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4001F000	PPI	PPI	Programmable peripheral interconnect	

Table 49: Instances

Register	Offset	Description
TASKS_CHG[0].EN	0x000	Enable channel group 0
TASKS_CHG[0].DIS	0x004	Disable channel group 0
TASKS_CHG[1].EN	0x008	Enable channel group 1
TASKS_CHG[1].DIS	0x00C	Disable channel group 1
TASKS_CHG[2].EN	0x010	Enable channel group 2
TASKS_CHG[2].DIS	0x014	Disable channel group 2
TASKS_CHG[3].EN	0x018	Enable channel group 3
TASKS_CHG[3].DIS	0x01C	Disable channel group 3
TASKS_CHG[4].EN	0x020	Enable channel group 4
TASKS_CHG[4].DIS	0x024	Disable channel group 4
TASKS_CHG[5].EN	0x028	Enable channel group 5
TASKS_CHG[5].DIS	0x02C	Disable channel group 5
CHEN	0x500	Channel enable register
CHENSET	0x504	Channel enable set register
CHENCLR	0x508	Channel enable clear register
CH[0].EEP	0x510	Channel 0 event endpoint
CH[0].TEP	0x514	Channel 0 task endpoint
CH[1].EEP	0x518	Channel 1 event endpoint
CH[1].TEP	0x51C	Channel 1 task endpoint
CH[2].EEP	0x520	Channel 2 event endpoint
CH[2].TEP	0x524	Channel 2 task endpoint
CH[3].EEP	0x528	Channel 3 event endpoint
CH[3].TEP	0x52C	Channel 3 task endpoint
CH[4].EEP	0x530	Channel 4 event endpoint
CH[4].TEP	0x534	Channel 4 task endpoint
CH[5].EEP	0x538	Channel 5 event endpoint
CH[5].TEP	0x53C	Channel 5 task endpoint
CH[6].EEP	0x540	Channel 6 event endpoint
CH[6].TEP	0x544	Channel 6 task endpoint



Dogiston	Office	Description
Register	Offset	Description Channel 7 quart and saint
CH[7].EEP	0x548	Channel 7 event endpoint
CH[7].TEP	0x54C	Channel 7 task endpoint
CH[8].EEP	0x550	Channel 8 event endpoint
CH[8].TEP	0x554	Channel 8 task endpoint
CH[9].EEP	0x558	Channel 9 event endpoint
CH[9].TEP	0x55C	Channel 9 task endpoint
CH[10].EEP	0x560	Channel 10 event endpoint
CH[10].TEP	0x564	Channel 10 task endpoint
CH[11].EEP	0x568	Channel 11 event endpoint
CH[11].TEP	0x56C	Channel 11 task endpoint
CH[12].EEP	0x570	Channel 12 event endpoint
CH[12].TEP	0x574	Channel 12 task endpoint
CH[13].EEP	0x578	Channel 13 event endpoint
CH[13].TEP	0x57C	Channel 13 task endpoint
CH[14].EEP	0x580	Channel 14 event endpoint
CH[14].TEP	0x584	Channel 14 task endpoint
CH[15].EEP	0x588	Channel 15 event endpoint
CH[15].TEP	0x58C	Channel 15 task endpoint
CH[16].EEP	0x590	Channel 16 event endpoint
CH[16].TEP	0x594	Channel 16 task endpoint
CH[17].EEP	0x598	Channel 17 event endpoint
CH[17].TEP	0x59C	Channel 17 task endpoint
CH[18].EEP	0x5A0	Channel 18 event endpoint
CH[18].TEP	0x5A4	Channel 18 task endpoint
CH[19].EEP	0x5A8	Channel 19 event endpoint
CH[19].TEP	0x5AC	Channel 19 task endpoint
CHG[0]	0x800	Channel group 0
CHG[1]	0x804	Channel group 1
CHG[2]	0x808	Channel group 2
CHG[3]	0x80C	Channel group 3
CHG[4]	0x810	Channel group 4
CHG[5]	0x814	Channel group 5
FORK[0].TEP	0x910	Channel 0 task endpoint
FORK[1].TEP	0x914	Channel 1 task endpoint
FORK[2].TEP	0x918	Channel 2 task endpoint
FORK[3].TEP	0x91C	Channel 3 task endpoint
FORK[4].TEP	0x920	Channel 4 task endpoint
FORK[5].TEP	0x924	Channel 5 task endpoint
FORK[6].TEP	0x928	Channel 6 task endpoint
FORK[7].TEP	0x92C	Channel 7 task endpoint
FORK[8].TEP	0x930	Channel 8 task endpoint
FORK[9].TEP	0x934	Channel 9 task endpoint
FORK[10].TEP	0x938	Channel 10 task endpoint
FORK[11].TEP	0x93C	Channel 11 task endpoint
FORK[12].TEP	0x940	Channel 12 task endpoint
FORK[13].TEP	0x944	Channel 13 task endpoint
FORK[14].TEP	0x948	Channel 14 task endpoint
FORK[15].TEP	0x94C	Channel 15 task endpoint
FORK[16].TEP	0x950	Channel 16 task endpoint
FORK[17].TEP	0x954	Channel 17 task endpoint
FORK[18].TEP	0x958	Channel 18 task endpoint
FORK[19].TEP	0x95C	Channel 19 task endpoint
FORK[20].TEP	0x960	Channel 20 task endpoint




Register	Offset	Description
FORK[21].TEP	0x964	Channel 21 task endpoint
FORK[22].TEP	0x968	Channel 22 task endpoint
FORK[23].TEP	0x96C	Channel 23 task endpoint
FORK[24].TEP	0x970	Channel 24 task endpoint
FORK[25].TEP	0x974	Channel 25 task endpoint
FORK[26].TEP	0x978	Channel 26 task endpoint
FORK[27].TEP	0x97C	Channel 27 task endpoint
FORK[28].TEP	0x980	Channel 28 task endpoint
FORK[29].TEP	0x984	Channel 29 task endpoint
FORK[30].TEP	0x988	Channel 30 task endpoint
FORK[31].TEP	0x98C	Channel 31 task endpoint

Table 50: Register overview

6.10.2.1 TASKS_CHG[n].EN (n=0..5)

Address offset: $0x000 + (n \times 0x8)$


Enable channel group n



6.10.2.2 TASKS_CHG[n].DIS (n=0..5)

Address offset: $0x004 + (n \times 0x8)$

Disable channel group n



6.10.2.3 CHEN

Address offset: 0x500 Channel enable register



Bit number		31	30 2	9 2	8 2	7 26	25	5 24	23	22	21	20 1	.9 1	8 17	16	15	14	13 1	12 13	l 10	9	8	7	6	5	4	3 2	1	0
ID		f	e d	d (c k	а	Z	Υ	Χ	W	٧	U	Т 5	R	Q	Р	О	N I	M L	K	J	T	Н	G	F	E I	0 0	В	Α
Reset 0x00000000		0	0 (0 (0 0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 0	0	0
ID Acce Field V																													
A-T RW CH[i] (i=019)									En	able	e or	dis	able	e ch	ann	el i													
C	Disabled	0							Di	sabl	e cl	nani	nel																
E	Enabled	1							En	able	e ch	anr	ıel																
U-f RW CH[i] (i=2031)									En	able	e or	dis	able	e ch	ann	el i													
C	Disabled	0							Di	sabl	e cl	nani	nel																
E	Enabled	1							En	able	e ch	anr	iel																

6.10.2.4 CHENSET

Address offset: 0x504

Channel enable set register

Read: reads value of CH{i} field in CHEN register.

Bit number	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	f e d c b	aZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-T RW CH[i] (i=019)		Channel i enable set register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Set	1	Write: Enable channel
U-f RW CH[i] (i=2031)		Channel i enable set register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Set	1	Write: Enable channel

6.10.2.5 CHENCLR

Address offset: 0x508

Channel enable clear register

Read: reads value of CH{i} field in CHEN register.


Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	fedcbaZY	Y X W V U T S R Q P O N M L K J I H G F E D C B A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-T RW CH[i] (i=019)		Channel i enable clear register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Clear	1	Write: disable channel
U-f RW CH[i] (i=2031)		Channel i enable clear register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Clear	1	Write: disable channel

6.10.2.6 CH[n].EEP (n=0..19)

Address offset: $0x510 + (n \times 0x8)$



Channel n event endpoint



6.10.2.7 CH[n].TEP (n=0..19)

Address offset: $0x514 + (n \times 0x8)$

Channel n task endpoint

Α	RW TEP	Pointer to task register. Accepts only addresses to registers
ID		Value Description
Res	et 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Pointer to task register. Accepts only addresses to regis from the Task group.

6.10.2.8 CHG[n] (n=0..5)

Address offset: $0x800 + (n \times 0x4)$


Channel group n

Bit number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		f edcb	aZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A-T RW CH[i] (i=019)			Include or exclude channel i
	Excluded	0	Exclude
	Included	1	Include
U-f RW CH[i] (i=2031)			Include or exclude channel i
	Excluded	0	Exclude
	Included	1	Include

6.10.2.9 FORK[n].TEP (n=0..19, 20..31)

Address offset: $0x910 + (n \times 0x4)$

Channel n task endpoint





6.11 QDEC — Quadrature decoder

The Quadrature decoder (QDEC) provides buffered decoding of quadrature-encoded sensor signals. It is suitable for mechanical and optical sensors.

The sample period and accumulation are configurable to match application requirements. The QDEC provides the following:

- Digital waveform decoding from off-chip quadrature encoder
- Sample accumulation eliminating hard real-time requirements to be enforced on application
- · Optional input de-bounce filters.
- Optional LED output signal for optical encoders

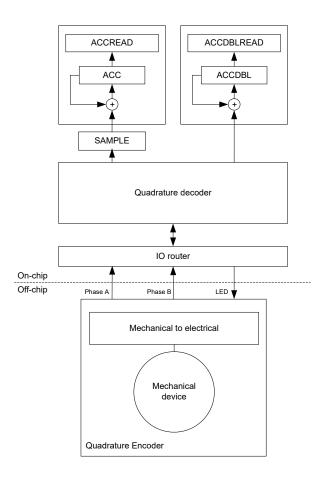


Figure 47: Quadrature decoder configuration

6.11.1 Sampling and decoding

The QDEC decodes the output from an incremental motion encoder by sampling the QDEC phase input pins (A and B).

The off-chip quadrature encoder is an incremental motion encoder outputting two waveforms, phase A and phase B. The two output waveforms are always 90 degrees out of phase, meaning that one always changes level before the other. The direction of movement is indicated by the waveform that changes level first. Invalid transitions may occur, meaning the two waveforms simultaneously switch. This may occur if the wheel rotates too fast relative to the sample rate set for the decoder.

The QDEC decodes the output from the off-chip encoder by sampling the QDEC phase input pins (A and B) at a fixed rate as specified in the SAMPLEPER register.



If the SAMPLEPER value needs to be changed, the QDEC shall be stopped using the STOP task. SAMPLEPER can be then changed upon receiving the STOPPED event, and QDEC can be restarted using the START task. Failing to do so may result in unpredictable behavior.

It is good practice to only change registers LEDPOL, REPORTPER, DBFEN, and LEDPRE when the QDEC is stopped.

When started, the decoder continuously samples the two input waveforms and decodes these by comparing the current sample pair (n) with the previous sample pair (n-1).

The decoding of the sample pairs is described in the table below.

Previo	us	Currer	nt	SAMPLE	ACC operation	ACCDBL	Description
sampl	e pair(n	sampl	es	register		operation	
- 1)		pair(n)				
Α	В	Α	В				
0	0	0	0	0	No change	No change	No movement
0	0	0	1	1	Increment	No change	Movement in positive direction
0	0	1	0	-1	Decrement	No change	Movement in negative direction
0	0	1	1	2	No change	Increment	Error: Double transition
0	1	0	0	-1	Decrement	No change	Movement in negative direction
0	1	0	1	0	No change	No change	No movement
0	1	1	0	2	No change	Increment	Error: Double transition
0	1	1	1	1	Increment	No change	Movement in positive direction
1	0	0	0	1	Increment	No change	Movement in positive direction
1	0	0	1	2	No change	Increment	Error: Double transition
1	0	1	0	0	No change	No change	No movement
1	0	1	1	-1	Decrement	No change	Movement in negative direction
1	1	0	0	2	No change	Increment	Error: Double transition
1	1	0	1	-1	Decrement	No change	Movement in negative direction
1	1	1	0	1	Increment	No change	Movement in positive direction
1	1	1	1	0	No change	No change	No movement

Table 51: Sampled value encoding

6.11.2 LED output

The LED output follows the sample period. The LED is switched on for a set period before sampling and then switched off immediately after. The period the LED is switched on before sampling is given in the LEDPRE register.

The LED output pin polarity is specified in the LEDPOL register.

When using off-chip mechanical encoders not requiring an LED, the LED output can be disabled by writing value 'Disconnected' to the CONNECT field of the PSEL.LED register. In this case, the QDEC will not acquire access to a pin for the LED output.

6.11.3 Debounce filters

Each of the two-phase inputs have digital debounce filters.

When enabled through the DBFEN register, the filter inputs are sampled at a fixed 1 MHz frequency during the entire sample period (which is specified in the SAMPLEPER register). The filters require all of the samples within this sample period to equal before the input signal is accepted and transferred to the output of the filter.

As a result, only input signal with a steady state longer than twice the period specified in SAMPLEPER are guaranteed to pass through the filter. Any signal with a steady state shorter than SAMPLEPER will always



be suppressed by the filter. It is assumed that the frequency during the debounce period never exceeds 500 kHz (as required by the Nyquist theorem when using a 1 MHz sample frequency).

The LED will always be ON when the debounce filters are enabled, as the inputs in this case will be sampled continuously.

When the debounce filters are enabled, displacements reported by the QDEC peripheral are delayed by one SAMPLEPER period.

6.11.4 Accumulators

The quadrature decoder contains two accumulator registers, ACC and ACCDBL. These registers accumulate valid motion sample values and the number of detected invalid samples (double transitions), respectively.

The ACC register accumulates all valid values (1/-1) written to the SAMPLE register. This can be useful for preventing hard real-time requirements from being enforced on the application. When using the ACC register, the application can fetch data when necessary instead of reading all SAMPLE register output. The ACC register holds the relative movement of the external mechanical device from the previous clearing of the ACC register. Sample values indicating a double transition (2) will not be accumulated in the ACC register.

An ACCOF event is generated if the ACC receives a SAMPLE value that would cause the register to overflow or underflow. Any SAMPLE value that would cause an ACC overflow or underflow will be discarded, but any samples that do not cause the ACC to overflow or underflow will still be accepted.

The accumulator ACCDBL accumulates the number of detected double transitions since the previous clearing of the ACCDBL register.

The ACC and ACCDBL registers can be cleared by the READCLRACC and subsequently read using the ACCREAD and ACCDBLREAD registers.

The ACC register can be separately cleared by the RDCLRACC and subsequently read using the ACCREAD registers.

The ACCDBL register can be separately cleared by the RDCLRDBL and subsequently read using the ACCDBLREAD registers.

The REPORTPER register allows automated capture of multiple samples before sending an event. When a non-null displacement is captured and accumulated, a REPORTRDY event is sent. When one or more double-displacements are captured and accumulated, a DBLRDY event is sent. The REPORTPER field in this register determines how many samples must be accumulated before the contents are evaluated and a REPORTRDY or DBLRDY event is sent.

Using the RDCLRACC task (manually sent upon receiving the event, or using the DBLRDY_RDCLRACC shortcut), ACCREAD can then be read.

When a double transition has been captured and accumulated, a DBLRDY event is sent. Using the RDCLRDBL task (manually sent upon receiving the event, or using the DBLRDY_RDCLRDBL shortcut), ACCDBLREAD can then be read.

6.11.5 Output/input pins

The QDEC uses a three-pin interface to the off-chip quadrature encoder.

These pins are acquired when the QDEC is enabled in the ENABLE register. The pins acquired by the QDEC cannot be written by the CPU, but they can still be read by the CPU.

The pin numbers used for the QDEC are selected using the PSEL.n registers.



6.11.6 Pin configuration

The Phase A, Phase B, and LED signals are mapped to physical pins according to the configuration specified in the PSEL.A, PSEL.B, and PSEL.LED registers respectively.

If the CONNECT field value 'Disconnected' is specified in any of these registers, the associated signal will not be connected to any physical pin. The PSEL.A, PSEL.B, and PSEL.LED registers and their configurations are only used as long as the QDEC is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN CNF[n] register.

To secure correct behavior in the QDEC, the pins used by the QDEC must be configured in the GPIO peripheral as described in GPIO configuration before enabling peripheral on page 154 before enabling the QDEC. This configuration must be retained in the GPIO for the selected I/Os as long as the QDEC is enabled.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

QDEC signal	QDEC pin	Direction	Output value	Comment
Phase A	As specified in PSEL.A	Input	Not applicable	
Phase B	As specified in PSEL.B	Input	Not applicable	
LED	As specified in PSEL.LED	Input	Not applicable	

Table 52: GPIO configuration before enabling peripheral

6.11.7 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40012000	QDEC	QDEC	Quadrature decoder	

Table 53: Instances

Register	Offset	Description
TASKS_START	0x000	Task starting the quadrature decoder
TASKS_STOP	0x004	Task stopping the quadrature decoder
TASKS_READCLRACC	0x008	Read and clear ACC and ACCDBL
TASKS_RDCLRACC	0x00C	Read and clear ACC
TASKS_RDCLRDBL	0x010	Read and clear ACCDBL
EVENTS_SAMPLERDY	0x100	Event being generated for every new sample value written to the SAMPLE register
EVENTS_REPORTRDY	0x104	Non-null report ready
EVENTS_ACCOF	0x108	ACC or ACCDBL register overflow
EVENTS_DBLRDY	0x10C	Double displacement(s) detected
EVENTS_STOPPED	0x110	QDEC has been stopped
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ENABLE	0x500	Enable the quadrature decoder
LEDPOL	0x504	LED output pin polarity
SAMPLEPER	0x508	Sample period
SAMPLE	0x50C	Motion sample value
REPORTPER	0x510	Number of samples to be taken before REPORTRDY and DBLRDY events can be generated
ACC	0x514	Register accumulating the valid transitions
ACCREAD	0x518	Snapshot of the ACC register, updated by the READCLRACC or RDCLRACC task
PSEL.LED	0x51C	Pin select for LED signal



Register	Offset	Description
PSEL.A	0x520	Pin select for A signal
PSEL.B	0x524	Pin select for B signal
DBFEN	0x528	Enable input debounce filters
LEDPRE	0x540	Time period the LED is switched ON prior to sampling
ACCDBL	0x544	Register accumulating the number of detected double transitions
ACCDBLREAD	0x548	Snapshot of the ACCDBL, updated by the READCLRACC or RDCLRDBL task

Table 54: Register overview

6.11.7.1 TASKS_START

Address offset: 0x000

Task starting the quadrature decoder


When started, the SAMPLE register will be continuously updated at the rate given in the SAMPLEPER register.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_START			Task starting the quadrature decoder
				When started, the SAMPLE register will be continuously
				updated at the rate given in the SAMPLEPER register.
		Trigger	1	Trigger task

6.11.7.2 TASKS_STOP

Address offset: 0x004

Task stopping the quadrature decoder




6.11.7.3 TASKS_READCLRACC

Address offset: 0x008

Read and clear ACC and ACCDBL

Task transferring the content of ACC to ACCREAD and the content of ACCDBL to ACCDBLREAD, and then clearing the ACC and ACCDBL registers. These read-and-clear operations will be done atomically.




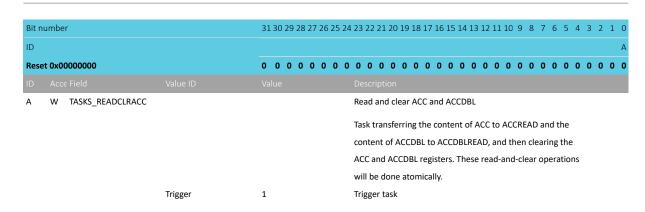

6.11.7.4 TASKS_RDCLRACC

Address offset: 0x00C Read and clear ACC


Task transferring the content of ACC to ACCREAD, and then clearing the ACC register. This read-and-clear operation will be done atomically.

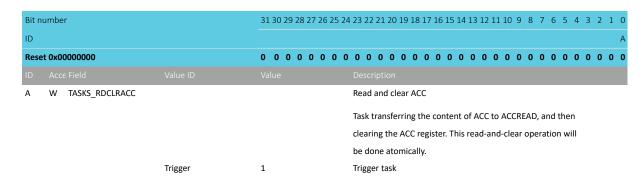

6.11.7.5 TASKS RDCLRDBL

Address offset: 0x010
Read and clear ACCDBL

Task transferring the content of ACCDBL to ACCDBLREAD, and then clearing the ACCDBL register. This readand-clear operation will be done atomically.

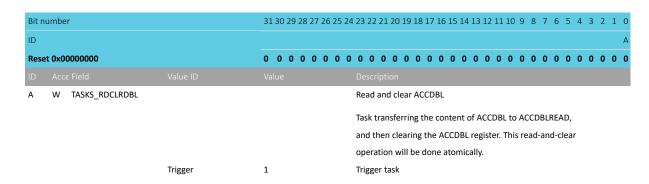


6.11.7.6 EVENTS SAMPLERDY

Address offset: 0x100

Event being generated for every new sample value written to the SAMPLE register



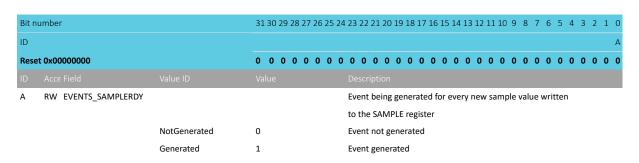

6.11.7.7 EVENTS REPORTRDY

Address offset: 0x104 Non-null report ready


Event generated when REPORTPER number of samples has been accumulated in the ACC register and the content of the ACC register is not equal to 0. (Thus, this event is only generated if a motion is detected since the previous clearing of the ACC register).

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_REPORTRDY			Non-null report ready
				Event generated when REPORTPER number of samples has
				been accumulated in the ACC register and the content of
				the ACC register is not equal to 0. (Thus, this event is only
				generated if a motion is detected since the previous clearing
				of the ACC register).
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.7.8 EVENTS ACCOF

Address offset: 0x108

ACC or ACCDBL register overflow

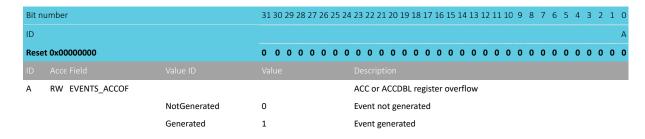

6.11.7.9 EVENTS_DBLRDY

Address offset: 0x10C

Double displacement(s) detected

Event generated when REPORTPER number of samples has been accumulated and the content of the ACCDBL register is not equal to 0. (Thus, this event is only generated if a double transition is detected since the previous clearing of the ACCDBL register).



Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_DBLRDY			Double displacement(s) detected
				Event generated when REPORTPER number of samples has
				been accumulated and the content of the ACCDBL register
				is not equal to 0. (Thus, this event is only generated if a
				double transition is detected since the previous clearing of
				the ACCDBL register).
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.7.10 EVENTS_STOPPED

Address offset: 0x110

QDEC has been stopped

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_STOPPED		QDEC has been stopped
NotGenerated	0	Event not generated
Generated	1	Event generated

6.11.7.11 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				G F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW REPORTRDY_READCLE	RACC		Shortcut between event REPORTRDY and task READCLRACC
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW SAMPLERDY_STOP			Shortcut between event SAMPLERDY and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
С	RW REPORTRDY_RDCLRAC	CC		Shortcut between event REPORTRDY and task RDCLRACC
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
D	RW REPORTRDY_STOP			Shortcut between event REPORTRDY and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Ε	RW DBLRDY_RDCLRDBL			Shortcut between event DBLRDY and task RDCLRDBL
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
F	RW DBLRDY_STOP			Shortcut between event DBLRDY and task STOP
		Disabled	0	Disable shortcut



Bit n	umber		313	0 29	9 28	27	26	25 2	24 2	23 2	2 2	1 20) 19	18	17	16 1	15 1	4 1	3 12	11	10 9	9 8	3 7	6	5	4	3	2	1 0
ID																								G	F	Ε	D	С	3 A
Rese	t 0x00000000		0	0 0	0	0	0	0	0	0 () (0	0	0	0	0	0 (0	0	0	0 () (0 0	0	0	0	0	0	0 0
ID																													
		Enabled	1						-	Enal	ole	sho	rtcu	t															
G	RW SAMPLERDY_READCLR	ACC								Shor	rtcu	it be	etwe	een	eve	nt	SAN	1PLI	ERD	Y ar	nd ta	sk I	REA	DCL	RA	CC			
		Disabled	0						-	Disa	ble	sho	rtcı	ıt															
		Enabled	1						1	Enal	ole	sho	rtcu	t															

6.11.7.12 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW SAMPLERDY			Write '1' to enable interrupt for event SAMPLERDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW REPORTRDY			Write '1' to enable interrupt for event REPORTRDY
				Event generated when REPORTPER number of samples has
				been accumulated in the ACC register and the content of
				the ACC register is not equal to 0. (Thus, this event is only
				generated if a motion is detected since the previous clearing
				of the ACC register).
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACCOF			Write '1' to enable interrupt for event ACCOF
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW DBLRDY			Write '1' to enable interrupt for event DBLRDY
				Event generated when REPORTPER number of samples has
				been accumulated and the content of the ACCDBL register
				is not equal to 0. (Thus, this event is only generated if a
				double transition is detected since the previous clearing of
				the ACCDBL register).
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Е	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.11.7.13 INTENCLR

Address offset: 0x308

Disable interrupt

NORDIC*

Bit r	number		31 30 29 28 27 26	25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID					E D C B
Res	et 0x00000000		0 0 0 0 0 0	0 (0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW SAMPLERDY				Write '1' to disable interrupt for event SAMPLERDY
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
В	RW REPORTRDY				Write '1' to disable interrupt for event REPORTRDY
					Event generated when REPORTPER number of samples has
					been accumulated in the ACC register and the content of
					the ACC register is not equal to 0. (Thus, this event is only
					generated if a motion is detected since the previous clearing
					of the ACC register).
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
С	RW ACCOF				Write '1' to disable interrupt for event ACCOF
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
D	RW DBLRDY				Write '1' to disable interrupt for event DBLRDY
					Event generated when REPORTPER number of samples has
					been accumulated and the content of the ACCDBL register
					is not equal to 0. (Thus, this event is only generated if a
					double transition is detected since the previous clearing of
					the ACCDBL register).
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
E	RW STOPPED	Lilabica	•		Write '1' to disable interrupt for event STOPPED
_	3101125	Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled

6.11.7.14 ENABLE

Address offset: 0x500


Enable the quadrature decoder

Bit number		31 30 29 28 27	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1			
ID			А			
Reset 0x00000000		0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$			
ID Acce Field			Description			
A RW ENABLE	A RW ENABLE Enable or disable the quadrature decoder					
			When enabled the decoder pins will be active. When			
			disabled the quadrature decoder pins are not active and can			
			be used as GPIO .			
	Disabled	0	Disable			
	Enabled	1	Enable			
		0 1	be used as GPIO . Disable			



6.11.7.15 LEDPOL


Address offset: 0x504 LED output pin polarity

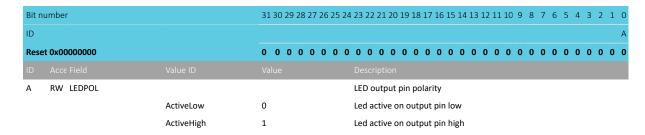

6.11.7.16 SAMPLEPER

Address offset: 0x508

Sample period

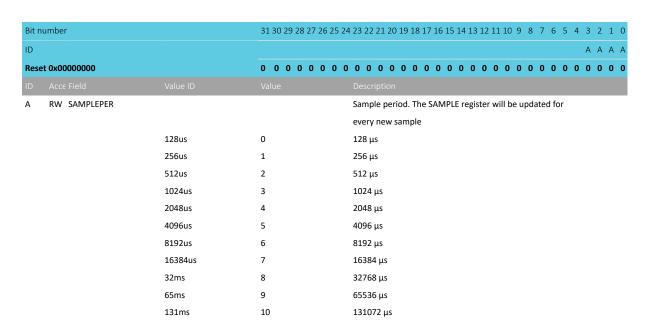

6.11.7.17 SAMPLE

Address offset: 0x50C Motion sample value


Bit n	umber			31	30	29	28 2	27 2	6 2	25 2	24	23	22	21	20	19 1	8 1	7 16	5 15	14	13	12 1	11 1	0 9	8	7	6	5	4	3 2	2 1	0
ID				Α	Α	Α	Α	A A	Δ.	A .	Α	Α	Α	Α	Α	A	Α Δ	A	Α	Α	Α	Α	A A	A A	Α	Α	Α	Α	Α.	Α Δ	A A	Α
Rese	t 0x000	00000		0	0	0	0	0 ()	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0 (0	0	0	0	0	0	0 0	0	0
ID																																
Α	R S	SAMPLE		[-1	2]							Las	t n	noti	ion	sam	ple															
	The value is a 2's complement value, and the sign gives the																															
												dir	ect	ion	of 1	the	mot	ion	. Th	ie v	alue	2'	ind	icat	es a	do	ubl	e				
												tra	nsi	tior	١.																	



6.11.7.18 REPORTPER

Address offset: 0x510


Number of samples to be taken before REPORTRDY and DBLRDY events can be generated

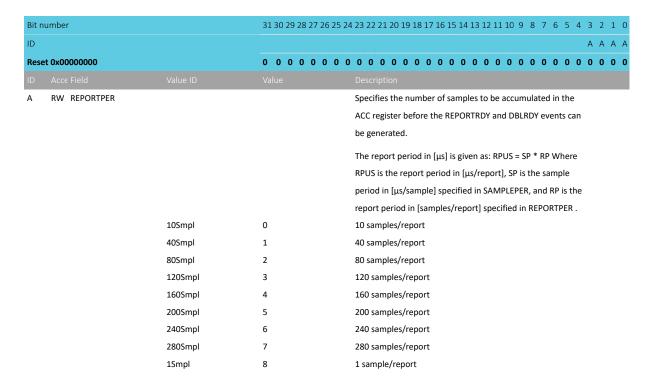

6.11.7.19 ACC

Address offset: 0x514

Register accumulating the valid transitions

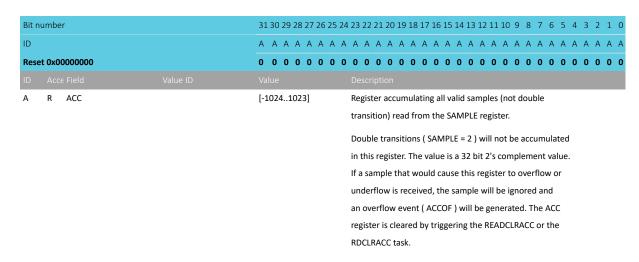

6.11.7.20 ACCREAD

Address offset: 0x518

Snapshot of the ACC register, updated by the READCLRACC or RDCLRACC task



A R ACCREAD	[-10241023]	Snapshot of the ACC register.
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

The ACCREAD register is updated when the READCLRACC or RDCLRACC task is triggered.

6.11.7.21 PSEL.LED

Address offset: 0x51C Pin select for LED signal

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.11.7.22 PSEL.A

Address offset: 0x520 Pin select for A signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.11.7.23 PSEL.B

Address offset: 0x524 Pin select for B signal


Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t 0xFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
A C	RW PIN RW CONNECT		[031]	Pin number Connection
		Disconnected	[031]	



6.11.7.24 DBFEN

Address offset: 0x528


Enable input debounce filters

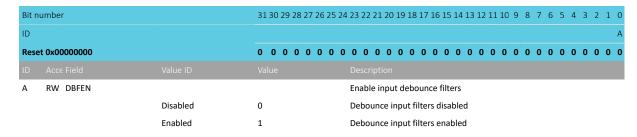

6.11.7.25 LEDPRE

Address offset: 0x540


Time period the LED is switched ON prior to sampling



6.11.7.26 ACCDBL

Address offset: 0x544

Register accumulating the number of detected double transitions

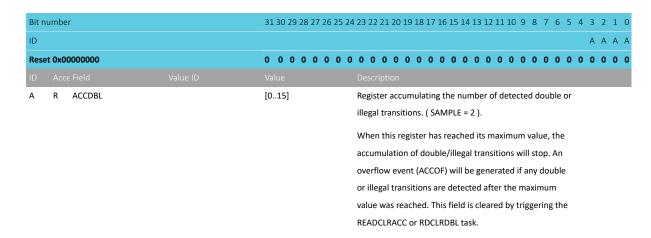

6.11.7.27 ACCDBLREAD

Address offset: 0x548

Snapshot of the ACCDBL, updated by the READCLRACC or RDCLRDBL task



Bit n	number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			АААА
Rese	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
Α	R ACCDBLREAD	[015]	Snapshot of the ACCDBL register. This field is updated when
			the READCLRACC or RDCLRDBL task is triggered.

6.11.8 Electrical specification

6.11.8.1 QDEC Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{SAMPLE}	Time between sampling signals from quadrature decoder	128		131072	μs
t _{LED}	Time from LED is turned on to signals are sampled	0		511	μs

6.12 RADIO — 2.4 GHz radio

The 2.4 GHz radio transceiver is compatible with multiple radio standards such as Bluetooth Low Energy, IEEE 802.15.4, and Nordic's proprietary modes.

The main features of RADIO are:

- Multidomain 2.4 GHz radio transceiver, with
 - Bluetooth Low Energy 1 Mbps and 2 Mbps modes
 - Bluetooth Low Energy Long Range (125 kbps and 500 kbps) modes
 - Angle of Arrival (AoA) and Angle of Departure (AoD) direction finding using Bluetooth Low Energy
 - IEEE 802.15.4 250 kbps mode
 - 1 Mbps and 2 Mbps Nordic proprietary modes
- Best in class link budget and low power operation
- Efficient data interface with EasyDMA support
- Automatic address filtering and pattern matching

EasyDMA, in combination with an automated packet assembler, packet disassembler, automated CRC generator and CRC checker, makes it easy to configure and use RADIO. See the following figure for details.

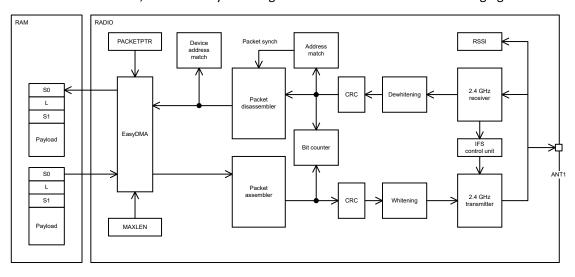


Figure 48: RADIO block diagram



RADIO includes a device address match unit and an interframe spacing control unit that can be utilized to simplify address whitelisting and interframe spacing respectively in Bluetooth Low Energy and similar applications.

RADIO also includes a received signal strength indicator (RSSI) and a bit counter. The bit counter generates events when a preconfigured number of bits are sent or received by RADIO.

6.12.1 Packet configuration

A RADIO packet contains the fields PREAMBLE, ADDRESS, S0, LENGTH, S1, PAYLOAD, and CRC. For Long Range (125 kbps and 500 kbps) Bluetooth Low Energy modes, fields CI, TERM1, and TERM2 are also included.

The content of a RADIO packet is illustrated in the following figures. RADIO sends the fields in the packet according to the sequence shown in the figures, starting on the left.




Figure 49: On-air packet layout




Figure 50: On-air packet layout for Long Range (125 kbps and 500 kbps) Bluetooth Low Energy modes

Not shown in the figures is the static payload add-on (the length of which is defined in PCNF1.STATLEN, and which is 0 bytes in a standard BLE packet). The static payload add-on is sent between PAYLOAD and CRC fields. RADIO sends the different fields in the packet in the order they are illustrated above, from left to right.

PREAMBLE is sent with least significant bit first on air. The size of the PREAMBLE depends on the mode selected in the MODE register:

- The PREAMBLE is one byte for MODE = Ble_1Mbit as well as all Nordic proprietary operating modes
 (MODE = Nrf_1Mbit and MODE = Nrf_2Mbit), and PCNFO.PLEN has to be set accordingly. If the first bit
 of the ADDRESS is 0, the preamble will be set to 0xAA. Otherwise the PREAMBLE will be set to 0x55.
- For MODE = Ble_2Mbit, the PREAMBLE must be set to 2 bytes through PCNFO.PLEN. If the first bit of the ADDRESS is 0, the preamble will be set to 0xAAAA. Otherwise the PREAMBLE will be set to 0x5555.
- For MODE = Ble_LR125Kbit and MODE = Ble_LR500Kbit, the PREAMBLE is 10 repetitions of 0x3C.
- For MODE = leee802154_250Kbit, the PREAMBLE is 4 bytes and set to all zeros.

Radio packets are stored in memory inside instances of a RADIO packet data structure as illustrated below. The PREAMBLE, ADDRESS, CI, TERM1, TERM2, and CRC fields are omitted in this data structure. Fields SO, LENGTH, and S1 are optional.




Figure 51: Representation of a RADIO packet in RAM



The byte ordering on air is always least significant byte first for the ADDRESS and PAYLOAD fields, and most significant byte first for the CRC field. The ADDRESS fields are always transmitted and received least significant bit first. The CRC field is always transmitted and received most significant bit first. The endianness, i.e. the order in which the bits are sent and received, of the SO, LENGTH, S1, and PAYLOAD fields can be configured via PCNF1.ENDIAN.

The sizes of the SO, LENGTH, and S1 fields can be individually configured via SOLEN, LFLEN, and S1LEN in PCNFO respectively. If any of these fields are configured to be less than 8 bits, the least significant bits of the fields are used.

If SO, LENGTH, or S1 are specified with zero length, their fields will be omitted in memory. Otherwise each field will be represented as a separate byte, regardless of the number of bits in their on-air counterpart.

Independent of the configuration of PCNF1.MAXLEN, the combined length of SO, LENGTH, S1, and PAYLOAD cannot exceed 258 bytes.

6.12.2 Address configuration

The on-air radio ADDRESS field is composed of two parts, the base address field and the address prefix field.

The size of the base address field is configurable via PCNF1.BALEN. The base address is truncated from the least significant byte if the PCNF1.BALEN is less than 4. See Definition of logical addresses on page 167.

The on-air addresses are defined in the BASEO/BASE1 and PREFIXO/PREFIX1 registers. It is only when writing these registers that the user must relate to the actual on-air addresses. For other radio address registers, such as the TXADDRESS, RXADDRESSES, and RXMATCH registers, logical radio addresses ranging from 0 to 7 are being used. The relationship between the on-air radio addresses and the logical addresses is described in the following table.

Logical address	Base address	Prefix byte
0	BASE0	PREFIXO.APO
1	BASE1	PREFIXO.AP1
2	BASE1	PREFIXO.AP2
3	BASE1	PREFIXO.AP3
4	BASE1	PREFIX1.AP4
5	BASE1	PREFIX1.AP5
6	BASE1	PREFIX1.AP6
7	BASE1	PREFIX1.AP7

Table 55: Definition of logical addresses

6.12.3 Data whitening

RADIO can do packet whitening and de-whitening which is enabled in PCNF1.WHITEEN. When enabled, whitening and de-whitening will be handled by RADIO automatically as packets are sent and received.

The whitening word is generated using polynomial $g(D) = D^7 + D^4 + 1$, which then is XORed with the data packet that is to be whitened, or de-whitened. The linear feedback shift register is initialized via DATAWHITEIV. See the following figure.






Figure 52: Data whitening and de-whitening

Whitening and de-whitening will be performed over the whole packet except for the preamble and the address fields.

6.12.4 CRC

The CRC generator in RADIO calculates the CRC over the whole packet excluding the preamble.

If useful, the address field can be excluded from the CRC calculation as well. See the CRCCNF register for more information.

The CRC polynomial is configurable as illustrated in the following figure, where bit 0 in the CRCPOLY register corresponds to X^0 and bit 1 corresponds to X^1 etc. See CRCPOLY on page 213 for more information.




Figure 53: CRC generation of an n bit CRC

The figure shows that the CRC is calculated by feeding the packet serially through the CRC generator. Before the packet is clocked through the CRC generator, the CRC generator's latches b_0 through b_n will be initialized with a predefined value specified in the CRCINIT register. After the whole packet has been clocked through the CRC generator, b_0 through b_n will hold the resulting CRC. This value will be used by RADIO during both transmission and reception. Latches b_0 through b_n are not available to be read by the CPU at any time. However, a received CRC can be read by the CPU via the RXCRC register.

The length (n) of the CRC is configurable, see CRCCNF for more information.

Once the entire packet, including the CRC, has been received and no errors were detected, RADIO generates a CRCOK event. If CRC errors were detected, a CRCERROR event is generated.

The status of the CRC check can be read from the CRCSTATUS register after a packet has been received.

6.12.5 Radio states

Tasks and events are used to control the operating state of RADIO.

RADIO can enter the states described in the following table.



State	Description
DISABLED	No operations are going on inside RADIO and the power consumption is at a minimum
RXRU	RADIO is ramping up and preparing for reception
RXIDLE	RADIO is ready for reception to start
RX	Reception has been started and the addresses enabled in the RXADDRESSES register are being monitored
TXRU	RADIO is ramping up and preparing for transmission
TXIDLE	RADIO is ready for transmission to start
TX	RADIO is transmitting a packet
RXDISABLE	RADIO is disabling the receiver
TXDISABLE	RADIO is disabling the transmitter

Table 56: RADIO state diagram

A state diagram showing an overview of RADIO is shown in the following figure.

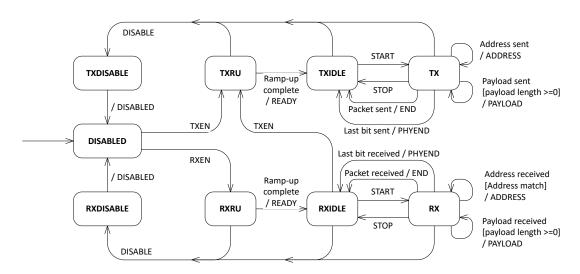


Figure 54: Radio states

This figure shows how the tasks and events relate to RADIO's operation. RADIO does not prevent a task from being triggered from the wrong state. If a task is triggered from the wrong state, for example if the RXEN task is triggered from the RXDISABLE state, this may lead to incorrect behavior. The PAYLOAD event is always generated even if the payload is zero.

The END to START shortcut should not be used with IEEE 802.15.4 250 kbps mode. Use the PHYEND to START shortcut instead.

The END to START shortcut should not be used with Long Range (125 kbps and 500 kbps) Bluetooth Low Energy modes. Use the PHYEND to START shortcut instead.

6.12.6 Transmit sequence

Before RADIO can transmit a packet, it must first ramp-up in TX mode. See TXRU in Radio states on page 169 and Transmit sequence on page 170. A TXRU ramp-up sequence is initiated when the TXEN task is triggered. After RADIO has successfully ramped up it will generate the READY event indicating that a packet transmission can be initiated. A packet transmission is initiated by triggering the START task. The START task can first be triggered after RADIO has entered into the TXIDLE state.

The following figure illustrates a single packet transmission where the CPU manually triggers the different tasks needed to control the flow of RADIO, i.e. no shortcuts are used. If shortcuts are not used, a certain amount of delay caused by CPU execution is expected between READY and START, and between END and DISABLE. As illustrated in the following figure, RADIO will by default transmit 1s between READY and



START, and between END and DISABLED. What is transmitted can be programmed through the DTX field in the MODECNF0 register.

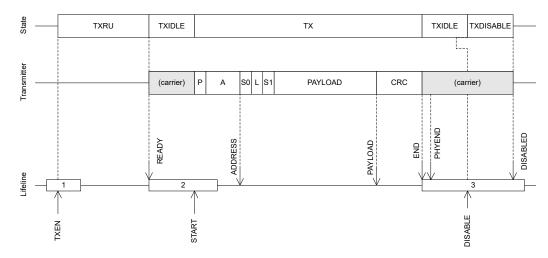


Figure 55: Transmit sequence

The following figure shows a slightly modified version of the transmit sequence where RADIO is configured to use shortcuts between READY and START, and between END and DISABLE, which means that no delay is introduced.

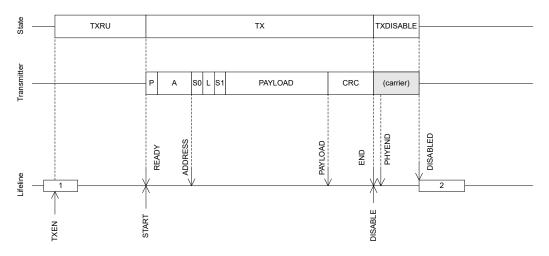


Figure 56: Transmit sequence using shortcuts to avoid delays

RADIO is able to send multiple packets one after the other without having to disable and re-enable RADIO between packets, as illustrated in the following figure.

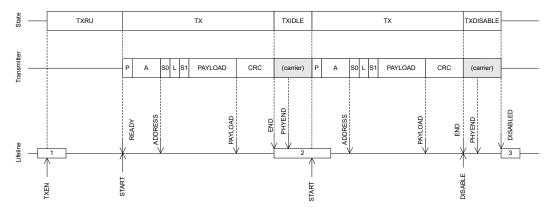


Figure 57: Transmission of multiple packets



6.12.7 Receive sequence

Before RADIO is able to receive a packet, it must first ramp up in RX mode. See RXRU in Radio states on page 169 and Receive sequence on page 171 for more information.

An RXRU ramp up sequence is initiated when the RXEN task is triggered. After RADIO has successfully ramped up it will generate the READY event indicating that a packet reception can be initiated. A packet reception is initiated by triggering the START task. As illustrated in Radio states on page 169, the START task can first be triggered after RADIO has entered into the RXIDLE state.

The following figure shows a single packet reception where the CPU manually triggers the different tasks needed to control the flow of RADIO, i.e. no shortcuts are used. If shortcuts are not used, a certain amount of delay caused by CPU execution is expected between READY and START, and between END and DISABLE. RADIO will be listening and possibly receiving undefined data, represented with an 'X', from START and until a packet with valid preamble (P) is received.

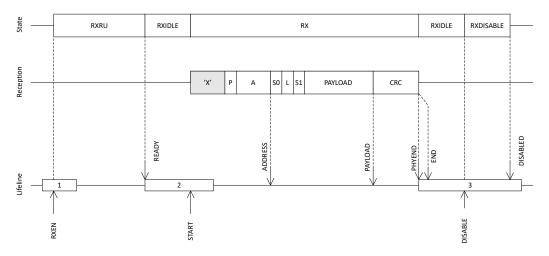


Figure 58: Receive sequence

The following figure shows a modified version of the receive sequence, where RADIO is configured to use shortcuts between READY and START, and between END and DISABLE, which means that no delay is introduced.

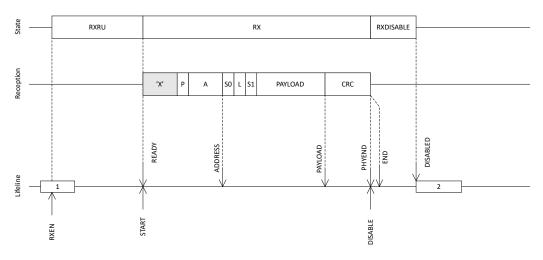


Figure 59: Receive sequence using shortcuts to avoid delays

RADIO can receive consecutive packets without having to disable and re-enable RADIO between packets, as illustrated in the following figure.



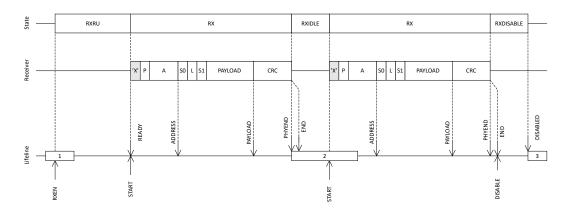


Figure 60: Reception of multiple packets

6.12.8 Received signal strength indicator (RSSI)

RADIO implements a mechanism for measuring the power in the received signal. This feature is called received signal strength indicator (RSSI).

The RSSI is measured continuously and the value filtered using a single-pole IIR filter. After a signal level change, the RSSI will settle after approximately RSSI_{SETTLE}.

Sampling of the received signal strength is started by using the RSSISTART task. The sample can be read from the RSSISAMPLE register.

The sample period of the RSSI is defined by RSSI_{PERIOD}. The RSSISAMPLE will hold the filtered received signal strength after this sample period.

For the RSSI sample to be valid, RADIO has to be enabled in RX mode (RXEN task) and the reception has to be started (READY event followed by START task).

6.12.9 Interframe spacing (IFS)

Interframe spacing (IFS) is defined as the time, in microseconds, between two consecutive packets, starting from when the end of the last bit of the previous packet is received, to the beginning of the first bit of the subsequent packet that is transmitted.

RADIO can enforce this interval, as specified in the TIFS register, as long as the TIFS register is not specified to be shorter than RADIO's turnaround time (i.e. the time needed to switch off the receiver, and then switch the transmitter back on). The TIFS register can be written any time before the last bit on air is received.

This timing is illustrated in the following figure.



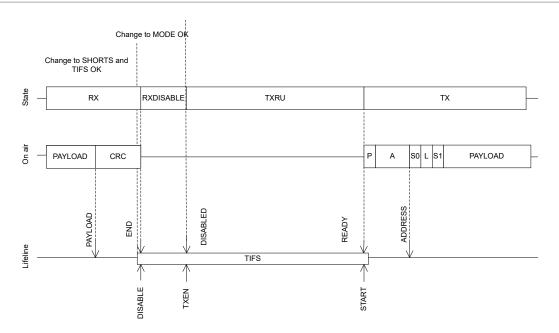


Figure 61: IFS timing detail

The TIFS duration starts after the last bit on air (just before the END event), and elapses with the first bit being transmitted on air (just after READY event).

TIFS is only enforced if the shortcuts END to DISABLE and DISABLED to TXEN or END to DISABLE and DISABLED to RXEN are enabled.

TIFS is qualified for use in IEEE 802.15.4 250kbps mode, Bluetooth Low Energy Long Range (125 kbps and 500 kbps) modes, and Bluetooth Low Energy 1 Mbps and 2 Mbps modes, using the default ramp-up mode.

SHORTS and TIFS registers are not double-buffered, and can be updated at any point before the last bit on air is received. The MODE register is double-buffered and sampled at the TXEN or RXEN task.

6.12.10 Device address match

The device address match feature is tailored for address whitelisting in Bluetooth Low Energy and similar implementations.

This feature enables on-the-fly device address matching while receiving a packet on air. This feature only works in receive mode and when RADIO is configured for little endian, see PCNF1.ENDIAN for more information.

The device address match unit assumes that the first 48 bits of the payload are the device address and that bit number 6 in S0 is the TxAdd bit. See the *Bluetooth Core Specification* for more information about device addresses, TxAdd, and whitelisting.

RADIO is able to listen for eight different device addresses at the same time. These addresses are specified in a DAB/DAP register pair, one pair per address, in addition to a TxAdd bit configured in the DACNF register. The DAB register specifies the 32 least significant bits of the device address, while the DAP register specifies the 16 most significant bits of the device address.

Each of the device addresses can be individually included or excluded from the matching mechanism. This is configured in the DACNF register.

6.12.11 Bit counter

RADIO implements a simple counter that can be configured to generate an event after a specific number of bits have been transmitted or received.



By using shortcuts, this counter can be started from different events generated by RADIO and count relative to these.

The bit counter is started by triggering the BCSTART task, and stopped by triggering the BCSTOP task. A BCMATCH event will be generated when the bit counter has counted the number of bits specified in the BCC register. The bit counter will continue to count bits until the DISABLED event is generated or until the BCSTOP task is triggered. After a BCMATCH event, the CPU can reconfigure the BCC value for new BCMATCH events within the same packet.

The bit counter can only be started after RADIO has received the ADDRESS event.

The bit counter will stop and reset on either the BCSTOP, STOP, or DISABLE task, or the END event.

The following figure shows how the bit counter can be used to generate a BCMATCH event in the beginning of the packet payload, and again generate a second BCMATCH event after sending 2 bytes (16 bits) of the payload.

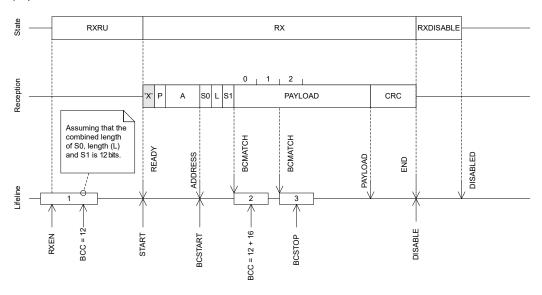


Figure 62: Bit counter example

6.12.12 Direction finding

RADIO implements the Angle of Arrival (AoA) and Angle of Departure (AoD) Bluetooth Low Energy feature, which can be used to determine the direction of a peer device. The feature is available for the Bluetooth Low Energy 1 and 2 Mbps modes.

When using this feature, the transmitter sends a packet with a constant tone extension (CTE) appended to the packet, after the CRC. During the CTE, the receiver can take IQ samples of the incoming signal.

An antenna array is employed at the transmitter (AoD) or at the receiver (AoA). The AoD transmitter, or AoA receiver, switches between the antennas, in order to collect IQ samples from the different antenna pairs. The IQ samples can be used to calculate the relative path lengths between the antenna pairs, which can be used to estimate the direction of the transmitter.

6.12.12.1 CTE format

The CTE is from 16 μ s to 160 μ s and consists of an unwhitened sequence of 1s, equivalent to a continuous tone nominally offset from the carrier by +250 kHz for the Bluetooth Low Energy 1 Mbps PHY and +500 kHz for the 2 Mbps Bluetooth Low Energy PHY. The format of the CTE, when switching and/or sampling, is shown in the following figure.






Figure 63: Constant tone extension (CTE) structure

Antenna switching is performed during switch slots and the guard period. The AoA/AoD feature requires that one IQ sample is taken for each microsecond within the reference period, and once for each sample slot. Oversampling is possible by changing the sample spacing as described in IQ sampling on page 178. The switch slot and sample slot durations are either 1 or 2 μ s, but must be equal. The format of the CTE and switching and sampling procedures may be configured prior to, or during, packet transmission and reception. Alternatively, during packet reception, these operations can be configured by reading specific fields of the packet contents.

6.12.12.2 Mode

Depending on the DFEMODE, the device performs the procedures shown in the following table.

			DFEN	MODE	
		AO	A	AC	D
		тх	RX	тх	RX
	Generating and transmitting CTE	х		х	
AoA/AoD Procedure	Receiving, interpreting, and sampling CTE		x		x
	Antenna switching		x	x	

Table 57: AoA/AoD Procedures performed as a function of DFEMODE and TX/RX mode

6.12.12.3 Inline configuration

When inline configuration is enabled during RX, further configuration of the AoA/AoD procedures is performed based on the values of the CP bit and the CTEInfo octet within the packet. This is enabled by setting CTEINLINECONF.CTEINLINECTRLEN. The CTEInfo octet is present only if the CP bit is set. The position of the CP bit and CTEInfo octet depends on whether the packet has a *Data Channel PDU* (CTEINLINECONF.CTEINFOINS1=InS1), or an *Advertising Channel PDU* (CTEINLINECONF.CTEINFOINS1=NotInS1).

Data channel PDU

For Data Channel PDUs, PCNF0.SOLEN must be 1 byte, and PCNF0.LFLEN must be 8 bits. To determine if S1 is present, the registers CTEINLINECONF.SOMASK and CTEINLINECONF.SOCONF forms a bitwise mask-and-test for the S0 field. If the bitwise AND between S0 and S0MASK equals S0CONF, then S1 is determined to be present. When present, the value of PCNF0.S1LEN will be ignored, as this is decided by the CP bit in the the following figure.




Figure 64: Data channel PDU header

When encrypting and decrypting Bluetooth Low Energy packets using the CCM peripheral, it is also required to set PCNF0.S1INCL=1. The CCM mode must be configured to use an 8-bit length field. The value of the CP bit is included in the calculation of the MIC, while the S1 field is ignored by the CCM calculation.



Advertising channel PDU

For advertising channel PDUs, the CTEInfo Flag replaces the CP bit. The CTEInfo Flag is within the extended header flag field in some of the advertising PDUs that employ the common extended advertising payload format (i.e. AUX_SYNC_IND, AUX_CHAIN_IND). The format of such packets is shown in the following figure.




Figure 65: Advertising channel PDU header

The CTEINLINECONF.SOCONF and CTEINLINECONF.SOMASK fields can be configured to accept only certain advertising PDU Types. If the extended header length is non-zero, the CTEInfo extended header flag is checked to determine whether CTEInfo is present. If a bit before the CTEInfo flag within the extended header flags is set, then the CTEInfo position is postponed 6 octets.

CTEInfo parsing

The CTEInfo field is shown in the following figure.



Figure 66: CTEInfo field

The CTETIME field defines the length of the CTE in 8 μ s units. The valid upper bound of values can be adjusted using CTEINLINECONF.CTETIMEVALIDRANGE, including allowing use of the RFU bit within this field. If the CTETIME field is an invalid value of either 0 or 1, the CTE is assumed to be the minimum valid length of 16 μ s. The slot duration is determined by the CTEType field. In RX mode this determines whether the sample spacing as defined in CTEINLINECONF.CTEINLINERXMODE1US or CTEINLINECONF.CTEINLINERXMODE2US is used.

СТЕТуре	Description	TX switch spacing	RX sample spacing during	Sample spacing RX during
			reference period	reference period
0	AoA, no switching	-	TSAMPLESPACING1	TSAMPLESPACING2
1	AoD, 1 μs slots	2 μs	TSAMPLESPACING1	CTEINLINERXMODE1US
2	AoD, 2 μs slots	4 μs	TSAMPLESPACING1	CTEINLINERXMODE2US
3	Reserved for future use			

Table 58: Switching and sampling spacing based on CTEType

6.12.12.4 Manual configuration

If CTEINLINECONF.CTEINLINECTRLEN is not set, then the packet is not parsed to determine the CTE parameters and the antenna switching and sampling is controlled by other registers (see Antenna switching on page 177). The length of the CTE is given in 8 µs units by DFECTRL1.NUMBEROF8US. The start of the antenna switching and/or sampling (denoted as an AoA/AoD procedure), can be configured to start at some trigger with an additional offset. Using DFECTRL1.DFEINEXTENSION, the trigger can be configured to be the end of the CRC, or alternatively, the ADDRESS event. The additional offset for antenna switching is configured using DFECTRL2.TSWITCHOFFSET. Similarly, the additional offset for antenna sampling is configured using DFECTRL2.TSAMPLEOFFSET.



6.12.12.5 Receive- and transmit sequences

The addition of the CTE to the transmitted packet is illustrated in the following figure.

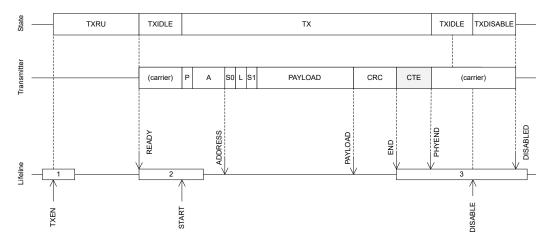


Figure 67: Transmit sequence with DFE

The presence of CTE within a received packet is signalled by the CTEPRESENT event illustrated in the following figure.

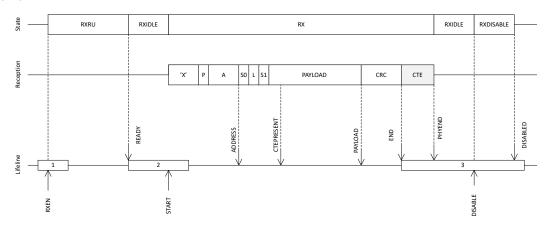


Figure 68: Receive sequence with DFE

6.12.12.6 Antenna switching

RADIO can control up to 8 GPIO pins in order to control external antenna switches used in direction finding.

Pin configuration

The eight antenna selection signals are mapped to physical pins according to the pin numbers specified in the PSEL.DFEGPIO[n] registers. Only pins that have the PSEL.DFEGPIO[n].CONNECTED field set to Connected will be controlled by RADIO. Pins that are disconnected will be controlled by GPIO.

During transmission in AoD TX mode or reception in AoA RX mode, RADIO automatically acquires the pins as needed. At times when RADIO does not use the pin, the pin is released to its default state and controlled by the GPIO configuration. Thus, the pin must be configured using the GPIO peripheral.



Pin acquired by RADIO	Direction	Value	Comment
Yes	Output	Specified in SWITCHPATTERN	Pin acquired by RADIO, and in use for DFE.
No	Specified by GPIO	Specified by GPIO	DFE not in progress. Pin has not been acquired by RADIO, but is available for
			DFE use.

Table 59: Pin configuration matrix for a connected and enabled pin [n]

Switch pattern configuration

The values of the GPIOs while switching during the CTE are configured by writing successively to the SWITCHPATTERN register. The first write to SWITCHPATTERN is the GPIO pattern applied from the call of TASKS_TXEN or TASKS_RXEN until the first antenna switch is triggered. The second write sets the pattern for the reference period and is applied at the start of the guard period. The following writes set the pattern for the remaining switch slots and are applied at the start of each switch slot. If writing beyond the total number of antenna slots, the pattern will wrap to SWITCHPATTERN[2] and start over again. During operation, when the end of the SWITCHPATTERN buffer is reached, RADIO cycles back to SWITCHPATTERN[2]. At the end of the AoA/AoD procedure, SWITCHPATTERN[0] is applied to DFECTRL1.TSWITCHSPACING after the previous antenna switch. The SWITCHPATTERN buffer can be erased/cleared using CLEARPATTERN.

A minimum number of three patterns must be written to the SWITCHPATTERN register.

If CTEINLINECONF.CTEINLINECTRLEN is not set, then the antenna switch spacing is determined by DFECTRL1.TSWITCHSPACING (see Switching and sampling spacing based on CTEType on page 176). DFECTRL2.TSWITCHOFFSET determines the position of the first switch compared to the configurable start of CTE (see DFECTRL1.DFEINEXTENSION).

6.12.12.7 IQ sampling

RADIO uses DMA to write IQ samples recorded during the CTE to RAM. Alternatively, the magnitude and phase of the samples can be recorded using the DFECTRL1.SAMPLETYPE field. The samples are written to the location in RAM specified by DFEPACKET.PTR. The maximum number of samples to transfer are specified by DFEPACKET.MAXCNT and the number of samples transferred are given in DFEPACKET.AMOUNT. The IQ samples are recorded with respect to the RX carrier frequency. The format of the samples is provided in the following table.

SAMPLETYPE	Field	Bits	Description	
0: I_Q (default)	Q	31:16	12 bits signed, sign extended to 16 bits. Out of range samples are saturated at value -32768.	
	1	15:0		
1: MagPhase	reserved	31:29	Always zero	
	magnitude	28:16	13 bits unsigned. Equals $1.646756*sqrt(I^2 + Q^2)$.	
	phase	15:0	9 bits signed, sign extended to 16 bits. Equals 64*atan2(Q, I) in the range [-201,201].	

Table 60: Format of samples

Oversampling is configured separately for the reference period and for the time after the reference period. During the reference period, the sample spacing is determined by DFECTRL1.TSAMPLESPACINGREF.

DFECTRL2.TSAMPLEOFFSET allows fine tuning the position of the samples in steps of 16 MHz periods (62.5 ns)

For the time after the reference period, if CTEINLINECONF.CTEINLINECTRLEN is disabled, the sample spacing is set in DFECTRL1.TSAMPLESPACING. However, when CTEINLINECONF.CTEINLINECTRLEN is enabled, the sample spacing is determined by two different registers, depending on whether the device is in AoA or AoD RX-mode.

For AoD RX mode, the sample spacing after the reference period is determined by the CTEType in the packet, as listed in the following table.

NORDIC SEMICONDUCTOR

СТЕТуре	Sample spacing
AoD 1 µs slots	CTEINLINECONF.CTEINLINERXMODE1US
AoD 2 μs slots	CTEINLINECONF.CTEINLINERXMODE2US
Other	DFECTRL1.TSAMPLESPACING

Table 61: Sample spacing when CTEINLINECONF.CTEINLINECTRLEN is set and the device is in AoD RX mode

For AoA RX mode, the sample spacing after the reference period is determined by DFECTRL1.TSWITCHSPACING, as listed in the following table.

DFECTRL1.TSWITCHSPACING	Sample spacing
2 μs	CTEINLINECONF.CTEINLINERXMODE1US
4 μs	CTEINLINECONF.CTEINLINERXMODE2US
Other	DFECTRL1.TSAMPLESPACING

Table 62: Sample spacing when CTEINLINECONF.CTEINLINECTRLEN is set and the device is in AoA RX mode

For the reference and switching periods, DFECTRL1.TSAMPLESPACINGREF and DFECTRL1.TSAMPLESPACING can be used to achieve oversampling.

6.12.13 IEEE 802.15.4 operation

With the MODE=Ieee802154_250kbit, RADIO will comply with the IEEE 802.15.4-2006 standard implementing its 250 kbps, 2450 MHz, O-QPSK PHY.

The IEEE 802.15.4 standard differs from Nordic's proprietary and Bluetooth Low Energy modes. Notable differences include modulation scheme, channel structure, packet structure, security, and medium access control.

The main features of the IEEE 802.15.4 mode are:

- Ultra-low power 250 kbps, 2450 MHz, IEEE 802.15.4-2006 compliant link
- Clear channel assessment (CCA)
- Energy detection (ED) scan
- CRC generation

6.12.13.1 Packet structure

The IEEE 802.15.4 standard defines an on-the-air frame/packet that is different from what is used in Bluetooth Low Energy.

The following figure provides an overview of the physical frame structure and its timing.

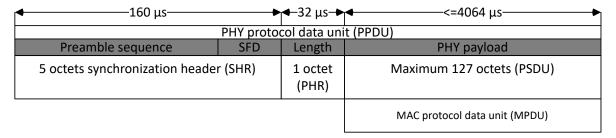


Figure 69: IEEE 802.15.4 frame format (PPDU)

The standard uses the term *octet* for an 8-bit storage unit within the PPDU. For timing, the value *symbol* is used, and it has a duration of $16 \mu s$.

The total usable payload (PSDU) is 127 octets, but when CRC is in use, this is reduced to 125 octets of usable payload.



The preamble sequence consists of four octets that are all zero, and are used for synchronizing RADIO's receiver. Following the preamble is the single octet *start of frame delimiter (SFD)*, with a fixed value of 0xA7. An alternate SFD can be programmed through the SFD register, providing an initial level of frame filtering for those who choose non-standard compliance. It is a valuable feature when operating in a congested or private network. The preamble sequence and the SFD are generated by RADIO, and are not programmed by the user into the frame buffer.

Following the five octet *synchronization header (SHR)* is the single octet *phy header (PHR)*. The least significant seven bits of PHR denote the frame length of the following PSDU. The most significant bit is reserved and is set to 0 for frames that are standard compliant. RADIO reports all eight bits which can be used to carry additional information. The PHR is the first byte written to the frame data memory pointed to by PACKETPTR. Frames with zero length are discarded, and the FRAMESTART event is not generated in this case.

The next N octets carry the data of the PHY packet, where N equals the value of the PHR. For an implementation also using the IEEE 802.15.4 medium access control (MAC) layer, the PHY data is a MAC frame of N-2 octets, since two octets occupy a CRC field.

An IEEE 802.15.4 MAC layer frame consists of the following:

- A header:
 - The frame control field (FCF)
 - The sequence number
 - · Addressing fields
- A payload
- The 16-bit frame control sequence (FCS)

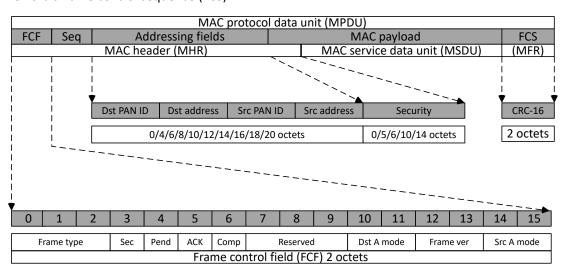


Figure 70: IEEE 802.15.4 frame format (MPDU)

The two FCF octets contain information about the frame type, addressing, and other control flags. This field is decoded when using the assisted operating modes offered by RADIO.

The sequence number is a single octet in size and is unique for a frame. It is used in the associated acknowledgement frame sent upon successful frame reception.

The addressing field can be zero (acknowledgement frame) or up to 20 octets in size. The field is used to direct packets to the correct recipient and denote its origin. IEEE 802.15.4 bases its addressing on networks being organized in PANs with 16-bit identifier and nodes having a 16-bit or 64-bit address. In the assisted receive mode, these parameters are analyzed for address matching and acknowledgement.

The MAC payload carries the data of the next higher layer, or in the case of a MAC command frame, information used by the MAC layer itself.



The two last octets contain the 16-bit ITU-T CRC. The FCS is calculated over the MAC header (MHR) and MAC payload (MSDU) parts of the frame. This field is calculated automatically when sending a frame, or indicated in the CRCSTATUS register when a frame is received. If configured, this feature is maintained autonomously by the CRC module.

6.12.13.2 Operating frequencies

The IEEE 802.15.4 standard defines 16 channels in the 2450 MHz frequency band. The channels are numbered from 11 to 26, and each channel is 5 MHz wide.

To choose the correct channel center frequency, the FREQUENCY register must be programmed according to the following table.

IEEE 802.15.4 channel	Center frequency (MHz)	FREQUENCY setting
Channel 11	2405	5
Channel 12	2410	10
Channel 13	2415	15
Channel 14	2420	20
Channel 15	2425	25
Channel 16	2430	30
Channel 17	2435	35
Channel 18	2440	40
Channel 19	2445	45
Channel 20	2450	50
Channel 21	2455	55
Channel 22	2460	60
Channel 23	2465	65
Channel 24	2470	70
Channel 25	2475	75
Channel 26	2480	80

Table 63: IEEE 802.15.4 center frequency definition

6.12.13.3 Energy detection (ED)

As required by the IEEE 802.15.4 standard, it must be possible to sample the received signal power within the bandwidth of a channel, for the purpose of determining presence of activity.

To prevent the channel signal from being decoded, the shortcut between the READY event and the START task should be disabled before putting RADIO in receive mode. The energy detection (ED) measurement time, where RSSI samples are averaged, is 8 symbol periods, corresponding to 128 µs. The standard further specifies the measurement to be a number between 0 and 255, where 0 shall indicate received power less than 10 dB above the selected receiver sensitivity. The power range of the ED values must be at least a 40 dB linear mapping with accuracy of ±6 dB. See section 6.9.7 Receiver ED in the IEEE 802.15.4 standard for further details.


The following example shows how to perform a single energy detection measurement and convert to IEEE 802.15.4 scale.



#define ED_RSSISCALE 4 // From electrical specifications uint8_t sample_ed(void) { int val; NRF_RADIO->TASKS_EDSTART = 1; // Start while (NRF_RADIO->EVENTS_EDEND != 1) { // CPU can sleep here or do something else // Use of interrupts are encouraged } val = NRF_RADIO->EDSAMPLE * ED_RSSISCALE; // Read level return (uint8_t) (val>255 ? 255 : val); // Convert to IEEE 802.15.4 scale }

For scaling between hardware value and dBm, see equation Conversion between hardware value and dBm on page 184.

The mlme-scan.req primitive of the MAC layer uses the ED measurement to detect channels where there might be wireless activity. To assist this primitive, a tailored mode of operation is available where the ED measurement runs for a defined number of iterations keeping track of the maximum ED level. This is enganged by writing the EDCNT register to a value different from 0, where it will run the specified number of iterations and report the maximum energy measurement in the EDSAMPLE register. The scan is started with EDSTART task and its end indicated with the EDEND event. This significantly reduces the interrupt frequency and therefore power consumption. The following figure shows how the ED measurement will operate depending on the EDCNT register.

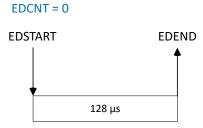

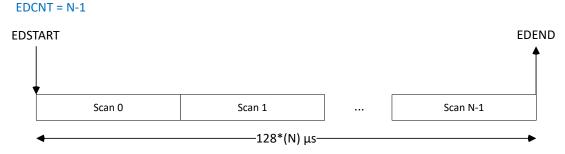


Figure 71: Energy detection measurement examples

The scan is stopped by writing the EDSTOP task. It is followed by the EDSTOPPED event when the module has terminated.

6.12.13.4 Clear channel assessment (CCA)



The IEEE 802.15.4 standard implements a listen-before-talk channel access method to avoid collisions when transmitting, known as *carrier sense multiple access with collision avoidance (CSMA-CA)*. The key part of this is measuring if the wireless medium is busy or not.

The following clear channel assesment modes are supported:

- CCA Mode 1 (energy above threshold) The medium is reported busy upon detecting any energy above
 the ED threshold.
- *CCA Mode 2* (carrier sense only) The medium is reported busy upon detection of a signal compliant with the IEEE 802.15.4 standard with the same modulation and spreading characteristics.
- CCA Mode 3 (carrier sense with energy above threshold) The medium is reported busy using a logical combination (AND/OR) between the results from CCA Mode 1 and CCA Mode 2.

The clear channel assessment should survey a period equal to 8 symbols or 128 μ s.

RADIO must be in RX mode and be able to receive correct packets when performing the CCA. The shortcut between READY and START must be disabled if baseband processing is not to be performed while the measurement is running.

CCA Mode 1

CCA Mode 1 is enabled by first configuring the field CCACTRL.CCAMODE=EdMode and writing the CCACTRL.CCAEDTHRES field to a chosen value. Once the CCASTART task is written, RADIO will perform an ED measurement for 8 symbols and compare the measured level with that found in the CCACTRL.CCAEDTHRES field. If the measured value is higher than or equal to this threshold, the CCABUSY event is generated. If the measured level is less than the threshold, the CCAIDLE event is generated.

CCA Mode 2

CCA Mode 2 is enabled by configuring CCACTRL.CCAMODE=CarrierMode. RADIO will sample to see if a valid SFD is found during the 8 symbols. If a valid SFD is detected, the CCABUSY event is generated and the device should not send any data. The CCABUSY event is also generated if the scan was performed during an ongoing frame reception. In the case where the measurement period completes with no SFD detection, the CCAIDLE event is generated. When CCACTRL.CCACORRCNT is not zero, the algorithm will look at the correlator output in addition to the SFD detection signal. If a SFD is reported during the scan period, it will terminate immidiately indicating busy medium. Similarly, if the number of peaks above CCACTRL.CCACORRTHRES crosses the CCACTRL.CCACORRCNT, the CCACTRL.CCABUSY event is generated. If less than CCACORRCOUNT crossings are found and no SFD is reported, the CCAIDLE event will be generated and the device can send data.

CCA Mode 3

CCA Mode 3 is enabled by configuring CCACTRL.CCAMODE=CarrierAndEdMode or CCACTRL.CCAMODE=CarrierOrEdMode, performing the required logical combination of the result from CCA Mode 1 and 2. The CCABUSY or CCAIDLE events are generated by ANDing or ORing the energy above threshold and carrier detection scans.

Shortcuts

An ongoing CCA can always be stopped by issuing the CCASTOP task. This will trigger the associated CCASTOPPED event.

For CCA mode automation, the following shortcuts are available:

To automatically switch between RX mode (when performing the CCA) and to TX mode where the
packet is sent, the shortcut between CCAIDLE and TXEN, in conjunction with the short between
CCAIDLE and STOP must be used.



- To automatically disable RADIO whenever the CCA reports a busy medium, the shortcut between CCABUSY and DISABLE can be used.
- To immediately start a CCA after ramping up into RX mode, the shortcut between RXREADY and CCASTART can be used.

Conversion

The conversion from a CCAEDTHRES, LQI, or EDSAMPLE value to dBm can be done with the following equation, where VAL_{HARDWARE} is either CCAEDTHRES, LQI, or EDSAMPLE. LQI and EDSAMPLE are hardware-reported values, while CCAEDTHRES is set by software. Constants ED_RSSISCALE and ED_RSSIOFFS are from electrical specifications.

```
P_{RF}[dBm] = ED_RSSIOFFS + VAL_{HARDWARE}
```

Figure 72: Conversion between hardware value and dBm

The ED RSSISCALE constant is used to calculate power in 802.15.4 units (0-255):

```
P_{RF}[802.15.4 \text{ units}] = MIN(ED_RSSISCALE \times VAL_{HARDWARE}, 255)
```

Figure 73: Conversion between hardware value and 802.15.4 units (0-255)

6.12.13.5 Cyclic redundancy check (CRC)

The IEEE 802.15.4 standard uses a 16-bit ITU-T cyclic redundancy check (CRC) calculated over the MAC header (MHR) and MAC service data unit (MSDU).

The standard defines the following generator polynomial:

```
G(x) = x^{16} + x^{12} + x^5 + 1
```

In RX mode, RADIO will trigger the CRC module when the first octet after the frame length (PHR) is received. The CRC will then update on each consecutive octet received. When a complete frame is received the CRCSTATUS register will be updated accordingly and the CRCOK or CRCERROR events generated. When the CRC module is enabled it will not write the two last octets (CRC) to the frame Data RAM. When transmitting, the CRC will be computed on the fly, starting with the first octet after PHR, and inserted as the two last octets in the frame. The EasyDMA will fetch frame length minus 2 octets from RAM and insert the CRC octets at their correct positions in the frame.

The following code shows how to configure the CRC module for correct operation when in IEEE 802.15.4 mode. The CRCCNF is written to 16-bit CRC and the CRCPOLY is written to 0×11021 . The start value used by IEEE 802.15.4 is 0 and CRCINIT is configured to reflect this.

The ENDIANESS subregister must be set to little-endian since the FCS field is transmitted from left bit to right.

6.12.13.6 Transmit sequence

The transmission is started by first putting RADIO in RX mode and triggering the RXEN task.

An outline of the IEEE 802.15.4 transmission is illustrated in the following figure.



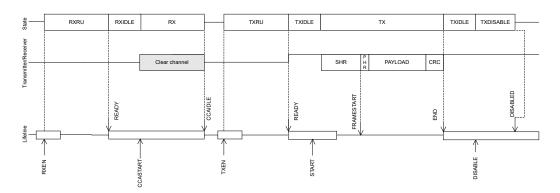


Figure 74: IEEE 802.15.4 transmit sequence

The receiver will ramp up and enter the RXIDLE state where the READY event is generated. Upon receiving the ready event, the CCA is started by triggering the CCASTART task. The chosen mode of assessment (CCACTRL.CCAMODE register) will be performed and signal the CCAIDLE or CCABUSY event 128 µs later. If the CCABUSY event is received, RADIO will have to retry the CCA after a specific back-off period. This is outlined in the IEEE 802.15.4 standard, Figure 69 in section 7.5.1.4 The CSMA-CA algorithm.

If the CCAIDLE event is generated, a write to the TXEN task register enters RADIO in TXRU state. The READY event will be generated when RADIO is in TXIDLE state and ready to transmit. With the PACKETPTR pointing to the length (PHR) field of the frame, the START task can be written. RADIO will send the four octet preamble sequence followed by the start of frame delimiter (SFD register). The first byte read from the Data RAM is the length field (PHR) followed by the transmission of the number of bytes indicated as the frame length. If the CRC module is configured it will run for PHR-2 octets. The last two octets will be substituted with the results from running the CRC. The necessary CRC parameters are sampled on the START task. The FCS field of the frame is little endian.

In addition to the already available shortcuts, one is provided between the READY event and the CCASTART task so that a CCA can automatically start when the receiver is ready. A second shortcut has been added between the CCAIDLE event and the TXEN task, so that upon detecting a clear channel RADIO can immediately enter TX mode.

6.12.13.7 Receive sequence

The reception is started by first putting RADIO in receive mode. After writing to the RXEN task, RADIO will start ramping up and enter the RXRU state.

When the READY event is generated, RADIO enters the RXIDLE mode. For the baseband processing to be enabled, the START task must be written. An outline of the IEEE 802.15.4 reception can be found in the following figure.



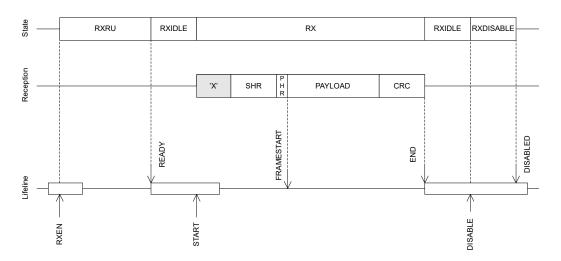


Figure 75: IEEE 802.15.4 receive sequence

When a valid SHR is received, RADIO will start storing future octets (starting with PHR) to the data memory pointed to by PACKETPTR. After the SFD octet is received, the FRAMESTART event is generated. If the CRC module is enabled it will start updating with the second byte received (first byte in payload) and run for the full frame length. The two last bytes in the frame are not written to RAM when CRC is configured. However, if the result of the CRC after running the full frame is zero, the CRCOK event will be generated. The END event is generated when the last octet has been received and is available in data memory.

When a packet is received, a link quality indicator (LQI) is also generated and appended immediately after the last received octet. When using an IEEE 802.15.4 compliant frame, this will be just after the MSDU since the FCS is not reported. In the case of a non-compliant frame, it will be appended after the full frame. The LQI reported by the hardware must be converted to the IEEE 802.15.4 range by an 8-bit saturating multiplication of 4, as shown in IEEE 802.15.4 ED measurement example on page 182. The LQI is only valid for frames equal to or longer than three octets. When receiving a frame, the RSSI (reported as negative dB) will be measured at three points during the reception. These three values will be sorted and the middle one selected (median 3) to be remapped within the LQI range. The following figure illustrates the LQI measurement and how the data is arranged in data memory.



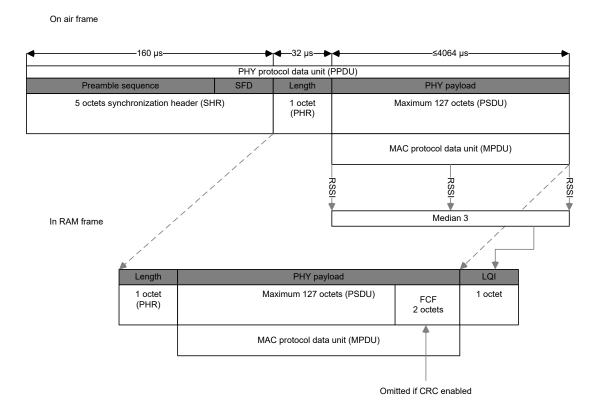


Figure 76: IEEE 802.15.4 frame in data memory

A shortcut has been added between the FRAMESTART event and the BCSTART task. This can be used to trigger a BCMATCH event after N bits, such as when inspecting the MAC addressing fields.

6.12.13.8 Interframe spacing (IFS)

The IEEE 802.15.4 standard defines a specific time that is alotted for the MAC sublayer to process received data. The interframe spacing (IFS) is used to prevent two frames from being transmitted too close together. If the transmission is requesting an acknowledgement, the space before the second frame shall be at least one IFS period.

IFS is determined to be one of the following:

- IFS equals macMinSIFSPeriod (12 symbols) if the MPDU is less than or equal to aMaxSIFSFrameSize (18 octets) octets
- IFS equals macMinLIFSPeriod (40 symbols) if the MPDU is larger than aMaxSIFSFrameSize

Using the efficient assisted modes in RADIO, the TIFS will be programmed with the correct value based on the frame being transmitted. If the assisted modes are not in use, the TIFS register must be updated manually. The following figure provides details on what IFS period is valid in both acknowledged and unacknowledged transmissions.



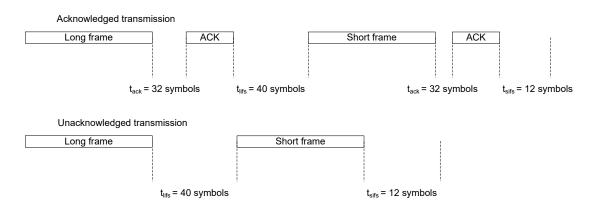


Figure 77: Interframe spacing examples

6.12.14 EasyDMA

RADIO uses EasyDMA to read and write packets to RAM without CPU involvement.

As illustrated in RADIO block diagram on page 165, RADIO's EasyDMA utilizes the same PACKETPTR for receiving and transmitting packets. This pointer should be reconfigured by the CPU each time before RADIO is started by the START task. The PACKETPTR register is double-buffered, meaning that it can be updated and prepared for the next transmission.

The END event indicates that the last bit has been processed by RADIO. The DISABLED event is issued to acknowledge that a DISABLE task is done.

The structure of a packet is described in detail in Packet configuration on page 166. The data that is stored in Data RAM and transported by EasyDMA consists of the following fields:

- S0
- LENGTH
- S1
- PAYLOAD

In addition, a static add-on is sent immediately after the payload.

The size of each of the above fields in the frame is configurable (see Packet configuration on page 166), and the space occupied in RAM depends on these settings. The size of the field can be zero, as long as the resulting frame complies with the chosen RF protocol.

All fields are extended in size to align with a byte boundary in RAM. For instance, a 3-bit long field on air will occupy 1 byte in RAM while a 9-bit long field will be extended to 2 bytes.

The packet's elements can be configured as follows:

- CI, TERM1, and TERM2 fields are only present in Bluetooth Low Energy Long Range mode
- S0 is configured through the PCNF0.S0LEN field
- LENGTH is configured through the PCNFO.LFLEN field
- S1 is configured through the PCNFO.S1LEN field
- Payload size is configured through the value in RAM corresponding to the LENGTH field
- Static add-on size is configured through the PCNF1.STATLEN field

The PCNF1.MAXLEN field configures the maximum packet payload plus add-on size in number of bytes that can be transmitted or received by RADIO. This feature can be used to ensure that RADIO does not overwrite, or read beyond, the RAM assigned to the packet payload. This means that if the LENGTH field of the packet payload exceedes PCNF1.STATLEN, and the LENGTH field in the packet specifies a packet larger than configured in PCNF1.MAXLEN, the payload will be truncated to the length specified in PCNF1.MAXLEN.



Note: The PCNF1.MAXLEN field includes the payload and the add-on, but excludes the size occupied by the SO, LENGTH, and S1 fields. This has to be taken into account when allocating RAM.

If the payload and add-on length is specified larger than PCNF1.MAXLEN, RADIO will still transmit or receive in the same way as before, except the payload is now truncated to PCNF1.MAXLEN. The packet's LENGTH field will not be altered when the payload is truncated. RADIO will calculate CRC as if the packet length is equal to PCNF1.MAXLEN.

Note: If PACKETPTR is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The END event indicates that the last bit has been processed by RADIO. The DISABLED event is issued to acknowledge that an DISABLE task is done.

6.12.15 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40001000	RADIO	RADIO	2.4 GHz radio		

Table 64: Instances

Register	Offset	Description
TASKS_TXEN	0x000	Enable RADIO in TX mode
TASKS_RXEN	0x004	Enable RADIO in RX mode
TASKS_START	0x008	Start RADIO
TASKS_STOP	0x00C	Stop RADIO
TASKS_DISABLE	0x010	Disable RADIO
TASKS_RSSISTART	0x014	Start the RSSI and take one single sample of the receive signal strength
TASKS_RSSISTOP	0x018	Stop the RSSI measurement
TASKS_BCSTART	0x01C	Start the bit counter
TASKS_BCSTOP	0x020	Stop the bit counter
TASKS_EDSTART	0x024	Start the energy detect measurement used in IEEE 802.15.4 mode
TASKS_EDSTOP	0x028	Stop the energy detect measurement
TASKS_CCASTART	0x02C	Start the clear channel assessment used in IEEE 802.15.4 mode
TASKS_CCASTOP	0x030	Stop the clear channel assessment
EVENTS_READY	0x100	RADIO has ramped up and is ready to be started
EVENTS_ADDRESS	0x104	Address sent or received
EVENTS_PAYLOAD	0x108	Packet payload sent or received
EVENTS_END	0x10C	Packet sent or received
EVENTS_DISABLED	0x110	RADIO has been disabled
EVENTS_DEVMATCH	0x114	A device address match occurred on the last received packet
EVENTS_DEVMISS	0x118	No device address match occurred on the last received packet
EVENTS_RSSIEND	0x11C	Sampling of receive signal strength complete
EVENTS_BCMATCH	0x128	Bit counter reached bit count value
EVENTS_CRCOK	0x130	Packet received with CRC ok
EVENTS_CRCERROR	0x134	Packet received with CRC error
EVENTS_FRAMESTART	0x138	IEEE 802.15.4 length field received
EVENTS_EDEND	0x13C	Sampling of energy detection complete. A new ED sample is ready for readout from the
		RADIO.EDSAMPLE register.
EVENTS_EDSTOPPED	0x140	The sampling of energy detection has stopped
EVENTS_CCAIDLE	0x144	Wireless medium in idle - clear to send
EVENTS_CCABUSY	0x148	Wireless medium busy - do not send



Register	Offset	Description
EVENTS_CCASTOPPED	0x14C	The CCA has stopped
EVENTS_RATEBOOST	0x150	Ble_LR CI field received, receive mode is changed from Ble_LR125Kbit to Ble_LR500Kbit.
EVENTS_TXREADY	0x154	RADIO has ramped up and is ready to be started TX path
EVENTS_RXREADY	0x158	RADIO has ramped up and is ready to be started RX path
EVENTS_MHRMATCH	0x15C	MAC header match found
EVENTS_SYNC	0x168	Preamble indicator
EVENTS PHYEND	0x16C	Generated when last bit is sent on air, or received from air
EVENTS_CTEPRESENT	0x170	CTE is present (early warning right after receiving CTEInfo byte)
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
CRCSTATUS	0x400	CRC status
RXMATCH	0x408	Received address
RXCRC	0x40C	CRC field of previously received packet
DAI	0x410	Device address match index
PDUSTAT	0x414	Payload status
CTESTATUS	0x44C	CTEInfo parsed from received packet
DFESTATUS	0x458	DFE status information
PACKETPTR	0x504	Packet pointer
FREQUENCY	0x508	Frequency
TXPOWER	0x50C	Output power
MODE	0x510	Data rate and modulation
PCNF0	0x514	Packet configuration register 0
PCNF1	0x518	Packet configuration register 1
BASEO	0x51C	Base address 0
BASE1	0x520	Base address 1
PREFIXO	0x524	Prefixes bytes for logical addresses 0-3
PREFIX1	0x524	Prefixes bytes for logical addresses 4-7
TXADDRESS	0x52C	Transmit address select
RXADDRESSES	0x530	Receive address select
CRCCNF	0x534	CRC configuration
CRCPOLY	0x538	CRC polynomial
CRCINIT	0x53C	CRC initial value
TIFS	0x544	Interframe spacing in μs
RSSISAMPLE	0x548	RSSI sample
STATE	0x550	Current radio state
DATAWHITEIV	0x554	Data whitening initial value
BCC	0x560	Bit counter compare
DAB[n]	0x600	Device address base segment n
DAP[n]	0x620	Device address prefix n
DACNF	0x640	Device address match configuration
MHRMATCHCONF	0x644	Search pattern configuration
MHRMATCHMAS	0x648	Pattern mask
MODECNF0	0x650	Radio mode configuration register 0
SFD	0x660	IEEE 802.15.4 start of frame delimiter
EDCNT	0x664	IEEE 802.15.4 energy detect loop count
EDSAMPLE	0x668	IEEE 802.15.4 energy detect level
CCACTRL	0x66C	IEEE 802.15.4 clear channel assessment control
DFEMODE	0x900	Whether to use Angle-of-Arrival (AOA) or Angle-of-Departure (AOD)
CTEINLINECONF	0x904	Configuration for CTE inline mode
DFECTRL1	0x910	Various configuration for Direction finding
DFECTRL2	0x914	Start offset for Direction finding
SWITCHPATTERN	0x928	GPIO patterns to be used for each antenna
SWITCHIALTERN	0,320	or to patterns to be used for each unterilla



Register	Offset	Description
CLEARPATTERN	0x92C	Clear the GPIO pattern array for antenna control
PSEL.DFEGPIO[0]	0x930	Pin select for DFE pin 0
PSEL.DFEGPIO[1]	0x934	Pin select for DFE pin 1
PSEL.DFEGPIO[2]	0x938	Pin select for DFE pin 2
PSEL.DFEGPIO[3]	0x93C	Pin select for DFE pin 3
PSEL.DFEGPIO[4]	0x940	Pin select for DFE pin 4
PSEL.DFEGPIO[5]	0x944	Pin select for DFE pin 5
PSEL.DFEGPIO[6]	0x948	Pin select for DFE pin 6
PSEL.DFEGPIO[7]	0x94C	Pin select for DFE pin 7
DFEPACKET.PTR	0x950	Data pointer
DFEPACKET.MAXCNT	0x954	Maximum number of buffer words to transfer
DFEPACKET.AMOUNT	0x958	Number of samples transferred in the last transaction
POWER	0xFFC	Peripheral power control

Table 65: Register overview

6.12.15.1 TASKS_TXEN

Address offset: 0x000 Enable RADIO in TX mode

Bit n	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_TXEN			Enable RADIO in TX mode
		Trigger	1	Trigger task

6.12.15.2 TASKS_RXEN

Address offset: 0x004
Enable RADIO in RX mode

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_RXEN			Enable RADIO in RX mode
		Trigger	1	Trigger task

6.12.15.3 TASKS_START

Address offset: 0x008

Start RADIO


Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_START			Start RADIO
		Trigger	1	Trigger task



6.12.15.4 TASKS_STOP

Address offset: 0x00C


Stop RADIO



6.12.15.5 TASKS DISABLE

Address offset: 0x010

Disable RADIO

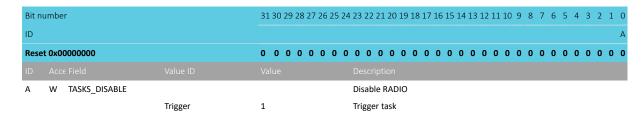

6.12.15.6 TASKS_RSSISTART

Address offset: 0x014


Start the RSSI and take one single sample of the receive signal strength

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A W TASKS_RSSISTART		Start the RSSI and take one single sample of the receive
		signal strength
Trigger	1	Trigger task

6.12.15.7 TASKS_RSSISTOP

Address offset: 0x018

Stop the RSSI measurement








6.12.15.8 TASKS_BCSTART

Address offset: 0x01C Start the bit counter

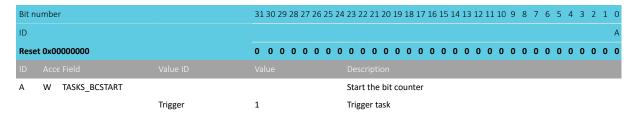

6.12.15.9 TASKS BCSTOP

Address offset: 0x020 Stop the bit counter

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_BCSTOP			Stop the bit counter
		Trigger	1	Trigger task

6.12.15.10 TASKS_EDSTART

Address offset: 0x024


Start the energy detect measurement used in IEEE 802.15.4 mode

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Valu		Description
A W TASKS_EDSTART		Start the energy detect measurement used in IEEE 802.15.4
		mode
Trig	ger 1	Trigger task

6.12.15.11 TASKS_EDSTOP

Address offset: 0x028

Stop the energy detect measurement








6.12.15.12 TASKS_CCASTART

Address offset: 0x02C

Start the clear channel assessment used in IEEE 802.15.4 mode

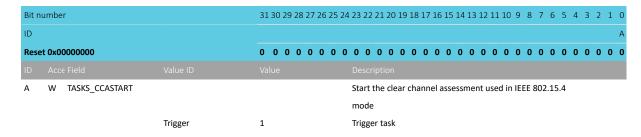

6.12.15.13 TASKS CCASTOP

Address offset: 0x030

Stop the clear channel assessment

Bit n	number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_CCASTOP			Stop the clear channel assessment
		Trigger	1	Trigger task

6.12.15.14 EVENTS READY


Address offset: 0x100

RADIO has ramped up and is ready to be started

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_READY			RADIO has ramped up and is ready to be started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.12.15.15 EVENTS_ADDRESS

Address offset: 0x104
Address sent or received

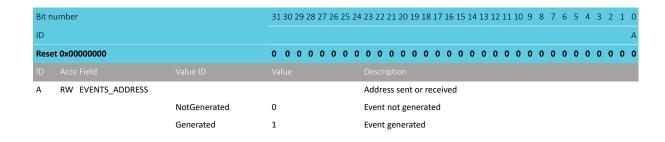






6.12.15.16 EVENTS_PAYLOAD

Address offset: 0x108


Packet payload sent or received

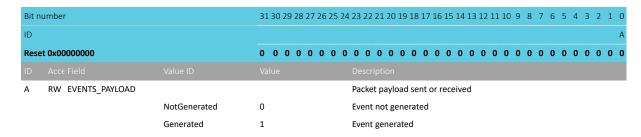

6.12.15.17 EVENTS END

Address offset: 0x10C


Packet sent or received

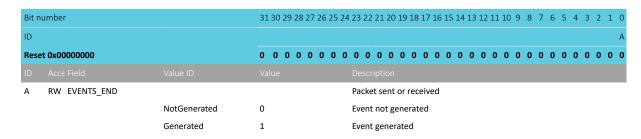

6.12.15.18 EVENTS_DISABLED

Address offset: 0x110

RADIO has been disabled

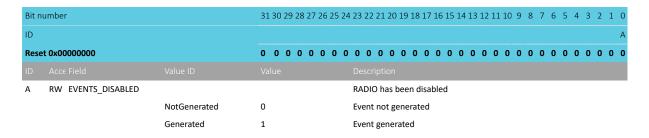


6.12.15.19 EVENTS DEVMATCH

Address offset: 0x114

A device address match occurred on the last received packet




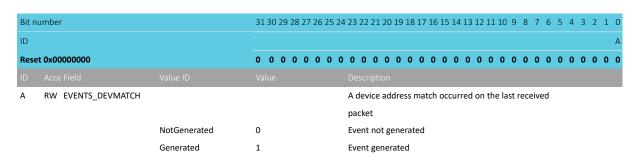

6.12.15.20 EVENTS DEVMISS

Address offset: 0x118

No device address match occurred on the last received packet

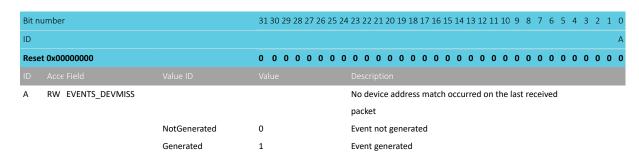


6.12.15.21 EVENTS RSSIEND

Address offset: 0x11C

Sampling of receive signal strength complete

A new RSSI sample is ready for readout from the RADIO.RSSISAMPLE register

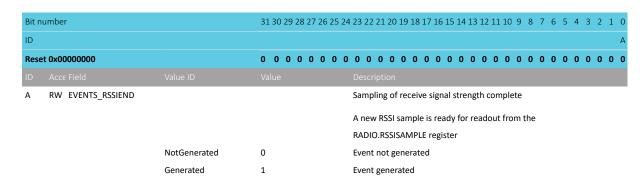

6.12.15.22 EVENTS BCMATCH

Address offset: 0x128

Bit counter reached bit count value

Bit counter value is specified in the RADIO.BCC register



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_BCMATCH			Bit counter reached bit count value
				Bit counter value is specified in the RADIO.BCC register
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.12.15.23 EVENTS_CRCOK

Address offset: 0x130

Packet received with CRC ok

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_CRCOK			Packet received with CRC ok
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.12.15.24 EVENTS_CRCERROR

Address offset: 0x134

Packet received with CRC error

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_CRCERROR			Packet received with CRC error
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.12.15.25 EVENTS_FRAMESTART

Address offset: 0x138

IEEE 802.15.4 length field received

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_FRAMESTART			IEEE 802.15.4 length field received
		NotGenerated	0	Event not generated
		Generated	1	Event generated


6.12.15.26 EVENTS_EDEND

Address offset: 0x13C






Sampling of energy detection complete. A new ED sample is ready for readout from the RADIO.EDSAMPLE register.

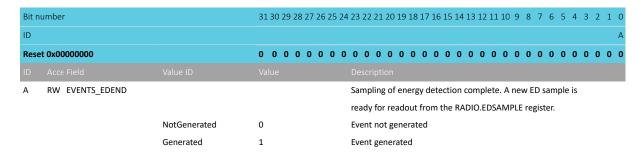

6.12.15.27 EVENTS_EDSTOPPED

Address offset: 0x140


The sampling of energy detection has stopped

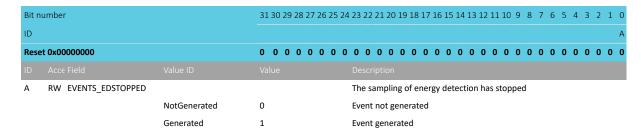

6.12.15.28 EVENTS CCAIDLE

Address offset: 0x144


Wireless medium in idle - clear to send

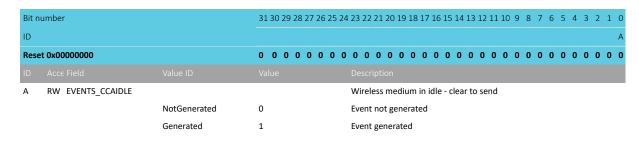

6.12.15.29 EVENTS_CCABUSY

Address offset: 0x148

Wireless medium busy - do not send

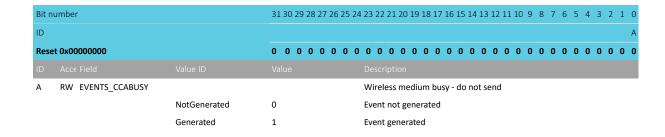






6.12.15.30 EVENTS_CCASTOPPED


Address offset: 0x14C
The CCA has stopped

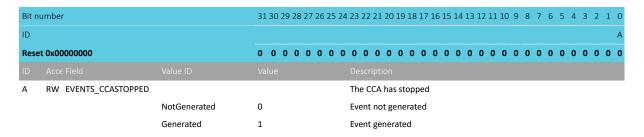

6.12.15.31 EVENTS RATEBOOST

Address offset: 0x150


Ble_LR CI field received, receive mode is changed from Ble_LR125Kbit to Ble_LR500Kbit.

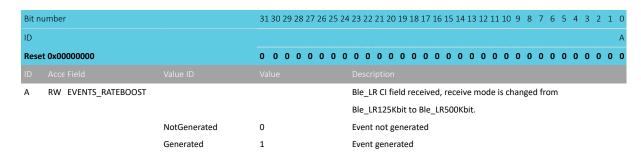

6.12.15.32 EVENTS_TXREADY

Address offset: 0x154

RADIO has ramped up and is ready to be started TX path

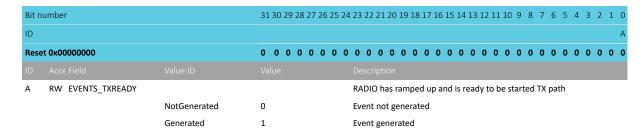


6.12.15.33 EVENTS RXREADY

Address offset: 0x158

RADIO has ramped up and is ready to be started RX path




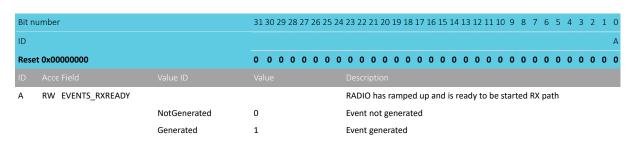

6.12.15.34 EVENTS MHRMATCH

Address offset: 0x15C


MAC header match found

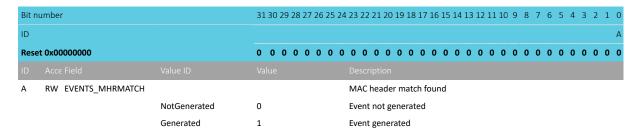

6.12.15.35 EVENTS_SYNC

Address offset: 0x168
Preamble indicator

A possible preamble has been received in Ble_LR125Kbit, Ble_LR500Kbit, or leee802154_250Kbit modes during an RX transaction. False triggering of the event is possible.

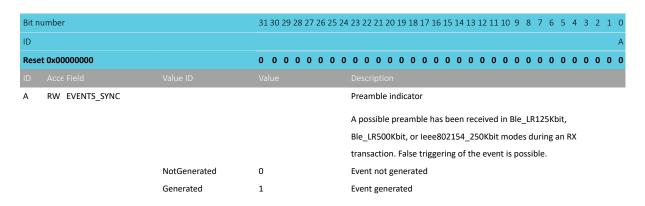


6.12.15.36 EVENTS_PHYEND

Address offset: 0x16C

Generated when last bit is sent on air, or received from air



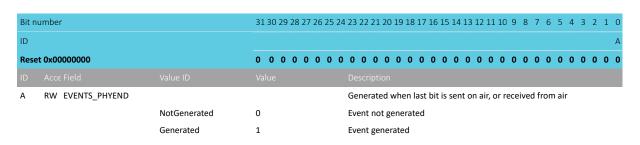

6.12.15.37 EVENTS_CTEPRESENT

Address offset: 0x170

CTE is present (early warning right after receiving CTEInfo byte)

Bit n	umber		31 3	0 29	28	27	26	25 :	24 2	23 :	22	21	20	19	18	17	16	15	14	13	12 :	11 1	.0 9	9 8	7	6	5	4	3	2 :	1 0
ID																															Α
Rese	t 0x00000000		0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0	0	0	0	0	0	0 (0 0
ID																															
Α	RW EVENTS_CTEPRESENT								(СТЕ	E is	pre	ese	nt ((ea	rly v	wai	rnin	ıg ri	ght	aft	ter i	ece	ivi	ng C	TEI	nfo				
									k	oyt	:e)																				
		NotGenerated	0						E	Eve	ent	no	t ge	ene	rat	ed															
		Generated	1						E	Eve	ent	gei	ner	ate	d																

6.12.15.38 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				UTSRQPONMLK H GFEDCBA
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW READY_START			Shortcut between event READY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW END_DISABLE			Shortcut between event END and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
С	RW DISABLED_TXEN			Shortcut between event DISABLED and task TXEN
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
D	RW DISABLED_RXEN			Shortcut between event DISABLED and task RXEN
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Ε	RW ADDRESS_RSSISTART			Shortcut between event ADDRESS and task RSSISTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
F	RW END_START			Shortcut between event END and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
G	RW ADDRESS_BCSTART			Shortcut between event ADDRESS and task BCSTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Н	RW DISABLED_RSSISTOP			Shortcut between event DISABLED and task RSSISTOP





DIL III	number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 (
ID				UTSRQPONMLK H GFEDCB/
Rese	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
K	RW RXREADY_CCASTART			Shortcut between event RXREADY and task CCASTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
L	RW CCAIDLE_TXEN			Shortcut between event CCAIDLE and task TXEN
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
М	RW CCABUSY_DISABLE			Shortcut between event CCABUSY and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
N	RW FRAMESTART_BCSTAR	т		Shortcut between event FRAMESTART and task BCSTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
О	RW READY_EDSTART			Shortcut between event READY and task EDSTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Р	RW EDEND_DISABLE			Shortcut between event EDEND and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Q	RW CCAIDLE_STOP			Shortcut between event CCAIDLE and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
R	RW TXREADY_START			Shortcut between event TXREADY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
S	RW RXREADY_START			Shortcut between event RXREADY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Т	RW PHYEND_DISABLE			Shortcut between event PHYEND and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
U	RW PHYEND_START			Shortcut between event PHYEND and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.12.15.39 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			b a Z	W V U T S R Q P O N M L J H G F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW READY			Write '1' to enable interrupt for event READY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled





Rit nı	umber		31 30 29 28 27 26 25 27	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	amber		b a Z	WVUTSRQPONML J HGFEDCBA
	t 0x00000000			0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID D	Acce Field	Value ID	Value	Description Approximation Appr
В	RW ADDRESS	Set	1	Write '1' to enable interrupt for event ADDRESS Enable
				Read: Disabled
		Disabled	0	
_	DW DAVIOAD	Enabled	1	Read: Enabled
С	RW PAYLOAD	C-1	4	Write '1' to enable interrupt for event PAYLOAD
		Set	1	Enable Read: Disabled
		Disabled	0	
D	RW END	Enabled	1	Read: Enabled
U	KW END	Set	1	Write '1' to enable interrupt for event END Enable
			1	Read: Disabled
		Disabled Enabled	0	Read: Enabled
_	DW DICARLED	Enabled	1	
E	RW DISABLED	C-1	4	Write '1' to enable interrupt for event DISABLED
		Set	1	Enable Parada Disabled
		Disabled	0	Read: Disabled
-	DIA DEMATCH	Enabled	1	Read: Enabled
F	RW DEVMATCH	.		Write '1' to enable interrupt for event DEVMATCH
		Set	1	Enable
		Disabled	0	Read: Disabled
	DIV DEMANCE	Enabled	1	Read: Enabled
G	RW DEVMISS		_	Write '1' to enable interrupt for event DEVMISS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Н	RW RSSIEND			Write '1' to enable interrupt for event RSSIEND
				A new RSSI sample is ready for readout from the
				RADIO.RSSISAMPLE register
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW BCMATCH			Write '1' to enable interrupt for event BCMATCH
				Bit counter value is specified in the RADIO.BCC register
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW CRCOK			Write '1' to enable interrupt for event CRCOK
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
М	RW CRCERROR			Write '1' to enable interrupt for event CRCERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
N	RW FRAMESTART			Write '1' to enable interrupt for event FRAMESTART
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
0	RW EDEND	Enabled	-	Write '1' to enable interrupt for event EDEND
J	EDEND	Set	1	Enable
		Disabled	0	Read: Disabled
		PISANICA	v	nead. Disabled





Di+	umber		21,20,20,20,27,20,21	5 24 22 22 21 20 10 10 10 17 16 45 14 12 12 11 10 0 0 7 0 5 4 2 2 1 0
	lumber			5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			b a Z	W V U T S R Q P O N M L J H G F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0	000000000000000000000000000000000000000
ID	Acce Field	Value ID	Value	Description
		Enabled	1	Read: Enabled
Р	RW EDSTOPPED			Write '1' to enable interrupt for event EDSTOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Q	RW CCAIDLE			Write '1' to enable interrupt for event CCAIDLE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
R	RW CCABUSY			Write '1' to enable interrupt for event CCABUSY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
S	RW CCASTOPPED			Write '1' to enable interrupt for event CCASTOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
_		Enabled	1	Read: Enabled
Т	RW RATEBOOST			Write '1' to enable interrupt for event RATEBOOST
		Set	1	Enable
		Disabled	0	Read: Disabled
	DIA TYPEADY	Enabled	1	Read: Enabled
U	RW TXREADY	6.4		Write '1' to enable interrupt for event TXREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
.,	DIA DADEADA	Enabled	1	Read: Enabled
V	RW RXREADY	6.4		Write '1' to enable interrupt for event RXREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
14/	DIA/ MALIDMANTCH	Enabled	1	Read: Enabled
VV	RW MHRMATCH	Cat	1	Write '1' to enable interrupt for event MHRMATCH
		Set Disabled	1 0	Enable Read: Disabled
		Enabled	1	Read: Enabled
Z	RW SYNC	Ellableu	1	Write '1' to enable interrupt for event SYNC
۷	NW SINC			write 1 to enable interrupt for event 31NC
				A possible preamble has been received in Ble_LR125Kbit,
				Ble_LR500Kbit, or leee802154_250Kbit modes during an RX
				transaction. False triggering of the event is possible.
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
а	RW PHYEND			Write '1' to enable interrupt for event PHYEND
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
b	RW CTEPRESENT			Write '1' to enable interrupt for event CTEPRESENT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled





6.12.15.40 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	
ID			b a Z	W V U T S R Q P O N M L J H G F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW READY			Write '1' to disable interrupt for event READY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ADDRESS			Write '1' to disable interrupt for event ADDRESS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW PAYLOAD			Write '1' to disable interrupt for event PAYLOAD
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW DISABLED	2.102.103	-	Write '1' to disable interrupt for event DISABLED
_	5.0/15225	Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW DEVMATCH	2.102.00	-	Write '1' to disable interrupt for event DEVMATCH
•	52	Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW DEVMISS	2.102.103	-	Write '1' to disable interrupt for event DEVMISS
Ü	52155	Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Н	RW RSSIEND	2.102.103	-	Write '1' to disable interrupt for event RSSIEND
••				·
				A new RSSI sample is ready for readout from the
				RADIO.RSSISAMPLE register
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW BCMATCH			Write '1' to disable interrupt for event BCMATCH
				Bit counter value is specified in the RADIO.BCC register
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW CRCOK			Write '1' to disable interrupt for event CRCOK
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
М	RW CRCERROR			Write '1' to disable interrupt for event CRCERROR



Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID			b a Z	W V U T S R Q P O N M L J H G F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
N	RW FRAMESTART			Write '1' to disable interrupt for event FRAMESTART
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
0	RW EDEND			Write '1' to disable interrupt for event EDEND
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Р	RW EDSTOPPED			Write '1' to disable interrupt for event EDSTOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Q	RW CCAIDLE			Write '1' to disable interrupt for event CCAIDLE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
R	RW CCABUSY	2.100.00	-	Write '1' to disable interrupt for event CCABUSY
	NW CCABOST	Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
S	RW CCASTOPPED	Enabled	1	Write '1' to disable interrupt for event CCASTOPPED
5	NW CCASTOTTED	Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Т	RW RATEBOOST	Eliablea	1	Write '1' to disable interrupt for event RATEBOOST
'	KW KATEBOOST	Clear	1	Disable
		Disabled	0	Read: Disabled
	DIAL TYPEADY	Enabled	1	Read: Enabled
U	RW TXREADY	al.		Write '1' to disable interrupt for event TXREADY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
V	RW RXREADY	a.		Write '1' to disable interrupt for event RXREADY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
W	RW MHRMATCH			Write '1' to disable interrupt for event MHRMATCH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Z	RW SYNC			Write '1' to disable interrupt for event SYNC
				A possible preamble has been received in Ble_LR125Kbit,
				Ble_LR500Kbit, or leee802154_250Kbit modes during an RX
				transaction. False triggering of the event is possible.
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled



Bit n	umber		313	0 29	28 2	27 2	6 2!	5 24	23	22 2	21:	20 1	19 1	8 1	7 16	5 15	14	13	12 1	11 10) 9	8 (7	6	5	4	3	2 1	0
ID					b i	a Z	7		W	V	U	Т	S I	R C	Q P	0	N	M	L	J			Н	G	F	Е	D (СВ	5 A
Rese	et 0x00000000		0 0	0 0	0 (0 (0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0 0	0	0	0	0	0	0	0 (0 0	0
ID																													
а	RW PHYEND								W	rite '	'1' t	o d	lisal	ole i	nte	rrup	t fo	or e	ven	t PH	YEI	ND							
		Clear	1						Di	sable	e																		
		Disabled	0						Re	ad: I	Dis	able	ed																
		Enabled	1						Re	ad: I	Ena	ble	d																
b	RW CTEPRESENT								W	rite '	'1' t	o d	lisal	ole i	nte	rrup	t fo	or e	ven	t CT	EPF	RESE	NT						
		Clear	1						Di	sable	e																		
		Disabled	0						Re	ad: I	Dis	able	ed																
		Enabled	1						Re	ad: I	Ena	ble	d																

6.12.15.41 CRCSTATUS

Address offset: 0x400

CRC status

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R CRCSTATUS			CRC status of packet received
	CRCError	0	Packet received with CRC error
	CRCOk	1	Packet received with CRC ok

6.12.15.42 RXMATCH

Address offset: 0x408

Received address

Bit nu	mber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9	8 7 6 5 4 3 2 1 0
ID			ААА
Reset	0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0
ID			
Α	R RXMATCH	Received address	

Logical address of which previous packet was received

6.12.15.43 RXCRC

Address offset: 0x40C

CRC field of previously received packet

A R RXCRC		CRC field of previously received packet
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0


CRC field of previously received packet



6.12.15.44 DAI

Address offset: 0x410


Device address match index

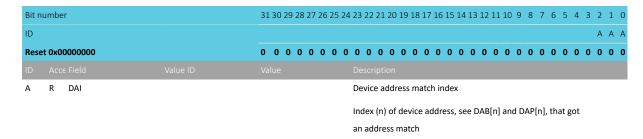

6.12.15.45 PDUSTAT

Address offset: 0x414

Payload status

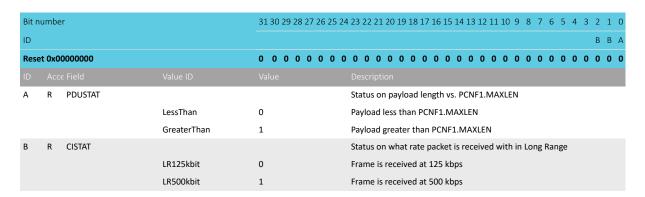

6.12.15.46 CTESTATUS

Address offset: 0x44C

CTEInfo parsed from received packet

Bit r	umbe	er	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ССВАААА
Rese	et OxO	0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	R	CTETIME		CTETime parsed from packet
В	R	RFU		RFU parsed from packet
С	R	CTETYPE		CTEType parsed from packet

6.12.15.47 DFESTATUS

Address offset: 0x458

DFE status information



Bit number		31 30 29 28 27 26 25 24	¹ 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			B AAA
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A R SWITCHINGSTATE			Internal state of switching state machine
	Idle	0	Switching state Idle
	Offset	1	Switching state Offset
	Guard	2	Switching state Guard
	Ref	3	Switching state Ref
	Switching	4	Switching state Switching
	Ending	5	Switching state Ending
B R SAMPLINGSTATE			Internal state of sampling state machine
	Idle	0	Sampling state Idle
	Sampling	1	Sampling state Sampling

6.12.15.48 PACKETPTR

Address offset: 0x504

Packet pointer

Bit n	umber		31	. 30 2	29	28	27	26 :	25	24	23 2	22 2	21 2	0 1	.9 1	8 1	7 16	5 15	14	13	12 1	.1 1	0 9	8	7	6	5	4	3 2	1	0
ID			Α	Α.	Α	Α	Α	Α	Α	Α	Α	Α /	A A	\ <i>A</i>	Δ /	λ Δ	A A	Α	Α	Α	A	4 4	A A	Α	Α	Α	Α	Α	A A	ι A	A
Rese	t 0x00	000000	0	0	0	0	0	0	0	0	0	0 (0 0) (0 0) (0	0	0	0	0	0 (0	0	0	0	0	0	0 0	0	0
ID											Des																				
Α	RW	PACKETPTR									Pac	ket	poi	nte	er																
											Pac	ket	ado	lres	ss to	o be	e us	ed	for	the	nex	t tra	ansr	niss	ion	or					
											rec	epti	ion.	WI	hen	tra	ansr	nitt	ing,	, the	e pa	cket	ро	inte	d t	o by	/				
											this	ado	dres	SS V	will	be	trar	ısm	itte	d a	nd v	he	n re	ceiv	ing	, th	e				
											rec	eive	ed p	ack	ket 1	will	be	wri	tter	ı to	this	ado	dres	s. T	his	ado	dres	SS			
											is a	byt	te al	ign	ned	RA	M a	ddr	ess	. Se	e th	e m	em	ory	cha	pte	r fo	or			
											det	ails	abo	ut	wh	ich	me	mo	ries	are	avi	labl	e fo	r Ea	syl	OM	۹.				

6.12.15.49 FREQUENCY

Address offset: 0x508

Frequency


Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B A A A A A A
Rese	t 0x00000002		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW FREQUENCY		[0100]	Radio channel frequency
				Frequency = 2400 + FREQUENCY (MHz)
В	RW MAP			Channel map selection
		Default	0	Channel map between 2400 MHz and 2500 MHz
				Frequency = 2400 + FREQUENCY (MHz)
		Low	1	Channel map between 2360 MHz and 2460 MHz
				Frequency = 2360 + FREQUENCY (MHz)

6.12.15.50 TXPOWER

Address offset: 0x50C




Output power

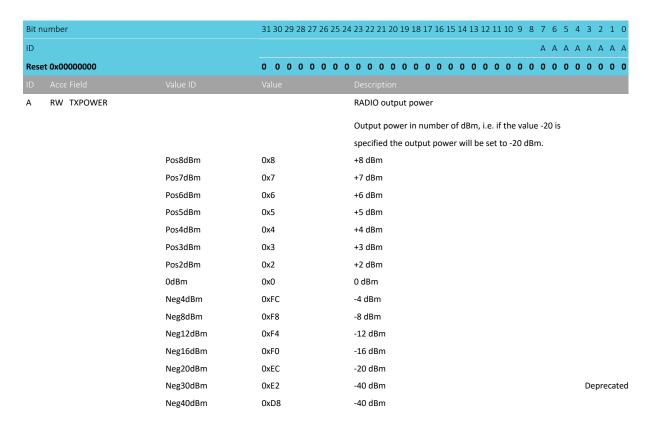

6.12.15.51 MODE

Address offset: 0x510

Data rate and modulation

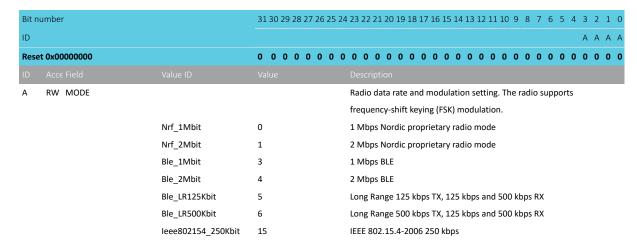

6.12.15.52 PCNFO

Address offset: 0x514

Packet configuration register 0



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			јј јнн	IGG FEEEE C AAAA
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW LFLEN			Length on air of LENGTH field in number of bits
С	RW SOLEN			Length on air of SO field in number of bytes
Ε	RW S1LEN			Length on air of S1 field in number of bits
F	RW S1INCL			Include or exclude S1 field in RAM
		Automatic	0	Include S1 field in RAM only if S1LEN > 0
		Include	1	Always include S1 field in RAM independent of S1LEN
G	RW CILEN			Length of code indicator - Long Range
Н	RW PLEN			Length of preamble on air. Decision point: TASKS_START task
		8bit	0	8-bit preamble
		16bit	1	16-bit preamble
		32bitZero	2	32-bit zero preamble - used for IEEE 802.15.4
		LongRange	3	Preamble - used for Bluetooth LE Long Range
1	RW CRCINC			Indicates if LENGTH field contains CRC or not
		Exclude	0	LENGTH does not contain CRC
		Include	1	LENGTH includes CRC
J	RW TERMLEN			Length of TERM field in Long Range operation

6.12.15.53 PCNF1

Address offset: 0x518

Packet configuration register 1


Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			E [C C C B B B B B B B A A A A A A A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
Α	RW MAXLEN		[0255]	Maximum length of packet payload. If the packet payload is larger than MAXLEN, the radio will truncate the payload to
В	RW STATLEN		[0255]	MAXLEN. Static length in number of bytes
				The static length parameter is added to the total length
				of the payload when sending and receiving packets, e.g. if the static length is set to N the radio will receive or send N
				bytes more than what is defined in the LENGTH field of the
				packet.
С	RW BALEN		[24]	Base address length in number of bytes
				The address field is composed of the base address and the
				one byte long address prefix, e.g. set BALEN=2 to get a total
				address of 3 bytes.
D	RW ENDIAN			On-air endianness of packet, this applies to the SO, LENGTH,
				S1, and the PAYLOAD fields.
		Little	0	Least significant bit on air first
		Big	1	Most significant bit on air first
Ε	RW WHITEEN			Enable or disable packet whitening
		Disabled	0	Disable
		Enabled	1	Enable



6.12.15.54 BASEO

Address offset: 0x51C

Base address 0



6.12.15.55 BASE1

Address offset: 0x520

Base address 1

Α	RW BASE1		Base address 1
ID			
Rese	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A	
Bit r	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.12.15.56 PREFIXO

Address offset: 0x524

Prefixes bytes for logical addresses 0-3

A-D	RW AP[i] (i=03)	Address prefix i.
ID		
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		D D D D D D D C C C C C C C B B B B B B
Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.12.15.57 PREFIX1

Address offset: 0x528

Prefixes bytes for logical addresses 4-7

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0
ID	D D D D D D D C C C C C C B B B B B B A A A A	A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0
ID Acce Field Value ID		
A-D RW AP[i] (i=47)	Address prefix i.	

6.12.15.58 TXADDRESS

Address offset: 0x52C
Transmit address select



Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 0 Reset 0x000000000 0 0 0 0 0 0 0 0 0 0 0 0 0	Α	RW TXADDRESS		Transmit address select
ID A A A	ID			
	Reset	0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 (ID			A A A
	Bit nu	ımber	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Logical address to be used when transmitting a packet

6.12.15.59 RXADDRESSES

Address offset: 0x530 Receive address select

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-H RW ADDR[i] (i=07)			Enable or disable reception on logical address i.
	Disabled	0	Disable
	Enabled	1	Enable

6.12.15.60 CRCCNF

Address offset: 0x534

CRC configuration


ID B B	A A O
	0 0
Reset 0x000000000 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID Acce Field Value ID Value Description	
A RW LEN [13] CRC length in number of bytes	
For MODE Ble_LR125Kbit and Ble_LR500Kbit, only LEN set	
to 3 is supported	
Disabled 0 CRC length is zero and CRC calculation is disabled	
One 1 CRC length is one byte and CRC calculation is enabled	
Two 2 CRC length is two bytes and CRC calculation is enabled	
Three 3 CRC length is three bytes and CRC calculation is enabled	
B RW SKIPADDR Include or exclude packet address field out of CRC	
calculation.	
Include 0 CRC calculation includes address field	
Skip 1 CRC calculation does not include address field. The CRC	
calculation will start at the first byte after the address.	
leee802154 2 CRC calculation as per 802.15.4 standard. Starting at first	
byte after length field.	

6.12.15.61 CRCPOLY

Address offset: 0x538

CRC polynomial



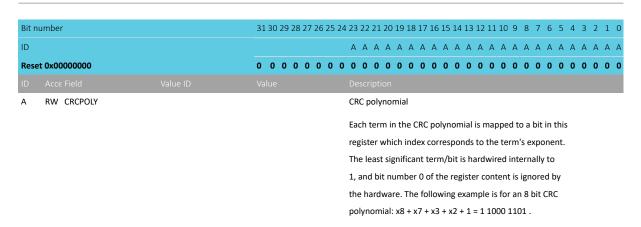

6.12.15.62 CRCINIT

Address offset: 0x53C

CRC initial value

Bit n	umber	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	t 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
Α	RW CRCINIT		CRC initial value

Initial value for CRC calculation

6.12.15.63 TIFS

Address offset: 0x544
Interframe spacing in µs


Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Rese	et 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW TIFS	Interframe spacing in μs.
		Interframe space is the time interval between two
		consecutive packets. It is defined as the time, in
		microseconds, from the end of the last bit of the previous
		packet to the start of the first bit of the subsequent packet.

6.12.15.64 RSSISAMPLE

Address offset: 0x548

RSSI sample



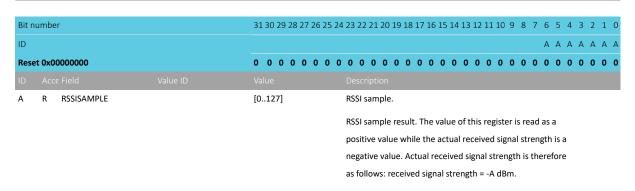

6.12.15.65 STATE

Address offset: 0x550 Current radio state

Reset 0x00000000000000000000000000000000000	Bit no	umbe	er		31 30 29 28 27	26 25 2	4 23 :	22 21 2	0 19	18 1	7 16	15 1	14 1	3 12	11 1	.0 9	8	7	6	5 4	4 3	2	1 0
A R STATE Disabled 0 RADIO is in the Disabled state RXRU 1 RADIO is in the RXRU state RXIDIO is in the RXIDLE state RX 3 RADIO is in the RX State RXDIO is in the RXDISABLED state RXDIO is in the RXDISABLED state TXRU 9 RADIO is in the TXRU state RADIO is in the TXRU state	ID																				Α	Α	A A
A R STATE Disabled 0 RADIO is in the Disabled state RXRu 1 RADIO is in the RXRU state RXIDIO is in the RXIDLE state RXIDIO is in the RXIDLE state RX 3 RADIO is in the RX State RXDIO is in the RXDISABLED state RXDISABLED state TXRU 9 RADIO is in the TXRU state TXRU 10 RADIO is in the TXRU state	Rese	t 0x0	0000000		0 0 0 0 0	0 0 0	0	0 0	0 0	0 (0	0	0 (0 0	0 (0 0	0	0	0	0 (0 0	0	0 0
Disabled 0 RADIO is in the Disabled state RXRU 1 RADIO is in the RXRU state RXIdle 2 RADIO is in the RXIDLE state RX 3 RADIO is in the RX state RXDisable 4 RADIO is in the RXDISABLED state TXRU 9 RADIO is in the TXRU state TXIdle 10 RADIO is in the TXIDLE state	ID																						
RxRu 1 RADIO is in the RXRU state RxIdle 2 RADIO is in the RXIDLE state Rx 3 RADIO is in the RX state RxDisable 4 RADIO is in the RXDISABLED state TxRu 9 RADIO is in the TXRU state TxIdle 10 RADIO is in the TXIDLE state	Α	R	STATE				Cur	rent ra	dio st	tate													
RXIDLE State RX 3 RADIO is in the RXIDLE state RXDISable 4 RADIO is in the RXDISABLED state TXRU 9 RADIO is in the TXRU state TXIDLE 10 RADIO is in the TXIDLE state				Disabled	0		RAI	DIO is i	n the	Disa	bled	sta	te										
RX 3 RADIO is in the RX state RXDisable 4 RADIO is in the RXDISABLED state TXRU 9 RADIO is in the TXRU state TXIdle 10 RADIO is in the TXIDLE state				RxRu	1		RAI	DIO is i	n the	RXR	U sta	ate											
RXDisable 4 RADIO is in the RXDISABLED state TXRu 9 RADIO is in the TXRU state TxIdle 10 RADIO is in the TXIDLE state				RxIdle	2		RAI	DIO is i	n the	RXIE	DLE s	tate	!										
TXRu 9 RADIO is in the TXRU state Txldle 10 RADIO is in the TXIDLE state				Rx	3		RAI	DIO is i	n the	RX s	tate												
TxIdle 10 RADIO is in the TXIDLE state				RxDisable	4		RAI	DIO is i	n the	RXD	ISAB	BLED	sta	te									
				TxRu	9		RAI	DIO is i	n the	TXR	U sta	ate											
Tx 11 RADIO is in the TX state				TxIdle	10		RAI	DIO is i	n the	TXIC)LE s	tate											
				Tx	11		RAI	DIO is i	n the	TX s	tate												
TxDisable 12 RADIO is in the TXDISABLED state				TxDisable	12		RAI	DIO is i	n the	TXD	ISAB	LED	sta	te									

6.12.15.66 DATAWHITEIV

Address offset: 0x554


Data whitening initial value

Bit n	umber	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			ААААА
Rese	et 0x00000040	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
			Description
Α	RW DATAWHITEIV		Data whitening initial value. Bit 6 is hardwired to '1', writing
			'0' to it has no effect, and it will always be read back and
			used by the device as '1'.
			Bit 0 corresponds to Position 6 of the LSFR, Bit 1 to Position
			5, etc.

6.12.15.67 BCC

Address offset: 0x560 Bit counter compare





Bit counter compare register

6.12.15.68 DAB[n] (n=0..7)


Address offset: $0x600 + (n \times 0x4)$ Device address base segment n

Α	RW DAB									De	evic	e a	ıddı	ress	ba	se s	seg	me	nt ı	n											
ID																															
Rese	et 0x00000000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (D (0 (0 0) (0	0	0	0	0
ID		Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α.	Α /	Δ /	Δ /	Δ Α	. 4	A	Α	Α	Α	Α ,
Bit n	umber	31	30	29	28	27	26	25	24	23	22	21	. 20	19	18	17	16	15	14	13	12 1	11 1	.0 9	9 8	3 7	΄ 6	5	4	3	2	1

6.12.15.69 DAP[n] (n=0..7)

Address offset: $0x620 + (n \times 0x4)$

Device address prefix n



6.12.15.70 DACNF

Address offset: 0x640

Device address match configuration

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				PONMLKJIHGFEDCBA
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
A-H	RW ENA[i] (i=07)			Enable or disable device address matching using device
				address i
		Disabled	0	Disabled
		Enabled	1	Enabled
I-P	RW TXADD[i] (i=07)			TxAdd for device address i

6.12.15.71 MHRMATCHCONF

Address offset: 0x644

Search pattern configuration



Bit number	31 30	0 29 28 2	27 26 2	25 24	23 22	2 21 2	20 19	18 1	7 16	15	14 13	3 12 1	11 1	.0 9	8	7	6	5 4	1 3	2	1 0
ID	A A	A A A	А А	А А	АА	Α.	А А	A A	A	Α	АА	Α	A A	4 A	Α	Α	Α	A A	A A	Α .	АА
Reset 0x00000000	0 0	0 0	0 0	0 0	0 0	0	0 0	0 0	0	0	0 0	0	0 (0	0	0	0	0 (0	0	0 0
ID Acce Field Value	ID Value	e			Desc	riptio	n														

A RW MHRMATCHCONF

Search pattern configuration

6.12.15.72 MHRMATCHMAS

Address offset: 0x648

Pattern mask

Α	RW MHRMATCHMAS	Pattern mask
ID		Value Description
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.12.15.73 MODECNF0

Address offset: 0x650

Radio mode configuration register 0


Bit n	umber		313	30 2	9 28	27 2	26 2	5 24	1 2:	3 22 2	21 2	20 19	18	3 17	16	15	14	13 1	2 :	11 1	o 9	8 (7	6	5	4	3	2	1 0
ID																					C	: c							Α
Rese	et 0x00000200		0	0 (0 0	0	0 (0 0	0	0	0	0 0	0	0	0	0	0	0	0	0 0) 1	. 0	0	0	0	0	0	0	0 0
ID	Acce Field	Value ID	Valu	ue					D	escri	ptic	on																	
Α	RW RU								R	adio	ran	ոթ-սբ	ti	me															
		Default	0						D	efaul	lt ra	mp-u	up	time	e (t	RXE	N a	and 1	tΤ>	EN)	, co	mp	atib	le v	with	n			
									fi	rmwa	are	writt	en	for	nR	F51													
		Fast	1							ast ra										,FAS	Τ),	see	ele	ctri	ical				
									S	pecifi	icat	ions 1	for	mo	re i	nfo	rm	atio	n										
									W	/hen	ena	abled	l, T	IFS i	is n	ot e	enfo	orce	d b	y ha	ırdı	war	e ar	nd					
									S	oftwa	are	need	ls t	о со	ntr	ol v	vhe	n to	tu	rn o	n t	he	Radi	io					
С	RW DTX								D	efaul	lt T	X valu	ue																
									S	pecifi	ies	what	th	e R	٩DI	O w	/ill 1	trans	sm	it w	nen	it	is no	ot					
									st	artec	d, i.	e. be	tw	een	:														
									R	ADIO).EV	ENTS	5_F	READ	OY a	nd	RA	DIO.	.TA	SKS_	_ST	AR1	-						
									R	ADIO).EV	ENTS	S_E	ND	and	d RA	ADI	O.TA	SK	S_S	ΓAR	Т							
									R	ADIO).EV	'ENTS	S_E	ND	and	d RA	ADI	0.E\	/E1	NTS_	DIS	SAB	LED						
									F	or IEE	EE 8	802.1	5.4	1 250	0 kl	ps	mc	de d	onl	y Ce	nte	er is	a v	alid					
									Se	etting	3																		
									F	or Blu	ueto	ooth	Lo	w Er	ner	gy L	.on	g Ra	ng	e mo	ode	on	ly C	ent	er i	S			
									а	valid	set	tting																	
		B1	0						Ti	ransn	nit '	'1'																	
		В0	1						Ti	ransn	nit '	'0'																	
		Center	2						Ti	ransn	nit (cente	er f	requ	uen	су													
									W	/hen	tur	ning t	he	cry	stal	for	ce	nter	fre	eque	nc	y, tl	ne R	AD	10				
									m	nust b	oe s	et in	DΊ	TX =	Cei	nter	m	ode	to	be a	ble	e to	ach	iev	e th	ne			
									e	xpect	ted	accu	rac	у															



6.12.15.74 SFD

Address offset: 0x660

IEEE 802.15.4 start of frame delimiter




6.12.15.75 EDCNT

Address offset: 0x664

IEEE 802.15.4 energy detect loop count


Number of iterations to perform an ED scan. If set to 0 one scan is performed, otherwise the specified number + 1 of ED scans will be performed and the max ED value tracked in EDSAMPLE.



6.12.15.76 EDSAMPLE

Address offset: 0x668

IEEE 802.15.4 energy detect level

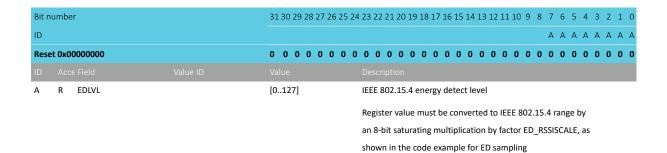

6.12.15.77 CCACTRL

Address offset: 0x66C

IEEE 802.15.4 clear channel assessment control



Bit n	umber		31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13 1	2 1	1 10	9	8	7	6	5	4 3	3 2	1	0
ID			D	D	D	D	D	D	D	D	С	С	С	С	С	С	С	С	В	В	В	3 E	3 B	В	В					Α	Α	Α
Rese	et 0x052D0000		0	0	0	0	0	1	0	1	0	0	1	0	1	1	0	1	0	0	0) (0	0	0	0	0	0	0 (0	0	0
ID											Des																					
Α	RW CCAMODE										CCA	A n	noc	de (of o	pe	rati	on														_
		EdMode	0								Ene	erg	y a	bo	ve t	hre	sho	old														
											Wil	ll re	ерс	rt	bus	y w	he	nev	/er	ene	rgy	is d	etec	ted	lab	ove						
											CCA	ΑEI	DTF	IRE	ES																	
		CarrierMode	1								Car	rrie	er se	eer	1																	
											Wil	ll re	epc	rt	bus	y w	he	nev	/er	cor	nplia	nt	IEEE	80	2.1	5.4	sigr	nal	is			
											see	en																				
		CarrierAndEdMode	2								Ene	erg	y a	bo	ve t	hre	sho	old	ΑN	D c	arrie	er s	een									
		CarrierOrEdMode	3								Ene	erg	y a	bo	ve t	hre	sho	old	OR	cai	rier	see	en									
		EdModeTest1	4								Ene	erg	y a	bo	ve t	hre	sho	old	tes	t m	ode	tha	at wi	II al	bor	t wl	hen	fire	st			
											ED	me	eas	ure	eme	ent	ove	r tl	hre	sho	ld is	se	en. N	No a	ieve	agi	ng.					
В	RW CCAEDTHRES										CCA	A e	nei	rgy	bu	sy t	hre	sho	old.	Us	ed i	n al	l the	e CC	A n	nod	les					
											exc	ер	t C	arr	ierľ	Иo	de.															
											Mu	ıst	be	со	nve	rte	d fr	om	IEI	E 8	302.:	15.4	1 rar	nge	by (ivib	ding	g by	y			
											fac	tor	ED)_R	SSI	SCA	ALE	- si	mil	ar t	o El	SA	MPI	E re	egis	ter						
С	RW CCACORRTHRES										CCA	A c	orr	ela	tor	bu	sy t	hre	esh	old.	Onl	y re	eleva	ant	to							
											Car	rrie	rM	lod	e, (Carı	rier	And	dEd	Mc	de,	and	l Cai	rie	rOr	EdΝ	∕lod	e.				
D	RW CCACORRCNT										Lim	nit	for	ос	cur	anc	es	abc	ve	CC	ACO	RRT	HRE	S. ۱	Νh	en r	not					
											equ	ual	to	zei	o t	he	corı	ola	ote	ba	sed	sigi	nal c	lete	ct i	s er	nabl	led				

6.12.15.78 DFEMODE

Address offset: 0x900

Whether to use Angle-of-Arrival (AOA) or Angle-of-Departure (AOD)

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW DFEOPMODE			Direction finding operation mode
		Disabled	0	Direction finding mode disabled
		AoD	2	Direction finding mode set to AoD
		AoA	3	Direction finding mode set to AoA

6.12.15.79 CTEINLINECONF

Address offset: 0x904

Configuration for CTE inline mode

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0
ID		I I I I I I I I I H H H H H H H G G G F F F E E C	В А
Reset 0x00002800		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0
A RW CTEINLINECTRLEN		Enable parsing of CTEInfo from received packet in BLE	
		modes	
	Enabled	1 Parsing of CTEInfo is enabled	
	Disabled	O Parsing of CTEInfo is disabled	
B RW CTEINFOINS1		CTEInfo is S1 byte or not	



Bit r	number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				H H H H H H H H G G G F F F E E C B A
Rese	et 0x00002800			0 0 0 0 0 0 0 0 0 0 0 1 0 1 0 0 0 0 0 0
ID				
_		InS1	1	CTEInfo is in S1 byte (data PDU)
		NotInS1	0	CTEInfo is NOT in S1 byte (advertising PDU)
С	RW CTEERRORHANDLING			Sampling/switching if CRC is not OK
		Yes	1	Sampling and antenna switching also when CRC is not OK
		No	0	No sampling and antenna switching when CRC is not OK
Ε	RW CTETIMEVALIDRANGE			Max range of CTETime
				Valid range is 2-20 in the Bluetooth Core Specification. If
				larger than 20, it can be an indication of an error in the
				received packet.
		20	0	20 in 8 μs unit (default)
				Set to 20 if parsed CTETime is larger than 20
		31	1	31 in 8 µs unit
		63	2	63 in 8 µs unit
F	RW CTEINLINERXMODE1US			Spacing between samples for the samples in the
				SWITCHING period when CTEINLINEMODE is set.
				AoD 1 µs
		4us	1	4 μs
		2us	2	2 μs
		1us	3	1 μs
		500ns	4	0.5 μs
		250ns	5	0.25 μs
		125ns	6	0.125 μs
G	RW CTEINLINERXMODE2US			Spacing between samples for the samples in the
				SWITCHING period when CTEINLINEMODE is set.
				When the device is in AoD mode, this is used when the
				received CTEType is "AoD 2 μs". When in AoA mode, this is
				used when TSWITCHSPACING is 4 µs.
		4us	1	4 μs
		2us	2	2 μs
		1us	3	1 μs
		500ns	4	0.5 μs
		250ns	5	0.25 μs
		125ns	6	0.125 μs
Н	RW SOCONF			S0 bit pattern to match
				The least significant bit always corresponds to the first bit of
				S0 received.
I	RW SOMASK			S0 bit mask to set which bit to match
				The least significant bit always corresponds to the first bit of
				SO received.

220

6.12.15.80 DFECTRL1

Address offset: 0x910

Various configuration for Direction finding



Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			1 1 1	I H H H H G G G F E E E C C C B A A A A A
Res	et 0x00023282		0 0 0 0 0 0 0	0 0 0 0 0 0 0 1 0 0 0 1 1 0 0 1 0 1 0 0 0 0 1 0
Α	RW NUMBEROF8US			Length of the AoA/AoD procedure in number of 8 μs units
				Always used in TX mode, but in RX mode only when
				CTEINLINECTRLEN is 0
В	RW DFEINEXTENSION			Add CTE extension and do antenna switching/sampling in
				this extension
		CRC	1	AoA/AoD procedure triggered at end of CRC
		Payload	0	Antenna switching/sampling is done in the packet payload
С	RW TSWITCHSPACING			Interval between every time the antenna is changed in the
				SWITCHING state
		4us	1	4 μs
		2us	2	2 μs
_		1us	3	1 μs
E	RW TSAMPLESPACINGREF			Interval between samples in the REFERENCE period
		4us	1	4 μs
		2us 1us	2	2 μs
		500ns	4	1 μs 0.5 μs
		250ns	5	0.25 μs
		125ns	6	0.125 μs
F	RW SAMPLETYPE		-	Whether to sample I/Q or magnitude/phase
		IQ	0	Complex samples in I and Q
		MagPhase	1	Complex samples as magnitude and phase
G	RW TSAMPLESPACING			Interval between samples in the SWITCHING period when
				CTEINLINECTRLEN is 0
				When CTEINLINECTRLEN is 1, CTEINLINERXMODE1US
				or CTEINLINERXMODE2US is used instead of
				TSAMPLESPACING.
		4us	1	4 μs
		2us	2	2 μs
		1us	3	1 μs
		500ns	4	0.5 μs
		250ns	5	0.25 μs
		125ns	6	0.125 μs
Н	RW REPEATPATTERN			Repeat each individual antenna pattern N times
				sequentially, i.e. P0, P0, P1, P1, P2, P2, P3, P3, etc.
		NoRepeat	0	Do not repeat (1 time in total)
I	RW AGCBACKOFFGAIN			Gain will be lowered by the specified number of gain steps at the start of CTE
				At the start of receiving the CTE, the gain is lowered by the
				specified number of gain steps (approximately 3 dB ± 1 dB
				per step). The initial gain reduction is implemented in the
				analog front-end, thus the gain back-off can be used to
				prevent sample saturation.
				·

6.12.15.81 DFECTRL2

Address offset: 0x914

Start offset for Direction finding



Bit r	number	31 30 29	9 28 2	7 2	6 25	24	23	22 2	1 20	19	18	17	16	15 1	14 13	12	11	10	9	8	7	6	5 4	4 3	2	1	C
ID			E	3 I	ВВ	В	В	ВВ	В	В	В	В	В			Α	Α	Α	Α	Α	Α	Α	A A	Α Α	A	Α	Δ
Res	et 0x00000000	0 0 0	0 () (0 0	0	0	0 0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0 0	0	0	C
Α	RW TSWITCHOFFSET						Sigi	ned '	valu	e of	fse	t af	ter	the	end	of t	he	CR	C b	efor	re s	tar	ting				
							swi	tchir	ng ir	n nu	mb	er d	of 1	6 N	1Hz c	lock	с су	cle	S								
							Dec	reas	ing	TSV	VIT	CHC)FF:	SET	bey	ond	the	e tri	igge	er o	f th	ne A	\oA/	,			
							Aol) pro	oceo	dure	wi	ll ha	ave	no	effe	ct											
В	RW TSAMPLEOFFSET						Sigi	ned v	valu	e of	ffse	t in	nu	mb	er of	16	МН	lz cl	locl	с су	cle	s fo	r				
							fine	tun	ing	of t	he	sam	pli	ng i	nsta	nt fo	or a	II IC	Q sa	mp	les	. W	/ith				
							TSA	MPI	EO	FFSI	ET=	0 th	e fi	irst	sam	ple i	s ta	akeı	n in	nme	edia	ate	ly at				
							the	star	t of	the	ret	fere	nce	e pe	riod												
							Dec	reas	ing	TSA	M	PLEC	OFF	SET	bey	ond	the	e tr	igg	er o	of th	ne A	٩oA,	/			
) pro	_						·				-								

6.12.15.82 SWITCHPATTERN


Address offset: 0x928

GPIO patterns to be used for each antenna

Maximum 8 GPIOs can be controlled. To secure correct signal levels on the pins, the pins must be configured in the GPIO peripheral as described in Pin configuration.

If, during switching, the total number of antenna slots is bigger than the number of written patterns, the RADIO loops back to the pattern used after the reference pattern.


A minimum number of three patterns must be written.

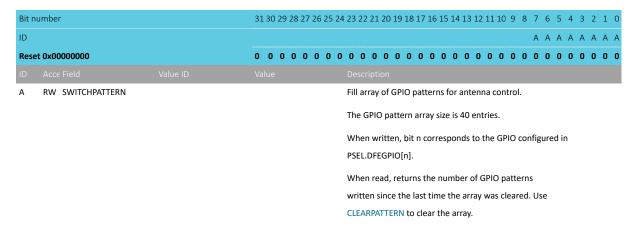

6.12.15.83 CLEARPATTERN

Address offset: 0x92C

Clear the GPIO pattern array for antenna control





6.12.15.84 PSEL.DFEGPIO[n] (n=0..7)

Address offset: $0x930 + (n \times 0x4)$

Pin select for DFE pin n

Must be set before enabling the radio

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t 0xFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.12.15.85 DFEPACKET.PTR

Address offset: 0x950

Data pointer

Α	RW PTR		Data pointer
ID			
Res	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A	
Bit r	number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

See the memory chapter for details about which memories are available for EasyDMA.

6.12.15.86 DFEPACKET.MAXCNT

Address offset: 0x954

Maximum number of buffer words to transfer

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID	A A A A A A A A A A A A A A A A A A A
Reset 0x00001000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	

A RW MAXCNT

Maximum number of buffer words to transfer

6.12.15.87 DFEPACKET.AMOUNT

Address offset: 0x958

Number of samples transferred in the last transaction

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 1	.6 15 14 13	3 12 11 10 9	8 7	6 5	4 3	2 1 0
ID			A A A	AAAA	AAA	А А	АА	A A A
Reset 0x00000000	0 0 0 0 0 0 0	00000000	0 0 0	0 0 0 0	0 0	0 0	0 0	0 0 0
ID Acce Field Value ID	Value	Description						

A R AMOUNT


Number of samples transferred in the last transaction $% \left(1\right) =\left(1\right) \left(1\right)$



6.12.15.88 POWER

Address offset: 0xFFC

Peripheral power control

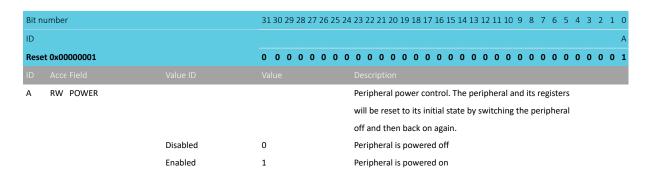

6.12.16 Electrical specification

6.12.16.1 General radio characteristics

Symbol	Description	Min.	Тур.	Max.	Units
f _{OP}	Operating frequencies	2360		2500	MHz
f _{PLL,CH,SP}	PLL channel spacing		1		MHz
f _{DELTA,1M}	Frequency deviation @ 1 Mbps		±170		kHz
f _{DELTA,BLE,1M}	Frequency deviation @ Bluetooth LE 1 Mbps		±250		kHz
f _{DELTA,2M}	Frequency deviation @ 2 Mbps		±320		kHz
f _{DELTA,BLE,2M}	Frequency deviation @ Bluetooth LE 2 Mbps		±500		kHz
fsk_{BPS}	On-the-air data rate	125		2000	kbps
f _{chip} , IEEE 802.15.4	Chip rate in IEEE 802.15.4 mode		2000		kchip,
					S

6.12.16.2 Radio current consumption (transmitter)

Symbol	Description	Min.	Тур.	Max.	Units
I _{TX,PLUS8dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = +8 dBm		14.0		mA
I _{TX,PLUS8dBM}	TX only run current P _{RF} = +8 dBm		30.0		mA
I _{TX,PLUS4dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = +4 dBm		9.4		mA
I _{TX,PLUS4dBM}	TX only run current P _{RF} = +4 dBm		20.4		mA
I _{TX,0dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = 0 dBm		4.9		mA
I _{TX,0dBM}	TX only run current P _{RF} = 0 dBm		10.4		mA
I _{TX,MINUS4dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -4 dBm		3.8		mA
I _{TX,MINUS4dBM}	TX only run current P _{RF} = -4 dBm		8.1		mA
I _{TX,MINUS8dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -8 dBm		3.4		mA
I _{TX,MINUS8dBM}	TX only run current P _{RF} = -8 dBm		7.1		mA
I _{TX,MINUS12dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -12 dBm		3.1		mA
I _{TX,MINUS12dBM}	TX only run current P _{RF} = -12 dBm		6.4		mA
I _{TX,MINUS16dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -16 dBm		2.9		mA
I _{TX,MINUS16dBM}	TX only run current P _{RF} = -16 dBm		6.0		mA
I _{TX,MINUS20dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -20 dBm		2.7		mA
I _{TX,MINUS20dBM}	TX only run current P _{RF} = -20 dBm		5.6		mA
I _{TX,MINUS40dBM,DCDC}	TX only run current DC/DC, 3 V, P _{RF} = -40 dBm		2.3		mA
I _{TX,MINUS40dBM}	TX only run current P _{RF} = -40 dBm		4.6		mA
I _{START,TX,DCDC}	TX start-up current DC/DC, 3 V, P _{RF} = 4 dBm		4.2		mA





Symbol	Description	Min.	Тур.	Max.	Units
I _{START,TX}	TX start-up current, P _{RF} = 4 dBm		8.8		mA

6.12.16.3 Radio current consumption (Receiver)

Symbol	Description	Min.	Тур.	Max.	Units
I _{RX,1M,DCDC}	RX only run current DC/DC, 3 V, 1 Mbps/1 Mbps Bluetooth		4.7		mA
	LE mode				
I _{RX,1M}	RX only run current LDO, 3 V, 1 Mbps/1 Mbps Bluetooth LE		9.8		mA
	mode				
I _{RX,2M,DCDC}	RX only run current DC/DC, 3 V, 2 Mbps/2 Mbps Bluetooth		5.2		mA
	LE mode				
I _{RX,2M}	RX only run current LDO, 3 V, 2 Mbps/2 Mbps Bluetooth LE		10.9		mA
	mode				
I _{START,RX,1M,DCDC}	RX start-up current DC/DC, 3 V, 1 Mbps/1 Mbps Bluetooth LE		3.4		mA
	mode				
I _{START,RX,1M}	RX start-up current 1 Mbps/1 Mbps Bluetooth LE mode		6.8		mA

6.12.16.4 Transmitter specification

Symbol	Description	Min.	Тур.	Max.	Units
P _{RF}	Maximum output power		8		dBm
P _{RFC}	RF power control range		28		dB
P_{RFCR}	RF power accuracy			±4	dB
P _{RF1,1}	1st Adjacent Channel Transmit Power 1 MHz (1 Mbps)		-25		dBc
P _{RF2,1}	2nd Adjacent Channel Transmit Power 2 MHz (1 Mbps)		-54		dBc
P _{RF1,2}	1st Adjacent Channel Transmit Power 2 MHz (2 Mbps)		-26		dBc
P _{RF2,2}	2nd Adjacent Channel Transmit Power 4 MHz (2 Mbps)		-54		dBc
E_{vm}	Error vector magnitude in IEEE 802.15.4 mode (Offset EVM)		2		%rms
P _{harm2nd, IEEE 802.15.4}	2nd harmonics in IEEE 802.15.4 mode		-49		dBm
P _{harm3rd} , IEEE 802.15.4	3rd harmonics in IEEE 802.15.4 mode		-54		dBm
P _{ACP,R, IEEE 802.15.4}	IEEE 802.15.4 Relative adjacent Channel Power, offset > 3.5		-42		dBc
	MHz ¹³				
P _{ACP,A} , IEEE 802.15.4	IEEE 802 15.4 Absolute adjacent Channel Power, offset > 3.5		-46		dBm
	MHz ¹³				

4463_156 v1.4 225 NORD

Output power set to 8 dBm, resolution bandwidth (RBW) set to 100 kHz, and transmitter Duty-Cycle approximately 85%.

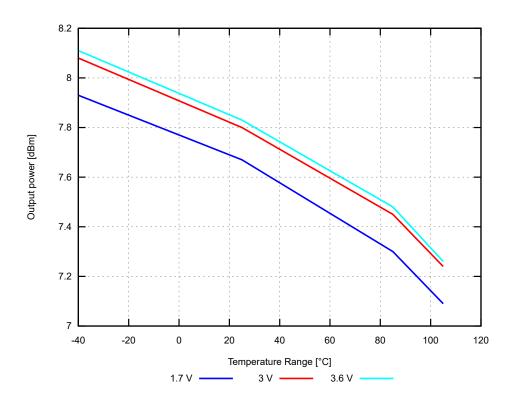


Figure 78: Output power, 1 Mbps Bluetooth low energy mode, at maximum TXPOWER setting (typical values)

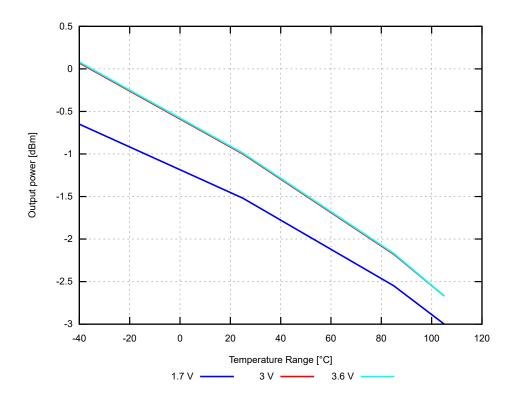


Figure 79: Output power, 1 Mbps Bluetooth low energy mode, at 0 dBm TXPOWER setting (typical values)

6.12.16.5 Receiver operation

Symbol	Description	Min.	Тур.	Max.	Units
P _{RX,MAX}	Maximum received signal strength at < 0.1% PER		0		dBm
P _{SENS,IT,1M}	Sensitivity, 1 Mbps nRF mode ideal transmitter ¹⁴		-92		dBm
P _{SENS,IT,2M}	Sensitivity, 2 Mbps nRF mode ideal transmitter ¹⁴		-89		dBm
P _{SENS,IT,SP,1M,BLE}	Sensitivity, 1 Mbps Bluetooth LE ideal transmitter, packet		-95		dBm
	length ≤ 37 bytes BER = 1E-3 ¹⁵				
P _{SENS,IT,LP,1M,BLE}	Sensitivity, 1 Mbps Bluetooth LE ideal transmitter, packet		-94		dBm
	length ≥ 128 bytes BER = 1E-4 ¹⁶				
P _{SENS,IT,SP,2M,BLE}	Sensitivity, 2 Mbps Bluetooth LE ideal transmitter, packet		-92		dBm
	length ≤ 37 bytes				
P _{SENS,IT,BLE LE125k}	Sensitivity, 125 kbps Bluetooth LE mode		-103		dBm
P _{SENS,IT,BLE LE500k}	Sensitivity, 500 kbps Bluetooth LE mode		-98		dBm
P _{SENS,IEEE 802.15.4}	Sensitivity in IEEE 802.15.4 mode		-99		dBm

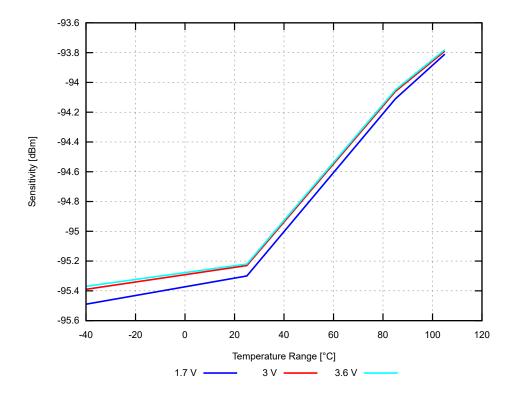


Figure 80: Sensitivity, 1 Mbps Bluetooth low energy mode, Regulator = LDO (typical values)

6.12.16.6 RX selectivity

RX selectivity with equal modulation on interfering signal ¹⁷



Typical sensitivity applies when ADDR0 is used for receiver address correlation. When ADDR[1...7] are used for receiver address correlation, the typical sensitivity for this mode is degraded by 3 dB.

As defined in the Bluetooth Core Specification v4.0 Volume 6: Core System Package (Low Energy Controller Volume).

Equivalent BER limit < 10E-04.</p>

Desired signal level at P_{IN} = -67 dBm. One interferer is used, having equal modulation as the desired signal. The input power of the interferer where the sensitivity equals BER = 1E-4 is presented.

Symbol	Description	Min.	Тур.	Max.	Units
C/I _{1M,co-channel}	1Mbps mode, co-channel interference		10		dB
C/I _{1M,-1MHz}	1 Mbps mode, Adjacent (-1 MHz) interference		-5		dB
C/I _{1M,+1MHz}	1 Mbps mode, Adjacent (+1 MHz) interference		-14		dB
C/I _{1M,-2MHz}	1 Mbps mode, Adjacent (-2 MHz) interference		-25		dB
C/I _{1M,+2MHz}	1 Mbps mode, Adjacent (+2 MHz) interference		-45		dB
C/I _{1M,-3MHz}	1 Mbps mode, Adjacent (-3 MHz) interference		-40		dB
C/I _{1M,+3MHz}	1 Mbps mode, Adjacent (+3 MHz) interference		-46		dB
C/I _{1M,±6MHz}	1 Mbps mode, Adjacent (≥6 MHz) interference		-52		dB
C/I _{1MBLE,co-channel}	1 Mbps Bluetooth LE mode, co-channel interference		6		dB
C/I _{1MBLE,-1MHz}	1 Mbps Bluetooth LE mode, Adjacent (-1 MHz) interference		-2		dB
C/I _{1MBLE,+1MHz}	1 Mbps Bluetooth LE mode, Adjacent (+1 MHz) interference		-10		dB
C/I _{1MBLE,-2MHz}	1 Mbps Bluetooth LE mode, Adjacent (-2 MHz) interference		-28		dB
C/I _{1MBLE,+2MHz}	1 Mbps Bluetooth LE mode, Adjacent (+2 MHz) interference		-45		dB
C/I _{1MBLE,>3MHz}	1 Mbps Bluetooth LE mode, Adjacent (≥3 MHz) interference		-54		dB
C/I _{1MBLE,image}	Image frequency interference		-28		dB
C/I _{1MBLE,image,1MHz}	Adjacent (1 MHz) interference to in-band image frequency		-37		dB
C/I _{2M,co-channel}	2 Mbps mode, co-channel interference		10		dB
C/I _{2M,-2MHz}	2 Mbps mode, Adjacent (-2 MHz) interference		-4		dB
C/I _{2M,+2MHz}	2 Mbps mode, Adjacent (+2 MHz) interference		-16		dB
C/I _{2M,-4MHz}	2 Mbps mode, Adjacent (-4 MHz) interference		-22		dB
C/I _{2M,+4MHz}	2 Mbps mode, Adjacent (+4 MHz) interference		-46		dB
C/I _{2M,-6MHz}	2 Mbps mode, Adjacent (-6 MHz) interference		-39		dB
C/I _{2M,+6MHz}	2 Mbps mode, Adjacent (+6 MHz) interference		-48		dB
C/I _{2M,≥12MHz}	2 Mbps mode, Adjacent (≥12 MHz) interference		-52		dB
C/I _{2MBLE,co-channel}	2 Mbps Bluetooth LE mode, co-channel interference		7		dB
C/I _{2MBLE,-2MHz}	2 Mbps Bluetooth LE mode, Adjacent (-2 MHz) interference		-2		dB
C/I _{2MBLE,+2MHz}	2 Mbps Bluetooth LE mode, Adjacent (+2 MHz) interference		-12		dB
C/I _{2MBLE,-4MHz}	2 Mbps Bluetooth LE mode, Adjacent (-4 MHz) interference		-25		dB
C/I _{2MBLE,+4MHz}	2 Mbps Bluetooth LE mode, Adjacent (+4 MHz) interference		-46		dB
C/I _{2MBLE,≥6MHz}	2 Mbps Bluetooth LE mode, Adjacent (≥6 MHz) interference		-54		dB
C/I _{2MBLE,image}	Image frequency interference		-25		dB
C/I _{2MBLE,image, 2MHz}	Adjacent (2 MHz) interference to in-band image frequency		-37		dB
C/I _{125k BLE LR,co} -	125 kbps Bluetooth LE LR mode, co-channel interference		3		dB
channel	42511 21 1 11512 1 415 1 (4441)		0		10
C/I _{125k BLE LR,-1MHz}	125 kbps Bluetooth LE LR mode, Adjacent (-1 MHz) interference		-9		dB
C/I _{125k BLE LR,+1MHz}	125 kbps Bluetooth LE LR mode, Adjacent (+1 MHz)		-16		dB
	interference				
C/I _{125k BLE LR,-2MHz}	125 kbps Bluetooth LE LR mode, Adjacent (-2 MHz) interference		-28		dB
C/I	125 kbps Bluetooth LE LR mode, Adjacent (+2 MHz)		-54		dB
C/I _{125k} BLE LR,+2MHz	interference		-54		ив
C/I _{125k BLE LR,>3MHz}	125 kbps Bluetooth LE LR mode, Adjacent (≥3 MHz) interference		-60		dB
C/I _{125k BLE LR,image}	Image frequency interference		-28		dB
C/I _{IEEE 802.15.4,-5MHz}	IEEE 802.15.4 mode, Adjacent (-5 MHz) rejection		-33		dB
C/I _{IEEE 802.15.4,+5MHz}	IEEE 802.15.4 mode, Adjacent (+5 MHz) rejection		-38		dB
			-49		dB

6.12.16.7 RX intermodulation

RX intermodulation. Desired signal level at P_{IN} = -64 dBm. Two interferers with equal input power are used. The interferer closest in frequency is not modulated, the other interferer is modulated equal with the desired signal. The input power of the interferers where the sensitivity equals BER = 1E-3 is presented.



Symbol	Description	Min.	Тур.	Max.	Units
P _{IMD,5TH,1M}	IMD performance, 1 Mbps, 5th offset channel, packet length		-34		dBm
	≤ 37 bytes				
P _{IMD,5TH,1M,BLE}	IMD performance, Bluetooth LE 1 Mbps, 5th offset channel,		-32		dBm
	packet length ≤ 37 bytes				
P _{IMD,5TH,2M}	IMD performance, 2 Mbps, 5th offset channel, packet length		-33		dBm
	≤ 37 bytes				
P _{IMD,5TH,2M,BLE}	IMD performance, Bluetooth LE 2 Mbps, 5th offset channel,		-32		dBm
	packet length ≤ 37 bytes				

6.12.16.8 Radio timing

Symbol	Description	Min.	Тур.	Max.	Units
t _{TXEN,BLE,1M}	Time between TXEN task and READY event after channel		140		μs
	FREQUENCY configured (1 Mbps Bluetooth LE and 150 μs				
	TIFS)				
t _{TXEN,FAST,BLE,1M}	Time between TXEN task and READY event after channel		40		μs
	FREQUENCY configured (1 Mbps Bluetooth LE with fast				
	ramp-up and 150 μs TIFS)				
t _{TXDIS,BLE,1M}	When in TX, delay between DISABLE task and DISABLED		6		μs
	event for MODE = Nrf_1Mbit and MODE = Ble_1Mbit				
t _{RXEN,BLE,1M}	Time between the RXEN task and READY event after channel		140		μs
	FREQUENCY configured (1 Mbps Bluetooth LE)				
t _{RXEN,FAST,BLE,1M}	Time between the RXEN task and READY event after channel		40		μs
	FREQUENCY configured (1 Mbps Bluetooth LE with fast				
	ramp-up)				
t _{RXDIS,BLE,1M}	When in RX, delay between DISABLE task and DISABLED		0		μs
	event for MODE = Nrf_1Mbit and MODE = Ble_1Mbit				
t _{TXDIS,BLE,2M}	When in TX, delay between DISABLE task and DISABLED		4		μs
	event for MODE = Nrf_2Mbit and MODE = Ble_2Mbit				
t _{RXDIS,BLE,2M}	When in RX, delay between DISABLE task and DISABLED		0		μs
	event for MODE = Nrf_2Mbit and MODE = Ble_2Mbit				
t _{TXEN,IEEE 802.15.4}	Time between TXEN task and READY event after channel		130		μs
	FREQUENCY configured (IEEE 802.15.4 mode)				
t _{TXEN,FAST,IEEE 802.15.4}	Time between TXEN task and READY event after channel		40		μs
	FREQUENCY configured (IEEE 802.15.4 mode with fast ramp-				
	up)				
t _{TXDIS,IEEE 802.15.4}	When in TX, delay between DISABLE task and DISABLED		21		μs
	event (IEEE 802.15.4 mode)				
t _{RXEN,IEEE 802.15.4}	Time between the RXEN task and READY event after channel		130		μs
	FREQUENCY configured (IEEE 802.15.4 mode)				
t _{RXEN,FAST,IEEE} 802.15.4	Time between the RXEN task and READY event after channel		40		μs
	FREQUENCY configured (IEEE 802.15.4 mode with fast ramp-				
	up)				
t _{RXDIS,IEEE} 802.15.4	When in RX, delay between DISABLE task and DISABLED		0.5		μs
	event (IEEE 802.15.4 mode)				
t _{RX-to-TX} turnaround	Maximum TX-to-RX or RX-to-TX turnaround time in IEEE		40		μs
	802.15.4 mode				



6.12.16.9 Received signal strength indicator (RSSI) specifications

Symbol	Description	Min.	Тур.	Max.	Units
RSSI _{ACC}	RSSI accuracy ¹⁸		±2		dB
RSSI _{RESOLUTION}	RSSI resolution		1		dB
RSSI _{PERIOD}	RSSI sampling time from RSSI_START task		0.25		μs
RSSI _{SETTLE}	RSSI settling time after signal level change		15		μs

6.12.16.10 Jitter

Symbol	Description	Min.	Тур.	Max.	Units	
t _{DISABLEDJITTER}	Jitter on DISABLED event relative to END event when		0.25		μs	
	shortcut between END and DISABLE is enabled					
t _{READYJITTER}	Jitter on READY event relative to TXEN and RXEN task		0.25		μs	

6.12.16.11 IEEE 802.15.4 mode energy detection constants

Symbol	Description	Min.	Тур.	Max.	Units
ED_RSSISCALE	Scaling value when converting between hardware-reported 5				
	value and dBm				
ED_RSSIOFFS	Offset value when converting between hardware-reported		-93		
	value and dBm				

6.13 RNG — Random number generator

The Random number generator (RNG) generates true non-deterministic random numbers based on internal thermal noise that are suitable for cryptographic purposes. The RNG does not require a seed value.




Figure 81: Random number generator

The RNG is started by triggering the START task and stopped by triggering the STOP task. When started, new random numbers are generated continuously and written to the VALUE register when ready. A VALRDY event is generated for every new random number that is written to the VALUE register. This means that after a VALRDY event is generated, the CPU has the time until the next VALRDY event to read out the random number from the VALUE register before it is overwritten by a new random number.

6.13.1 Bias correction

A bias correction algorithm is employed on the internal bit stream to remove any bias toward 1 or 0. The bits are then queued into an eight-bit register for parallel readout from the VALUE register.

It is possible to enable bias correction in the CONFIG register. This will result in slower value generation, but will ensure a statistically uniform distribution of the random values.



 $^{^{18}}$ Valid range -90 to -30 dBm

6.13.2 Speed

The time needed to generate one random byte of data is unpredictable, and may vary from one byte to the next. This is especially true when bias correction is enabled.

6.13.3 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000D000	RNG	RNG	Random number generator	

Table 66: Instances


Register	Offset	Description
TASKS_START	0x000	Task starting the random number generator
TASKS_STOP	0x004	Task stopping the random number generator
EVENTS_VALRDY	0x100	Event being generated for every new random number written to the VALUE register
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
CONFIG	0x504	Configuration register
VALUE	0x508	Output random number

Table 67: Register overview

6.13.3.1 TASKS_START

Address offset: 0x000


Task starting the random number generator



6.13.3.2 TASKS STOP

Address offset: 0x004

Task stopping the random number generator



6.13.3.3 EVENTS VALRDY

Address offset: 0x100

Event being generated for every new random number written to the VALUE register



Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_VALRDY			Event being generated for every new random number
			written to the VALUE register
NotGenerated		0	Event not generated
Generated		1	Event generated

6.13.3.4 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW VALRDY_STOP			Shortcut between event VALRDY and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.13.3.5 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW VALRDY		Write '1' to enable interrupt for event VALRDY
Set	1	Enable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.13.3.6 INTENCLR

Address offset: 0x308

Disable interrupt


Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW VALRDY	RDY Write '1' to disable interrupt for event VALRDY		Write '1' to disable interrupt for event VALRDY
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled





6.13.3.7 CONFIG


Address offset: 0x504 Configuration register

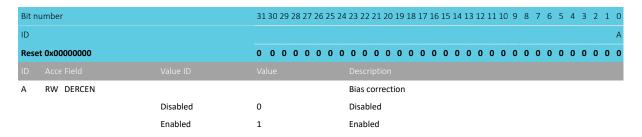

6.13.3.8 VALUE

Address offset: 0x508

Output random number



6.13.4 Electrical specification

6.13.4.1 RNG Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{RNG,START}	Time from setting the START task to generation begins.		128		μs
	This is a one-time delay on START signal and does not apply				
	between samples.				
t _{RNG,RAW}	Run time per byte without bias correction. Uniform		30		μs
	distribution of 0 and 1 is not guaranteed.				
t _{RNG,BC}	Run time per byte with bias correction. Uniform distribution		120		μs
	of 0 and 1 is guaranteed. Time to generate a byte cannot be				
	guaranteed.				

6.14 RTC — Real-time counter

The Real-time counter (RTC) module provides a generic, low power timer on the low-frequency clock source (LFCLK).



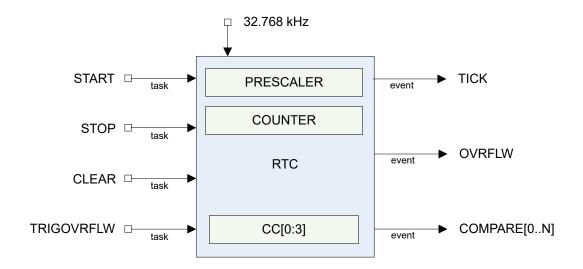


Figure 82: RTC block schematic

The RTC module features a 24-bit COUNTER, a 12-bit (1/X) prescaler, capture/compare registers, and a tick event generator for low power, tickless RTOS implementation.

6.14.1 Clock source

The RTC runs off the LFCLK.

The COUNTER resolution is $30.517~\mu s$. Depending on the source, the RTC is able to run while the HFCLK is OFF and PCLK16M is not available.

The software has to explicitly start LFCLK before using the RTC.

See CLOCK — Clock control on page 72 for more information about clock sources.

6.14.2 Resolution versus overflow and the PRESCALER

Counter increment frequency:

```
f_{RTC} [kHz] = 32.768 / (PRESCALER + 1 )
```

The PRESCALER register is read/write when the RTC is stopped. The PRESCALER register is read-only once the RTC is STARTed. Writing to the PRESCALER register when the RTC is started has no effect.

The PRESCALER is restarted on START, CLEAR, and TRIGOVRFLW, meaning the prescaler value is latched to an internal register (<<PRESC>>) on these tasks.

Examples of different frequency configurations are as following:

• Desired COUNTER frequency 100 Hz (10 ms counter period)

```
PRESCALER = round(32.768 kHz / 100 Hz) - 1 = 327
```

 $f_{RTC} = 99.9 \text{ Hz}$

10009.576 µs counter period

• Desired COUNTER frequency 8 Hz (125 ms counter period)

PRESCALER = round(32.768 kHz / 8 Hz) - 1 = 4095

 $f_{RTC} = 8 Hz$



125 ms counter period

Prescaler	Counter resolution	Overflow
0	30.517 μs	512 seconds
28-1	7812.5 μs	131072 seconds
2 ¹² -1	125 ms	582.542 hours

Table 68: RTC resolution versus overflow

6.14.3 COUNTER register

The COUNTER increments on LFCLK when the internal PRESCALER register (<<PRESC>>) is 0x00. <<PRESC>> is reloaded from the PRESCALER register. If enabled, the TICK event occurs on each increment of the COUNTER. The TICK event is disabled by default.

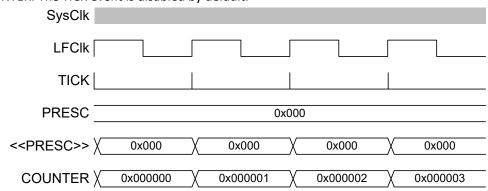


Figure 83: Timing diagram - COUNTER_PRESCALER_0

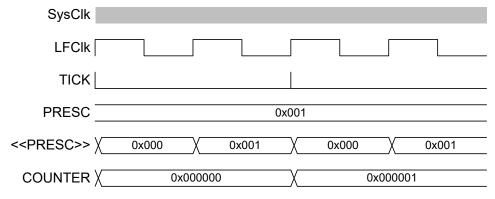


Figure 84: Timing diagram - COUNTER_PRESCALER_1

6.14.4 Overflow features

The TRIGOVRFLW task sets the COUNTER value to 0xFFFFF0 to allow SW test of the overflow condition.

OVRFLW occurs when COUNTER overflows from 0xFFFFFF to 0.

Note: The OVRFLW event is disabled by default.

6.14.5 TICK event

The TICK event enables low power tickless RTOS implementation as it optionally provides a regular interrupt source for a RTOS without the need to use the $\mathsf{ARM}^{\mathsf{B}}$ SysTick feature.

Using the RTC TICK event rather than the SysTick allows the CPU to be powered down while still keeping RTOS scheduling active.



Note: The TICK event is disabled by default.

6.14.6 Event control feature

To optimize RTC power consumption, events in the RTC can be individually disabled to prevent PCLK16M and HFCLK being requested when those events are triggered. This is managed using the EVTEN register.

For example, if the TICK event is not required for an application, this event should be disabled as it is frequently occurring and may increase power consumption if HFCLK otherwise could be powered down for long durations.

This means that the RTC implements a slightly different task and event system compared to the standard system described in Peripheral interface on page 88. The RTC task and event system is illustrated in Tasks, events, and interrupts in the RTC on page 236.

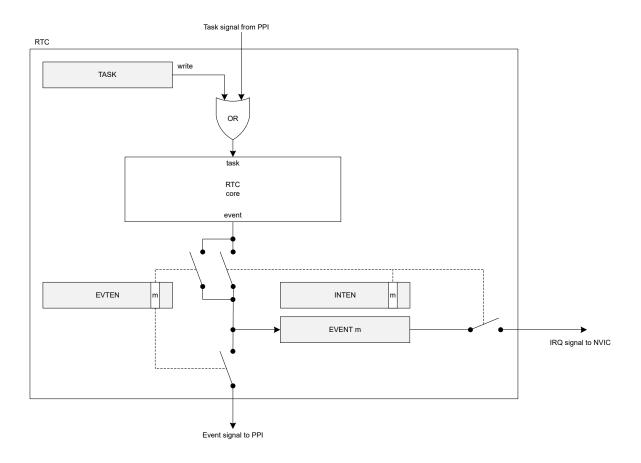


Figure 85: Tasks, events, and interrupts in the RTC

6.14.7 Compare feature

There are a number of Compare registers.

For more information, see Registers on page 241.

When setting a compare register, the following behavior of the RTC compare event should be noted:

• If a CC register value is 0 when a CLEAR task is set, this will not trigger a COMPARE event.



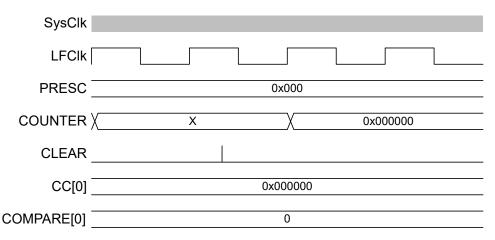


Figure 86: Timing diagram - COMPARE_CLEAR

• If a CC register is N and the COUNTER value is N when the START task is set, this will not trigger a COMPARE event.

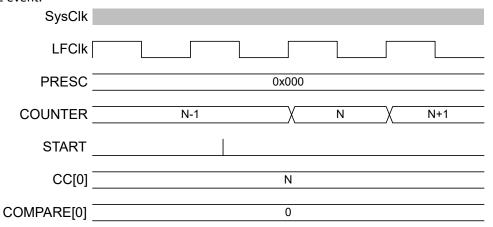


Figure 87: Timing diagram - COMPARE START

• COMPARE occurs when a CC register is N and the COUNTER value transitions from N-1 to N.

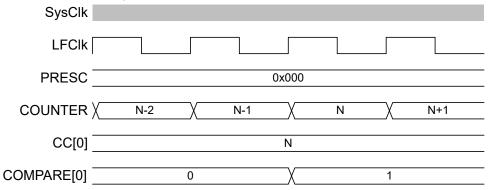


Figure 88: Timing diagram - COMPARE

• If the COUNTER is N, writing N+2 to a CC register is guaranteed to trigger a COMPARE event at N+2.



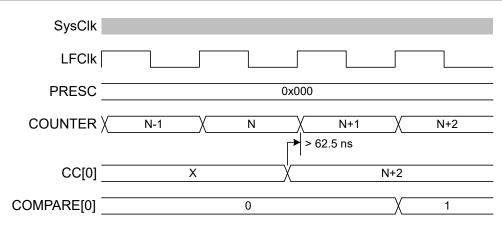


Figure 89: Timing diagram - COMPARE_N+2

• If the COUNTER is N, writing N or N+1 to a CC register may not trigger a COMPARE event.

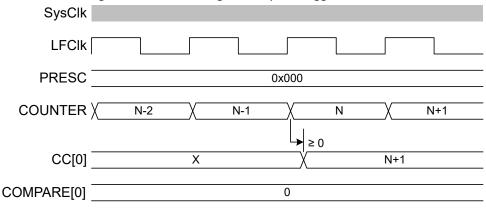


Figure 90: Timing diagram - COMPARE N+1

• If the COUNTER is N and the current CC register value is N+1 or N+2 when a new CC value is written, a match may trigger on the previous CC value before the new value takes effect. If the current CC value is greater than N+2 when the new value is written, there will be no event due to the old value.

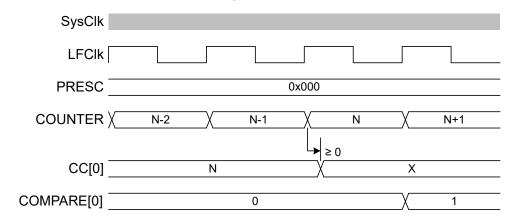


Figure 91: Timing diagram - COMPARE_N-1

6.14.8 TASK and EVENT jitter/delay

Jitter or delay in the RTC is due to the peripheral clock being a low frequency clock (LFCLK) which is not synchronous to the faster PCLK16M.

Registers in the peripheral interface, part of the PCLK16M domain, have a set of mirrored registers in the LFCLK domain. For example, the COUNTER value accessible from the CPU is in the PCLK16M domain and is latched on read from an internal register called COUNTER in the LFCLK domain. COUNTER is the register which is actually modified each time the RTC ticks. These registers must be synchronised between clock domains (PCLK16M and LFCLK).

NORDIC

The following is a summary of the jitter introduced on tasks and events.



Table 69: RTC jitter magnitudes on tasks

Operation/Function	Jitter
START to COUNTER increment	+/- 15 μs
COMPARE to COMPARE ¹⁹	+/- 62.5 ns

Table 70: RTC jitter magnitudes on events

Note: 32.768 kHz clock jitter is additional to the numbers provided above.

CLEAR and STOP (and TRIGOVRFLW; not shown) will be delayed as long as it takes for the peripheral to clock a falling edge and rising of the LFCLK. This is between 15.2585 μ s and 45.7755 μ s – rounded to 15 μ s and 46 μ s for the remainder of the section.

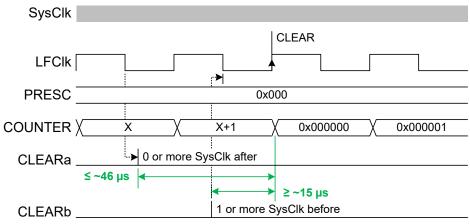


Figure 92: Timing diagram - DELAY_CLEAR

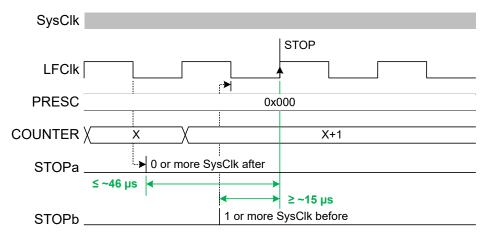


Figure 93: Timing diagram - DELAY_STOP

The START task will start the RTC. Assuming that the LFCLK was previously running and stable, the first increment of COUNTER (and instance of TICK event) will be typically after 30.5 μ s +/-15 μ s. In some cases, in particular if the RTC is STARTed before the LFCLK is running, that timing can be up to ~250 μ s. The software should therefore wait for the first TICK if it has to make sure the RTC is running. Sending a

NORDIC*

¹⁹ Assumes RTC runs continuously between these events.

TRIGOVRFLW task sets the COUNTER to a value close to overflow. However, since the update of COUNTER relies on a stable LFCLK, sending this task while LFCLK is not running will start LFCLK, but the update will then be delayed by the same amount of time of up to \sim 250 μ s. The figures show the shortest and longest delays on the START task which appears as a +/-15 μ s jitter on the first COUNTER increment.

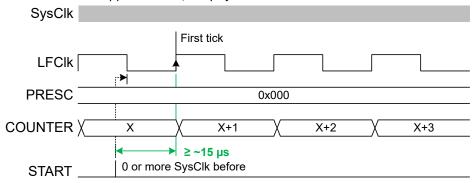


Figure 94: Timing diagram - JITTER START-

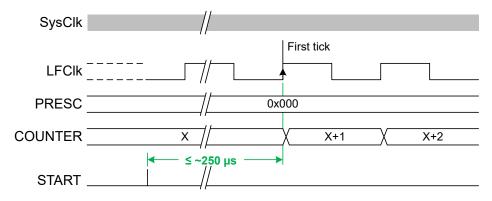


Figure 95: Timing diagram - JITTER_START+

6.14.9 Reading the COUNTER register

To read the COUNTER register, the internal <<COUNTER>> value is sampled.

To ensure that the <<COUNTER>> is safely sampled (considering an LFCLK transition may occur during a read), the CPU and core memory bus are halted for three cycles by lowering the core PREADY signal. The Read takes the CPU 2 cycles in addition resulting in the COUNTER register read taking a fixed five PCLK16M clock cycles.

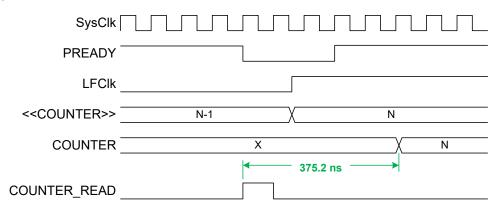


Figure 96: Timing diagram - COUNTER READ



6.14.10 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000B000	RTC	RTC0	Real-time counter 0	CC[02] implemented, CC[3] not
				implemented
0x40011000	RTC	RTC1	Real-time counter 1	CC[03] implemented

Table 71: Instances

Register	Offset	Description
TASKS_START	0x000	Start RTC COUNTER
TASKS_STOP	0x004	Stop RTC COUNTER
TASKS_CLEAR	0x008	Clear RTC COUNTER
TASKS_TRIGOVRFLW	0x00C	Set COUNTER to 0xFFFFF0
EVENTS_TICK	0x100	Event on COUNTER increment
EVENTS_OVRFLW	0x104	Event on COUNTER overflow
EVENTS_COMPARE[0]	0x140	Compare event on CC[0] match
EVENTS_COMPARE[1]	0x144	Compare event on CC[1] match
EVENTS_COMPARE[2]	0x148	Compare event on CC[2] match
EVENTS_COMPARE[3]	0x14C	Compare event on CC[3] match
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
EVTEN	0x340	Enable or disable event routing
EVTENSET	0x344	Enable event routing
EVTENCLR	0x348	Disable event routing
COUNTER	0x504	Current COUNTER value
PRESCALER	0x508	12 bit prescaler for COUNTER frequency (32768/(PRESCALER+1)). Must be written when RTC is
		stopped.
CC[0]	0x540	Compare register 0
CC[1]	0x544	Compare register 1
CC[2]	0x548	Compare register 2
CC[3]	0x54C	Compare register 3

Table 72: Register overview

6.14.10.1 TASKS_START

Address offset: 0x000 Start RTC COUNTER

Bit n	number		31 30 29 28 27 2	6 25 2	4 23 2	2 21 2	20 19	9 18 1	7 16	15 1	4 13	12 1	1 10	9	8 7	6	5	4	3	2 1	. 0
ID																					Α
Rese	et 0x00000000		0 0 0 0 0	0 0	0 (0	0 0	0 (0 0	0 (0	0	0 0	0	0 0	0	0	0	0	0 (0
ID																					
Α	W TASKS_START				Star	RTC	cou	NTER													
		Trigger	1		Trigg	er ta	sk														

6.14.10.2 TASKS_STOP

Address offset: 0x004 Stop RTC COUNTER



Bit n	umbe	er		31 30 29 28 27 2	6 25 24	1 23 2	22 2	1 20	19	18 1	.7 16	5 15	14	13 :	12 13	10	9	8	7	6	5	4	3	2	1 0
ID																									А
Rese	t 0x0	0000000		0 0 0 0 0	0 0 0	0	0 0	0 0	0	0	0 0	0	0	0	0 0	0	0	0	0	0	0	0	0	0	0 0
ID																									
Α	W	TASKS_STOP				Sto	o RT	с со	UN	ITER															
			Trigger	1		Trig	ger	task																	

6.14.10.3 TASKS_CLEAR

Address offset: 0x008 Clear RTC COUNTER

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_CLEAR			Clear RTC COUNTER
		Trigger	1	Trigger task

6.14.10.4 TASKS_TRIGOVRFLW

Address offset: 0x00C

Set COUNTER to 0xFFFFF0

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_TRIGOVRFLW			Set COUNTER to 0xFFFFF0
		Trigger	1	Trigger task

6.14.10.5 EVENTS_TICK

Address offset: 0x100

Event on COUNTER increment

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_TICK			Event on COUNTER increment
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.14.10.6 EVENTS_OVRFLW

Address offset: 0x104

Event on COUNTER overflow



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_OVRFLW			Event on COUNTER overflow
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.14.10.7 EVENTS_COMPARE[n] (n=0..3)

Address offset: $0x140 + (n \times 0x4)$ Compare event on CC[n] match

Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value II		Description
A RW EVENTS_COMPARE		Compare event on CC[n] match
NotGer	nerated 0	Event not generated
Genera	ted 1	Event generated

6.14.10.8 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW TICK			Write '1' to enable interrupt for event TICK
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW OVRFLW			Write '1' to enable interrupt for event OVRFLW
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C-F	RW COMPARE[i] (i=03)			Write '1' to enable interrupt for event COMPARE[i]
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.14.10.9 INTENCLR

Address offset: 0x308

Disable interrupt



Bit numl	ber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Reset 0x	x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID A				Description
A R	W TICK			Write '1' to disable interrupt for event TICK
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
B R	W OVRFLW			Write '1' to disable interrupt for event OVRFLW
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C-F R	W COMPARE[i] (i=03)			Write '1' to disable interrupt for event COMPARE[i]
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.14.10.10 EVTEN

Address offset: 0x340

Enable or disable event routing

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW TICK			Enable or disable event routing for event TICK
		Disabled	0	Disable
		Enabled	1	Disable
В	RW OVRFLW			Enable or disable event routing for event OVRFLW
		Disabled	0	Disable
		Enabled	1	Disable
C-F	RW COMPARE[i] (i=03)			Enable or disable event routing for event COMPARE[i]
		Disabled	0	Disable
		Enabled	1	Disable

6.14.10.11 EVTENSET

Address offset: 0x344 Enable event routing

Bit number	31 30	29 28 27 26 25 24 2	23 22 21 20 19 1	18 17 16	15 14	13 12 1	.1 10	9 8	7	6 5	4	3 2	1 0
ID			F	E D C									ВА
Reset 0x00000000	0 0	0 0 0 0 0 0	0 0 0 0 0	0 0 0	0 0	0 0	0 0	0 0	0	0 0	0	0 0	0 0
ID Acce Field Val			Description										
A RW TICK		,	Write '1' to enal	ble even	t routir	ng for e	vent T	ICK					
Dis	abled 0	1	Read: Disabled										
Ena	abled 1	1	Read: Enabled										
Set	1	I	Enable										
B RW OVRFLW		,	Write '1' to enal	ble even	t routir	ng for e	vent (VRF	LW				
Dis	abled 0	I	Read: Disabled										
Ena	abled 1	I	Read: Enabled										
Set	1	ı	Enable										



Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID	F E D C
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	
C-F RW COMPARE[i] (i=03)	Write '1' to enable event routing for event COMPARE[i]
Disabled	0 Read: Disabled
Enabled	1 Read: Enabled
Set	1 Enable

6.14.10.12 EVTENCLR

Address offset: 0x348

Disable event routing

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW TICK			Write '1' to disable event routing for event TICK
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
		Clear	1	Disable
В	RW OVRFLW			Write '1' to disable event routing for event OVRFLW
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
		Clear	1	Disable
C-F	RW COMPARE[i] (i=03)			Write '1' to disable event routing for event COMPARE[i]
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
		Clear	1	Disable

6.14.10.13 COUNTER

Address offset: 0x504
Current COUNTER value

Α	R COUNTER		Cour	iter	valu	e															
ID			Desc																		
Res	et 0x00000000	0 0 0 0 0 0 0 0	0 0	0	0	0 0	0	0 (0	0	0	0	0 0	0	0	0	0	0	0	0	0 0
ID			A A	Α	Α	А А	Α	A A	A	Α	Α	Α	ΑА	Α	A	Α	Α	Α	Α	Α	A A
Bit	number	31 30 29 28 27 26 25 24	23 2:	2 21	20 2	19 18	17	16 1	5 14	13	12	11 :	10 9	8	7	6	5	4	3	2	1 0

6.14.10.14 PRESCALER

Address offset: 0x508

12 bit prescaler for COUNTER frequency (32768/(PRESCALER+1)). Must be written when RTC is stopped.


Α	RW PRESCALER	Prescaler value
ID		Value Description
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0



6.14.10.15 CC[n] (n=0..3)

Address offset: $0x540 + (n \times 0x4)$

Compare register n



6.14.11 Electrical specification

6.15 SPI — Serial peripheral interface master

The SPI master provides a simple CPU interface which includes a TXD register for sending data and an RXD register for receiving data. This section is added for legacy support for now.

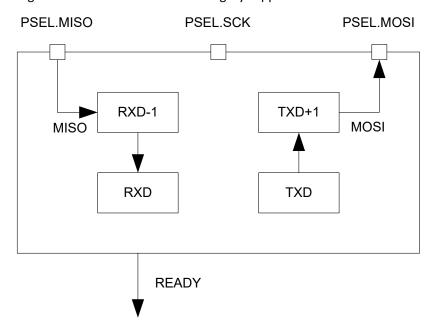


Figure 97: SPI master

RXD-1 and TXD+1 illustrate the double buffered version of RXD and TXD respectively.

6.15.1 Functional description

The TXD and RXD registers are double-buffered to enable some degree of uninterrupted data flow in and out of the SPI master.

The SPI master does not implement support for chip select directly. Therefore, the CPU must use available GPIOs to select the correct slave and control this independently of the SPI master. The SPI master supports SPI modes 0 through 3.



Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Leading)	0 (Active high)
SPI_MODE1	0 (Leading)	1 (Active low)
SPI_MODE2	1 (Trailing)	0 (Active high)
SPI_MODE3	1 (Trailing)	1 (Active low)

Table 73: SPI modes

6.15.1.1 SPI master mode pin configuration

The different signals SCK, MOSI, and MISO associated with the SPI master are mapped to physical pins.

This mapping is according to the configuration specified in the PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers respectively. If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated SPI master signal is not connected to any physical pin. The PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers and their configurations are only used as long as the SPI master is enabled, and retained only as long as the device is in ON mode. PSEL.SCK, PSEL.MOSI, and PSEL.MISO must only be configured when the SPI master is disabled.

To secure correct behavior in the SPI, the pins used by the SPI must be configured in the GPIO peripheral as described in GPIO configuration on page 247 prior to enabling the SPI. The SCK must always be connected to a pin, and that pin's input buffer must always be connected for the SPI to work. This configuration must be retained in the GPIO for the selected I/Os as long as the SPI is enabled.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI master signal	SPI master pin	Direction	Output value
SCK	As specified in PSEL.SCK	Output	Same as CONFIG.CPOL
MOSI	As specified in PSEL.MOSI	Output	0
MISO	As specified in PSEL.MISO	Input	Not applicable

Table 74: GPIO configuration

6.15.1.2 Shared resources

The SPI shares registers and other resources with other peripherals that have the same ID as the SPI. Therefore, the user must disable all peripherals that have the same ID as the SPI before the SPI can be configured and used.

Disabling a peripheral that has the same ID as the SPI will not reset any of the registers that are shared with the SPI. It is therefore important to configure all relevant SPI registers explicitly to secure that it operates correctly.

See the Instantiation table in Instantiation on page 18 for details on peripherals and their IDs.

6.15.1.3 SPI master transaction sequence

An SPI master transaction is started by writing the first byte, which is to be transmitted by the SPI master, to the TXD register.

Since the transmitter is double buffered, the second byte can be written to the TXD register immediately after the first one. The SPI master will then send these bytes in the order they are written to the TXD register.

The SPI master is a synchronous interface, and for every byte that is sent, a different byte will be received at the same time. This is illustrated in SPI master transaction on page 248. Bytes that are received will be moved to the RXD register where the CPU can extract them by reading the register. The RXD register is double buffered in the same way as the TXD register, and a second byte can therefore be received at the



same time as the first byte is being extracted from RXD by the CPU. The SPI master will generate a READY event every time a new byte is moved to the RXD register. The double buffered byte will be moved from RXD-1 to RXD as soon as the first byte is extracted from RXD. The SPI master will stop when there are no more bytes to send in TXD and TXD+1.

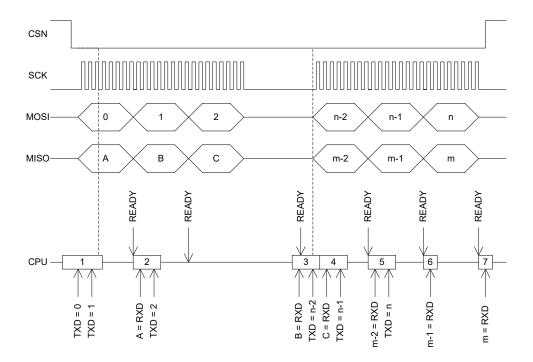


Figure 98: SPI master transaction

The READY event of the third byte transaction is delayed until B is extracted from RXD in occurrence number 3 on the horizontal lifeline. The reason for this is that the third event is generated first when C is moved from RXD-1 to RXD after B is read.

The SPI master will move the incoming byte to the RXD register after a short delay following the SCK clock period of the last bit in the byte. This also means that the READY event will be delayed accordingly, see SPI master transaction on page 249. Therefore, it is important that you always clear the READY event, even if the RXD register and the data that is being received is not used.



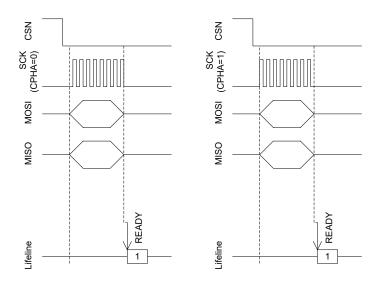


Figure 99: SPI master transaction

6.15.2 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	SPI	SPI0	SPI master 0		Deprecated
0x40004000	SPI	SPI1	SPI master 1		Deprecated

Table 75: Instances

Register	Offset	Description
EVENTS_READY	0x108	TXD byte sent and RXD byte received
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ENABLE	0x500	Enable SPI
PSEL.SCK	0x508	Pin select for SCK
PSEL.MOSI	0x50C	Pin select for MOSI signal
PSEL.MISO	0x510	Pin select for MISO signal
RXD	0x518	RXD register
TXD	0x51C	TXD register
FREQUENCY	0x524	SPI frequency. Accuracy depends on the HFCLK source selected.
CONFIG	0x554	Configuration register

Table 76: Register overview

6.15.2.1 EVENTS_READY

Address offset: 0x108

TXD byte sent and RXD byte received



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_READY			TXD byte sent and RXD byte received
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.15.2.2 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW READY		Write '1' to enable interrupt for event READY
Set	1	Enable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.15.2.3 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW READY			Write '1' to disable interrupt for event READY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.15.2.4 ENABLE

Address offset: 0x500

Enable SPI


Bit r	number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ААА
Rese	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW ENABLE			Enable or disable SPI
		Disabled	0	Disable SPI
		Enabled	1	Enable SPI

6.15.2.5 PSEL.SCK

Address offset: 0x508



Pin select for SCK

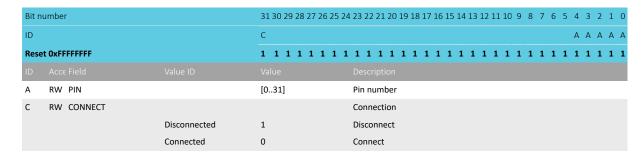

6.15.2.6 PSEL.MOSI

Address offset: 0x50C

Pin select for MOSI signal

Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Reset 0xFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.15.2.7 PSEL.MISO

Address offset: 0x510


Pin select for MISO signal

Bit number			31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Reset 0xFFFFFFF			1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.15.2.8 RXD

Address offset: 0x518

RXD register






6.15.2.9 TXD

Address offset: 0x51C

TXD register



6.15.2.10 FREQUENCY

Address offset: 0x524

SPI frequency. Accuracy depends on the HFCLK source selected.

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A	A A A A A A A A A A A A A A A A A A A
Reset 0x04000000	0 0 0 0 0 1 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW FREQUENCY		SPI master data rate
K125	0x02000000	125 kbps
K250	0x04000000	250 kbps
K500	0x0800000	500 kbps
M1	0x10000000	1 Mbps
M2	0x20000000	2 Mbps
M4	0x4000000	4 Mbps
M8	0x80000000	8 Mbps

6.15.2.11 CONFIG

Address offset: 0x554 Configuration register

Rit r	Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1						
DIC HUITIDEI			31 30 29 28 27 20				
ID				СВА			
Reset 0x00000000			0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$			
Α	RW ORDER			Bit order			
		MsbFirst	0	Most significant bit shifted out first			
		LsbFirst	1	Least significant bit shifted out first			
В	RW CPHA			Serial clock (SCK) phase			
		Leading	0	Sample on leading edge of clock, shift serial data on trailing			
				edge			
		Trailing	1	Sample on trailing edge of clock, shift serial data on leading			
				edge			
С	RW CPOL			Serial clock (SCK) polarity			
		ActiveHigh	0	Active high			
		ActiveLow	1	Active low			



6.15.3 Electrical specification

6.15.3.1 SPI master interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPI}	Bit rates for SPI ²⁰			8 ²¹	Mbps
t _{SPI,START}	Time from writing TXD register to transmission started		1		μs

6.15.3.2 Serial Peripheral Interface (SPI) Master timing specifications

Symbol	Description	Mi	n.	Тур.	Max.	Units
t _{SPI,CSCK}	SCK period	12	5			ns
$t_{SPI,RSCK,LD}$	SCK rise time, standard drive ²²				t _{RF,25pF}	
$t_{SPI,RSCK,HD}$	SCK rise time, high drive ²²				t _{HRF,25pF}	
$t_{\text{SPI,FSCK,LD}}$	SCK fall time, standard drive ²²				t _{RF,25pF}	
$t_{\text{SPI,FSCK,HD}}$	SCK fall time, high drive ²²				t _{HRF,25pF}	
t _{SPI,WHSCK}	SCK high time ²²	(t _C	SCK/2)		
		- t	RSCK			
$t_{\text{SPI,WLSCK}}$	SCK low time ²²	(t _C	sck/2)		
		- t	FSCK			
t _{SPI,SUMI}	MISO to CLK edge setup time	19				ns
t _{SPI,HMI}	CLK edge to MISO hold time	18				ns
t _{SPI,VMO}	CLK edge to MOSI valid				59	ns
t _{SPI,HMO}	MOSI hold time after CLK edge	20				ns

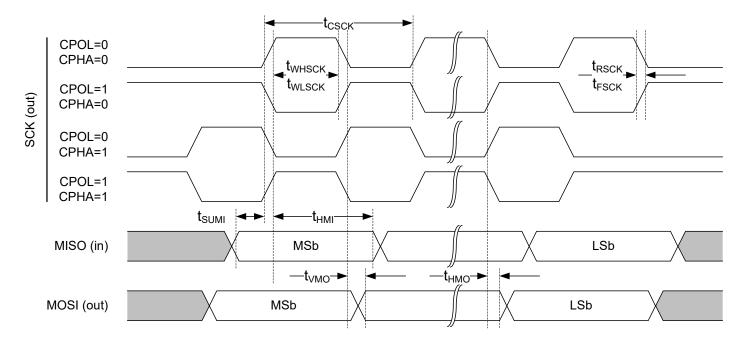


Figure 100: SPI master timing diagram



High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.

The actual maximum data rate depends on the slave's CLK to MISO and MOSI setup and hold timings.

²² At 25 pF load, including GPIO capacitance, see GPIO electrical specification.

6.16 SPIM — Serial peripheral interface master with EasyDMA

The SPI master can communicate with multiple SPI slaves using individual chip select signals for each slave.

Listed here are the main features for the SPIM:

- EasyDMA direct transfer to/from RAM
- SPI mode 0-3
- Individual selection of I/O pins

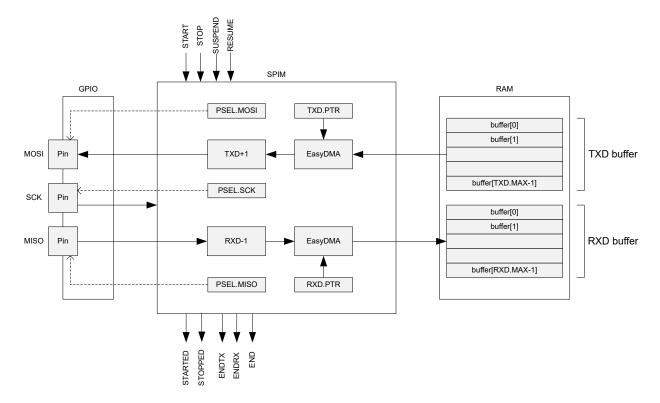


Figure 101: SPIM — SPI master with EasyDMA

6.16.1 SPI master transaction sequence

An SPI master transaction is started by triggering the START task. When started, a number of bytes will be transmitted/received on MOSI/MISO.

The following figure illustrates an SPI master transaction.



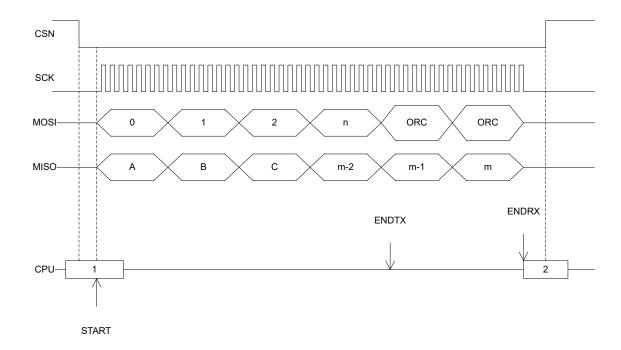


Figure 102: SPI master transaction

The ENDTX is generated when all bytes in buffer TXD.PTR on page 264 are transmitted. The number of bytes in the transmit buffer is specified in register TXD.MAXCNT on page 264. The ENDRX event will be generated when buffer RXD.PTR on page 263 is full, meaning the number of bytes specified in register RXD.MAXCNT on page 263 have been received. The transaction stops automatically after all bytes have been transmitted/received. When the maximum number of bytes in the receive buffer is larger than the number of bytes in the transmit buffer, the contents of register ORC on page 265 will be transmitted after the last byte in the transmit buffer has been transmitted.

The END event will be generated after both the ENDRX and ENDTX events have been generated.

The SPI master can be stopped in the middle of a transaction by triggering the STOP task. When triggering the STOP task, SPIM will complete the transmission/reception of the current byte before stopping. A STOPPED event is generated when the SPI master has stopped.

If the ENDTX event has not already been generated when the SPI master has come to a stop, the ENDTX event will be generated even if all bytes in the buffer TXD.PTR on page 264 have not been transmitted.

If the ENDRX event has not already been generated when the SPI master has come to a stop, the ENDRX event will be generated even if the buffer RXD.PTR on page 263 is not full.

A transaction can be suspended and resumed using the SUSPEND and RESUME tasks. When the SUSPEND task is triggered, the SPI master will complete transmitting and receiving the current ongoing byte before it is suspended.

6.16.2 Pin configuration

The SCK, MOSI, and MISO signals associated with SPIM are mapped to physical pins according to the configuration specified in the PSEL.n registers.

The contents of registers PSEL.SCK on page 261, PSEL.MOSI on page 262, and PSEL.MISO on page 262 are only used when SPIM is enabled, and retained only as long as the device is in System ON mode. The PSEL.n registers can only be configured when SPIM is disabled. Enabling/disabling is done using register ENABLE on page 261.



To ensure correct behavior, the pins used by SPIM must be configured in the GPIO peripheral as described in GPIO configuration on page 256 before SPIM is enabled.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI master signal	SPI master pin	Direction	Output value	Comments
SCK	As specified in PSEL.SCK	Output	Same as CONFIG.CPOL	
	on page 261			
MOSI	As specified in PSEL.MOS	l Output	0	
	on page 262			
MISO	As specified in PSEL.MISC	Input	Not applicable	
	on page 262			

Table 77: GPIO configuration

SPIM does not support automatic control of CSN. The available GPIO pins need to be used to control CSN directly.

SPIM supports SPI modes 0 through 3. The clock polarity (CPOL) and the clock phase (CPHA) are configured in register CONFIG on page 265.

Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Active High)	0 (Leading)
SPI_MODE1	0 (Active High)	1 (Trailing)
SPI_MODE2	1 (Active Low)	0 (Leading)
SPI_MODE3	1 (Active Low)	1 (Trailing)

Table 78: SPI modes

6.16.3 EasyDMA

SPIM implements EasyDMA for accessing RAM without CPU involvement.

The SPIM peripheral implements the following EasyDMA channels.

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 79: SPIM EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 37.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next transmission immediately after having received the STARTED event.

The SPI master will automatically stop transmitting after TXD.MAXCNT bytes have been transmitted and RXD.MAXCNT bytes have been received. If RXD.MAXCNT is larger than TXD.MAXCNT, the remaining transmitted bytes will contain the value defined in the ORC register. If TXD.MAXCNT is larger than RXD.MAXCNT, the superfluous received bytes will be discarded.

The ENDRX/ENDTX event indicate that EasyDMA has finished accessing respectively the RX/TX buffer in RAM. The END event gets generated when both RX and TX are finished accessing the buffers in RAM.



If several AHB bus masters try to access the same AHB slave at the same time, AHB bus congestion might occur. Data loss will occur in this event.

6.16.4 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task may not be always needed (the peripheral might already be stopped), but if it is sent, software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.16.5 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40003000	SPIM	SPIM0	SPI master 0	
0x40004000	SPIM	SPIM1	SPI master 1	

Table 80: Instances

Register	Offset	Description
TASKS_START	0x010	Start SPI transaction
TASKS_STOP	0x014	Stop SPI transaction
TASKS_SUSPEND	0x01C	Suspend SPI transaction
TASKS_RESUME	0x020	Resume SPI transaction
EVENTS_STOPPED	0x104	SPI transaction has stopped
EVENTS_ENDRX	0x110	End of RXD buffer reached
EVENTS_END	0x118	End of RXD buffer and TXD buffer reached
EVENTS_ENDTX	0x120	End of TXD buffer reached
EVENTS_STARTED	0x14C	Transaction started
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ENABLE	0x500	Enable SPIM
PSEL.SCK	0x508	Pin select for SCK
PSEL.MOSI	0x50C	Pin select for MOSI signal
PSEL.MISO	0x510	Pin select for MISO signal
FREQUENCY	0x524	SPI frequency. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
TXD.LIST	0x550	EasyDMA list type
CONFIG	0x554	Configuration register
ORC	0x5C0	Byte transmitted after TXD.MAXCNT bytes have been transmitted in the case when
		RXD.MAXCNT is greater than TXD.MAXCNT


Table 81: Register overview

6.16.5.1 TASKS_START

Address offset: 0x010



Start SPI transaction



6.16.5.2 TASKS_STOP

Address offset: 0x014 Stop SPI transaction

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_STOP			Stop SPI transaction
		Trigger	1	Trigger task

6.16.5.3 TASKS_SUSPEND

Address offset: 0x01C Suspend SPI transaction

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_SUSPEND			Suspend SPI transaction
		Trigger	1	Trigger task

6.16.5.4 TASKS_RESUME

Address offset: 0x020 Resume SPI transaction

Bit n	um	ber			31 30 29 28 27 26	25 24	1 23 2	2 2	1 20 1	19 1	.8 1	7 1	6 15	5 14	1 13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID																											Α
Rese	et O	x00	000000		0 0 0 0 0 0	0 0	0	0 0	0 0	0	0 () (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																											
Α	٧	٧	TASKS_RESUME				Res	ume	e SPI t	tran	sac	tior	1														
				Trigger	1		Trigger task																				

6.16.5.5 EVENTS_STOPPED

Address offset: 0x104

SPI transaction has stopped



Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_STOPPED			SPI transaction has stopped
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.16.5.6 EVENTS_ENDRX

Address offset: 0x110

End of RXD buffer reached

Bit n	umber		31	30	29	28 2	27 2	6 25	24	23	22	21	20	19 1	.8 1	7 1	5 15	14	13	12 1	.1 1	0 9	8	7	6	5	4	3	2 :	1 0
ID																														Α
Rese	t 0x00000000		0	0	0	0	0 0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0 (0 0
ID																														
Α	RW EVENTS_ENDRX									En	ıd o	f RX	D b	ouffe	er re	eac	ned													
		NotGenerated	0							Ev	ent	not	ge	ner	ated	t														
		Generated	1							Ev	ent	gen	era	ated																

6.16.5.7 EVENTS_END

Address offset: 0x118

End of RXD buffer and TXD buffer reached

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_END			End of RXD buffer and TXD buffer reached
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.16.5.8 EVENTS_ENDTX

Address offset: 0x120

End of TXD buffer reached

Bit n	umber		31	30	29	28	27	26	25	24	23	22	2 2 1	. 20	19	18	3 17	16	15	14	13	12	11	10	9	8 7	7 (6 5	5 4	1 3	2	1	0
ID																																	Α
Rese	t 0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0 (0	0	0	0	0
ID																																	
Α	RW EVENTS_ENDTX										En	ıd c	of T	XD	bu	ffe	re	ach	ed														
		NotGenerated	0								Ev	ent	t no	ot g	en	era	ted																
		Generated	1								Ev	ent	t ge	ne	rat	ed																	

6.16.5.9 EVENTS_STARTED

Address offset: 0x14C
Transaction started





Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_STARTED			Transaction started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.16.5.10 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	umber		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW END_START			Shortcut between event END and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.16.5.11 INTENSET

Address offset: 0x304

Enable interrupt

number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
			E D C B A
et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
			Description
RW STOPPED			Write '1' to enable interrupt for event STOPPED
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
RW ENDRX			Write '1' to enable interrupt for event ENDRX
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
RW END			Write '1' to enable interrupt for event END
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
RW ENDTX			Write '1' to enable interrupt for event ENDTX
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
RW STARTED			Write '1' to enable interrupt for event STARTED
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
	RW ENDRX RW ENDRX	RW ENDTX RW ENDTX Set Disabled Enabled RW STARTED Set Disabled	RW ENDRX Set Disabled Disable



6.16.5.12 INTENCLR

Address offset: 0x308


Disable interrupt

Bit number			31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				E D C B A
Reset 0x000	000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW	STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
B RW	ENDRX			Write '1' to disable interrupt for event ENDRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C RW	END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D RW	ENDTX			Write '1' to disable interrupt for event ENDTX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E RW :	STARTED			Write '1' to disable interrupt for event STARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.16.5.13 ENABLE

Address offset: 0x500

Enable SPIM

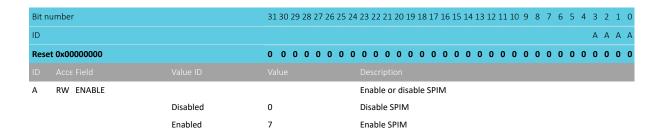

6.16.5.14 PSEL.SCK

Address offset: 0x508

Pin select for SCK



Bit nu	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.16.5.15 PSEL.MOSI

Address offset: 0x50C


Pin select for MOSI signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.16.5.16 PSEL.MISO

Address offset: 0x510

Pin select for MISO signal

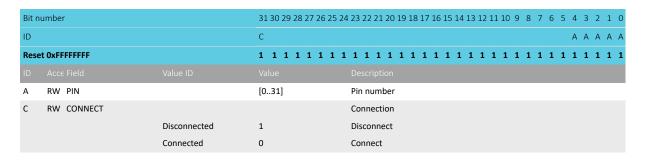

6.16.5.17 FREQUENCY

Address offset: 0x524

SPI frequency. Accuracy depends on the HFCLK source selected.



Bit n	umber		31	L 30	29 :	28 2	7 26	5 25	5 24	23	3 22	21	20 :	19 1	18 1	17 :	16 :	15 :	14	13 1	L2 1	111	0 9	8	7	6	5	4	3	2	1 0
ID			Α	Α	Α	A	4 А	A	. A	Α	Α	Α	Α	A	A	A	A	A	A	Α.	A .	Α /	λ Α	Α	Α	Α	Α	Α	Α	Α	A A
Rese	et 0x04000000		0	0	0	0 (0 1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0 0
ID																															
Α	RW FREQUENCY									SP	l m	aste	er d	ata	rat	e															
		K125	0x	(020	0000	000				12	25 kl	bps																			
		K250	0x	(040	0000	000				25	60 kl	bps																			
		K500	0x	(080	0000	000				50	00 kl	bps																			
		M1	0x	(100	0000	000				1	Mbp	os																			
		M2	0x	(200	0000	000				2	Mbp	os																			
		M4	0x	400	0000	000				4	Mbp	os																			
		M8	0x	(800	0000	000				8	Mbp	os																			

6.16.5.18 RXD.PTR

Address offset: 0x534

Data pointer

Α	RW PTR		Data pointer
ID			
Res	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A	. A A A A A A A A A A A A A A A A A A A
Bit	number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

See the memory chapter for details about which memories are available for EasyDMA.

6.16.5.19 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer

Bit n	umber	31 30	29 2	8 27	26 2	5 24	23 2	22 2	1 20	19	18 1	7 16	5 15	14	13 1	2 1	1 10	9	8	7	6	5 4	1 3	2	1 0
ID														Α	A A	Δ Δ	A	Α	Α	Α	Α	Α /	A A	Α	A A
Rese	t 0x00000000	0 0	0 (0 0	0	0 0	0	0 (0 0	0	0 (0 0	0	0	0 (0	0	0	0	0	0	0 0	0	0	0 0
ID																									
Α	RW MAXCNT	 [00x	7fff]				Max	xim	um r	num	ber	of b	ytes	in r	ece	ive	buff	er							

6.16.5.20 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction


Bit n	umber		313	0 29	28 2	7 26	5 25	24 2	23 2:	2 21	20 1	.9 18	3 17	16 1	.5 1	113	12	11 10	9	8	7	6	5 4	3	2	1 0
ID															Δ	Α	Α	A A	Α	Α	Α	Α.	ДД	Α	Α	А А
Rese	et 0x000000	00	0 (0	0	0 0	0	0	0 0	0	0	0 0	0	0 (0 0	0	0	0 0	0	0	0	0	0 0	0	0	0 0
ID																										
Α	R AMO	DUNT	[00]	x7ff	f]			1	Num	ber	of b	ytes	tran	sfer	red	in th	ne la	st tr	ans	actio	on					

6.16.5.21 RXD.LIST

Address offset: 0x540




EasyDMA list type

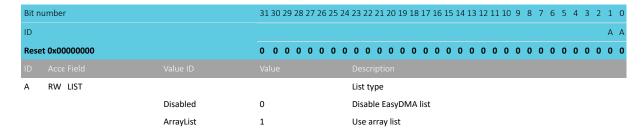

6.16.5.22 TXD.PTR

Address offset: 0x544

Data pointer



See the memory chapter for details about which memories are available for EasyDMA.

6.16.5.23 TXD.MAXCNT

Address offset: 0x548

Number of bytes in transmit buffer

Α	RW MAXCNT	[00x7fff] Maximu	um number of bytes in transmit buff	er
ID				
Res	et 0x00000000	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0	0000000000
ID			A A A A A	A A A A A A A A
Bit r	umber	31 30 29 28 27 26 25 24 23 22 23	1 20 19 18 17 16 15 14 13 12 11 10	8 7 6 5 4 3 2 1 0

6.16.5.24 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction

A R AMOUNT	[00x7fff] Number of bytes transferred in the last tr	ansaction
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	00000000000
ID	A A A A	A A A A A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 1	0 9 8 7 6 5 4 3 2 1 0

6.16.5.25 TXD.LIST

Address offset: 0x550 EasyDMA list type



Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x00000000		0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID Acce Field			
A RW LIST			List type
	Disabled	0	Disable EasyDMA list
	ArrayList	1	Use array list

6.16.5.26 CONFIG


Address offset: 0x554 Configuration register

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW ORDER			Bit order
		MsbFirst	0	Most significant bit shifted out first
		LsbFirst	1	Least significant bit shifted out first
В	RW CPHA			Serial clock (SCK) phase
		Leading	0	Sample on leading edge of clock, shift serial data on trailing
				edge
		Trailing	1	Sample on trailing edge of clock, shift serial data on leading
				edge
С	RW CPOL			Serial clock (SCK) polarity
		ActiveHigh	0	Active high
		ActiveLow	1	Active low

6.16.5.27 ORC

Address offset: 0x5C0

Byte transmitted after TXD.MAXCNT bytes have been transmitted in the case when RXD.MAXCNT is greater than TXD.MAXCNT

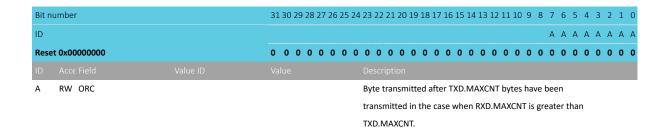

6.16.6 Electrical specification

6.16.6.1 Timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPIM}	Bit rates for SPIM ²³			8	Mbps

High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.



Symbol	Description	1	Min.	Тур.	Max.	Units
t _{SPIM,START}	Time from START task to transmission started			1		μs
t _{SPIM,CSCK}	SCK period	1	125			ns
t _{SPIM,RSCK,LD}	SCK rise time, standard drive ²⁴				t _{RF,25pF}	
t _{SPIM,RSCK,HD}	SCK rise time, high drive ²⁴				t _{HRF,25pF}	
t _{SPIM,FSCK,LD}	SCK fall time, standard drive ²⁴				t _{RF,25pF}	
t _{SPIM,FSCK,HD}	SCK fall time, high drive ²⁴				t _{HRF,25pF}	
t _{SPIM,WHSCK}	SCK high time ²⁴	((t _{CSCK} /2)			
		-	- t _{RSCK}			
t _{SPIM,WLSCK}	SCK low time ²⁴	((t _{CSCK} /2)			
		-	- t _{FSCK}			
t _{SPIM,SUMI}	MISO to CLK edge setup time	1	19			ns
t _{SPIM,HMI}	CLK edge to MISO hold time	1	18			ns
t _{SPIM,VMO}	CLK edge to MOSI valid, SCK frequency ≤ 8 MHz				59	ns
t _{SPIM,HMO}	MOSI hold time after CLK edge	2	20			ns

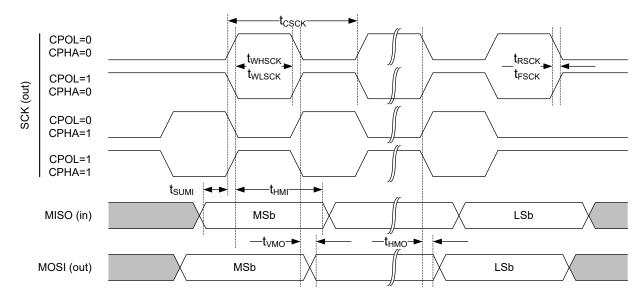


Figure 103: SPIM timing diagram

6.17 SPIS — Serial peripheral interface slave with EasyDMA

SPI slave (SPIS) is implemented with EasyDMA support for ultra-low power serial communication from an external SPI master. EasyDMA, in conjunction with hardware-based semaphore mechanisms, removes all real-time requirements associated with controlling the SPI slave from a low priority CPU execution context.

NORDIC

²⁴ At 25 pF load, including GPIO pin capacitance, see GPIO electrical specification.

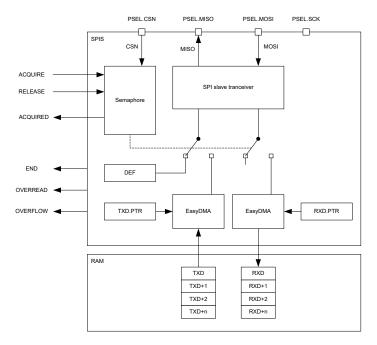


Figure 104: SPI slave

The SPIS supports SPI modes 0 through 3. The CONFIG register allows setting CPOL and CPHA appropriately.

Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Active High)	0 (Trailing Edge)
SPI_MODE1	0 (Active High)	1 (Leading Edge)
SPI_MODE2	1 (Active Low)	0 (Trailing Edge)
SPI_MODE3	1 (Active Low)	1 (Leading Edge)

Table 82: SPI modes

6.17.1 Shared resources

The SPI slave shares registers and other resources with other peripherals that have the same ID as the SPI slave. Therefore, you must disable all peripherals that have the same ID as the SPI slave before the SPI slave can be configured and used.

Disabling a peripheral that has the same ID as the SPI slave will not reset any of the registers that are shared with the SPI slave. It is important to configure all relevant SPI slave registers explicitly to secure that it operates correctly.

The Instantiation table in Instantiation on page 18 shows which peripherals have the same ID as the SPI slave.

6.17.2 EasyDMA

The SPIS implements EasyDMA for accessing RAM without CPU involvement.

The SPIS peripheral implements the following EasyDMA channels.



Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 83: SPIS EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 37.

If RXD.MAXCNT is larger than TXD.MAXCNT, the remaining transmitted bytes will contain the value defined in the ORC register.

The END event indicates that EasyDMA has finished accessing the buffer in RAM.

6.17.3 SPI slave operation

SPI slave uses two memory pointers, RXD.PTR and TXD.PTR, that point to the RXD buffer (receive buffer) and TXD buffer (transmit buffer) respectively. Since these buffers are located in RAM, which can be accessed by both the SPI slave and the CPU, a hardware based semaphore mechanism is implemented to enable safe sharing.

See SPI transaction when shortcut between END and ACQUIRE is enabled on page 269.

Before the CPU can safely update the RXD.PTR and TXD.PTR pointers, it must first acquire the SPI semaphore. The CPU can acquire the semaphore by triggering the ACQUIRE task and then receiving the ACQUIRED event. When the CPU has updated the RXD.PTR and TXD.PTR pointers the CPU must release the semaphore before the SPI slave will be able to acquire it. The CPU releases the semaphore by triggering the RELEASE task. This is illustrated in SPI transaction when shortcut between END and ACQUIRE is enabled on page 269. Triggering the RELEASE task when the semaphore is not granted to the CPU will have no effect.

The semaphore mechanism does not, at any time, prevent the CPU from performing read or write access to the RXD.PTR register, the TXD.PTR registers, or the RAM that these pointers are pointing to. The semaphore is only telling when these can be updated by the CPU so that safe sharing is achieved.

The semaphore is by default assigned to the CPU after the SPI slave is enabled. No ACQUIRED event will be generated for this initial semaphore handover. An ACQUIRED event will be generated immediately if the ACQUIRE task is triggered while the semaphore is assigned to the CPU.

The SPI slave will try to acquire the semaphore when CSN goes low. If the SPI slave does not manage to acquire the semaphore at this point, the transaction will be ignored. This means that all incoming data on MOSI will be discarded, and the DEF (default) character will be clocked out on the MISO line throughout the whole transaction. This will also be the case even if the semaphore is released by the CPU during the transaction. In case of a race condition where the CPU and the SPI slave try to acquire the semaphore at the same time, as illustrated in lifeline item 2 in SPI transaction when shortcut between END and ACQUIRE is enabled on page 269, the semaphore will be granted to the CPU.

If the SPI slave acquires the semaphore, the transaction will be granted. The incoming data on MOSI will be stored in the RXD buffer and the data in the TXD buffer will be clocked out on MISO.

When a granted transaction is completed and CSN goes high, the SPI slave will automatically release the semaphore and generate the END event.

As long as the semaphore is available, the SPI slave can be granted multiple transactions one after the other. If the CPU is not able to reconfigure the TXD.PTR and RXD.PTR between granted transactions, the same TX data will be clocked out and the RX buffers will be overwritten. To prevent this from happening, the END_ACQUIRE shortcut can be used. With this shortcut enabled, the semaphore will be handed over to the CPU automatically after the granted transaction has completed. This enables the CPU to update the TXPTR and RXPTR between every granted transaction.



If the CPU tries to acquire the semaphore while it is assigned to the SPI slave, an immediate handover will not be granted. However, the semaphore will be handed over to the CPU as soon as the SPI slave has released the semaphore after the granted transaction is completed. If the END_ACQUIRE shortcut is enabled and the CPU has triggered the ACQUIRE task during a granted transaction, only one ACQUIRE request will be served following the END event.

The MAXRX register specifies the maximum number of bytes the SPI slave can receive in one granted transaction. If the SPI slave receives more than MAXRX number of bytes, an OVERFLOW will be indicated in the STATUS register and the incoming bytes will be discarded.

The MAXTX parameter specifies the maximum number of bytes the SPI slave can transmit in one granted transaction. If the SPI slave is forced to transmit more than MAXTX number of bytes, an OVERREAD will be indicated in the STATUS register and the ORC character will be clocked out.

The RXD.AMOUNT and TXD.AMOUNT registers are updated when a granted transaction is completed. The TXD.AMOUNT register indicates how many bytes were read from the TX buffer in the last transaction. This does not include the ORC (over-read) characters. Similarly, the RXD.AMOUNT register indicates how many bytes were written into the RX buffer in the last transaction.

The ENDRX event is generated when the RX buffer has been filled.

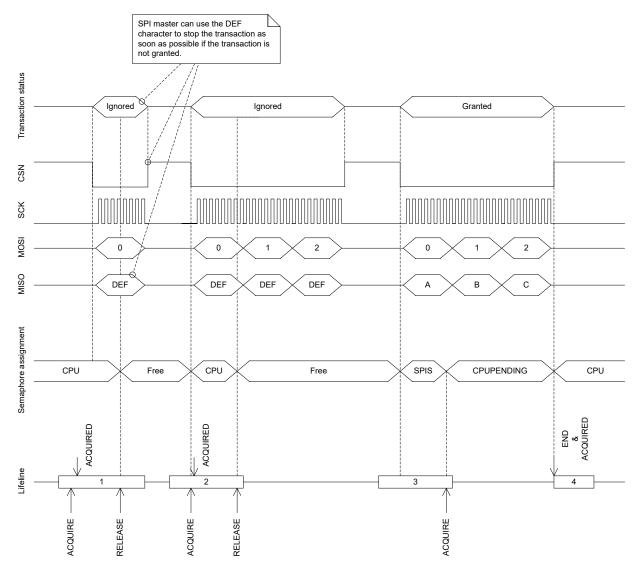


Figure 105: SPI transaction when shortcut between END and ACQUIRE is enabled



6.17.4 Pin configuration

The CSN, SCK, MOSI, and MISO signals associated with the SPI slave are mapped to physical pins according to the configuration specified in the PSEL.CSN, PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers respectively. If the CONNECT field of any of these registers is set to Disconnected, the associated SPI slave signal will not be connected to any physical pins.

The PSEL.CSN, PSEL.MOSI, and PSEL.MISO registers and their configurations are only used as long as the SPI slave is enabled, and retained only as long as the device is in System ON mode. See POWER — Power supply on page 52 chapter for more information about power modes. When the peripheral is disabled, the pins will behave as regular GPIOs and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.CSN, PSEL.SCK, PSEL.MOSI, and PSEL.MISO must only be configured when the SPI slave is disabled.

To secure correct behavior in the SPI slave, the pins used by the SPI slave must be configured in the GPIO peripheral as described in GPIO configuration before enabling peripheral on page 270 before enabling the SPI slave. This is to secure that the pins used by the SPI slave are driven correctly if the SPI slave itself is temporarily disabled, or if the device temporarily enters System OFF. This configuration must be retained in the GPIO for the selected I/Os as long as the SPI slave is to be recognized by an external SPI master.

The MISO line is set in high impedance as long as the SPI slave is not selected with CSN.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI signal	SPI pin	Direction	Output value Comment
CSN	As specified in PSEL.CSN	Input	Not applicable
SCK	As specified in PSEL.SCK	Input	Not applicable
MOSI	As specified in PSEL.MOSI	Input	Not applicable
MISO	As specified in PSEL.MISO	Input	Not applicable Emulates that the SPI slave is not selected.

Table 84: GPIO configuration before enabling peripheral

6.17.5 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	SPIS	SPIS0	SPI slave 0		
0x40004000	SPIS	SPIS1	SPI slave 1		

Table 85: Instances

Register	Offset	Description
TASKS_ACQUIRE	0x024	Acquire SPI semaphore
TASKS_RELEASE	0x028	Release SPI semaphore, enabling the SPI slave to acquire it
EVENTS_END	0x104	Granted transaction completed
EVENTS_ENDRX	0x110	End of RXD buffer reached
EVENTS_ACQUIRED	0x128	Semaphore acquired
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
SEMSTAT	0x400	Semaphore status register
STATUS	0x440	Status from last transaction
ENABLE	0x500	Enable SPI slave
PSEL.SCK	0x508	Pin select for SCK
PSEL.MISO	0x50C	Pin select for MISO signal




Register	Offset	Description	
PSEL.MOSI	0x510	Pin select for MOSI signal	
PSEL.CSN	0x514	Pin select for CSN signal	
PSELSCK	0x508	Pin select for SCK	Deprecated
PSELMISO	0x50C	Pin select for MISO	Deprecated
PSELMOSI	0x510	Pin select for MOSI	Deprecated
PSELCSN	0x514	Pin select for CSN	Deprecated
RXDPTR	0x534	RXD data pointer	Deprecated
MAXRX	0x538	Maximum number of bytes in receive buffer	Deprecated
AMOUNTRX	0x53C	Number of bytes received in last granted transaction	Deprecated
RXD.PTR	0x534	RXD data pointer	
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer	
RXD.AMOUNT	0x53C	Number of bytes received in last granted transaction	
RXD.LIST	0x540	EasyDMA list type	
TXDPTR	0x544	TXD data pointer	Deprecated
MAXTX	0x548	Maximum number of bytes in transmit buffer	Deprecated
AMOUNTTX	0x54C	Number of bytes transmitted in last granted transaction	Deprecated
TXD.PTR	0x544	TXD data pointer	
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer	
TXD.AMOUNT	0x54C	Number of bytes transmitted in last granted transaction	
TXD.LIST	0x550	EasyDMA list type	
CONFIG	0x554	Configuration register	
DEF	0x55C	Default character. Character clocked out in case of an ignored transaction.	
ORC	0x5C0	Over-read character	

Table 86: Register overview

6.17.5.1 TASKS_ACQUIRE


Address offset: 0x024 Acquire SPI semaphore

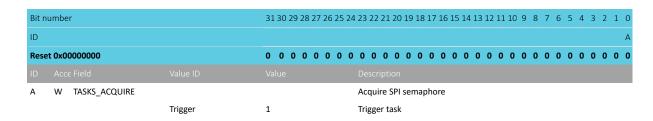

6.17.5.2 TASKS_RELEASE

Address offset: 0x028

Release SPI semaphore, enabling the SPI slave to acquire it





6.17.5.3 EVENTS_END

Address offset: 0x104

Granted transaction completed

Bit n	umber		31	30	29	28 2	27 2	26 2	5 2	4 23	3 2:	2 2:	1 20	19	18	17	16	15	14	13	12 1	.1 1	.0 9	8	7	6	5	4	3	2	1 0
ID																															Α
Rese	et 0x00000000		0	0	0	0	0	0 0) (0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 0
ID																															
Α	RW EVENTS_END									G	ran	ntec	d tra	ansa	ctio	on c	on	nple	etec	t											
		NotGenerated	0							E۱	ven	nt n	ot g	gene	erat	ed															
		Generated	1							E۱	ven	nt ge	ene	rate	ed																

6.17.5.4 EVENTS_ENDRX

Address offset: 0x110

End of RXD buffer reached

Bit n	umber		31 30	29 2	28 27	7 26	25 2	24 2	23 2	2 21	1 20	19 1	.8 17	7 16	15	14 1	.3 12	11	10 9	8	7	6	5	4	3 2	2 1	0
ID																											Α
Rese	t 0x00000000		0 0	0	0 0	0	0	0 (0 0	0	0	0	0 0	0	0	0	0 0	0	0 (0	0	0	0	0	0 (0	0
ID																											
Α	RW EVENTS_ENDRX							E	End	of R	RXD	buff	er re	ach	ed												
		NotGenerated	0					E	er	nt no	ot ge	ener	ated														
		Generated	1					E	er	nt ge	ener	ated															

6.17.5.5 EVENTS_ACQUIRED

Address offset: 0x128 Semaphore acquired


Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_ACQUIRED			Semaphore acquired
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.17.5.6 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID Acce Field			Description
A RW END_ACQUIRE			Shortcut between event END and task ACQUIRE
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut





6.17.5.7 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				C B A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW END			Write '1' to enable interrupt for event END
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDRX			Write '1' to enable interrupt for event ENDRX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACQUIRED			Write '1' to enable interrupt for event ACQUIRED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.17.5.8 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				C B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDRX			Write '1' to disable interrupt for event ENDRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACQUIRED			Write '1' to disable interrupt for event ACQUIRED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.17.5.9 SEMSTAT

Address offset: 0x400

Semaphore status register



Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x00000001		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R SEMSTAT			Semaphore status
	Free	0	Semaphore is free
	CPU	1	Semaphore is assigned to CPU
	SPIS	2	Semaphore is assigned to SPI slave
	CPUPending	3	Semaphore is assigned to SPI but a handover to the CPU is
			pending

6.17.5.10 STATUS

Address offset: 0x440

Status from last transaction

Individual bits are cleared by writing a $\ensuremath{\mathbb{1}}$ to the bits that shall be cleared

Bit number		31 30	29	28 2	7 2	6 25	24	23	22	21	. 20	19	18	17	16 1	.5 1	4 13	12	11 :	10 9	9 8	3 7	6	5	4	3 2	1	0
ID																											В	Α
Reset 0x00000000		0 0	0	0 (0 (0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0 (0	0	0	0	0	0 0	0	0
ID Acce Field																												
A RW OVERREAD								TX	bu	ıffe	r ov	ver-	rea	d d	etec	ted	, an	d pr	eve	nte	t							
	NotPresent	0						Re	ad:	: er	ror	no	pr	ese	nt													
	Present	1						Re	ad:	: er	ror	pre	ser	nt														
	Clear	1						W	rite	e: cl	ear	eri	or	on v	vrit	ing	'1'											
B RW OVERFLOW								RX	(bu	ıffe	r o	verl	lov	v de	tec	ed,	and	pre	ever	ited								
	NotPresent	0						Re	ad:	: er	ror	no	pr	ese	nt													
	Present	1						Re	ad:	: er	ror	pre	ser	nt														
	Clear	1						W	rite	: cl	ear	eri	or	on v	vrit	ing	'1'											

6.17.5.11 ENABLE

Address offset: 0x500

Enable SPI slave

Bit n	umber		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				АААА
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW ENABLE			Enable or disable SPI slave
		Disabled	0	Disable SPI slave
		Enabled	2	Enable SPI slave

6.17.5.12 PSEL.SCK

Address offset: 0x508

Pin select for SCK



Bit nu	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.13 PSEL.MISO

Address offset: 0x50C

Pin select for MISO signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.14 PSEL.MOSI

Address offset: 0x510

Pin select for MOSI signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t 0xFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α				
^	RW PIN		[031]	Pin number
С	RW PIN RW CONNECT		[031]	Pin number Connection
С		Disconnected	[031]	

6.17.5.15 PSEL.CSN

Address offset: 0x514

Pin select for CSN signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect





6.17.5.16 PSELSCK (Deprecated)

Address offset: 0x508

Pin select for SCK

		Disconnected	0xFFFFFFF	Disconnect
Α	RW PSELSCK		[031]	Pin number configuration for SPI SCK signal
ID				Description
Rese	t OxFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.17 PSELMISO (Deprecated)

Address offset: 0x50C Pin select for MISO

		Disconnected	OxFFFFFFF	Disconnect
Α	RW PSELMISO		[031]	Pin number configuration for SPI MISO signal
ID				Description
Rese	et OxFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			A A A A A A	. A A A A A A A A A A A A A A A A A A A
Bit r	umber		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.18 PSELMOSI (Deprecated)

Address offset: 0x510
Pin select for MOSI

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A	
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PSELMOSI		[031]	Pin number configuration for SPI MOSI signal
		Disconnected	0xFFFFFFF	Disconnect

6.17.5.19 PSELCSN (Deprecated)

Address offset: 0x514 Pin select for CSN


А	RW PSELCSN	Disconnected	[031] 0xFFFFFFF	Pin number configuration for SPI CSN signal Disconnect
	DUL DEFLECTI		[0.24]	Di la Cari Capiconi i la
ID				Description
Rese	t OxFFFFFFF		1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			AAAAA	
Bit n	umber		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.20 RXDPTR (Deprecated)

Address offset: 0x534



RXD data pointer



See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.21 MAXRX (Deprecated)

Address offset: 0x538

Maximum number of bytes in receive buffer

A	RW MAXRX	[00x7fff]	Maximum number of bytes in receive buffer
ID			
Res	et 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.22 AMOUNTRX (Deprecated)

Address offset: 0x53C

Number of bytes received in last granted transaction

A R AMOUNTRX	[00x7fff]	Number of bytes received in the last granted transaction
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25	$24\ 23\ 22\ 21\ 20\ 19\ 18\ 17\ 16\ 15\ 14\ 13\ 12\ 11\ 10\ 9\ 8\ 7\ 6\ 5\ 4\ 3\ 2\ 1\ 0$

6.17.5.23 RXD.PTR

Address offset: 0x534

RXD data pointer

ID			Description
Rese	t 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

A RW PTR RXD data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.24 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer

NORDIC

Α	RW MAXCNT	[00x7fff]	Maximum	numb	er of	byte	s in	rece	ive b	uffe	r							
ID																		
Rese	t 0x00000000	0 0 0 0 0 0 0	0000	0 0	0 0	0 0	0	0	0 0	0	0	0 (0	0	0	0	0 0	0
ID							Α	Α .	A A	Α	Α	A A	\ A	A	Α	Α .	4 A	Α
Bit r	umber	31 30 29 28 27 26 25 2	4 23 22 21 2	0 19 1	8 17	16 15	5 14	13 1	L2 11	10	9	8 7	' 6	5	4	3	2 1	0

6.17.5.25 RXD.AMOUNT

Address offset: 0x53C

Number of bytes received in last granted transaction

Δ	R AMOUNT	[00x7fff]	Number of bytes received in the last granted transaction
ID			
Rese	et 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.26 RXD.LIST

Address offset: 0x540 EasyDMA list type

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.17.5.27 TXDPTR (Deprecated)

Address offset: 0x544

TXD data pointer

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 1	.5 14 13 12 11 10 9	8 7 6 5 4 3 2 1 0
ID	A A A A A A A	A A A A A A A A	A A A A A A .	A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0
ID Acce Field Value ID				

A RW TXDPTR TXD data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.28 MAXTX (Deprecated)

Address offset: 0x548

Maximum number of bytes in transmit buffer



Α	RW MAXTX	[00x7f	ff1			Max	imun	n nur	nber	of b	vtes	in tr	ansr	nit l	buff	er							
ID						Desc																	
Res	et 0x00000000	0 0 0	0 0	0 0	0	0 0	0	0 0	0	0 0	0	0 0	0	0	0	0	0 0	0	0	0	0 0	0	0
ID												A A	Α	Α	Α .	Α.	Д Д	A	Α	Α	ΑА	Α	Α
Bit r	umber	31 30 2	9 28 27	26 25	5 24 :	23 2:	2 21	20 19	9 18 1	17 16	5 15	14 1	3 12	11	10	9	8 7	6	5	4	3 2	1	0

6.17.5.29 AMOUNTTX (Deprecated)

Address offset: 0x54C

Number of bytes transmitted in last granted transaction

^	R AMOUNTTX	[00x7fff]	Number of bytes transmitted in last granted transaction
ID			
Rese	et 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

6.17.5.30 TXD.PTR

Address offset: 0x544

TXD data pointer

ID -				A A A A A A A A A A A A A A A A A A A
Rese	Acce Field	Value ID		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	Acce Field RW PTR	Value ID	Value	Description TXD data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.31 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

Bit n	umber	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 1	5 14 13 12 11 10 9 8 7	6 5 4 3 2 1 0
ID				A A A A A A A	A A A A A A
Rese	t 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0
ID					

6.17.5.32 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transmitted in last granted transaction


Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Description
A R AMOUNT	[0_0x7fff]	Number of bytes transmitted in last granted transaction



6.17.5.33 TXD.LIST


Address offset: 0x550

EasyDMA list type

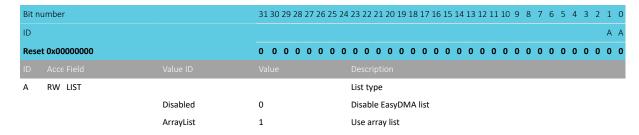

6.17.5.34 CONFIG

Address offset: 0x554 Configuration register

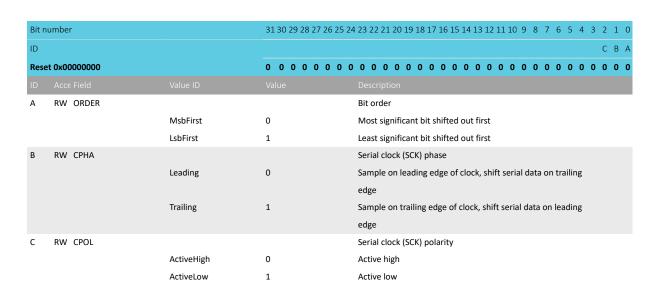

6.17.5.35 DEF

Address offset: 0x55C

Default character. Character clocked out in case of an ignored transaction.

Bit r	umber	31	30 :	29 2	8 27	7 26	25 2	24 2	3 2	2 21	1 20	19 1	.8 17	16	15	14 1	3 12	2 11	10 9	9 8	3 7	6	5	4	3 2	2 1	0
ID																					Α	Α	Α	Α	A A	A	Α
Res	et 0x00000000	0	0	0 (0 0	0	0	0	0 0	0	0	0	0 0	0	0	0 (0	0	0 (0 0	0	0	0	0	0 (0	0
ID																											
Α	RW DEF							[Defa	ult	char	acte	r. Ch	ara	cter	clo	cked	out	in c	ase	of	an					

ignored transaction.

6.17.5.36 ORC

Address offset: 0x5C0

Over-read character



Reset 0x000000000	0 0 0 0 0 0 0
	
10	A A A A A A A
10	
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8	7 6 5 4 3 2 1 0

read of the transmit buffer.

6.17.6 Electrical specification

6.17.6.1 SPIS slave interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPIS}	Bit rates for SPIS ²⁵			8 ²⁶	Mbps
t _{SPIS,START}	Time from RELEASE task to receive/transmit (CSN active)		0.125		μs

6.17.6.2 Serial Peripheral Interface Slave (SPIS) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{SPIS,CSCKIN}	SCK input period	125			ns
t _{SPIS,RFSCKIN}	SCK input rise/fall time			30	ns
t _{SPIS,WHSCKIN}	SCK input high time	30			ns
t _{SPIS,WLSCKIN}	SCK input low time	30			ns
t _{SPIS,SUCSN}	CSN to CLK setup time	1000			ns
t _{SPIS,HCSN}	CLK to CSN hold time	1000			ns
t _{SPIS,ASA}	CSN to MISO driven	0			ns
t _{SPIS,ASO}	CSN to MISO valid ²⁷			1000	ns
t _{SPIS,DISSO}	CSN to MISO disabled ²⁷			68	ns
t _{SPIS,CWH}	CSN inactive time	300			ns
t _{SPIS,VSO}	CLK edge to MISO valid			19	ns
t _{SPIS,HSO}	MISO hold time after CLK edge	18 ²⁸			ns
t _{SPIS,SUSI}	MOSI to CLK edge setup time	59			ns
t _{SPIS,HSI}	CLK edge to MOSI hold time	20			ns




High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.

The actual maximum data rate depends on the master's CLK to MISO and MOSI setup and hold timings.

At 25 pF load, including GPIO capacitance, see GPIO electrical specification.

This is to ensure compatibility to SPI masters sampling MISO on the same edge as MOSI is output.

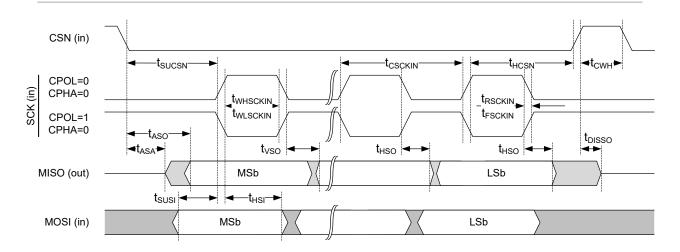

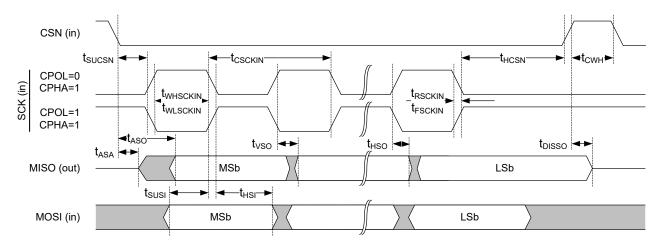


Figure 106: SPIS timing diagram

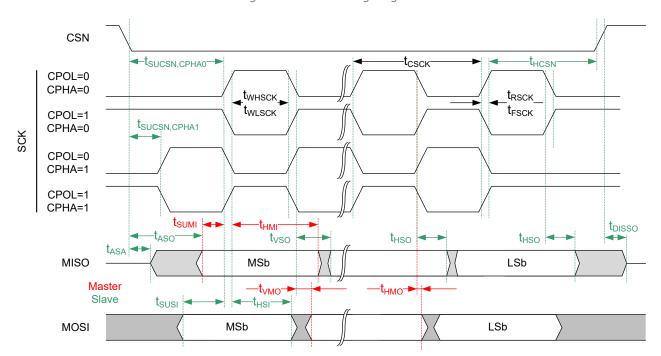


Figure 107: Common SPIM and SPIS timing diagram



6.18 SWI — Software interrupts

A set of interrupts have been reserved for use as software interrupts.

6.18.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40014000	SWI	SWI0	Software interrupt 0	
0x40015000	SWI	SWI1	Software interrupt 1	
0x40016000	SWI	SWI2	Software interrupt 2	
0x40017000	SWI	SWI3	Software interrupt 3	
0x40018000	SWI	SWI4	Software interrupt 4	
0x40019000	SWI	SWI5	Software interrupt 5	

Table 87: Instances

6.19 TEMP — Temperature sensor

The temperature sensor measures die temperature over the temperature range of the device. Linearity compensation can be implemented if required by the application.

Listed here are the main features for TEMP:

- Temperature range is greater than or equal to operating temperature of the device
- Resolution is 0.25 degrees

TEMP is started by triggering the START task.

When the temperature measurement is completed, a DATARDY event will be generated and the result of the measurement can be read from the TEMP register.

To achieve the measurement accuracy stated in the electrical specification, the crystal oscillator must be selected as the HFCLK source, see CLOCK — Clock control on page 72 for more information.

When the temperature measurement is completed, TEMP analog electronics power down to save power.

TEMP only supports one-shot operation, meaning that every TEMP measurement has to be explicitly started using the START task.

6.19.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000C000	TEMP	TEMP	Temperature sensor	

Table 88: Instances

Register	Offset	Description
TASKS_START	0x000	Start temperature measurement
TASKS_STOP	0x004	Stop temperature measurement
EVENTS_DATARDY	0x100	Temperature measurement complete, data ready
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
TEMP	0x508	Temperature in °C (0.25° steps)
A0	0x520	Slope of first piecewise linear function




Register	Offset	Description
_		
A1	0x524	Slope of second piecewise linear function
A2	0x528	Slope of third piecewise linear function
A3	0x52C	Slope of fourth piecewise linear function
A4	0x530	Slope of fifth piecewise linear function
A5	0x534	Slope of sixth piecewise linear function
ВО	0x540	y-intercept of first piecewise linear function
B1	0x544	y-intercept of second piecewise linear function
B2	0x548	y-intercept of third piecewise linear function
В3	0x54C	y-intercept of fourth piecewise linear function
B4	0x550	y-intercept of fifth piecewise linear function
B5	0x554	y-intercept of sixth piecewise linear function
ТО	0x560	End point of first piecewise linear function
T1	0x564	End point of second piecewise linear function
T2	0x568	End point of third piecewise linear function
Т3	0x56C	End point of fourth piecewise linear function
T4	0x570	End point of fifth piecewise linear function

Table 89: Register overview

6.19.1.1 TASKS_START

Address offset: 0x000


Start temperature measurement



6.19.1.2 TASKS_STOP

Address offset: 0x004

Stop temperature measurement



6.19.1.3 EVENTS_DATARDY

Address offset: 0x100

Temperature measurement complete, data ready



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_DATARDY			Temperature measurement complete, data ready
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.19.1.4 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW DATARDY			Write '1' to enable interrupt for event DATARDY
		Set	1	Enable
		Disabled	0	Read: Disabled

6.19.1.5 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW DATARDY		Write '1' to disable interrupt for event DATARDY
Clear	1	Disable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.19.1.6 TEMP

Address offset: 0x508

Temperature in °C (0.25° steps)

Bit n	umber	313	30 2	29 2	8 2	7 26	25	24	23	22	21	20	19 1	18 1	7 1	6 1	5 14	13	12	11 :	10 9	8	7	6	5	4	3 2	2 1	. 0
ID		Α	Α /	A A	, Δ	A	Α	Α	Α	Α	Α	Α	Α.	A A	Δ <i>A</i>	Α Α	A	Α	Α	Α	A A	A	Α	Α	Α	Α	A A	A /	ι A
Rese	et 0x00000000	0	0 (0 0	0	0	0	0	0	0	0	0	0	0 (0) (0	0	0	0	0 0	0	0	0	0	0	0 () (0
Α	R TEMP								Te	mp	era	ture	e in	°C (0.2	5° s	tep	s)											
									Re	sul	t of	ten	npe	ratu	ıre	me	asuı	em	ent	. Di	e tei	npe	rat	ure	in '	°C,			
									2's	s cc	mp	lem	ent	for	ma	t, 0	.25	°C s	tep	s.									
									De	ecis	ion	ioa	nt: I	DAT	ARI	ΟY													






6.19.1.7 A0

Address offset: 0x520

Slope of first piecewise linear function



6.19.1.8 A1

Address offset: 0x524

Slope of second piecewise linear function

Α	RW A1		Slope of second piecewise linear function	
ID				
Rese	et 0x00000348	0 0 0 0 0 0 0	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $	0
ID			A A A A A A A A A A A A A A A A A A A	A
Bit r	umber	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	. 0

6.19.1.9 A2

Address offset: 0x528

Slope of third piecewise linear function

ID Acce Field	Value	Description	, , , , , , , , , , , , , , , , , , , ,
Reset 0x000003AA	0 0 0 0 0 0		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13	3 12 11 10 9 8 7 6 5 4 3 2 1

6.19.1.10 A3

Address offset: 0x52C

Slope of fourth piecewise linear function

Bit n	umber	31 30	29 2	28 27	26 2	5 24	4 23	22	21 2	0 19	18	17 1	6 15	14	13 1	2 11	10	9	8	7 (5 5	4	3	2	1 0
ID																Α	Α	Α	Α /	۱ ۸	Δ Δ	A	Α	Α	A A
Rese	t 0x0000040E	0 0	0	0 0	0	0 0	0	0	0 0	0	0	0 (0	0	0 (0	1	0	0 () (0	0	1	1	1 0
ID																									
Α	RW A3						Slo	ре	of fo	urth	pie	cew	ise l	inea	ır fur	nctio	n								

6.19.1.11 A4

Address offset: 0x530

Slope of fifth piecewise linear function

NORDIC*

Α	RW A4			Sle	ope o	of fiftl	h pie	cewi	se line	ar fu	nctior	1								
ID																				
Rese	t 0x000004BD	0 0 0 0	0 0 0	0 0	0 (0 0	0 0	0	0 0	0 0	0 0	1	0	0	1 (0 1	1	1	١ ٥	1
ID											A	A	Α	Α	A ,	4 A	Α	Α ,	A A	Α
Bit n	umber	31 30 29 28	27 26 25	24 23	3 22 2	21 20	19 1	8 17	16 15	14 13	3 12 1	1 10	9	8	7	5 5	4	3	2 1	0

6.19.1.12 A5

Address offset: 0x534

Slope of sixth piecewise linear function

Α	RW A5								9	Slo	pe	of s	sixtl	n pi	ecev	vise	lin	ear	fun	ctio	n									
ID																														
Rese	et 0x000005A3	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0 () 1	. 0	1	1	0	1	0	0 () 1	1
ID																				,	A A	A	Α	Α	Α	Α	Α.	Δ Α	Α Α	Α
Bit r	number	31	1 30	29	9 28	27	26 2	25 2	24 2	23 :	22	21	20 1	19 1	8 17	7 16	15	14	13	12 1	1 10	9	8	7	6	5	4	3 2	2 1	0

6.19.1.13 BO

Address offset: 0x540

y-intercept of first piecewise linear function

Α	RW B0		y-intercept of first pie	ecewise line	ar func	tion						
ID												
Rese	et 0x00003FEF	0 0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 1	1 1	1 1	1 :	l 1	1	0 1	1	1 1
ID				А	АА	А А	Α /	A A	Α	A A	Α	A A
Bit n	umber	31 30 29 28 27 26 25 24	1 23 22 21 20 19 18 17	16 15 14 13	3 12 11	10 9	8	7 6	5	4 3	2	1 0

6.19.1.14 B1

Address offset: 0x544

y-intercept of second piecewise linear function

Bit no	ımber	31 30	29 2	28 27	26 2	25 24	1 23	22 2	21 20	19	18 1	7 16	15	14 1	3 12	11	10 !	9 8	3 7	6	5	4	3 2	2 1	0
ID														A	A	Α	A	Δ ,	4 A	Α	Α	Α	A A	4 A	Α
Rese	: 0x00003FBE	0 0	0	0 0	0	0 0	0	0	0 0	0	0 (0 0	0	0 1	. 1	1	1	1 :	l 1	0	1	1	1 1	l 1	0
ID																									
Α	RW B1						ıi-y	nter	cept	of s	ecor	nd pi	ece	wise	line	ar fı	unct	ion							_

6.19.1.15 B2

Address offset: 0x548

y-intercept of third piecewise linear function

A RW B2		y-intercept of third piecewise linear function											
ID Acce Field													
Reset 0x00003FBE	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 1	1 1 1	1 1	1 (1	1 :	l 1	1 0			
ID			А	A A A	A A	A A	AA	A A	A A	A A			
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 1	6 15 14 13	12 11 10	9 8	7 6	5 5	4 3	3 2	1 0			

4463_156 v1.4 287


y-intercept of third piecewise linear function



6.19.1.16 B3

Address offset: 0x54C

y-intercept of fourth piecewise linear function



6.19.1.17 B4

Address offset: 0x550


y-intercept of fifth piecewise linear function

Α	RW B4	y-intercept of fifth piecewise linear function																												
ID																														
Rese	et 0x00000124	0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0 (0	1	0	0	1	0	0	1 (0 0
ID																			Α	A	A A	A	Α	Α	Α	Α	Α	Α	A A	А А
Bit r	umber	31	L 30	29	28	27	26 2	25 2	24 2	23 2	22 :	21	20 1	.9 1	8 17	' 16	15	14 1	13	12 1	111	0 9	8	7	6	5	4	3	2 :	1 0

6.19.1.18 B5

Address offset: 0x554


y-intercept of sixth piecewise linear function



6.19.1.19 TO

Address offset: 0x560

End point of first piecewise linear function



6.19.1.20 T1

Address offset: 0x564

End point of second piecewise linear function

NORDIC

Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 3	17 16 15 14 1	3 12 11 10 9	8 7	6	5 4	3 2	1 (
ID					Α	Α /	4 A	ΑА	A A A
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0	0 0 0 0	0 0	0 (0 0	0 0	0 (
ID Acce Field	Value	Description							

A RW T1

End point of second piecewise linear function

6.19.1.21 T2

Address offset: 0x568


End point of third piecewise linear function

Α	RW T2						Е	nd	poi	nt of	thir	d pie	ecev	vise	line	ar fı	unct	ion								
ID																										
Rese	et 0x00000019	0 0	0	0	0 0	0	0	0 (0	0	0 (0 0	0	0	0 0	0	0	0 0	0	0	0	0	1 1	۰ 0	0	1
ID																				Α	Α	Α	A A	A A	A A	Α
Bit r	number	31 30	0 29	28 2	27 26	25	24 2	3 2	2 21	1 20	19 1	8 17	16	15 1	L4 1	3 12	11 :	10 9	8	7	6	5	4 3	3 2	. 1	0

6.19.1.22 T3

Address offset: 0x56C

End point of fourth piecewise linear function



6.19.1.23 T4

Address offset: 0x570

End point of fifth piecewise linear function

Bit no	ımber	31 30	29	28 2	7 2	6 25	5 24	23 2	22 2	21 20	19	18 :	17 1	6 15	14	13 1	2 11	. 10	9	8 7	' 6	5	4	3	2	1 0
ID																				A	\ A	A	Α	Α	Α	А А
Rese	: 0x00000050	0 0	0	0 (0	0 0	0	0	0	0 0	0	0	0 (0	0	0 (0 0	0	0	0 () 1	0	1	0	0	0 0
ID																										
А	RW T4							End	l po	int c	of fif	th p	iece	wise	e lin	ear i	func	tion								

6.19.2 Electrical specification

6.19.2.1 Temperature Sensor Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{TEMP}	Time required for temperature measurement		36		μs
T _{TEMP,RANGE}	Temperature sensor range	-40		105	°C
T _{TEMP,ACC}	Temperature sensor accuracy	-5		5	°C
T _{TEMP,ACC,EXT}	Temperature sensor accuracy, extended temperature range	-7		7	°C
T _{TEMP,RES}	Temperature sensor resolution		0.25		°C
T _{TEMP,STB}	Sample to sample stability at constant device temperature		±0.25		°C
T _{TEMP,OFFST}	Sample offset at 25°C	-2.5		2.5	°C



$6.20 \text{ TWI} - I^2 \text{C compatible two-wire interface}$

The TWI master is compatible with I²C operating at 100 kHz and 400 kHz.

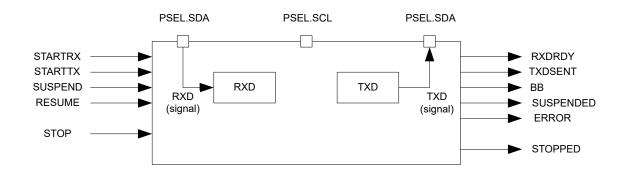


Figure 108: TWI master's main features

6.20.1 Functional description

This TWI master is not compatible with CBUS. The TWI transmitter and receiver are single buffered.

See TWI master's main features on page 290.

A TWI setup with one master and three slaves is shown in the following figure. This TWI master is only able to operate as the only master on the TWI bus.

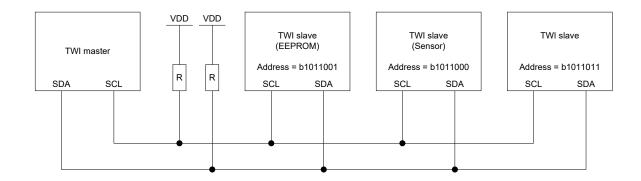


Figure 109: A typical TWI setup with one master and three slaves

This TWI master supports clock stretching performed by the slaves. The TWI master is started by triggering the STARTTX or STARTRX tasks, and stopped by triggering the STOP task.

If a NACK is clocked in from the slave, the TWI master will generate an ERROR event.

6.20.2 Master mode pin configuration

The different signals SCL and SDA associated with the TWI master are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated TWI signal is not connected to any physical pin. The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI master is enabled, and retained only as long as the device is in ON mode. PSEL.SCL and PSEL.SDA must only be configured when TWI is disabled.

NORDIC SEMICONDUCTOR

To secure correct signal levels on the pins used by the TWI master when the system is in OFF mode, and when the TWI master is disabled, these pins must be configured in the GPIO peripheral as described in GPIO configuration on page 291.

Only one peripheral can be assigned to drive a particular GPIO pin at a time, failing to do so may result in unpredictable behavior.

TWI master signal	TWI master pin	Direction	Drive strength	Output value
SCL	As specified in PSEL.SCL	Input	SOD1	Not applicable
SDA	As specified in PSEL.SDA	Input	SOD1	Not applicable

Table 90: GPIO configuration

6.20.3 Shared resources

TWI shares registers and other resources with other peripherals that have the same ID as TWI.

Therefore, you must disable all peripherals that have the same ID as TWI before TWI can be configured and used. Disabling a peripheral that has the same ID as TWI will not reset any of the registers that are shared with TWI. It is therefore important to configure all relevant TWI registers explicitly to secure that it operates correctly.

The Instantiation table in Instantiation on page 18 shows which peripherals have the same ID as TWI.

6.20.4 Master write sequence

A TWI master write sequence is started by triggering the STARTTX task. After the STARTTX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1).

The address must match the address of the slave device that the master wants to write to. The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) generated by the slave.

After receiving the ACK bit, the TWI master will clock out the data bytes that are written to the TXD register. Each byte clocked out from the master will be followed by an ACK/NACK bit clocked in from the slave. A TXDSENT event will be generated each time the TWI master has clocked out a TXD byte, and the associated ACK/NACK bit has been clocked in from the slave.

The TWI master transmitter is single buffered. A second byte can only be written to the TXD register after the previous byte has been clocked out and the ACK/NACK bit clocked in, that is, after the TXDSENT event has been generated.

If the CPU is prevented from writing to TXD when the TWI master is ready to clock out a byte, the TWI master will stretch the clock until the CPU has written a byte to the TXD register.

A typical TWI master write sequence is illustrated in The TWI master writing data to a slave on page 292. Occurrence 3 in the figure illustrates delayed processing of the TXDSENT event associated with TXD byte 1. In this scenario the TWI master will stretch the clock to prevent writing erroneous data to the slave.



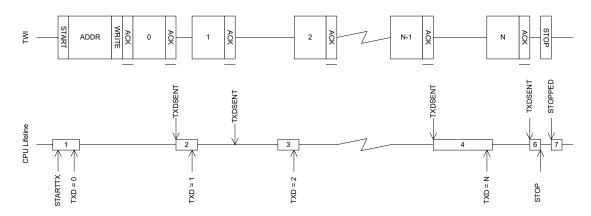


Figure 110: The TWI master writing data to a slave

The TWI master write sequence is stopped when the STOP task is triggered, causing the TWI master to generate a stop condition on the TWI bus.

6.20.5 Master read sequence

A TWI master read sequence is started by triggering the STARTRX task. After the STARTRX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE = 0, READ = 1).

The address must match the address of the slave device that the master wants to read from. The READ/ WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK = 1) generated by the slave.

After having sent the ACK bit, the TWI slave will send data to the master using the clock generated by the master.

The TWI master will generate a RXDRDY event every time a new byte is received in the RXD register.

After receiving a byte, the TWI master will delay sending the ACK/NACK bit by stretching the clock until the CPU has extracted the received byte, by reading the RXD register.

The TWI master read sequence is stopped by triggering the STOP task. This task must be triggered before the last byte is extracted from RXD to ensure that the TWI master sends a NACK back to the slave before generating the stop condition.

A typical TWI master read sequence is illustrated in The TWI master reading data from a slave on page 293. Occurrence 3 in this figure illustrates delayed processing of the RXDRDY event associated with RXD byte B. In this scenario the TWI master will stretch the clock to prevent the slave from overwriting the contents of the RXD register.



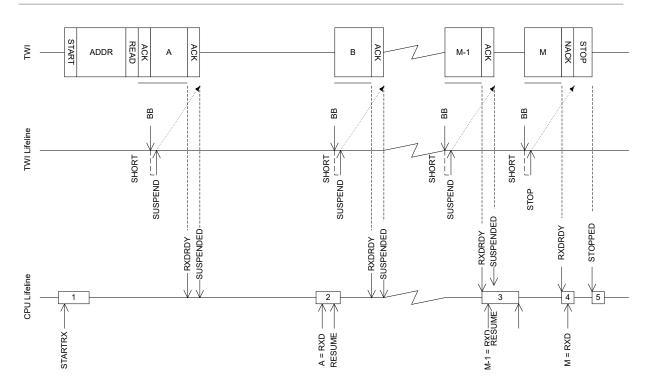


Figure 111: The TWI master reading data from a slave

6.20.6 Master repeated start sequence

A typical repeated start sequence is one in which the TWI master writes one byte to the slave followed by reading M bytes from the slave. Any combination and number of transmit and receive sequences can be combined in this fashion. Only one shortcut to STOP can be enabled at any given time.

The following figure shows a repeated start sequence where the TWI master writes one byte, followed by reading M bytes from the slave without performing a stop in-between.

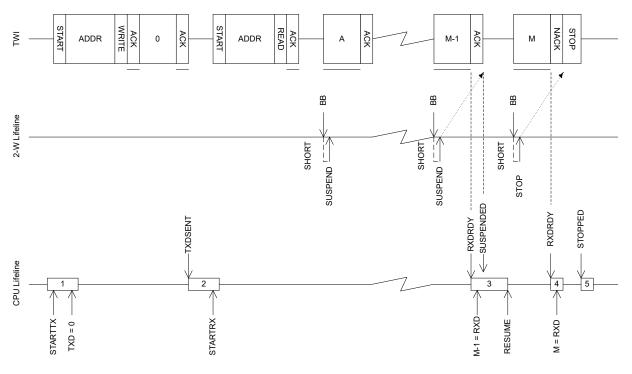


Figure 112: Repeated start sequence illustration



To generate a repeated start after a read sequence, a second start task, STARTRX or STARTTX, must be triggered instead of the STOP task. This start task must be triggered before the last byte is extracted from RXD to ensure that the TWI master sends a NACK back to the slave before generating the repeated start condition.

6.20.7 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task is not always needed, like when the peripheral is already stopped. If the STOP task is sent, the software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.20.8 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	TWI	TWI0	Two-wire interface master 0		Deprecated
0x40004000	TWI	TWI1	Two-wire interface master 1		Deprecated

Table 91: Instances

Register	Offset	Description
TASKS_STARTRX	0x000	Start TWI receive sequence
TASKS_STARTTX	0x008	Start TWI transmit sequence
TASKS_STOP	0x014	Stop TWI transaction
TASKS_SUSPEND	0x01C	Suspend TWI transaction
TASKS_RESUME	0x020	Resume TWI transaction
EVENTS_STOPPED	0x104	TWI stopped
EVENTS_RXDREADY	0x108	TWI RXD byte received
EVENTS_TXDSENT	0x11C	TWI TXD byte sent
EVENTS_ERROR	0x124	TWI error
EVENTS_BB	0x138	TWI byte boundary, generated before each byte that is sent or received
EVENTS_SUSPENDED	0x148	TWI entered the suspended state
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x4C4	Error source
ENABLE	0x500	Enable TWI
PSEL.SCL	0x508	Pin select for SCL
PSEL.SDA	0x50C	Pin select for SDA
RXD	0x518	RXD register
TXD	0x51C	TXD register
FREQUENCY	0x524	TWI frequency. Accuracy depends on the HFCLK source selected.
ADDRESS	0x588	Address used in the TWI transfer

Table 92: Register overview

6.20.8.1 TASKS_STARTRX

Address offset: 0x000

Start TWI receive sequence



Bit n	um	nber			31	30 2	9 28	3 27	7 26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID																																		А
Rese	et O)x00	000000		0	0 (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																																		
Α	٧	N	TASKS_STARTRX									Sta	rt '	TW	l re	cei	ve s	eq	uer	nce														
				Trigger	1							Tri	gge	er t	ask																			

6.20.8.2 TASKS_STARTTX

Address offset: 0x008

Start TWI transmit sequence

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_STARTTX			Start TWI transmit sequence
		Trigger	1	Trigger task

6.20.8.3 TASKS_STOP

Address offset: 0x014 Stop TWI transaction

Bit n	number		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_STOP			Stop TWI transaction
		Trigger	1	Trigger task

6.20.8.4 TASKS_SUSPEND

Address offset: 0x01C Suspend TWI transaction

Α	W TASKS_SUSPEND		Suspend TWI transaction
ID			
Reset	0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A
Bit nu	ımber	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.20.8.5 TASKS_RESUME

Address offset: 0x020
Resume TWI transaction



Bit n	um	ber			313	0 29	28	27 2	6 2!	5 24	23	22	21	20 1	9 1	8 17	7 16	15	14	13	12	11 :	LO 9	9 8	3 7	6	5	4	3	2	1 0
ID																															Α
Rese	et O	x00	000000		0 (0 0	0	0 0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0 0
ID																															
Α	٧	V	TASKS_RESUME								Res	sun	ne 1	ΓWΙ	trai	nsac	tio	n													
				Trigger	1						Trig	gge	r ta	isk																	

6.20.8.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped

Bit n	umber		313	30 29	28 2	27 26	25	24 2	23 2	2 2:	1 20	19	18 1	7 16	15	14	13 1	2 11	10	9 8	7	6	5	4	3 2	2 1	0
ID																											Α
Rese	t 0x00000000		0 (0 0	0	0 0	0	0	0 (0	0	0	0 0	0	0	0	0 (0	0	0 0	0	0	0	0	0 0	0	0
ID																											
Α	RW EVENTS_STOPPED							-	ΓWΙ	sto	ppe	d															
		NotGenerated	0					1	ever	nt no	ot g	ener	ated	ł													
		Generated	1					1	ver	nt ge	ener	rated	ł														

6.20.8.7 EVENTS_RXDREADY

Address offset: 0x108

TWI RXD byte received

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_RXDREADY			TWI RXD byte received
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.20.8.8 EVENTS_TXDSENT

Address offset: 0x11C TWI TXD byte sent


Bit n	umber		31	30 2	29 28	3 27	7 26	25	24	23	22	21	20	19	18	17	16	15	14	13	12 :	11 1	.0 9	9 8	7	6	5	4	3 2	2 1	L O
ID																															Α
Rese	t 0x00000000		0	0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0	0	0	0	0 () (0
ID																															
Α	RW EVENTS_TXDSENT									TW	/I T	ΧD	by	te s	en	t															
		NotGenerated	0							Eve	ent	no	t ge	ene	rat	ed															
		Generated	1							Eve	ent	ge	ner	ate	d																

6.20.8.9 EVENTS_ERROR

Address offset: 0x124

TWI error




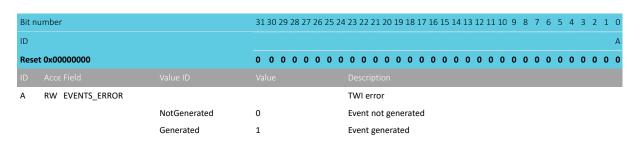

6.20.8.10 EVENTS_BB

Address offset: 0x138

TWI byte boundary, generated before each byte that is sent or received

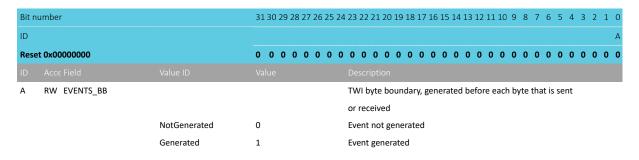


6.20.8.11 EVENTS_SUSPENDED

Address offset: 0x148

TWI entered the suspended state

Generated just after ACK bit has been transferred in a read transaction, and only if SUSPEND has been requested earlier.

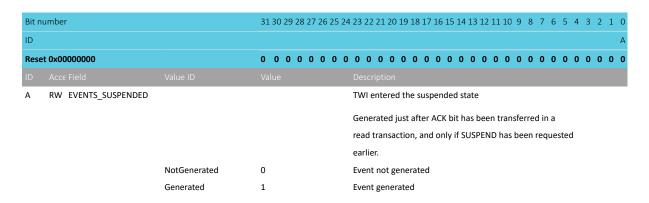

6.20.8.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks



Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				в А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW BB_SUSPEND			Shortcut between event BB and task SUSPEND
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW BB_STOP			Shortcut between event BB and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.20.8.13 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RXDREADY			Write '1' to enable interrupt for event RXDREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW TXDSENT			Write '1' to enable interrupt for event TXDSENT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ε	RW BB			Write '1' to enable interrupt for event BB
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to enable interrupt for event SUSPENDED
				Generated just after ACK bit has been transferred in a
				read transaction, and only if SUSPEND has been requested
				earlier.
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.20.8.14 INTENCLR

Address offset: 0x308

Disable interrupt



Bit r	umber		31 30 29 28 27 20	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RXDREADY			Write '1' to disable interrupt for event RXDREADY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW TXDSENT			Write '1' to disable interrupt for event TXDSENT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW BB			Write '1' to disable interrupt for event BB
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to disable interrupt for event SUSPENDED
				Generated just after ACK bit has been transferred in a
				read transaction, and only if SUSPEND has been requested
				earlier.
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.20.8.15 ERRORSRC

Address offset: 0x4C4

Error source

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW OVERRUN			Overrun error
				A new byte was received before previous byte got read by
				software from the RXD register. (Previous data is lost)
		NotPresent	0	Read: no overrun occured
		Present	1	Read: overrun occured
В	RW ANACK			NACK received after sending the address (write '1' to clear)
		NotPresent	0	Read: error not present
		Present	1	Read: error present
С	RW DNACK			NACK received after sending a data byte (write '1' to clear)
		NotPresent	0	Read: error not present
		Present	1	Read: error present





6.20.8.16 ENABLE

Address offset: 0x500

Enable TWI

Bit number		31 30 29 28 2	7 26 25 24 23 22 21 2	0 19 18 17 1	.6 15 14	13 12 1	1 10 9	8 7	7 6	5	4	3 2	1	0
ID												4 A	Α.	Α
Reset 0x0000	0000	0 0 0 0	0000000	0 0 0 0	0 0 0	0 0	0 0 0	0 (0	0	0	0 0	0	0
ID Acce Fi														
A RW E	NABLE		Enable or	disable TWI										
	Disabled	0	Disable TV	VI										
	Enabled	5	Enable TW	/I										

6.20.8.17 PSEL.SCL

Address offset: 0x508
Pin select for SCL

Bit n	umber		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	et OxFFFFFFF		1 1 1 1 1 1 :	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.20.8.18 PSEL.SDA


Address offset: 0x50C Pin select for SDA

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.20.8.19 RXD

Address offset: 0x518

RXD register






6.20.8.20 TXD

Address offset: 0x51C


TXD register



6.20.8.21 FREQUENCY

Address offset: 0x524


TWI frequency. Accuracy depends on the HFCLK source selected.

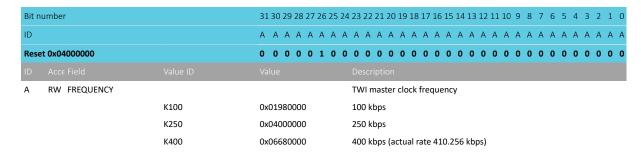

6.20.8.22 ADDRESS

Address offset: 0x588

Address used in the TWI transfer



6.20.9 Electrical specification

6.20.9.1 TWI interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
$f_{TWI,SCL}$	Bit rates for TWI ²⁹	100		400	kbps
t _{TWI,START}	Time from STARTRX/STARTTX task to transmission started		1.5		μs



²⁹ High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO chapter for more details.

6.20.9.2 Two Wire Interface (TWI) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{TWI,SU_DAT}	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWI,HD_DAT}	Data hold time after negative edge on SCL – all modes	500			ns
$t_{TWI,HD_STA,100kbps}$	TWI master hold time for START and repeated START	10000			ns
	condition, 100 kbps				
t _{TWI,HD_STA,250kbps}	TWI master hold time for START and repeated START	4000			ns
	condition, 250kbps				
$t_{TWI,HD_STA,400kbps}$	TWI master hold time for START and repeated START	2500			ns
	condition, 400 kbps				
$t_{TWI,SU_STO,100kbps}$	TWI master setup time from SCL high to STOP condition, 100	5000			ns
	kbps				
$t_{TWI,SU_STO,250kbps}$	TWI master setup time from SCL high to STOP condition, 250	2000			ns
	kbps				
$t_{TWI,SU_STO,400kbps}$	TWI master setup time from SCL high to STOP condition, 400	1250			ns
	kbps				
t _{TWI,BUF,100kbps}	TWI master bus free time between STOP and START	5800			ns
	conditions, 100 kbps				
t _{TWI,BUF,250kbps}	TWI master bus free time between STOP and START	2700			ns
	conditions, 250 kbps				
t _{TWI,BUF,400kbps}	TWI master bus free time between STOP and START	2100			ns
	conditions, 400 kbps				

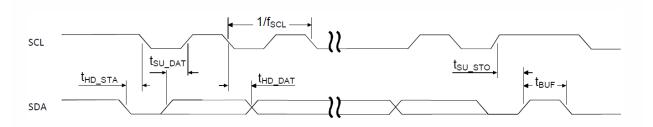


Figure 113: TWI timing diagram, 1 byte transaction

6.21 TIMER — Timer/counter

This peripheral is a general purpose timer designed to keep track of time in user-selective time intervals, it can operate in two modes: timer and counter.



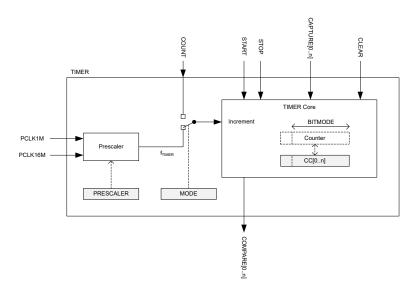


Figure 114: Block schematic for timer/counter

The timer/counter runs on the high-frequency clock source (HFCLK) and includes a four-bit (1/2X) prescaler that can divide the timer input clock from the HFCLK controller. Clock source selection between PCLK16M and PCLK1M is automatic according to TIMER base frequency set by the prescaler. The TIMER base frequency is always given as 16 MHz divided by the prescaler value.

The PPI system allows a TIMER event to trigger a task of any other system peripheral of the device. The PPI system also enables the TIMER task/event features to generate periodic output and PWM signals to any GPIO. The number of input/outputs used at the same time is limited by the number of GPIOTE channels.

TIMER can operate in two modes: Timer mode and Counter mode. In both modes, TIMER is started by triggering the START task, and stopped by triggering the STOP task. After the timer is stopped the timer can resume timing/counting by triggering the START task again. When timing/counting is resumed, the timer will continue from the value it had prior to being stopped.

In Timer mode, the TIMER's internal Counter register is incremented by one for every tick of the timer frequency f_{TIMER} as illustrated in Block schematic for timer/counter on page 303. The timer frequency is derived from PCLK16M as shown in the following example, using the values specified in the PRESCALER register.

```
f_{TIMER} = 16 \text{ MHz} / (2^{PRESCALER})
```

When $f_{TIMER} \le 1$ MHz, TIMER will use PCLK1M instead of PCLK16M for reduced power consumption.

In counter mode, the TIMER's internal Counter register is incremented by one each time the COUNT task is triggered, meaning the timer frequency and the prescaler are not utilized in counter mode. Similarly, the COUNT task has no effect in Timer mode.

The TIMER's maximum value is configured by changing the bit-width of the timer in register BITMODE on page 308.

PRESCALER on page 308 and BITMODE on page 308 must only be updated when the timer is stopped. If these registers are updated while the timer is started, unpredictable behavior may occur.

When the timer is incremented beyond its maximum value, the Counter register will overflow and the timer will automatically start over from zero.



The Counter register can be cleared by triggering the CLEAR task. This will explicitly set the internal value to zero.

TIMER implements multiple capture/compare registers.

Independent of prescaler setting, the accuracy of TIMER is equivalent to one tick of the timer frequency f_{TIMER} as illustrated in Block schematic for timer/counter on page 303.

6.21.1 Capture

TIMER implements one capture task for every available capture/compare register.

Every time the CAPTURE[n] task is triggered, the Counter value is copied to the CC[n] register.

6.21.2 Compare

TIMER implements one COMPARE event for every available capture/compare register.

A COMPARE event is generated when the Counter is incremented and then becomes equal to the value specified in one of the capture compare registers. When the Counter value becomes equal to the value specified in a capture compare register CC[n], the corresponding compare event COMPARE[n] is generated.

BITMODE on page 308 specifies how many bits of the Counter register and the capture/compare register that are used when the comparison is performed. Other bits will be ignored.

6.21.3 Task delays

After TIMER is started, the CLEAR, COUNT, and STOP tasks are guaranteed to take effect within one clock cycle of the PCLK16M.

6.21.4 Task priority

If the START task and the STOP task are triggered at the same time, meaning within the same period of PCLK16M, the STOP task will be prioritized.

6.21.5 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40008000	TIMER	TIMER0	Timer 0	This timer instance has 4 CC registers
				(CC[03])
0x40009000	TIMER	TIMER1	Timer 1	This timer instance has 4 CC registers
				(CC[03])
0x4000A000	TIMER	TIMER2	Timer 2	This timer instance has 4 CC registers
				(CC[03])
0x4001A000	TIMER	TIMER3	Timer 3	This timer instance has 6 CC registers
				(CC[05])

Table 93: Instances

Register	Offset	Description	
TASKS_START	0x000	Start Timer	
TASKS_STOP	0x004	Stop Timer	
TASKS_COUNT	0x008	Increment Timer (Counter mode only)	
TASKS_CLEAR	0x00C	Clear time	
TASKS_SHUTDOWN	0x010	Shut down timer	Deprecated
TASKS_CAPTURE[0]	0x040	Capture Timer value to CC[0] register	



Register	Offset	Description
TASKS_CAPTURE[1]	0x044	Capture Timer value to CC[1] register
TASKS_CAPTURE[2]	0x048	Capture Timer value to CC[2] register
TASKS_CAPTURE[3]	0x04C	Capture Timer value to CC[3] register
TASKS_CAPTURE[4]	0x050	Capture Timer value to CC[4] register
TASKS_CAPTURE[5]	0x054	Capture Timer value to CC[5] register
EVENTS_COMPARE[0]	0x140	Compare event on CC[0] match
EVENTS_COMPARE[1]	0x144	Compare event on CC[1] match
EVENTS_COMPARE[2]	0x148	Compare event on CC[2] match
EVENTS_COMPARE[3]	0x14C	Compare event on CC[3] match
EVENTS_COMPARE[4]	0x150	Compare event on CC[4] match
EVENTS_COMPARE[5]	0x154	Compare event on CC[5] match
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
MODE	0x504	Timer mode selection
BITMODE	0x508	Configure the number of bits used by the TIMER
PRESCALER	0x510	Timer prescaler register
CC[0]	0x540	Capture/Compare register 0
CC[1]	0x544	Capture/Compare register 1
CC[2]	0x548	Capture/Compare register 2
CC[3]	0x54C	Capture/Compare register 3
CC[4]	0x550	Capture/Compare register 4
CC[5]	0x554	Capture/Compare register 5

Table 94: Register overview

6.21.5.1 TASKS_START

Address offset: 0x000


Start Timer

Bit r	number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Res	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_START			Start Timer
		Trigger	1	Trigger task

6.21.5.2 TASKS_STOP

Address offset: 0x004

Stop Timer

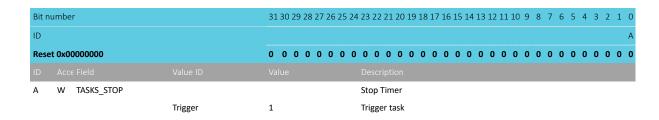




6.21.5.3 TASKS_COUNT

Address offset: 0x008

Increment Timer (Counter mode only)



6.21.5.4 TASKS CLEAR


Address offset: 0x00C

Clear time

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_CLEAR			Clear time
		Trigger	1	Trigger task


6.21.5.5 TASKS_SHUTDOWN (Deprecated)

Address offset: 0x010 Shut down timer



6.21.5.6 TASKS_CAPTURE[n] (n=0..5)

Address offset: $0x040 + (n \times 0x4)$ Capture Timer value to CC[n] register




6.21.5.7 EVENTS_COMPARE[n] (n=0..5)

Address offset: $0x140 + (n \times 0x4)$



Compare event on CC[n] match

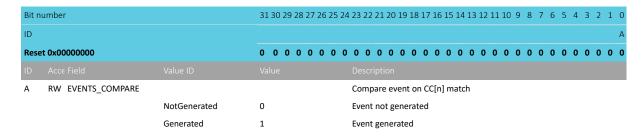

6.21.5.8 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		L K J I H G F E D C B A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-F RW COMPARE[i]_CLEAR		Shortcut between event COMPARE[i] and task CLEAR
(i=05)		
Disabled	0	Disable shortcut
Enabled	1	Enable shortcut
G-L RW COMPARE[i]_STOP		Shortcut between event COMPARE[i] and task STOP
(i=05)		
Disabled	0	Disable shortcut
Enabled	1	Enable shortcut

6.21.5.9 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		FEDCBA
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-F RW COMPARE[i] (i=05)		Write '1' to enable interrupt for event COMPARE[i]
Set	1	Enable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.21.5.10 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			F E D C B A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-F RW COMPARE[i] (i=05)			Write '1' to disable interrupt for event COMPARE[i]
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.21.5.11 MODE

Address offset: 0x504
Timer mode selection

Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	5 4 3 2 1 0
ID				АА
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0
ID Acce Field				
A RW MODE			Timer mode	
	Timer	0	Select Timer mode	
	Counter	1	Select Counter mode	Deprecated
	LowPowerCounter	2	Select Low Power Counter mode	

6.21.5.12 BITMODE

Address offset: 0x508

Configure the number of bits used by the TIMER

Bit number			31 30	29 :	28 27	7 26	25 2	4 23	3 22	2 2 1	. 20	19	18 :	17 1	6 1	5 14	13	12 1	1 10	9	8	7	6 !	5 4	1 3	2	1 0
ID																											АА
Reset 0x000	00000		0 0	0	0 0	0	0 (0	0	0	0	0	0	0 (0 0	0	0	0 (0	0	0	0	0 (0 (0	0	0 0
ID Acce F																											
A RW E	BITMODE							Ti	ime	r bi	t wi	idth															
		16Bit	0					10	6 bit	t tir	ner	bit	wic	lth													
		08Bit	1					8	bit 1	tim	er b	oit w	vidt	h													
		24Bit	2					24	4 bit	t tir	ner	bit	wic	lth													
		32Bit	3					3	2 bit	t tir	ner	bit	wic	lth													

6.21.5.13 PRESCALER

Address offset: 0x510
Timer prescaler register


Α	RW PRESCALER	[09]	Prescaler value
ID			
Res	et 0x00000004	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			АААА
Bit r	number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.21.5.14 CC[n] (n=0..5)

Address offset: $0x540 + (n \times 0x4)$



Capture/Compare register n

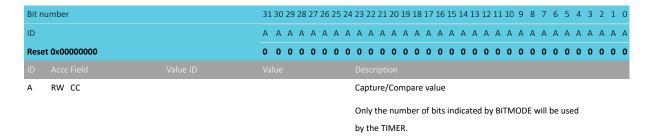

6.21.6 Electrical specification

$6.22 \text{ TWIM} - I^2 \text{C}$ compatible two-wire interface master with EasyDMA

TWI master with EasyDMA (TWIM) is a two-wire half-duplex master which can communicate with multiple slave devices connected to the same bus.

Listed here are the main features for TWIM:

- I²C compatible
- Supported baud rates: 100, 250, 400 kbps
- Support for clock stretching (non I²C compliant)
- EasyDMA

The two-wire interface can communicate with a bi-directional wired-AND bus with two lines (SCL, SDA). The protocol makes it possible to interconnect up to 127 individually addressable devices. TWIM is not compatible with CBUS.

The GPIOs used for each two-wire interface line can be chosen from any GPIO on the device and are independently configurable. This enables great flexibility in device pinout and efficient use of board space and signal routing.



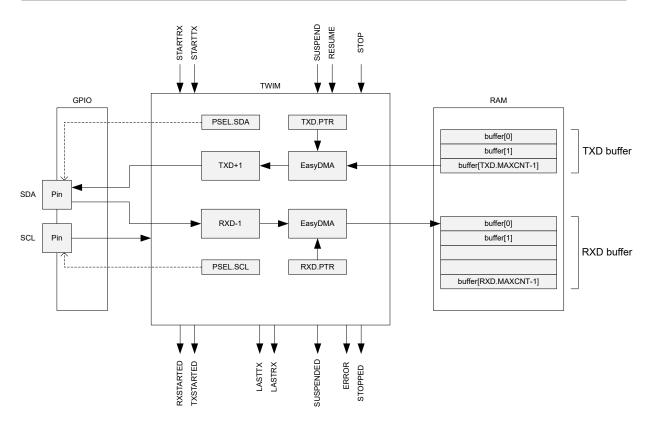


Figure 115: TWI master with EasyDMA

A typical TWI setup consists of one master and one or more slaves. For an example, see the following figure. This TWIM is only able to operate as a single master on the TWI bus. Multi-master bus configuration is not supported.



Figure 116: A typical TWI setup comprising one master and three slaves

This TWI master supports clock stretching performed by the slaves. The SCK pulse following a stretched clock cycle may be shorter than specified by the I2C specification.

The TWI master is started by triggering the STARTTX or STARTRX tasks, and stopped by triggering the STOP task. The TWI master will generate a STOPPED event when it has stopped following a STOP task.

After the TWI master is started, the STARTTX or STARTRX tasks should not be triggered again until the TWI master has issued a LASTRX, LASTTX, or STOPPED event.

The TWI master can be suspended using the SUSPEND task, this can be used when using the TWI master in a low priority interrupt context. When the TWIM enters suspend state, will automatically issue a SUSPENDED event while performing a continuous clock stretching until it is instructed to resume operation via a RESUME task. The TWI master cannot be stopped while it is suspended, thus the STOP task has to be issued after the TWI master has been resumed.

Note: Any ongoing byte transfer will be allowed to complete before the suspend is enforced. A SUSPEND task has no effect unless the TWI master is actively involved in a transfer.

If a NACK is clocked in from the slave, the TWI master will generate an ERROR event.

NORDIC SEMICONDUCTOR

6.22.1 EasyDMA

The TWIM implements EasyDMA for accessing RAM without CPU involvement.

The TWIM peripheral implements the EasyDMA channels found in the following table.

Channel	Туре	Register Cluster				
TXD	READER	TXD				
RXD	WRITER	RXD				

Table 95: TWIM EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 37.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next RX/TX transmission immediately after having received the RXSTARTED/TXSTARTED event.

The STOPPED event indicates that EasyDMA has finished accessing the buffer in RAM.

6.22.2 Master write sequence

A TWI master write sequence is started by triggering the STARTTX task. After the STARTTX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1).

The address must match the address of the slave device that the master wants to write to. The READ/ WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) generated by the slave.

After receiving the ACK bit, the TWI master will clock out the data bytes found in the transmit buffer located in RAM at the address specified in the TXD.PTR register. Each byte clocked out from the master will be followed by an ACK/NACK bit clocked in from the slave.

A typical TWI master write sequence is shown in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI master following a SUSPEND task.

A SUSPENDED event indicates that the SUSPEND task has taken effect. This event can be used to synchronize the software.

The TWI master will generate a LASTTX event when it starts to transmit the last byte, this is shown in the following figure.

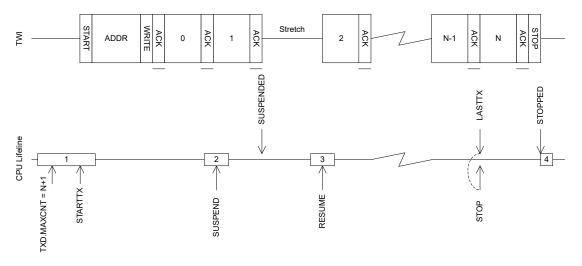


Figure 117: TWI master writing data to a slave



The TWI master is stopped by triggering the STOP task. This task should be triggered during the transmission of the last byte to secure that the TWI master will stop as fast as possible after sending the last byte. The shortcut between LASTTX and STOP can alternatively be used to accomplish this.

Note: The TWI master does not stop by itself when the entire RAM buffer has been sent, or when an error occurs. The STOP task must be issued, through the use of a local or PPI shortcut, or in software as part of the error handler.

6.22.3 Master read sequence

A TWI master read sequence is started by triggering the STARTRX task. After the STARTRX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE = 0, READ = 1). The address must match the address of the slave device that the master wants to read from. The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK = 1) generated by the slave.

After sending the ACK bit, the TWI slave will send data to the master using the clock generated by the master.

Data received will be stored in RAM at the address specified in the RXD.PTR register. The TWI master will generate an ACK after all but the last byte have been received from the slave. The TWI master will generate a NACK after the last byte received to indicate that the read sequence shall stop.

A typical TWI master read sequence is illustrated in The TWI master reading data from a slave on page 313. Occurrence 2 in the figure illustrates clock stretching performed by the TWI master following a SUSPEND task.

A SUSPENDED event indicates that the SUSPEND task has taken effect. This event can be used to synchronize the software.

The TWI master will generate a LASTRX event when it is ready to receive the last byte, as shown in The TWI master reading data from a slave on page 313. If RXD.MAXCNT > 1, the LASTRX event is generated after sending the ACK of the previously received byte. If RXD.MAXCNT = 1, the LASTRX event is generated after receiving the ACK following the address and READ bit.

The TWI master is stopped by triggering the STOP task. This task must be triggered before the NACK bit is supposed to be transmitted. The STOP task can be triggered at any time during the reception of the last byte. It is recommended to use the shortcut between LASTRX and STOP to accomplish this.

The TWI master does not stop by itself when the RAM buffer is full, or when an error occurs. The STOP task must be issued, through the use of a local or PPI shortcut, or in software as part of the error handler.

The TWI master cannot be stopped while suspended, so the STOP task must be issued after the TWI master has been resumed.



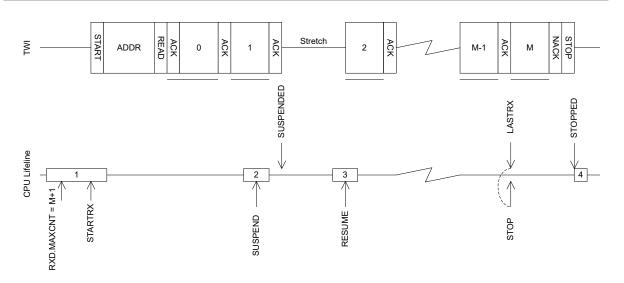


Figure 118: The TWI master reading data from a slave

6.22.4 Master repeated start sequence

A typical repeated start sequence is one in which the TWI master writes two bytes to the slave followed by reading four bytes from the slave. This example uses shortcuts to perform the simplest type of repeated start sequence, i.e. one write followed by one read. The same approach can be used to perform a repeated start sequence where the sequence is read followed by write.

The following figure shows an example of a repeated start sequence where the TWI master writes two bytes followed by reading four bytes from the slave.

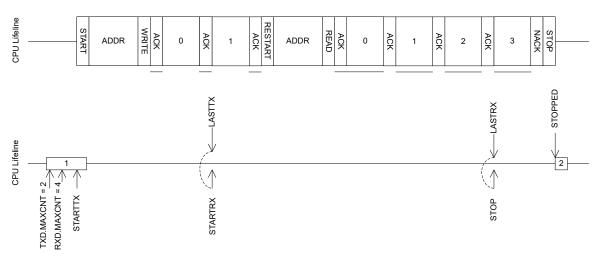


Figure 119: Master repeated start sequence

If a more complex repeated start sequence is needed, and the TWI firmware drive is serviced in a low priority interrupt, it may be necessary to use the SUSPEND task and SUSPENDED event to guarantee that the correct tasks are generated at the correct time. A double repeated start sequence using the SUSPEND task to secure safe operation in low priority interrupts is shown in the following figure.



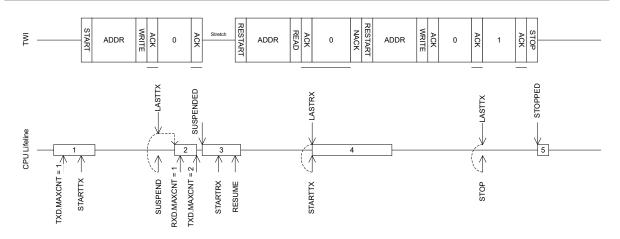


Figure 120: Double repeated start sequence

6.22.5 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

When the STOP task is sent, the software shall wait until the STOPPED event is received as a response before disabling the peripheral through the ENABLE register. If the peripheral is already stopped, the STOP task is not required.

6.22.6 Master mode pin configuration

The SCL and SDA signals associated with the TWI master are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI master is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.SCL, PSEL.SDA must only be configured when the TWI master is disabled.

To secure correct signal levels on the pins used by the TWI master when the system is in OFF mode, and when the TWI master is disabled, these pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

TWI master signal	TWI master pin	Direction	Output value	Drive strength
SCL	As specified in PSEL.SCL	Input	Not applicable	SOD1
SDA	As specified in PSEL.SDA	Input	Not applicable	SOD1

Table 96: GPIO configuration before enabling peripheral

6.22.7 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40003000	TWIM	TWIM0	Two-wire interface master 0	
0x40004000	TWIM	TWIM1	Two-wire interface master 1	

Table 97: Instances




Register	Offset	Description
TASKS_STARTRX	0x000	Start TWI receive sequence
TASKS_STARTTX	0x008	Start TWI transmit sequence
TASKS_STOP	0x014	Stop TWI transaction. Must be issued while the TWI master is not suspended.
TASKS_SUSPEND	0x01C	Suspend TWI transaction
TASKS_RESUME	0x020	Resume TWI transaction
EVENTS_STOPPED	0x104	TWI stopped
EVENTS_ERROR	0x124	TWI error
EVENTS_SUSPENDED	0x148	SUSPEND task has been issued, TWI traffic is now suspended.
EVENTS_RXSTARTED	0x14C	Receive sequence started
EVENTS_TXSTARTED	0x150	Transmit sequence started
EVENTS_LASTRX	0x15C	Byte boundary, starting to receive the last byte
EVENTS_LASTTX	0x160	Byte boundary, starting to transmit the last byte
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x4C4	Error source
ENABLE	0x500	Enable TWIM
PSEL.SCL	0x508	Pin select for SCL signal
PSEL.SDA	0x50C	Pin select for SDA signal
FREQUENCY	0x524	TWI frequency. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
TXD.LIST	0x550	EasyDMA list type
ADDRESS	0x588	Address used in the TWI transfer

Table 98: Register overview

6.22.7.1 TASKS_STARTRX

Address offset: 0x000

Start TWI receive sequence

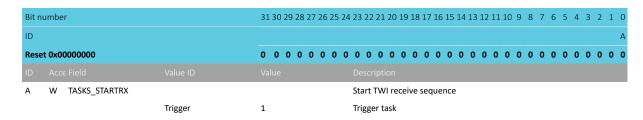

6.22.7.2 TASKS_STARTTX

Address offset: 0x008

Start TWI transmit sequence



Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_S	STARTTX		Start TWI transmit sequence
	Trigger	1	Trigger task

6.22.7.3 TASKS_STOP

Address offset: 0x014

Stop TWI transaction. Must be issued while the TWI master is not suspended.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_STOP			Stop TWI transaction. Must be issued while the TWI master
				is not suspended.
		Trigger	1	Trigger task

6.22.7.4 TASKS_SUSPEND

Address offset: 0x01C
Suspend TWI transaction

Bit no	un	nbe	r		31	30 2	9 2	28 2	27 2	6 2	25 2	4 2	23 2	2 2	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID																																			Α
Rese	t C)x0	0000000		0	0	0	0	0 () (0 ()	0 ()	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																																			
Α	١	Ν	TASKS_SUSPEND									9	Susp	er	nd '	TΜ	/I tı	ran	sac	tio	n														
				Trigger	1							1	rigg	ger	r ta	sk																			

6.22.7.5 TASKS_RESUME

Address offset: 0x020
Resume TWI transaction

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_RESUME			Resume TWI transaction
		Trigger	1	Trigger task

6.22.7.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped



Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_STOPPED			TWI stopped
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.22.7.7 EVENTS_ERROR

Address offset: 0x124

TWI error

Bit n	umber		31	30	29	28 2	27 2	6 25	5 24	1 23	22	21	20 :	19 1	8 1	7 16	15	14	13 1	.2 1:	1 10	9	8	7	6	5	4	3 2	2 1	0
ID																														Α
Rese	et 0x00000000		0	0	0	0	0 (0 0	0	0	0	0	0	0 (0 (0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0	0
ID																														
Α	RW EVENTS_ERROR									T۱	VI e	erroi	r																	
		NotGenerated	0							Ev	ent	not	ge	ner	ateo	ł														
		Generated	1							Εv	ent	ger	nera	ated																

6.22.7.8 EVENTS_SUSPENDED

Address offset: 0x148

SUSPEND task has been issued, TWI traffic is now suspended.

Bit n	umber		31	30 2	29 :	28 2	27	26	25	24	23	22	2 2 1	L 20) 1!	9 1	8 1	7 1	6	15	14	13	3 12	11	10	9	8	7	6	5	4	3	2	1 0
ID																																		А
Rese	t 0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0) () () (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																																		
Α	RW EVENTS_SUSPENDED										SL	JSP	EN	D t	ask	c ha	as k	ee	n i	SSI	ue	d, 1	W	tra	affic	is	nov	v						
											su	spe	end	led																				
		NotGenerated	0								Ev	ent	t no	ot g	gen	era	ite	b																
		Generated	1								Εv	ent	t σe	ne	rat	-ed																		

6.22.7.9 EVENTS_RXSTARTED

Address offset: 0x14C

Receive sequence started

Bit n	umber		31	30	29	28	27	26 2	25 2	24 2	23 :	22	21 2	20 1	19 1	.8 1	7 1	6 1	5 1	4 13	3 12	11	10	9 8	3 7	' 6	5	4	3	2	1 0
ID																															Α
Rese	et 0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0 (0	0	0	0	0	0	0 0
ID																															
Α	RW EVENTS_RXSTARTED									F	Rec	ceiv	e se	equ	ien	e s	tar	ted													
		NotGenerated	0							E	ve	ent	not	ge	ner	ate	d														
		Generated	1							E	ve	ent	gen	era	itec																

6.22.7.10 EVENTS_TXSTARTED

Address offset: 0x150

Transmit sequence started



Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_TXSTARTED			Transmit sequence started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.22.7.11 EVENTS_LASTRX

Address offset: 0x15C

Byte boundary, starting to receive the last byte

Bit n	umber		31	30	29	28 2	27 2	6 2	5 2	4 23	3 2	2 2	1 2	0 1	9 18	3 17	16	15	14	13	12	11	10 9	9 8	7	6	5	4	3	2	1 0
ID																															Α
Rese	t 0x00000000		0	0	0	0	0 (0 0) (0) (0	0) (0	0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0 0
ID																															
Α	RW EVENTS_LASTRX									В	yte	bo	un	dar	y, s	tart	ing	to	rec	eive	e th	e la	st b	yte							
		NotGenerated	0							E۱	ven	nt n	ot 8	ger	nera	ted															
		Generated	1							E۱	ven	nt g	ene	erat	ted																

6.22.7.12 EVENTS_LASTTX

Address offset: 0x160

Byte boundary, starting to transmit the last byte

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_LASTTX			Byte boundary, starting to transmit the last byte
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.22.7.13 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	umber		313	0 29	28 2	7 26	25	24	23 :	22 2	21 2	0 19	18	17 1	16 1	l5 1	4 13	3 12	11	10	9	8	7	6 5	5 4	. 3	2	1	0
ID																		F	Ε	D	С	В.	A						
Rese	t 0x00000000		0 (0 0	0 (0 0	0	0	0	0	0 (0 0	0	0	0	0 (0	0	0	0	0	0	0	0 (0	0	0	0	0
ID																													
Α	RW LASTTX_STARTRX								Sho	ortc	ut b	etw	een	eve	nt	LAS	ТХ	and	ta:	sk S	TAF	TR)	(
		Disabled	0						Dis	able	e sh	orto	ut																
		Enabled	1						Ena	able	sho	ortcı	ut																
В	RW LASTTX_SUSPEND								Sho	ortc	ut b	etw	een	eve	nt	LAS	ТХ	and	ta:	sk S	USI	PEN	D						
		Disabled	0						Dis	able	e sh	orto	ut																
		Enabled	1						Ena	able	sho	ortcı	ut																
С	RW LASTTX_STOP								Sho	ortc	ut b	etw	een	eve	nt	LAS	ТХ	and	ta:	sk S	TOI)							
		Disabled	0						Dis	able	e sh	orto	ut																
		Enabled	1						Ena	able	sho	ortcı	ut																





Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			F E D C B A
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
D RW LASTRX_STARTTX			Shortcut between event LASTRX and task STARTTX
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut
E RW LASTRX_SUSPEND			Shortcut between event LASTRX and task SUSPEND
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut
F RW LASTRX_STOP			Shortcut between event LASTRX and task STOP
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut

6.22.7.14 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit n	umber		3	1 30	29	28	27	26	25	24	23	22	21	. 20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1 0	
ID										J	1			Н	G	F									D								А	
Rese	et 0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	
ID																																		
Α	RW STOPPED										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t ST	ОР	PEC)								
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
D	RW ERROR										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t EF	RRO	R									
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
F	RW SUSPENDED										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	r ev	en	t Sl	JSP	ENI	DED)							
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
G	RW RXSTARTED										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t R)	KST/	ART	ED								
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
Н	RW TXSTARTED										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t T)	(ST/	ART	ED								
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
I	RW LASTRX										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t LA	STI	RX									
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					
J	RW LASTTX										Ena	ab	le c	r d	isal	ble	int	err	upt	fo	rev	en	t LA	ST	ТХ									
		Disabled	C)							Dis	sab	le																					
		Enabled	1								Ena	ab	le																					

6.22.7.15 INTENSET

Address offset: 0x304

Enable interrupt



Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				J I H G F D A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to enable interrupt for event SUSPENDED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW RXSTARTED			Write '1' to enable interrupt for event RXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Н	RW TXSTARTED			Write '1' to enable interrupt for event TXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW LASTRX			Write '1' to enable interrupt for event LASTRX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW LASTTX			Write '1' to enable interrupt for event LASTTX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.22.7.16 INTENCLR

Address offset: 0x308

Disable interrupt

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			J	I HGF D A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to disable interrupt for event SUSPENDED
		Clear	1	Disable
		Disabled	0	Read: Disabled





Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				JI HGF D A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
		Enabled	1	Read: Enabled
G	RW RXSTARTED			Write '1' to disable interrupt for event RXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Н	RW TXSTARTED			Write '1' to disable interrupt for event TXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
1	RW LASTRX			Write '1' to disable interrupt for event LASTRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW LASTTX			Write '1' to disable interrupt for event LASTTX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.22.7.17 ERRORSRC

Address offset: 0x4C4

Error source

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW OVERRUN			Overrun error
				A new byte was received before previous byte got
				transferred into RXD buffer. (Previous data is lost)
		NotReceived	0	Error did not occur
		Received	1	Error occurred
В	RW ANACK			NACK received after sending the address (write '1' to clear)
		NotReceived	0	Error did not occur
		Received	1	Error occurred
С	RW DNACK			NACK received after sending a data byte (write '1' to clear)
		NotReceived	0	Error did not occur
		Received	1	Error occurred

6.22.7.18 ENABLE

Address offset: 0x500

Enable TWIM



Bit number		31 30 29 28 2	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			ААА
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENABLE			Enable or disable TWIM
	Disabled	0	Disable TWIM
	Enabled	6	Enable TWIM

6.22.7.19 PSEL.SCL

Address offset: 0x508

Pin select for SCL signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.22.7.20 PSEL.SDA

Address offset: 0x50C

Pin select for SDA signal

Bit no	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.22.7.21 FREQUENCY

Address offset: 0x524

TWI frequency. Accuracy depends on the HFCLK source selected.

Bit r	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10	9 8 7 6 5 4 3 2 1 0
ID				A A A A A A A A A
Res	et 0x04000000		0 0 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0
ID				
Α	RW FREQUENCY		TWI master clock frequency	
		K100	0x01980000 100 kbps	
		K250	0x04000000 250 kbps	
		K400	0x06400000 400 kbps	






6.22.7.22 RXD.PTR

Address offset: 0x534

Data pointer




See the memory chapter for details about which memories are available for EasyDMA.

6.22.7.23 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer



6.22.7.24 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction

Bit n	umbe	er	31 30	29	28 2	7 26	25	5 24	23	22	21	20	19	18 :	17 :	16 1	15 3	.4 1	3 1	2 11	. 10	9	8	7	6	5	4	3 2	1	0
ID																		A A	Δ Δ	A	Α	Α	Α	Α	Α	Α	A	А А	. A	Α
Rese	t 0x0	0000000	0 0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0	0 0	0	0
ID																														
Α	R	AMOUNT	[00)	7FFI	F]				Nu	mb	er	of b	oyte	es ti	ran	sfer	rec	lin	the	last	tra	nsa	cti	on.	In o	ase	è			
									of	NA	CK	erro	or, i	ncli	ude	s th	ne I	NAC	K'e	d by	/te.									

6.22.7.25 RXD.LIST

Address offset: 0x540 EasyDMA list type

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		ААА
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list






6.22.7.26 TXD.PTR

Address offset: 0x544

Data pointer




See the memory chapter for details about which memories are available for EasyDMA.

6.22.7.27 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer



6.22.7.28 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction

Bit n	umbe	er	31 30	29	28 2	7 26	25	5 24	23	22	21	20	19	18 :	17 :	16 1	15 3	.4 1	3 1:	2 11	. 10	9	8	7	6	5	4	3 2	1	0
ID																		A A	Δ Δ	A	Α	Α	Α	Α	Α	Α	A	А А	. A	Α
Rese	t 0x0	0000000	0 0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0	0 0	0	0
ID																														
Α	R	AMOUNT	[00)	7FFI	F]				Nu	mb	er	of b	oyte	es ti	ran	sfer	rec	lin	the	last	tra	nsa	cti	on.	In o	ase	è			
									of	NA	CK	erro	or, i	ncli	ude	s th	ne I	NAC	K'e	d by	/te.									

6.22.7.29 TXD.LIST

Address offset: 0x550 EasyDMA list type

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		ААА
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list






6.22.7.30 ADDRESS

Address offset: 0x588

Address used in the TWI transfer



A RW ADDRESS Address used in the TWI transfer

6.22.8 Electrical specification

6.22.8.1 TWIM interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{TWIM,SCL}	Bit rates for TWIM ³⁰	100		400	kbps
t _{TWIM,START}	Time from STARTRX/STARTTX task to transmission started		1.5		μs

6.22.8.2 Two Wire Interface Master (TWIM) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{TWIM} ,su_DAT	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWIM,HD_DAT}	Data hold time after negative edge on SCL – 100, 250 and	500			ns
	400 kbps				
$t_{TWIM,HD_STA,100kbps}$	TWIM master hold time for START and repeated START	9937.5			ns
	condition, 100 kbps				
$t_{TWIM,HD_STA,250kbps}$	TWIM master hold time for START and repeated START	3937.5			ns
	condition, 250 kbps				
$t_{TWIM,HD_STA,400kbps}$	TWIM master hold time for START and repeated START	2437.5			ns
	condition, 400 kbps				
$t_{TWIM,SU_STO,100kbps}$	TWIM master setup time from SCL high to STOP condition,	5000			ns
	100 kbps				
$t_{TWIM,SU_STO,250kbps}$	TWIM master setup time from SCL high to STOP condition,	2000			ns
	250 kbps				
$t_{TWIM,SU_STO,400kbps}$	TWIM master setup time from SCL high to STOP condition,	1250			ns
	400 kbps				
t _{TWIM,BUF,100kbps}	TWIM master bus free time between STOP and START	5800			ns
	conditions, 100 kbps				
t _{TWIM,BUF,250kbps}	TWIM master bus free time between STOP and START	2700			ns
	conditions, 250 kbps				
t _{TWIM,BUF,400kbps}	TWIM master bus free time between STOP and START	2100			ns
	conditions, 400 kbps				



High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO — General purpose input/output on page 130 for more details.

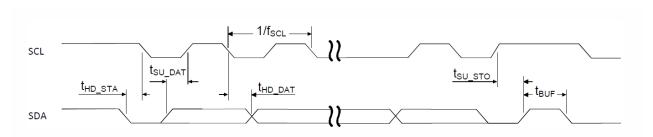


Figure 121: TWIM timing diagram, 1 byte transaction

6.22.9 Pullup resistor

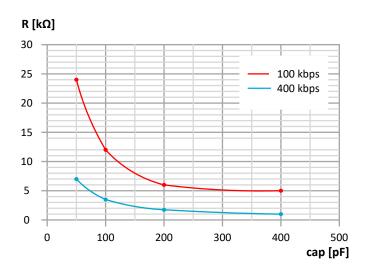


Figure 122: Recommended TWIM pullup value vs. line capacitance

- The I2C specification allows a line capacitance of 400 pF at most.
- The value of internal pullup resistor (R_{PU}) for nRF52820 can be found in GPIO General purpose input/output on page 130.

$6.23 \text{ TWIS} - I^2\text{C}$ compatible two-wire interface slave with EasyDMA

TWI slave with EasyDMA (TWIS) is compatible with I^2C operating at 100 kHz and 400 kHz. The TWI transmitter and receiver implement EasyDMA.

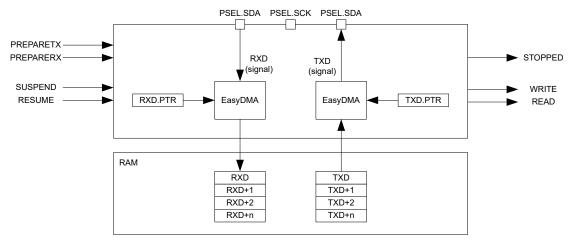


Figure 123: TWI slave with EasyDMA



A typical TWI setup consists of one master and one or more slaves. For an example, see the following figure. TWIS is only able to operate with a single master on the TWI bus.



Figure 124: A typical TWI setup comprising one master and three slaves

The following figure shows the TWI slave state machine.

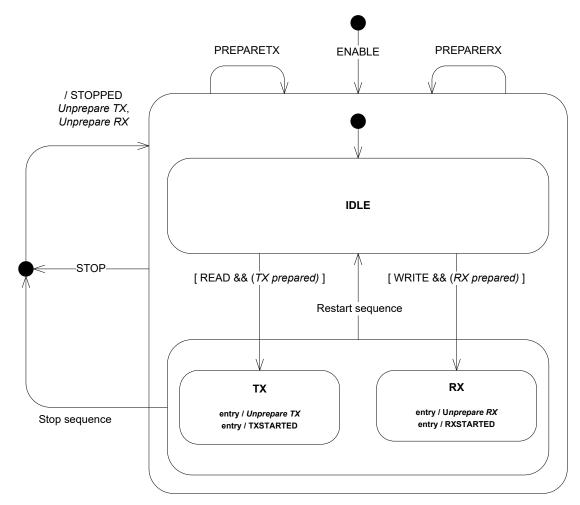


Figure 125: TWI slave state machine

The following table contains descriptions of the symbols used in the state machine.



Symbol	Туре	Description
ENABLE	Register	The TWI slave has been enabled via the ENABLE register.
PREPARETX	Task	The TASKS_PREPARETX task has been triggered.
STOP	Task	The TASKS_STOP task has been triggered.
PREPARERX	Task	The TASKS_PREPARERX task has been triggered.
STOPPED	Event	The EVENTS_STOPPED event was generated.
RXSTARTED	Event	The EVENTS_RXSTARTED event was generated.
TXSTARTED	Event	The EVENTS_TXSTARTED event was generated.
TX prepared	Internal	Internal flag indicating that a TASKS_PREPARETX task has been triggered. This flag is not visible to the
		user.
RX prepared	Internal	Internal flag indicating that a TASKS_PREPARERX task has been triggered. This flag is not visible to the
		user.
Unprepare TX	Internal	Clears the internal 'TX prepared' flag until next TASKS_PREPARETX task.
Unprepare RX	Internal	Clears the internal 'RX prepared' flag until next TASKS_PREPARERX task.
Stop condition	TWI protocol	A TWI stop condition was detected.
Restart condition	TWI protocol	A TWI restart condition was detected.

Table 99: TWI slave state machine symbols

The TWI slave can perform clock stretching, with the premise that the master is able to support it.

The TWI slave operates in a low power mode while waiting for a TWI master to initiate a transfer. As long as the TWI slave is not addressed, it will remain in this low power mode.

To secure correct behavior of the TWI slave, PSEL.SDA, CONFIG, and the ADDRESS[n] registers must be configured prior to enabling the TWI slave through the ENABLE register. Similarly, changing these settings must be performed while the TWI slave is disabled. Failing to do so may result in unpredictable behavior.

6.23.1 EasyDMA

The TWIS implements EasyDMA for accessing RAM without CPU involvement.

The following table shows the Easy DMA channels that the TWIS peripheral implements.

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 100: TWIS EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 37.

The STOPPED event indicates that EasyDMA has finished accessing the buffer in RAM.

6.23.2 TWI slave responding to a read command

Before the TWI slave can respond to a read command, the TWI slave must be configured correctly and enabled via the ENABLE register. When enabled, the TWI slave will be in its IDLE state. .

A read command is started when the TWI master generates a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE=0, READ=1). The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) response from the TWI slave.

The TWI slave is able to listen for up to two addresses at the same time. This is configured in the ADDRESS registers and the CONFIG register.



The TWI slave will only acknowledge (ACK) the read command if the address presented by the master matches one of the addresses the slave is configured to listen for. The TWI slave will generate a READ event when it acknowledges the read command.

The TWI slave is only able to detect a read command from the IDLE state.

The TWI slave will set an internal 'TX prepared' flag when the PREPARETX task is triggered.

When the read command is received, the TWI slave will enter the TX state if the internal 'TX prepared' flag is set.

If the internal 'TX prepared' flag is not set when the read command is received, the TWI slave will stretch the master's clock until the PREPARETX task is triggered and the internal 'TX prepared' flag is set.

The TWI slave will generate the TXSTARTED event and clear the 'TX prepared' flag ('unprepare TX') when it enters the TX state. In this state the TWI slave will send the data bytes found in the transmit buffer to the master using the master's clock.

The TWI slave will go back to the IDLE state if the TWI slave receives a restart command when it is in the TX state.

The TWI slave is stopped when it receives the stop condition from the TWI master. A STOPPED event will be generated when the transaction has stopped. The TWI slave will clear the 'TX prepared' flag ('unprepare TX') and go back to the IDLE state when it has stopped.

The transmit buffer is located in RAM at the address specified in the TXD.PTR register. The TWI slave will only be able to send TXD.MAXCNT bytes from the transmit buffer for each transaction. If the TWI master forces the slave to send more than TXD.MAXCNT bytes, the slave will send the byte specified in the ORC register to the master instead. If this happens, an ERROR event will be generated.

The EasyDMA configuration registers, see TXD.PTR etc., are latched when the TXSTARTED event is generated.

The TWI slave can be forced to stop by triggering the STOP task. A STOPPED event will be generated when the TWI slave has stopped. The TWI slave will clear the 'TX prepared' flag and go back to the IDLE state when it has stopped, see also Terminating an ongoing TWI transaction on page 331.

Each byte sent from the slave will be followed by an ACK/NACK bit sent from the master. The TWI master will generate a NACK following the last byte that it wants to receive to tell the slave to release the bus so that the TWI master can generate the stop condition. The TXD.AMOUNT register can be queried after a transaction to see how many bytes were sent.

A typical TWI slave read command response is shown in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI slave following a SUSPEND task.

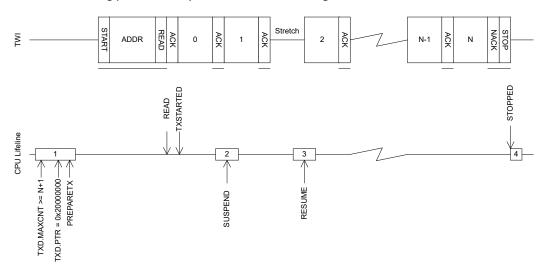


Figure 126: The TWI slave responding to a read command



6.23.3 TWI slave responding to a write command

Before the TWI slave can respond to a write command, the TWI slave must be configured correctly and enabled via the ENABLE register. When enabled, the TWI slave will be in its IDLE state.

A write command is started when the TWI master generates a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1). The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) response from the slave.

The TWI slave is able to listen for up to two addresses at the same time. This is configured in the ADDRESS registers and the CONFIG register.

The TWI slave will only acknowledge (ACK) the write command if the address presented by the master matches one of the addresses the slave is configured to listen for. The TWI slave will generate a WRITE event if it acknowledges the write command.

The TWI slave is only able to detect a write command from the IDLE state.

The TWI slave will set an internal 'RX prepared' flag when the PREPARERX task is triggered.

When the write command is received, the TWI slave will enter the RX state if the internal 'RX prepared' flag is set.

If the internal 'RX prepared' flag is not set when the write command is received, the TWI slave will stretch the master's clock until the PREPARERX task is triggered and the internal 'RX prepared' flag is set.

The TWI slave will generate the RXSTARTED event and clear the internal 'RX prepared' flag ('unprepare RX') when it enters the RX state. In this state, the TWI slave will be able to receive the bytes sent by the TWI master.

The TWI slave will go back to the IDLE state if the TWI slave receives a restart command when it is in the RX state.

The TWI slave is stopped when it receives the stop condition from the TWI master. A STOPPED event will be generated when the transaction has stopped. The TWI slave will clear the internal 'RX prepared' flag ('unprepare RX') and go back to the IDLE state when it has stopped.

The receive buffer is located in RAM at the address specified in the RXD.PTR register. The TWI slave will only be able to receive as many bytes as specified in the RXD.MAXCNT register. If the TWI master tries to send more bytes to the slave than it can receive, the extra bytes are discarded and NACKed by the slave. If this happens, an ERROR event will be generated.

The EasyDMA configuration registers, see RXD.PTR etc., are latched when the RXSTARTED event is generated.

The TWI slave can be forced to stop by triggering the STOP task. A STOPPED event will be generated when the TWI slave has stopped. The TWI slave will clear the internal 'RX prepared' flag and go back to the IDLE state when it has stopped, see also Terminating an ongoing TWI transaction on page 331.

The TWI slave will generate an ACK after every byte received from the master. The RXD.AMOUNT register can be queried after a transaction to see how many bytes were received.

A typical TWI slave write command response is show in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI slave following a SUSPEND task.



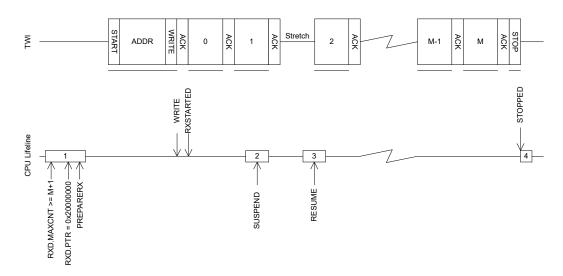


Figure 127: The TWI slave responding to a write command

6.23.4 Master repeated start sequence

An example of a repeated start sequence is one in which the TWI master writes two bytes to the slave followed by reading four bytes from the slave.

This is illustrated in the following figure.

In this example, the receiver does not know what the master wants to read in advance. This information is in the first two received bytes of the write in the repeated start sequence. To guarantee that the CPU is able to process the received data before the TWI slave starts to reply to the read command, the SUSPEND task is triggered via a shortcut from the READ event generated when the read command is received. When the CPU has processed the incoming data and prepared the correct data response, the CPU will resume the transaction by triggering the RESUME task.

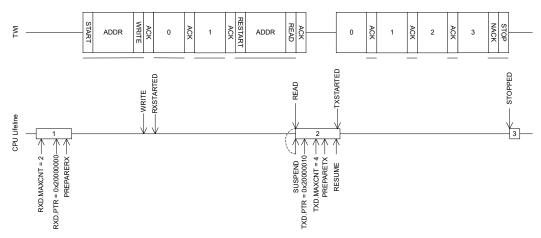


Figure 128: Repeated start sequence

6.23.5 Terminating an ongoing TWI transaction

In some situations, e.g. if the external TWI master is not responding correctly, it may be required to terminate an ongoing transaction.

This can be achieved by triggering the STOP task. In this situation, a STOPPED event will be generated when the TWI has stopped independent of whether or not a STOP condition has been generated on the TWI bus. The TWI slave will release the bus when it has stopped and go back to its IDLE state.



6.23.6 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task may not be always needed (the peripheral might already be stopped), but if it is sent, software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.23.7 Slave mode pin configuration

The SCL and SDA signals associated with the TWI slave are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI slave is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.SCL and PSEL.SDA must only be configured when the TWI slave is disabled.

To secure correct signal levels on the pins used by the TWI slave when the system is in OFF mode, and when the TWI slave is disabled, these pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

TWI slave signal	TWI slave pin	Direction	Output value	Drive strength
SCL	As specified in PSEL.SCL	Input	Not applicable	SOD1
SDA	As specified in PSEL.SDA	Input	Not applicable	SOD1

Table 101: GPIO configuration before enabling peripheral

6.23.8 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	TWIS	TWIS0	Two-wire interface slave 0		
0x40004000	TWIS	TWIS1	Two-wire interface slave 1		

Table 102: Instances

Register	Offset	Description
TASKS_STOP	0x014	Stop TWI transaction
TASKS_SUSPEND	0x01C	Suspend TWI transaction
TASKS_RESUME	0x020	Resume TWI transaction
TASKS_PREPARERX	0x030	Prepare the TWI slave to respond to a write command
TASKS_PREPARETX	0x034	Prepare the TWI slave to respond to a read command
EVENTS_STOPPED	0x104	TWI stopped
EVENTS_ERROR	0x124	TWI error
EVENTS_RXSTARTED	0x14C	Receive sequence started
EVENTS_TXSTARTED	0x150	Transmit sequence started
EVENTS_WRITE	0x164	Write command received
EVENTS_READ	0x168	Read command received
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt




Register	Offset	Description
ERRORSRC	0x4D0	Error source
MATCH	0x4D4	Status register indicating which address had a match
ENABLE	0x500	Enable TWIS
PSEL.SCL	0x508	Pin select for SCL signal
PSEL.SDA	0x50C	Pin select for SDA signal
RXD.PTR	0x534	RXD Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in RXD buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last RXD transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	TXD Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in TXD buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last TXD transaction
TXD.LIST	0x550	EasyDMA list type
ADDRESS[0]	0x588	TWI slave address 0
ADDRESS[1]	0x58C	TWI slave address 1
CONFIG	0x594	Configuration register for the address match mechanism
ORC	0x5C0	Over-read character. Character sent out in case of an over-read of the transmit buffer.

Table 103: Register overview


6.23.8.1 TASKS_STOP

Address offset: 0x014 Stop TWI transaction



6.23.8.2 TASKS_SUSPEND

Address offset: 0x01C
Suspend TWI transaction



6.23.8.3 TASKS_RESUME

Address offset: 0x020
Resume TWI transaction



Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_RESUME			Resume TWI transaction
	Trigger	1	Trigger task

6.23.8.4 TASKS_PREPARERX

Address offset: 0x030

Prepare the TWI slave to respond to a write command

Bit no	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				,
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_PREPARERX			Prepare the TWI slave to respond to a write command
		Trigger	1	Trigger task

6.23.8.5 TASKS_PREPARETX

Address offset: 0x034

Prepare the TWI slave to respond to a read command

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_PREPARETX			Prepare the TWI slave to respond to a read command
		Trigger	1	Trigger task

6.23.8.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped

Bit nu	mber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Reset	0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_STOPPED			TWI stopped
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.23.8.7 EVENTS_ERROR

Address offset: 0x124

TWI error



Bit number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_ERROR			TWI error
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.23.8.8 EVENTS_RXSTARTED

Address offset: 0x14C Receive sequence started

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_RXSTARTED			Receive sequence started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.23.8.9 EVENTS_TXSTARTED

Address offset: 0x150

Transmit sequence started

Bit n	umber		31 30 2	29 28	8 27	26	25 2	4 2	3 22	21 2	20 1	9 18	17	16 1	5 1	4 13	12 1	11 10	9	8	7	6	5	4	3 2	2 1	0
ID																											Α
Rese	t 0x00000000		0 0	0 0	0	0	0 (0 0	0	0	0 0	0	0	0 (0 0	0	0	0 0	0	0	0	0	0	0	0 0	0	0
ID																											
Α	RW EVENTS_TXSTARTED							T	rans	mit s	equ	ienc	e st	arte	d												
		NotGenerated	0					E	vent	not	gen	erat	ed														
		Generated	1					E	vent	gen	erat	ed															

6.23.8.10 EVENTS_WRITE

Address offset: 0x164
Write command received


Bit n	umber		31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12 :	11	10	9 :	8	7 (6 !	5 4	1 3	2	1	0
ID																																	Α
Rese	t 0x00000000		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0 (0 (0	0	0	0
ID											De																						
Α	RW EVENTS_WRITE										Wr	rite	co	mm	nan	d re	ece	ive	d														
		NotGenerated	0								Eve	ent	no	t ge	ene	rat	ed																
		Generated	1								Eve	ent	ge	ner	ate	d																	

6.23.8.11 EVENTS_READ

Address offset: 0x168
Read command received





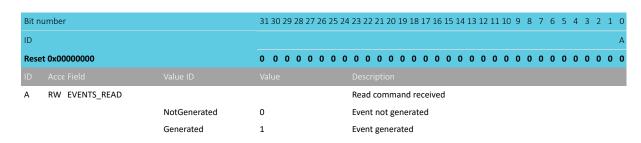

6.23.8.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30	29	28	27	26 2	25	24 2	3 22	2 2 1	. 20	19	18	17	16	15 1	14 :	13 1	2 1	1 10	9	8	7	6	5	4	3	2 1	1 0
ID																		В	Α											
Rese	t 0x00000000		0 0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0	0	0 () (0 0
ID																														
Α	RW WRITE_SUSPEND								9	hor	tcut	t be	etwe	en	eve	nt	WR	ITE	and	d ta	sk S	USI	PEN	D						
		Disabled	0						[Disal	ole s	sho	rtcı	ıt																
		Enabled	1						E	nab	le s	hor	rtcu	t																
В	RW READ_SUSPEND								9	hor	tcut	t be	etwe	en	eve	nt	RE/	AD :	and	tas	k Sl	JSP	END)						
		Disabled	0						[Disal	ole s	sho	rtcı	ıt																
		Enabled	1						E	nab	le s	hor	rtcu	t																

6.23.8.13 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			H G	F E B A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW STOPPED			Enable or disable interrupt for event STOPPED
		Disabled	0	Disable
		Enabled	1	Enable
В	RW ERROR			Enable or disable interrupt for event ERROR
		Disabled	0	Disable
		Enabled	1	Enable
E	RW RXSTARTED			Enable or disable interrupt for event RXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
F	RW TXSTARTED			Enable or disable interrupt for event TXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
G	RW WRITE			Enable or disable interrupt for event WRITE
		Disabled	0	Disable
		Enabled	1	Enable
Н	RW READ			Enable or disable interrupt for event READ
		Disabled	0	Disable
		Enabled	1	Enable



6.23.8.14 INTENSET

Address offset: 0x304

Enable interrupt

Reset 0x00000000000000000000000000000000000	Bit n	umber		313	30 2	9 28	27	26 2	25 24	4 2:	3 2	22 23	1 2	0 1	9 1	8 1	7 16	5 1!	5 14	4 1	3 12	2 1:	1 10	9	8	7	6	5 -	4 3	2	1	0
D Acce Field Value ID Value Description A RW STOPPED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled BRW ERROR Set 1 Enable Disabled 0 Read: Disabled Enable Disabled 0 Read: Disabled Enable Disabled 0 Read: Disabled Enable Disabled 1 Read: Enabled RW RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enable Disabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW TXSTARTED Set 1 Read: Enabled FRW TXSTARTED Set 1 Read: Enabled FRW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Frable Disabled 0 Read: Disabled Enabled 1 Read: Enabled RW READ Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 1 Read: Enabled Write '1' to enable interrupt for event READ RW READ Write '1' to enable interrupt for event READ Frable Enabled Write '1' to enable interrupt for event READ Frable Enabled Write '1' to enable interrupt for event READ Frable Enabled	ID							Н	G				F	- E										В							Α	
A RW STOPPED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled B RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled B RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled F RW RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled F RW TXSTARTED Set 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled Disabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED F RW WRITE Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 1 Read: Enabled Write '1' to enable interrupt for event READ H RW READ Write '1' to enable interrupt for event READ Enable Write '1' to enable interrupt for event READ Enable Write '1' to enable interrupt for event READ	Rese	et 0x00000000		0	0 0	0 0	0	0	0 0	0) (0 0) () () (0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Brank ERROR Write '1' to enable interrupt for event ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Enabled 0 Read: Disabled interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled From TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled From Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled From Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 0 Read: Disabled Enabled 0 Read: Disabled Enabled 1 Read: Enabled From Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled Head: Enabled Write '1' to enable interrupt for event READ Enabled Enabled 1 Read: Enabled	ID																															
Disabled 0 Read: Disabled 1 Read: Enabled 1 Read: Disabled 1 Read: Disabled 1 Read: Disabled 1 Read: Enabled 1 Read: Disabled 1 Read: Disabled 1 Read: Disabled 1 Read: Enabled 1 Read: Disabled 1 Read: Enabled 1 Read: Enabl	Α	RW STOPPED								V	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	or	eve	nt	STC	PP	ED	Т		Т			Т	Т
Enabled 1 Read: Enabled RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled ENABLE ENABLE Enabled ENABLE ENABLE ENABLE Enabled ENABLE ENABLE ENABLE ENABLED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled ENABLE ENABLE ENABLE ENABLE FOR TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled			Set	1						E	na	ble																				
RW ERROR Set Disabled Disable			Disabled	0						R	lea	d: D	isa	ble	d																	
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW TXSTARTED Set 1 Read: Enabled FRW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW READ FRW WRITE Set 1 Enable Disabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Enable Enable Write '1' to enable interrupt for event WRITE Enable FRW READ FREAD FRE			Enabled	1						R	lea	d: Eı	nal	bled	d																	
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Enabled 1 Read: Enabled Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW TXSTARTED	В	RW ERROR								W	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	for	eve	nt	ERF	OR								
Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW TXSTARTED Set 1 Enable Set 1 Enable Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Write '1' to enable interrupt for event WRITE Set 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enable Write '1' to enable interrupt for event WRITE Set 1 Enable Write '1' to enable interrupt for event WRITE Set 1 Enable Write '1' to enable interrupt for event WRITE Enable Write '1' to enable interrupt for event READ Enable			Set	1						E	na	ble																				
Set 1 Enable FRW TXSTARTED Set 1 Enable FRW TXSTARTED Set 1 Read: Enabled FRW TXSTARTED Set 1 Enable FRW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled FRW WRITE Set 1 Enable Set 1 Enable FRW WRITE Set 1 Enable Set 1 Enable FRW WRITE Set 1 Enable FRW WRITE Set 1 Enable FRW READ FREAD FREAD FREAD FREAD FREAD Write '1' to enable interrupt for event WRITE FREAD Write '1' to enable interrupt for event WRITE FREAD			Disabled	0						R	lea	d: D	isa	ble	d																	
Set 1 RW TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enable Enable Write '1' to enable interrupt for event READ Enabled Write '1' to enable interrupt for event READ Enabled Write '1' to enable interrupt for event READ Enable			Enabled	1						R	lea	d: Ei	nal	bled	d																	
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Finable Enabled Write '1' to enable interrupt for event READ Enabled 1 Read: Enabled	Е	RW RXSTARTED								W	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	for	eve	nt	RXS	TAI	RTE	D						
Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enable Notice '1' to enable interrupt for event WRITE Set 1 Enable H RW READ Write '1' to enable interrupt for event READ Enable Write '1' to enable interrupt for event READ Enable			Set	1						E	na	ble																				
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Write '1' to enable interrupt for event WRITE Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event WRITE Write '1' to enable interrupt for event WRITE Enable Write '1' to enable interrupt for event READ Enable			Disabled	0						R	lea	d: D	isa	ble	d																	
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enable Disabled 1 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event READ Set 1 Enable			Enabled	1						R	lea	d: Ei	nal	bled	d																	
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Set 1 Enable Enabled 1 Read: Enabled Write '1' to enable interrupt for event READ Set 1 Enable	F	RW TXSTARTED								W	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	or	eve	nt	TXS	TAF	RTE	0						
Enabled 1 Read: Enabled Write '1' to enable interrupt for event WRITE Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event WRITE Write '1' to enable interrupt for event READ Set 1 Enable			Set	1						E	na	ble																				
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event WRITE Write '1' to enable interrupt for event WRITE Read: Disabled Write '1' to enable interrupt for event READ Set 1 Enable			Disabled	0						R	lea	d: D	isa	ble	d																	
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event READ Set 1 Enable			Enabled	1						R	lea	d: Ei	nal	bled	d																	
Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event READ Set 1 Enable	G	RW WRITE								W	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	or	eve	nt	WR	ITE								
Enabled 1 Read: Enabled H RW READ Write '1' to enable interrupt for event READ Set 1 Enable			Set	1						E	na	ble																				
H RW READ Write '1' to enable interrupt for event READ Set 1 Enable			Disabled	0						R	lea	d: D	isa	ble	d																	
Set 1 Enable			Enabled	1						R	lea	d: Ei	nal	bled	d																	
	Н	RW READ								W	Vri	te '1	' to	o er	nab	le i	nte	rru	pt 1	or	eve	nt	REA	D								
Disabled 0 Read: Disabled			Set	1						E	na	ble																				
			Disabled	0						R	lea	d: D	isa	ble	d																	
Enabled 1 Read: Enabled			Enabled	1						R	lea	d: Eı	nal	bled	d																	

6.23.8.15 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		33	. 30 2	29 2	8 27	7 26	25	24	23 2	22 2	1 20	19	18	17 1	6 1	5 14	1 13	12	11 1	10 9	8	7	6	5	4	3 2	2 1	0
ID							Н	G				F	Ε								В							Α	
Rese	et 0x00000000		0	0	0 (0 0	0	0	0	0 (0 0	0 0	0	0	0 0) (0	0	0	0	0 0	0	0	0	0	0	0 (0	0
ID										Desc																			
Α	RW STOPPED									Writ	te '1	1' to	disa	able	inte	erru	ıpt 1	for	evei	nt S1	OPF	ED							
		Clear	1							Disa	ble	!																	
		Disabled	0							Read	d: D	Disal	oled																
		Enabled	1							Read	d: E	nab	led																
В	RW ERROR									Writ	te '1	1' to	disa	able	inte	erru	ıpt i	for	evei	nt El	RROI	2							
		Clear	1							Disa	ble	!																	
		Disabled	0							Read	d: D	Disal	oled																
		Enabled	1							Read	d: E	nab	led																
Ε	RW RXSTARTED									Writ	te '1	1' to	disa	able	inte	erru	ıpt i	for	evei	nt R	KSTA	RTE	D						
		Clear	1							Disa	ble	:																	




Bit n	umber		31 30 29 28 27 26	25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			Н	G	F E B A
Rese	t 0x00000000		0 0 0 0 0 0	0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
F	RW TXSTARTED				Write '1' to disable interrupt for event TXSTARTED
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
G	RW WRITE				Write '1' to disable interrupt for event WRITE
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
Н	RW READ				Write '1' to disable interrupt for event READ
		Clear	1		Disable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled

6.23.8.16 ERRORSRC

Address offset: 0x4D0

Error source

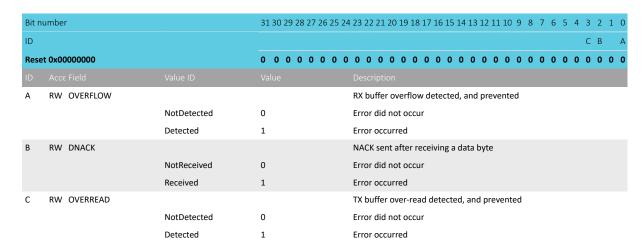

6.23.8.17 MATCH

Address offset: 0x4D4

Status register indicating which address had a match


Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field	
A R MATCH	[01] Indication of which address in {ADDRESS} that matched the
	incoming address

6.23.8.18 ENABLE

Address offset: 0x500



Enable TWIS

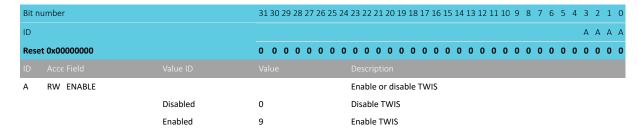

6.23.8.19 PSEL.SCL

Address offset: 0x508

Pin select for SCL signal

Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect


6.23.8.20 PSEL.SDA

Address offset: 0x50C Pin select for SDA signal

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.23.8.21 RXD.PTR

Address offset: 0x534 RXD Data pointer



See the memory chapter for details about which memories are available for EasyDMA.






6.23.8.22 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in RXD buffer



6.23.8.23 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last RXD transaction

Α	R AMOUNT	[00x7FFF]	Number of bytes transferred in the last RXD transaction
ID			
Reset	t 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A
Bit nu	ımber	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.23.8.24 RXD.LIST

Address offset: 0x540

EasyDMA list type

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW LIST			List type
		Disabled	0	Disable EasyDMA list
		ArrayList	1	Use array list

6.23.8.25 TXD.PTR

Address offset: 0x544


TXD Data pointer

Bit number	313	30 29	28	27 2	6 25	5 24	23 2	22 2	1 20	19	18 1	.7 1	6 15	14	13	12 1	.1 10	9	8	7	6	5	4	3	2 :	1 0
ID	А	АА	Α	A A	A	Α	Α	A A	4 A	Α	A	Δ ,	A A	Α	Α	A A	Δ Δ	Α	Α	Α	Α	Α	Α	Α .	A A	A A
Reset 0x00000000	0	0 0	0	0 0	0	0	0	0 (0 0	0	0	0 (0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0 (
ID Acce Field																										
A RW PTR							TXE) Da	ta p	oint	er															

See the memory chapter for details about which memories are available for EasyDMA.


6.23.8.26 TXD.MAXCNT

Address offset: 0x548





Maximum number of bytes in TXD buffer



6.23.8.27 TXD.AMOUNT

Address offset: 0x54C


Number of bytes transferred in the last TXD transaction

Α	R AMOUNT	[00x7FFF]	Number of bytes transferred in the last TXD transaction
ID			
Res	et 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit	number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.23.8.28 TXD.LIST

Address offset: 0x550


EasyDMA list type

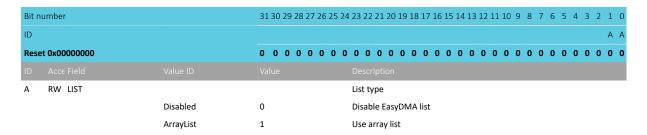

6.23.8.29 ADDRESS[n] (n=0..1)

Address offset: $0x588 + (n \times 0x4)$

TWI slave address n




6.23.8.30 CONFIG

Address offset: 0x594

Configuration register for the address match mechanism



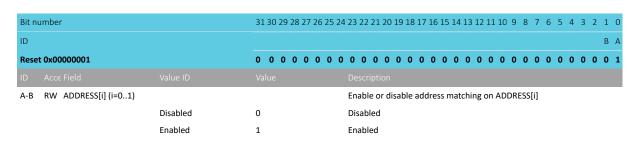

6.23.8.31 ORC

Address offset: 0x5C0

Over-read character. Character sent out in case of an over-read of the transmit buffer.

Α	RW ORC		Over-read character. Character sent out in case of an over-
ID			
Res	et 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A
Bit r	umber	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

read of the transmit buffer.

6.23.9 Electrical specification

6.23.9.1 TWIS slave timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{TWIS,SCL}	Bit rates for TWIS ³¹	100		400	kbps
t _{TWIS,START}	Time from PREPARERX/PREPARETX task to ready to receive/		1.5		μs
	transmit				
t _{TWIS,SU_DAT}	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWIS,HD_DAT}	Data hold time after negative edge on SCL – all modes	500			ns
$t_{TWIS,HD_STA,100kbps}$	TWI slave hold time from for START condition (SDA low to	5200			ns
	SCL low), 100 kbps				
$t_{TWIS,HD_STA,400kbps}$	TWI slave hold time from for START condition (SDA low to	1300			ns
	SCL low), 400 kbps				
$t_{TWIS,SU_STO,100kbps}$	TWI slave setup time from SCL high to STOP condition, 100	5200			ns
	kbps				
$t_{TWIS,SU_STO,400kbps}$	TWI slave setup time from SCL high to STOP condition, 400	1300			ns
	kbps				
t _{TWIS,BUF,100kbps}	TWI slave bus free time between STOP and START		4700		ns
	conditions, 100 kbps				
t _{TWIS,BUF,400kbps}	TWI slave bus free time between STOP and START		1300		ns
	conditions, 400 kbps				



High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO chapter for more details.

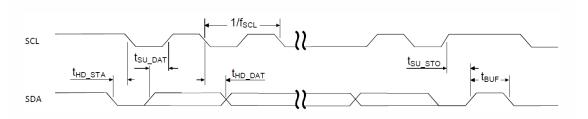


Figure 129: TWIS timing diagram, 1 byte transaction

6.24 UART — Universal asynchronous receiver/transmitter

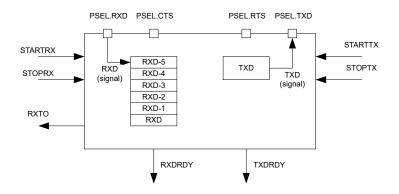


Figure 130: UART configuration

6.24.1 Functional description

Listed here are the main features of UART.

The UART implements support for the following features:

- Full-duplex operation
- Automatic flow control
- Parity checking and generation for the 9th data bit

As illustrated in UART configuration on page 343, the UART uses the TXD and RXD registers directly to transmit and receive data. The UART uses one stop bit.

Note: The external crystal oscillator must be enabled to obtain sufficient clock accuracy for stable communication. See CLOCK — Clock control on page 72 for more information.

6.24.2 Pin configuration

The different signals RXD, CTS (Clear To Send, active low), RTS (Request To Send, active low), and TXD associated with the UART are mapped to physical pins according to the configuration specified in the PSEL.RXD, PSEL.RTS, and PSEL.TXD registers respectively.

If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated UART signal will not be connected to any physical pin. The PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers and their configurations are only used as long as the UART is enabled, and retained only for the duration the device is in ON mode. PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD must only be configured when the UART is disabled.



To secure correct signal levels on the pins by the UART when the system is in OFF mode, the pins must be configured in the GPIO peripheral as described in Pin configuration on page 343.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

UART pin	Direction	Output value
RXD	Input	Not applicable
CTS	Input	Not applicable
RTS	Output	1
TXD	Output	1

Table 104: GPIO configuration

6.24.3 Shared resources

The UART shares registers and resources with other peripherals that have the same ID as the UART.

All peripherals with the same ID as the UART must be disabled before configuring and using the UART. Disabling a peripheral that has the same ID as the UART will not reset any of the registers that are shared with the UART. It is therefore important to configure all relevant UART registers explicitly to ensure that it operates correctly.

See Instantiation on page 18 for details on peripherals and their IDs.

6.24.4 Transmission

A UART transmission sequence is started by triggering the STARTTX task.

Bytes are transmitted by writing to the TXD register. When a byte has been successfully transmitted, the UART will generate a TXDRDY event after which a new byte can be written to the TXD register. A UART transmission sequence is stopped immediately by triggering the STOPTX task.

If flow control is enabled, a transmission will be automatically suspended when CTS is deactivated, and resumed when CTS is activated again, as shown in the following figure. A byte that is in transmission when CTS is deactivated will be fully transmitted before the transmission is suspended. For more information, see Suspending the UART on page 345.

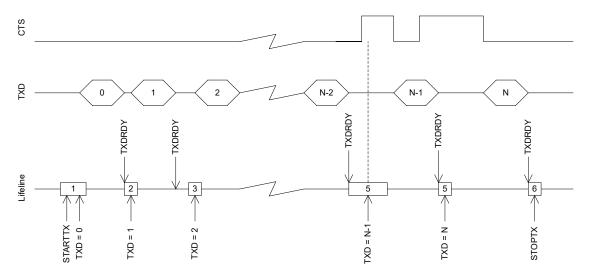


Figure 131: UART transmission



6.24.5 Reception

A UART reception sequence is started by triggering the STARTRX task.

The UART receiver chain implements a FIFO capable of storing six incoming RXD bytes before data is overwritten. Bytes are extracted from this FIFO by reading the RXD register. When a byte is extracted from the FIFO, a new byte pending in the FIFO will be moved to the RXD register. The UART will generate an RXDRDY event every time a new byte is moved to the RXD register.

When flow control is enabled, the UART will deactivate the RTS signal when there is only space for four more bytes in the receiver FIFO. The counterpart transmitter is therefore able to send up to four bytes after the RTS signal is deactivated before data is being overwritten. To prevent overwriting data in the FIFO, the counterpart UART transmitter must therefore make sure to stop transmitting data within four bytes after the RTS line is deactivated.

The RTS signal will first be activated again when the FIFO has been emptied, that is, when all bytes in the FIFO have been read by the CPU, see UART reception on page 345.

The RTS signal will also be deactivated when the receiver is stopped through the STOPRX task as illustrated in UART reception on page 345. The UART is able to receive four to five additional bytes if they are sent in succession immediately after the RTS signal has been deactivated. This is possible because the UART is, even after the STOPRX task is triggered, able to receive bytes for an extended period of time dependent on the configured baud rate. The UART will generate a receiver timeout event (RXTO) when this period has elapsed.

To prevent loss of incoming data, the RXD register must only be read one time following every RXDRDY event.

To secure that the CPU can detect all incoming RXDRDY events through the RXDRDY event register, the RXDRDY event register must be cleared before the RXD register is read. The reason for this is that the UART is allowed to write a new byte to the RXD register, and can generate a new event immediately after the RXD register is read (emptied) by the CPU.

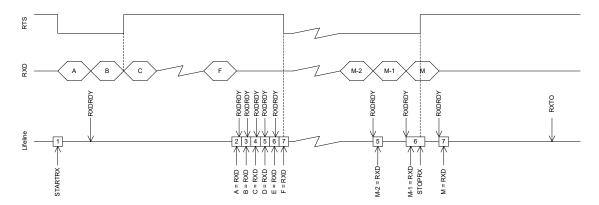


Figure 132: UART reception

As indicated in occurrence 2 in the figure, the RXDRDY event associated with byte B is generated first after byte A has been extracted from RXD.

6.24.6 Suspending the UART

The UART can be suspended by triggering the SUSPEND task.

SUSPEND will affect both the UART receiver and the UART transmitter, i.e. the transmitter will stop transmitting and the receiver will stop receiving. UART transmission and reception can be resumed, after being suspended, by triggering STARTTX and STARTRX respectively.

Following a SUSPEND task, an ongoing TXD byte transmission will be completed before the UART is suspended.



When the SUSPEND task is triggered, the UART receiver will behave in the same way as it does when the STOPRX task is triggered.

6.24.7 Error conditions

An ERROR event, in the form of a framing error, will be generated if a valid stop bit is not detected in a frame. Another ERROR event, in the form of a break condition, will be generated if the RXD line is held active low for longer than the length of a data frame. Effectively, a framing error is always generated before a break condition occurs.

6.24.8 Using the UART without flow control

If flow control is not enabled, the interface will behave as if the CTS and RTS lines are kept active all the time.

6.24.9 Parity and stop bit configuration

Automatic even parity generation for both transmission and reception can be configured using the register CONFIG on page 354. If odd parity is desired, it can be configured using the register CONFIG on page 354. See the register description for details.

The amount of stop bits can also be configured through the register CONFIG on page 354.

6.24.10 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40002000	UART	UART0	Universal asynchronous receiver/		Deprecated
			transmitter		

Table 105: Instances

Register	Offset	Description
TASKS_STARTRX	0x000	Start UART receiver
TASKS_STOPRX	0x004	Stop UART receiver
TASKS_STARTTX	0x008	Start UART transmitter
TASKS_STOPTX	0x00C	Stop UART transmitter
TASKS_SUSPEND	0x01C	Suspend UART
EVENTS_CTS	0x100	CTS is activated (set low). Clear To Send.
EVENTS_NCTS	0x104	CTS is deactivated (set high). Not Clear To Send.
EVENTS_RXDRDY	0x108	Data received in RXD
EVENTS_TXDRDY	0x11C	Data sent from TXD
EVENTS_ERROR	0x124	Error detected
EVENTS_RXTO	0x144	Receiver timeout
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x480	Error source
ENABLE	0x500	Enable UART
PSEL.RTS	0x508	Pin select for RTS
PSEL.TXD	0x50C	Pin select for TXD
PSEL.CTS	0x510	Pin select for CTS
PSEL.RXD	0x514	Pin select for RXD
RXD	0x518	RXD register
TXD	0x51C	TXD register
BAUDRATE	0x524	Baud rate. Accuracy depends on the HFCLK source selected.



Register	Offset	Description
CONFIG	0x56C	Configuration of parity and hardware flow control

Table 106: Register overview

6.24.10.1 TASKS_STARTRX

Address offset: 0x000 Start UART receiver

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_STARTRX			Start UART receiver
		Trigger	1	Trigger task

6.24.10.2 TASKS_STOPRX

Address offset: 0x004 Stop UART receiver

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_STOPRX			Stop UART receiver
		Trigger	1	Trigger task

6.24.10.3 TASKS_STARTTX

Address offset: 0x008 Start UART transmitter

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $
ID Acce Field			Description
A W TASKS_STAR	гтх		Start UART transmitter
	Trigger	1	Trigger task

6.24.10.4 TASKS_STOPTX

Address offset: 0x00C Stop UART transmitter



Bit numb	er		31 30 29 28	3 27 26	25 24	23 22	2 21 20	0 19	18 17	16 1	5 14 1	.3 12	11 1	0 9	8	7	6	5 4	- 3	2	1 0
ID																					Α
Reset 0x	00000000		0 0 0 0	0 0	0 0	0 0	0 0	0	0 0	0 0	0	0 0	0 (0	0	0	0	0 0	0	0	0 0
ID Ac																					
A W	TASKS_STOPTX					Stop	UART	tran	smitt	er											
		Trigger	1			Trigg	er tas	k													

6.24.10.5 TASKS_SUSPEND

Address offset: 0x01C

Suspend UART

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_SUSPEND			Suspend UART
		Trigger	1	Trigger task

6.24.10.6 EVENTS_CTS

Address offset: 0x100

CTS is activated (set low). Clear To Send.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_CTS			CTS is activated (set low). Clear To Send.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.24.10.7 EVENTS_NCTS

Address offset: 0x104

CTS is deactivated (set high). Not Clear To Send.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_NCTS			CTS is deactivated (set high). Not Clear To Send.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.24.10.8 EVENTS_RXDRDY

Address offset: 0x108

Data received in RXD



Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_RXDRDY			Data received in RXD
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.24.10.9 EVENTS_TXDRDY

Address offset: 0x11C Data sent from TXD

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_TXDRDY			Data sent from TXD
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.24.10.10 EVENTS_ERROR

Address offset: 0x124

Error detected

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_ERROR			Error detected
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.24.10.11 EVENTS_RXTO

Address offset: 0x144 Receiver timeout

Bit number		31 30 2	9 28 2	7 26	25 2	24 2	3 22	21 2	19	18 1	7 16	15	14 1	3 12 1	11 10	9	8	7 6	5 5	4	3	2 1	0
ID																							Α
Reset 0x00000000		0 0 0	0 0	0 0	0	0 0	0	0 0	0	0 (0	0	0 0	0	0 0	0	0	0 (0	0	0	0 0	0
ID Acce Field Val																							
A RW EVENTS_RXTO						R	eceiv	ver ti	meo	ut													
No	tGenerated	0				E	vent	not g	genei	ate	d												
Ge	nerated	1				E	vent	gene	rate	t													

6.24.10.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks



D'1 1		24 20 20 20 27 26 25 2	4.22.22.24.20.40.40.47.46.45.44.42.42.44.40.0.0.7.6.5.4.2.2.4.4.0
Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			ВА
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW CTS_STARTRX			Shortcut between event CTS and task STARTRX
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut
B RW NCTS_STOPRX			Shortcut between event NCTS and task STOPRX
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut

6.24.10.13 INTENSET

Address offset: 0x304

Enable interrupt

Bit r	number		31 30 29 28 27	26 25 24 2	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					F E D C B A
Res	et 0x00000000		0 0 0 0 0	0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW CTS			,	Write '1' to enable interrupt for event CTS
		Set	1	ı	Enable
		Disabled	0		Read: Disabled
		Enabled	1	1	Read: Enabled
В	RW NCTS			,	Write '1' to enable interrupt for event NCTS
		Set	1	1	Enable
		Disabled	0	1	Read: Disabled
		Enabled	1	1	Read: Enabled
С	RW RXDRDY			,	Write '1' to enable interrupt for event RXDRDY
		Set	1	ı	Enable
		Disabled	0	I	Read: Disabled
		Enabled	1	I	Read: Enabled
D	RW TXDRDY			,	Write '1' to enable interrupt for event TXDRDY
		Set	1	ı	Enable
		Disabled	0	ı	Read: Disabled
		Enabled	1	1	Read: Enabled
E	RW ERROR			,	Write '1' to enable interrupt for event ERROR
		Set	1	I	Enable
		Disabled	0	ı	Read: Disabled
		Enabled	1		Read: Enabled
F	RW RXTO			,	Write '1' to enable interrupt for event RXTO
		Set	1	1	Enable
		Disabled	0	- 1	Read: Disabled
		Enabled	1	ı	Read: Enabled

6.24.10.14 INTENCLR

Address offset: 0x308

Disable interrupt



Bit	number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW CTS			Write '1' to disable interrupt for event CTS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW NCTS			Write '1' to disable interrupt for event NCTS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW RXDRDY			Write '1' to disable interrupt for event RXDRDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW TXDRDY			Write '1' to disable interrupt for event TXDRDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ε	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW RXTO			Write '1' to disable interrupt for event RXTO
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.24.10.15 ERRORSRC

Address offset: 0x480

Error source

Bit number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			D C B A
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
			Description
A RW OVERR	UN		Overrun error
			A start bit is received while the previous data still lies in
			RXD. (Previous data is lost.)
	NotPresent	0	Read: error not present
	Present	1	Read: error present
B RW PARITY			Parity error
			A character with bad parity is received, if HW parity check is
			enabled.
	NotPresent	0	Read: error not present
	Present	1	Read: error present
C RW FRAMII	NG		Framing error occurred
			A valid stop bit is not detected on the serial data input after
			all bits in a character have been received.
	NotPresent	0	Read: error not present





Bit n	umber		31 30 2	9 28 2	27 26	25	24 2	3 22	21 2	0 1	9 18	3 17	16	15 1	.4 1	3 12	11	10 9	9 8	3 7	6	5	4	3 2	1	. 0
ID																								D (В	A
Rese	t 0x00000000		0 0	0 0	0 0	0	0 0	0	0 (0 0	0	0	0	0 (0 0	0	0	0 (0 0	0	0	0	0	0 (0	0
ID																										
		Present	1				R	ead:	: erro	r pı	rese	nt														
D	RW BREAK						В	reak	con	ditio	on															
							Т	he s	erial	dat	a in	put	is 'C)' fo	r lor	nger	tha	n th	e le	ngt	h of	a				
							d	ata f	frame	e. (1	Γhe	data	fra	me	len	gth i	s 10) bit	s wi	tho	ut p	arit	ty			
							b	it, ar	nd 11	1 bit	ts w	ith p	oari	ty b	it.).											
		NotPresent	0				R	ead:	: erro	or no	ot p	rese	nt													
		Present	1				R	ead:	: erro	r pı	rese	nt														

6.24.10.16 ENABLE

Address offset: 0x500

Enable UART

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			АААА
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW ENABLE			Enable or disable UART
	Disabled	0	Disable UART
	Enabled	4	Enable UART

6.24.10.17 PSEL.RTS

Address offset: 0x508

Pin select for RTS

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.18 PSEL.TXD

Address offset: 0x50C

Pin select for TXD



Bit no	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.19 PSEL.CTS

Address offset: 0x510 Pin select for CTS

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t 0xFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.20 PSEL.RXD

Address offset: 0x514 Pin select for RXD

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t 0xFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.21 RXD

Address offset: 0x518

RXD register

A R RXD		RX data received in previous transfers, double buffered
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A
Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

RX data received in previous transfers, double buffered

6.24.10.22 TXD

Address offset: 0x51C

TXD register

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A W TXD		TX data to be transferred

6.24.10.23 BAUDRATE

Address offset: 0x524

Baud rate. Accuracy depends on the HFCLK source selected.

Bit r	number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Res	et 0x04000000		0 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Α	RW BAUDRATE		Baud rate
		Baud1200	0x0004F000 1200 baud (actual rate: 1205)
		Baud2400	0x0009D000 2400 baud (actual rate: 2396)
		Baud4800	0x0013B000 4800 baud (actual rate: 4808)
		Baud9600	0x00275000 9600 baud (actual rate: 9598)
		Baud14400	0x003B0000 14400 baud (actual rate: 14414)
		Baud19200	0x004EA000 19200 baud (actual rate: 19208)
		Baud28800	0x0075F000 28800 baud (actual rate: 28829)
		Baud31250	0x00800000 31250 baud
		Baud38400	0x009D5000 38400 baud (actual rate: 38462)
		Baud56000	0x00E50000 56000 baud (actual rate: 55944)
		Baud57600	0x00EBF000 57600 baud (actual rate: 57762)
		Baud76800	0x013A9000 76800 baud (actual rate: 76923)
		Baud115200	0x01D7E000 115200 baud (actual rate: 115942)
		Baud230400	0x03AFB000 230400 baud (actual rate: 231884)
		Baud250000	0x04000000 250000 baud
		Baud460800	0x075F7000 460800 baud (actual rate: 470588)
		Baud921600	0x0EBED000 921600 baud (actual rate: 941176)
		Baud1M	0x10000000 1Mega baud

6.24.10.24 CONFIG

Address offset: 0x56C

Configuration of parity and hardware flow control

Bit number			31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D CBBBA
Reset 0x000	000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce				
A RW	HWFC			Hardware flow control
		Disabled	0	Disabled
		Enabled	1	Enabled
B RW	PARITY			Parity
		Excluded	0x0	Exclude parity bit
		Included	0x7	Include parity bit
C RW	STOP			Stop bits
		One	0	One stop bit
		Two	1	Two stop bits





Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B B B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
D	RW PARITYTYPE			Even or odd parity type
		Even	0	Even parity
		Odd	1	Odd parity

6.24.11 Electrical specification

6.24.11.1 UART electrical specification

Symbol	Description	Min.	Тур.	Max.	Units
f _{UART}	Baud rate for UART ³² .			1000	kbps
t _{UART,CTSH}	CTS high time	1			μs
t _{UART,START}	Time from STARTRX/STARTTX task to transmission started		1		μs

6.25 UARTE — Universal asynchronous receiver/transmitter with EasyDMA

The Universal asynchronous receiver/transmitter with EasyDMA (UARTE) offers fast, full-duplex, asynchronous serial communication with built-in flow control (CTS, RTS) support in hardware at a rate up to 1 Mbps, and EasyDMA data transfer from/to RAM.

Listed here are the main features for UARTE:

- Full-duplex operation
- Automatic hardware flow control
- Optional even parity bit checking and generation
- EasyDMA
- Up to 1 Mbps baudrate
- Return to IDLE between transactions supported (when using HW flow control)
- One or two stop bit
- · Least significant bit (LSB) first

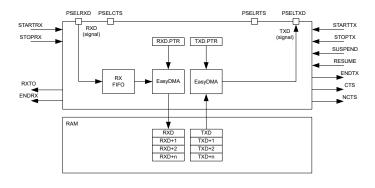


Figure 133: UARTE configuration



High baud rates may require GPIOs to be set as High Drive, see GPIO for more details.

The GPIOs used for each UART interface can be chosen from any GPIO on the device and are independently configurable. This enables great flexibility in device pinout and efficient use of board space and signal routing.

Note: The external crystal oscillator must be enabled to obtain sufficient clock accuracy for stable communication. See CLOCK — Clock control on page 72 for more information.

6.25.1 EasyDMA

The UARTE implements EasyDMA for reading and writing to and from the RAM.

If the TXD.PTR and the RXD.PTR are not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next RX/TX transmission immediately after having received the RXSTARTED/TXSTARTED event.

The ENDRX and ENDTX events indicate that the EasyDMA is finished accessing the RX or TX buffer in RAM.

6.25.2 Transmission

The first step of a DMA transmission is storing bytes in the transmit buffer and configuring EasyDMA. This is achieved by writing the initial address pointer to TXD.PTR, and the number of bytes in the RAM buffer to TXD.MAXCNT. The UARTE transmission is started by triggering the STARTTX task.

After each byte has been sent over the TXD line, a TXDRDY event will be generated.

When all bytes in the TXD buffer, as specified in the TXD.MAXCNT register, have been transmitted, the UARTE transmission will end automatically and an ENDTX event will be generated.

A UARTE transmission sequence is stopped by triggering the STOPTX task. A TXSTOPPED event will be generated when the UARTE transmitter has stopped.

If the ENDTX event has not already been generated when the UARTE transmitter has come to a stop, the UARTE will generate the ENDTX event explicitly even though all bytes in the TXD buffer, as specified in the TXD.MAXCNT register, have not been transmitted.

If flow control is enabled through the HWFC field in the CONFIG register, a transmission will be automatically suspended when CTS is deactivated and resumed when CTS is activated again, as shown in the following figure. A byte that is in transmission when CTS is deactivated will be fully transmitted before the transmission is suspended.



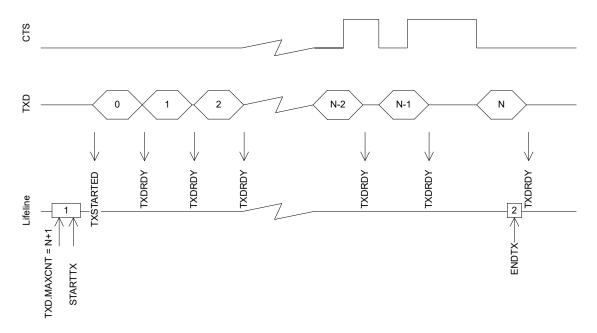


Figure 134: UARTE transmission

The UARTE transmitter will be in its lowest activity level, and consume the least amount of energy, when it is stopped, i.e. before it is started via STARTTX or after it has been stopped via STOPTX and the TXSTOPPED event has been generated. See POWER — Power supply on page 52 for more information about power modes.

6.25.3 Reception

The UARTE receiver is started by triggering the STARTRX task. The UARTE receiver is using EasyDMA to store incoming data in an RX buffer in RAM.

The RX buffer is located at the address specified in the RXD.PTR register. The RXD.PTR register is double-buffered and it can be updated and prepared for the next STARTRX task immediately after the RXSTARTED event is generated. The size of the RX buffer is specified in the RXD.MAXCNT register. The UARTE generates an ENDRX event when it has filled up the RX buffer, as seen in the following figure.

For each byte received over the RXD line, an RXDRDY event will be generated. This event is likely to occur before the corresponding data has been transferred to Data RAM.

The RXD.AMOUNT register can be queried following an ENDRX event to see how many new bytes have been transferred to the RX buffer in RAM since the previous ENDRX event.



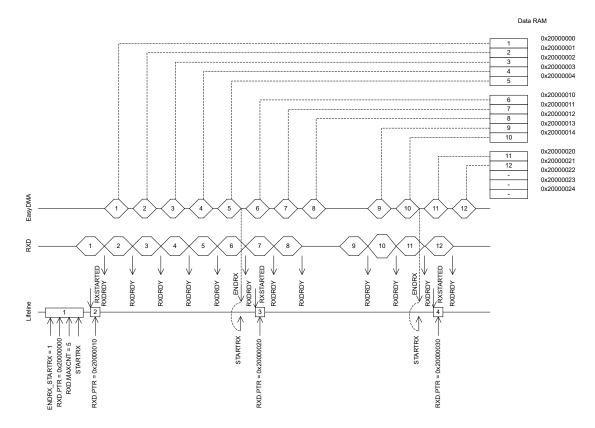


Figure 135: UARTE reception

The UARTE receiver is stopped by triggering the STOPRX task. An RXTO event is generated when the UARTE has stopped. The UARTE will make sure that an impending ENDRX event will be generated before the RXTO event is generated. This means that the UARTE will guarantee that no ENDRX event will be generated after RXTO, unless the UARTE is restarted or a FLUSHRX command is issued after the RXTO event is generated.

Note: If the ENDRX event has not been generated when the UARTE receiver stops, indicating that all pending content in the RX FIFO has been moved to the RX buffer, the UARTE will generate the ENDRX event explicitly even though the RX buffer is not full. In this scenario the ENDRX event will be generated before the RXTO event is generated.

To determine the amount of bytes the RX buffer has received, the CPU can read the RXD.AMOUNT register following the ENDRX event or the RXTO event.

The UARTE is able to receive up to four bytes after the STOPRX task has been triggered, as long as these are sent in succession immediately after the RTS signal is deactivated. After the RTS is deactivated, the UART is able to receive bytes for a period of time equal to the time needed to send four bytes on the configured baud rate.

After the RXTO event is generated the internal RX FIFO may still contain data, and to move this data to RAM the FLUSHRX task must be triggered. To make sure that this data does not overwrite data in the RX buffer, the RX buffer should be emptied or the RXD.PTR should be updated before the FLUSHRX task is triggered. To make sure that all data in the RX FIFO is moved to the RX buffer, the RXD.MAXCNT register must be set to RXD.MAXCNT > 4, as seen in the following figure. The UARTE will generate the ENDRX event after completing the FLUSHRX task even if the RX FIFO was empty or if the RX buffer does not get filled up. To be able to know how many bytes have actually been received into the RX buffer in this case, the CPU can read the RXD.AMOUNT register following the ENDRX event.



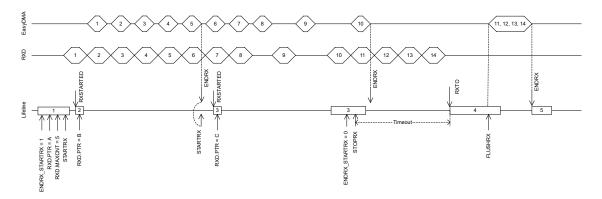


Figure 136: UARTE reception with forced stop via STOPRX

If HW flow control is enabled through the HWFC field in the CONFIG register, the RTS signal will be deactivated when the receiver is stopped via the STOPRX task or when the UARTE is only able to receive four more bytes in its internal RX FIFO.

With flow control disabled, the UARTE will function in the same way as when the flow control is enabled except that the RTS line will not be used. This means that no signal will be generated when the UARTE has reached the point where it is only able to receive four more bytes in its internal RX FIFO. Data received when the internal RX FIFO is filled up, will be lost.

The UARTE receiver will be in its lowest activity level, and consume the least amount of energy, when it is stopped, i.e. before it is started via STARTRX or after it has been stopped via STOPRX and the RXTO event has been generated. See POWER — Power supply on page 52 for more information about power modes.

6.25.4 Error conditions

An ERROR event, in the form of a framing error, will be generated if a valid stop bit is not detected in a frame. Another ERROR event, in the form of a break condition, will be generated if the RXD line is held active low for longer than the length of a data frame. Effectively, a framing error is always generated before a break condition occurs.

An ERROR event will not stop reception. If the error was a parity error, the received byte will still be transferred into Data RAM, and so will following incoming bytes. If there was a framing error (wrong stop bit), that specific byte will NOT be stored into Data RAM, but following incoming bytes will.

6.25.5 Using the UARTE without flow control

If flow control is not enabled, the interface will behave as if the CTS and RTS lines are kept active all the time.

6.25.6 Parity and stop bit configuration

Automatic even parity generation for both transmission and reception can be configured using the register CONFIG on page 373. If odd parity is desired, it can be configured using the register CONFIG on page 373. See the register description for details.

The amount of stop bits can also be configured through the register CONFIG on page 373.

6.25.7 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOPTX and STOPRX tasks may not be always needed (the peripheral might already be stopped), but if STOPTX and/or STOPRX is sent, software shall wait until the TXSTOPPED and/or RXTO event is received in response, before disabling the peripheral through the ENABLE register.



6.25.8 Pin configuration

The different signals RXD, CTS (Clear To Send, active low), RTS (Request To Send, active low), and TXD associated with the UARTE are mapped to physical pins according to the configuration specified in the PSEL.RXD, PSEL.RTS, and PSEL.TXD registers respectively.

The PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers and their configurations are only used as long as the UARTE is enabled, and retained only for the duration the device is in ON mode. PSEL.RXD, PSEL.RTS, PSEL.RTS, and PSEL.TXD must only be configured when the UARTE is disabled.

To secure correct signal levels on the pins by the UARTE when the system is in OFF mode, the pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

UARTE signal	UARTE pin	Direction	Output value
RXD	As specified in PSEL.RXD	Input	Not applicable
CTS	As specified in PSEL.CTS	Input	Not applicable
RTS	As specified in PSEL.RTS	Output	1
TXD	As specified in PSEL.TXD	Output	1

Table 107: GPIO configuration before enabling peripheral

6.25.9 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40002000	UARTE	UARTE0	Universal asynchronous receiver/	
			transmitter with EasyDMA, unit 0	

Table 108: Instances

TASKS_STARTRX 0x000 Start UART receiver TASKS_STOPRX 0x004 Stop UART receiver TASKS_STARTTX 0x008 Start UART transmitter TASKS_STOPTX 0x00C Stop UART transmitter TASKS_STOPTX 0x00C Stop UART transmitter TASKS_FLUSHRX 0x02C Flush RX FIFO into RX buffer EVENTS_CTS 0x100 CTS is activated (set low). Clear To Send. EVENTS_NCTS 0x104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_ERROR 0x124 Receiver timeout EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x150 Shortcuts between local events and tasks INTEN 0x200 Shortcuts between local events and tasks INTEN 0x201 Enable or disable interrupt INTEN 0x202 Bable interrupt	Register	Offset	Description
TASKS_STARTTX 0x008 Start UART transmitter TASKS_STOPTX 0x00C Stop UART transmitter TASKS_FLUSHRX 0x02C Flush RX FIFO into RX buffer EVENTS_CTS 0x100 CTS is activated (set low). Clear To Send. EVENTS_NCTS 0x104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x150 UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	TASKS_STARTRX	0x000	Start UART receiver
TASKS_STOPTX 0x00C Stop UART transmitter TASKS_FLUSHRX 0x02C Flush RX FIFO into RX buffer EVENTS_CTS 0x100 CTS is activated (set low). Clear To Send. EVENTS_NCTS 0x104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x150 UART transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	TASKS_STOPRX	0x004	Stop UART receiver
TASKS_FLUSHRX Ox02C Flush RX FIFO into RX buffer EVENTS_CTS Ox100 CTS is activated (set low). Clear To Send. EVENTS_NCTS Ox104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY Ox108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX Ox110 Receive buffer is filled up EVENTS_TXDRDY Ox11C Data sent from TXD EVENTS_ENDTX Ox120 Last TX byte transmitted EVENTS_ERROR Ox124 Error detected EVENTS_RXTO Ox144 Receiver timeout EVENTS_RXSTARTED Ox14C UART receiver has started EVENTS_TXSTARTED Ox150 UART transmitter stopped SHORTS Ox200 Shortcuts between local events and tasks INTEN Ox300 Enable or disable interrupt	TASKS_STARTTX	0x008	Start UART transmitter
EVENTS_CTS 0x100 CTS is activated (set low). Clear To Send. EVENTS_NCTS 0x104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	TASKS_STOPTX	0x00C	Stop UART transmitter
EVENTS_NCTS 0x104 CTS is deactivated (set high). Not Clear To Send. EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	TASKS_FLUSHRX	0x02C	Flush RX FIFO into RX buffer
EVENTS_RXDRDY 0x108 Data received in RXD (but potentially not yet transferred to Data RAM) EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXTO 0x144 Receiver has started EVENTS_TXSTARTED 0x150 UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTOPED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_CTS	0x100	CTS is activated (set low). Clear To Send.
EVENTS_ENDRX 0x110 Receive buffer is filled up EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_NCTS	0x104	CTS is deactivated (set high). Not Clear To Send.
EVENTS_TXDRDY 0x11C Data sent from TXD EVENTS_ENDTX 0x120 Last TX byte transmitted EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x150 UART transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_RXDRDY	0x108	Data received in RXD (but potentially not yet transferred to Data RAM)
EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTOPPED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_ENDRX	0x110	Receive buffer is filled up
EVENTS_ERROR 0x124 Error detected EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTARTED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_TXDRDY	0x11C	Data sent from TXD
EVENTS_RXTO 0x144 Receiver timeout EVENTS_RXSTARTED 0x14C UART receiver has started EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTOPPED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_ENDTX	0x120	Last TX byte transmitted
EVENTS_RXSTARTED	EVENTS_ERROR	0x124	Error detected
EVENTS_TXSTARTED 0x150 UART transmitter has started EVENTS_TXSTOPPED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_RXTO	0x144	Receiver timeout
EVENTS_TXSTOPPED 0x158 Transmitter stopped SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_RXSTARTED	0x14C	UART receiver has started
SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt	EVENTS_TXSTARTED	0x150	UART transmitter has started
INTEN 0x300 Enable or disable interrupt	EVENTS_TXSTOPPED	0x158	Transmitter stopped
	SHORTS	0x200	Shortcuts between local events and tasks
INTENCET 0v204 Enable interrupt	INTEN	0x300	Enable or disable interrupt
INTENSET 0X304 Enable interrupt	INTENSET	0x304	Enable interrupt
INTENCLR 0x308 Disable interrupt	INTENCLR	0x308	Disable interrupt




	011	
Register	Offset	Description
ERRORSRC	0x480	Error source
		This register is read/write one to clear.
ENABLE	0x500	Enable UART
PSEL.RTS	0x508	Pin select for RTS signal
PSEL.TXD	0x50C	Pin select for TXD signal
PSEL.CTS	0x510	Pin select for CTS signal
PSEL.RXD	0x514	Pin select for RXD signal
BAUDRATE	0x524	Baud rate. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
CONFIG	0x56C	Configuration of parity and hardware flow control

Table 109: Register overview

6.25.9.1 TASKS_STARTRX

Address offset: 0x000 Start UART receiver



6.25.9.2 TASKS_STOPRX

Address offset: 0x004 Stop UART receiver

Bit n	um	ber			31 30 29 28 27 26 2	25 24	23 2	2 2	21 20	0 19	18	3 17	7 10	5 15	5 1	4 13	3 12	2 13	1 10	9	8	7	6	5	4	3	2	1 0
ID																												Α
Rese	et O	x00	000000		0 0 0 0 0 0	0 0	0	0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																												
Α	٧	V	TASKS_STOPRX				Stop	o Ui	ART	rec	eiv	er																
				Trigger	1		Trig	ger	tasl	k																		

6.25.9.3 TASKS_STARTTX

Address offset: 0x008 Start UART transmitter



Bit n	ıun	nbe	r		31 3	0 29	28	3 27	26	25	24	23 2	22 2	1 20) 19	18	17	16	15	14 :	L3 1	2 1	1 10	9	8	7	6	5	4	3	2	1 0
ID																																Α
Rese	et (0x0	0000000		0 (0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0 (0 (0	0	0	0	0	0	0	0	0	0 0
ID												Des																				
Α	١	W	TASKS_STARTTX									Sta	t U	ART	tra	nsm	itte	er														
				Trigger	1							Trig	ger	tasl	(

6.25.9.4 TASKS_STOPTX

Address offset: 0x00C Stop UART transmitter

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	W TASKS_STOPTX			Stop UART transmitter
		Trigger	1	Trigger task

6.25.9.5 TASKS_FLUSHRX

Address offset: 0x02C

Flush RX FIFO into RX buffer

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID				Description
Α	W TASKS_FLUSHRX			Flush RX FIFO into RX buffer
		Trigger	1	Trigger task

6.25.9.6 EVENTS_CTS

Address offset: 0x100

CTS is activated (set low). Clear To Send.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_CTS			CTS is activated (set low). Clear To Send.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.7 EVENTS_NCTS

Address offset: 0x104

CTS is deactivated (set high). Not Clear To Send.



Bit number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_NCTS			CTS is deactivated (set high). Not Clear To Send.
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.8 EVENTS_RXDRDY

Address offset: 0x108

Data received in RXD (but potentially not yet transferred to Data RAM)

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_RXDRDY			Data received in RXD (but potentially not yet transferred to
				Data RAM)
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.9 EVENTS_ENDRX

Address offset: 0x110

Receive buffer is filled up

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				Α
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EVENTS_ENDRX			Receive buffer is filled up
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.10 EVENTS_TXDRDY

Address offset: 0x11C

Data sent from TXD

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_TXDRDY			Data sent from TXD
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.11 EVENTS_ENDTX

Address offset: 0x120 Last TX byte transmitted



Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_ENDTX			Last TX byte transmitted
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.12 EVENTS_ERROR

Address offset: 0x124

Error detected

Bit n	umber		31	30	29 2	28 2	7 26	25	24 2	23 2	22 2	1 20) 19	18	17 1	6 1	5 14	13	12 1	1 10	9	8	7	6	5	4 3	3 2	1	0
ID																													Α
Rese	t 0x00000000		0	0	0	0 0	0	0	0	0 (0 0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0	0 () (0	0
ID																													
Α	RW EVENTS_ERROR								1	Erro	r de	etec	ted																
		NotGenerated	0						1	Ever	nt n	ot g	gene	erate	ed														
		Generated	1						1	Ever	nt g	ene	rate	ed															

6.25.9.13 EVENTS_RXTO

Address offset: 0x144
Receiver timeout

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_RXTO			Receiver timeout
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.14 EVENTS_RXSTARTED

Address offset: 0x14C
UART receiver has started

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_RXSTARTED			UART receiver has started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.15 EVENTS_TXSTARTED

Address offset: 0x150

UART transmitter has started



Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_TXSTARTED			UART transmitter has started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.16 EVENTS_TXSTOPPED

Address offset: 0x158 Transmitter stopped

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_TXSTOPPED			Transmitter stopped
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.17 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30	29	28	27	26	25	24 2	23 2	22 2	21 2	0 1	L9 1	8 1	7 1	6 1	5 1	4 1	3 1:	2 11	. 10	9	8	7	6	5	4	3	2 2	1 0
ID																										D	С				
Rese	t 0x00000000		0 0	0	0	0	0	0	0	0 (0	0 (0	0 ()	0 0) (0	(0	0	0	0	0	0	0	0	0	0 (D (0 0
ID										Des																					
С	RW ENDRX_STARTRX									Sho	rtcı	ut b	etv	wee	n e	ever	nt E	ND	RX	and	d ta	sk S	TAF	(TR	X						
		Disabled	0						-	Disa	ble	e sh	ort	cut																	
		Enabled	1						1	Enal	ble	sho	ort	cut																	
D	RW ENDRX_STOPRX									Sho	rtcı	ut b	etv	wee	n e	ever	nt E	ND	RX	and	d ta	sk S	TOI	PRX							
		Disabled	0						-	Disa	ble	e sh	ort	cut																	
		Enabled	1						-	Enal	ble	sho	ort	cut																	

6.25.9.18 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit n	umber		313	0 29	9 28 2	27 26	25	24 2	3 2	22 21	L 2C	19	18 1	17 1	6 15	5 14	13 1	2 1	1 10	9	8	7 6	5 5	4	3	2	1 0
ID										L	J	1		Н						G	F	E		D		С	ВА
Rese	t 0x00000000		0 (0 0	0	0 0	0	0 (0 (0 0	0	0	0	0 (0 0	0	0	0 (0 0	0	0	0 0	0	0	0	0	0 0
ID																											
Α	RW CTS							E	na	ble c	or d	lisab	le ir	nter	rup	t for	eve	nt (CTS								
		Disabled	0					0	Disa	ble																	
		Enabled	1					E	na	ble																	
В	RW NCTS							E	na	ble c	or d	lisab	le ir	nter	rup	t for	eve	nt N	NCTS								
		Disabled	0					0	Disa	ble																	
		Enabled	1					E	na	ble																	





Reset 00000000000000000000000000000000000					
Reset 0x00000000000000000000000000000000000	Bit n	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID Acce Field Value ID Value Description C RW RXDRDY	ID				L J I H G F E D C B A
C RW RXDRDY Disabled 0 Disable Enable 1 Enable Disabled 1 Enable Disabled 0 Disable Enable 1 Enable Disabled 0 Disable Enable or disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event TXDRDY Disabled 0 Disable Enable 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 1 Enable Enable or Disable interrupt for event ENDRX Disabled 0 Disable Enable or Disable interrupt for event ENDRX Disabled 1 Enable I RW RXTO Disabled 0 Disable Enable or Disable interrupt for event RXSTARTED Disabled 0 Disable Enable or Disable interrupt for event RXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable interrupt for event TXSTARTED Disabled 0 Disable	Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Disabled 0 Disable Enabled 1 Enable D RW ENDRX Disabled 0 Disable Enabled 1 Enable or disable interrupt for event ENDRX Disabled 1 Enable Enabled 1 Enable Enabled 1 Enable Enable or disable interrupt for event TXDRDY Disabled 0 Disable Enabled 1 Enable or disable interrupt for event TXDRDY Disabled 0 Disable Enabled 1 Enable or disable interrupt for event ENDTX Disabled 0 Disable Enabled 1 Enable or disable interrupt for event ENDTX Disabled 0 Disable Enabled 1 Enable Enable or disable interrupt for event ERROR Disabled 0 Disable Enabled 1 Enable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 1 Enable I RW RXSTARTED Disabled 0 Disable Enable or disable interrupt for event RXSTARTED Disabled 1 Enable I Enable or disable interrupt for event RXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable					
Enabled 1 Enable Enable Enable or disable interrupt for event ENDRX Disabled 0 Disable Enable Enable Enable or disable interrupt for event ENDRX Disabled 1 Enable Enable Enable Enable Enable or Disable Enable or Disable Enable Disable Enable Enable Enable Enable Disable Enable Enable Disable Enable Disable Enable Enable Enable Disable Enable	С	RW RXDRDY			Enable or disable interrupt for event RXDRDY
D RW ENDRX Disabled 0 Disable Enabled 1 Enable E RW TXDRDY Disabled 0 Disable Enabled 1 Enable E RW ENDTX Disabled 0 Disable Enabled 1 Enable F RW ENDTX Disabled 0 Disable Enabled 1 Enable F RW ERROR Disabled 0 Disable Enabled 1 Enable F Enable or disable interrupt for event ENDTX Disabled 0 Disable Enabled 1 Enable F Enable or disable interrupt for event ENDTX Disabled 0 Disable Enabled 1 Enable F Enable or disable interrupt for event ERROR Disabled 0 Disable Enabled 1 Enable H RW RXTO Disabled 0 Disable Enabled 1 Enable I RW RXTO Disabled 0 Disable Enable 0 Disable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable L RW TXSTOPPED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Disable Enable or disable interrupt for event TXSTARTED Disable Enable or disable interrupt for event TXSTARTED Disable Enable ODIsable			Disabled	0	Disable
Disabled Disabled Disabled Disable			Enabled	1	Enable
E RW TXDRDY Disabled 0 Disable Enable of disable interrupt for event TXDRDY Disabled 1 Enable Enable of disable interrupt for event ENDTX Disabled 0 Disable Enable of Disable interrupt for event ENDTX Disabled 0 Disable Enabled 1 Enable Enable of Disable interrupt for event ERROR Disabled 0 Disable Enable of Disable interrupt for event ERROR Disabled 0 Disable Enable of Disable Enable Enable of Disable Enable Enable of Disable Enable	D	RW ENDRX			Enable or disable interrupt for event ENDRX
E RW TXDRDY Disabled Disabled Enabled Disabled Enabled Disabled Enabled Disable Enable or disable interrupt for event TXDRDY Disable Enabled Disabled Disabled Enabled Disable Enabled Disable Enabled Disable Enable Disabled Disable Enable Disable Disabled Disable Enable Disable Disa			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable F RW ENDTX Disabled 0 Disable Enable 0 Disable Enable or disable interrupt for event ENDTX Disabled 1 Enable F RW ERROR Disabled 0 Disable Enable or disable interrupt for event ERROR Disable interrupt for event RXTO Disable interrupt for event RXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disable Enabled 1 Enable Enable or disable interrupt for event TXSTOPPED Disable Disable Disable Enable Disable Enable Disable Enable Or Disable Enable Or Disable Enable Or Disable Enable Or Disable Enable Or Disable Enable Disable Enable Or Disable Or Disable Or Disable Enable Or Disable Enable Or Disable Enable Or Disable Or			Enabled	1	Enable
F RW ENDTX Disabled 0 Disable enable or disable interrupt for event ENDTX Disabled 0 Disable Enable or disable interrupt for event ENDTX Disable Enable or disable interrupt for event ERROR Disable Enable or disable interrupt for event ERROR Disable Enable or Disable Enable or disable interrupt for event RXTO Disable Enable or Disable interrupt for event RXTO Disable Enable or Disable Enable or disable interrupt for event RXTO Disable Enable or Disable Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable I RW TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable or disable interrupt for event TXSTOPPED Disabled 0 Disable	E	RW TXDRDY			Enable or disable interrupt for event TXDRDY
F RW ENDTX Disabled Disabled Enabled Disabled Disabled Disabled Enabled Disabled Disabled Enabled Disabled Dis			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable GRW ERROR Disabled 0 Disable Enable or disable interrupt for event ERROR Disabled 1 Enable Enable Enable HRW RXTO Disabled 0 Disable Enabled 1 Enable Enabled 1 Enable Enable or disable interrupt for event RXTO Disabled 1 Enable Enable or disable interrupt for event RXTO Disabled 1 Enable Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable or disable interrupt for event RXSTARTED Disabled 1 Enable Finable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable			Enabled	1	Enable
Enabled 1 Enable G RW ERROR Disabled 0 Disable Enable Enable or disable interrupt for event ERROR Disabled 1 Enable H RW RXTO Disabled 0 Disable Enabled 1 Enable Enable or disable interrupt for event RXTO Disabled 0 Disable Enable Enable or disable interrupt for event RXTO Disabled 1 Enable Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable Finable Disabled 1 Enable Enable Disabled 0 Disable Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or Disable Enable or disable interrupt for event TXSTOPPED Disabled 0 Disable Enable or disable interrupt for event TXSTOPPED	F	RW ENDTX			Enable or disable interrupt for event ENDTX
Finable or disable interrupt for event ERROR Disabled Disabled Enable Enable Enable Enable Enable Enable Enable Enable Disable Enable Disabled Disabled Enable Disabled Disabled Enable Ena			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable H RW RXTO Disabled 0 Disable Enable or disable interrupt for event RXTO Disabled 1 Enable Enable Enable Enable Enable Enable Enable Enable Enable Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disable Enable or disable interrupt for event TXSTARTED Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable Enable Enable Enable Disable			Enabled	1	Enable
Enabled 1 Enable H RW RXTO Disabled 0 Disable Enable enable Enable or disable interrupt for event RXTO Disabled 1 Enable Enable or disable interrupt for event RXSTARTED Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTOPPED Disabled 0 Disable	G	RW ERROR			Enable or disable interrupt for event ERROR
H RW RXTO Disabled 0 Disable Enabled 1 Enable RW RXSTARTED Disabled 0 Disable Enable or disable interrupt for event RXTO Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable Enable Enable Enable Enable Enable or disable interrupt for event RXSTARTED Disabled 1 Enable Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable Enable Enable Enable Disable			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable I RW RXSTARTED Disabled 0 Disable Enable or disable interrupt for event RXSTARTED Disabled 0 Disable Enable I Enable Enable Enable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable Enable Disable Disable Disable Disable Disable Disable Disable			Enabled	1	Enable
Enabled 1 Enable RW RXSTARTED Disabled 0 Disable Enable or disable interrupt for event RXSTARTED Disabled 1 Enable Enable Disable Enable or disable interrupt for event TXSTARTED Disabled 0 Disable Enable or disable interrupt for event TXSTARTED Disabled 1 Enable Enable Enable Disable Disable Disable Disable Disable Disable Disable	Н	RW RXTO			Enable or disable interrupt for event RXTO
Enable or disable interrupt for event RXSTARTED Disabled Enabled Disable Enable Enable Disable Enable Disable Enable or disable interrupt for event TXSTARTED Disabled Disabled Enable Enable Enable Enable Disable Enable Disable Disabled Disable Disable Disable Disable Disable Disable Disable Disable Disable			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable J RW TXSTARTED Enabled 0 Disable interrupt for event TXSTARTED Disabled 0 Disable Enable Enable Enable Enable Disable Enable Disable			Enabled	1	Enable
Enabled 1 Enable J RW TXSTARTED Disabled 0 Disable Enable Disable Enabled 1 Enable Enable Enable Enable Disable Enable Disable	I	RW RXSTARTED			Enable or disable interrupt for event RXSTARTED
Brable or disable interrupt for event TXSTARTED Disabled Enabled Enable Enable Enable Enable Disable Disable Disable Disable Disable Disable Disable Disable Disable			Disabled	0	Disable
Disabled 0 Disable Enabled 1 Enable L RW TXSTOPPED Enabled 0 Disable Disabled 0 Disable			Enabled	1	Enable
Enabled 1 Enable L RW TXSTOPPED Enable or disable interrupt for event TXSTOPPED Disabled 0 Disable	J	RW TXSTARTED			Enable or disable interrupt for event TXSTARTED
Enable or disable interrupt for event TXSTOPPED Disabled 0 Disable			Disabled	0	Disable
Disabled 0 Disable			Enabled	1	Enable
	L	RW TXSTOPPED			Enable or disable interrupt for event TXSTOPPED
Enabled 1 Enable			Disabled	0	Disable
			Enabled	1	Enable

6.25.9.19 INTENSET

Address offset: 0x304

Enable interrupt

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				L J I H G F E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW CTS			Write '1' to enable interrupt for event CTS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW NCTS			Write '1' to enable interrupt for event NCTS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW RXDRDY			Write '1' to enable interrupt for event RXDRDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled





Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled F RW ENDTX Set 1 Enable Disabled 0 Read: Disabled Enabled 0 Read: Disabled Enabled 0 Read: Disabled Enabled 1 Read: Enabled F RW ERROR FROR FROR Set 1 Enable Disabled 0 Read: Disabled Enabled 0 Read: Disabled Enabled 1 Read: Enabled From ERROR From Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled From Enabled 1 Read: Enabled	Bit n	number		31 30 29 28 27 2	26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
D Acce Field Value ID Value Description	ID					L J I H G F E D C B A
Name	Rese	et 0x00000000		0 0 0 0 0	0 0 (0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Set						Description
	D	RW ENDRX				Write '1' to enable interrupt for event ENDRX
E			Set	1		Enable
E RW TXDRDY Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ENDTX Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ENDTX Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled Enable 1 Read: Enabled FROM ERROR Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ERROR Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ERROR Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ERROR RW RXTO Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ENDT FROM ERROR FROM ERROR Set 1 Enable Disabled 0 Read: Disabled Enable 1 Read: Enabled FROM ENDT FROM ERROR FROM ERR			Disabled	0		Read: Disabled
Set 1 Enable 1 Read: Disabled 0 Read: Disabled 1 Read: Enabled 1 Read: Disabled 1 Read: Enabled 1 Read: Enable			Enabled	1		Read: Enabled
Book Bead: Disabled Bead: Disabled Bead: Enabled Bead: Enabled Bead: Enabled Bead: Enabled Bead: Enabled Bead: Disabled Bead: Disabled Bead: Disabled Bead: Disabled Bead: Enabled	Е	RW TXDRDY				Write '1' to enable interrupt for event TXDRDY
F RW ENDTX Set 1 Enable Disabled 0 Read: Disabled F RW EROR F RW E			Set	1		Enable
F RW ENDTX Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled G RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Frabled 1 Read: Enabled Read: Enabled Frabled 1 Read: Enabled H RW RXTO Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Frabled 1 Read: Enabled Read: Enabled Frabled 1 Read: Enabled Frable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Frable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Frabled 1 Read: Enabled			Disabled	0		Read: Disabled
Set 1 Enable GRAW ERROR FROM ERROR Set 1 Enable Disabled 0 Read: Disabled Write '1' to enable interrupt for event ERROR Enabled 0 Read: Disabled Disabled 0 Read: Disabled Enable Enable Read: Enabled Read: Disabled Read: Disabled Read: Disabled Read: Disabled Read: Disabled Read: Enabled Read: Enabled Read: Enabled Read: Enabled Read: Enabled Read: Disabled Read: Enabled Read: Enabled Read: Enabled Read: Enabled Read: Disabled			Enabled	1		Read: Enabled
Disabled Disabled Read: Disabled Read: Enabled	F	RW ENDTX				Write '1' to enable interrupt for event ENDTX
Enabled 1 Read: Enabled G RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enable Enable Write '1' to enable interrupt for event RXTO Feat 1 Enable Disabled 0 Read: Disabled Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Enable Vwrite '1' to enable interrupt for event RXSTARTED Enable Enable Enable Disabled 0 Read: Disabled Enable Enable Urite '1' to enable interrupt for event TXSTARTED Write '1' to enable interrupt for event TXSTARTED Enable I Read: Enable Enable Enable Enable Disabled 0 Read: Disabled Enable Disabled 1 Read: Enable Enable Enable Enable Enable Enable Disabled 0 Read: Disabled Enable Enable Disabled 0 Read: Enabled Enable Enable Enable Disabled 0 Read: Enabled Enable Enable Enable Disabled 0 Read: Enabled			Set	1		Enable
G RW ERROR Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW RXTO Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Finable Disabled 1 Read: Enabled Read: Disabled Enabled Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXTO Finable Enabled Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Finable Enable Set 1 Enable Enable Finable Enabled Write '1' to enable interrupt for event RXSTARTED Finable Enabled Write '1' to enable interrupt for event TXSTARTED Finable Finable Enable Enable Finable Finable Enabled Finable Finable Finable Finable Finable Write '1' to enable interrupt for event TXSTOPPED Finable Fi			Disabled	0		Read: Disabled
Set 1 Read: Disabled 0 Read: Disabled 0 Read: Disabled 1 Read: Enable 0 Read: Enabled 1 Read: Disabled 1 Read: Disabled 1 Read: Enabled 1 Read			Enabled	1		Read: Enabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled H RW RXTO Set 1 Enable Disabled 0 Read: Disabled interrupt for event RXTO Set 1 Enable Enabled 1 Read: Enabled Read: Disabled Read: Disabled Read: Disabled Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enable Disabled 1 Read: Enabled Read: Enabled Frame of the property of the event RXSTARTED Read: Enabled Frame of the property of the event TXSTARTED Read: Enabled Disabled 0 Read: Disabled	G	RW ERROR				Write '1' to enable interrupt for event ERROR
Enabled 1 Read: Enabled H RW RXTO Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Finabled 1 Read: Enabled Enabled 1 Read: Enabled Finabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Disabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finable Enabled Enabled 0 Read: Disabled Enabled 1 Read: Enabled Enabled 0 Read: Disabled Enabled 1 Read: Enabled			Set	1		Enable
H RW RXTO Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXTO Read: Disabled Write '1' to enable interrupt for event RXSTARTED Finable Disabled 0 Read: Disabled Disabled 0 Read: Disabled Disabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Finable Disabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finable Disabled 0 Read: Disabled Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Finable Disabled 0 Read: Disabled Read: Enabled Read: Enabled Mrite '1' to enable interrupt for event TXSTOPPED Read: Disabled 0 Read: Disabled			Disabled	0		Read: Disabled
Set 1 Read: Disabled 0 Read: Disabled 0 Read: Disabled 1 Read: Enabled 0 Read: Disabled 0 Read: Disabled 0 Read: Disabled 0 Read: Enabled 0 Read: Enabled 0 Read: Disabled 0 Read: Enabled 0 Read: Disabled 0 Read: Enabled 0 Read: Disabled 0 Re			Enabled	1		Read: Enabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enable Enable TXSTARTED Write '1' to enable interrupt for event RXSTARTED Read: Enabled Write '1' to enable interrupt for event TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enable Write '1' to enable interrupt for event TXSTARTED Write '1' to enable interrupt for event TXSTOPPED Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled	Н	RW RXTO				Write '1' to enable interrupt for event RXTO
Enabled 1 Read: Enabled RW RXSTARTED			Set	1		Enable
RW RXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled Finable Finable Write '1' to enable interrupt for event RXSTARTED Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finable Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Read: Enabled Write '1' to enable interrupt for event TXSTARTED Finable Write '1' to enable interrupt for event TXSTARTED Finable Write '1' to enable interrupt for event TXSTOPPED Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Read: Disabled Read: Disabled			Disabled	0		Read: Disabled
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Disabled 1 Read: Enabled Enable Note to enable interrupt for event TXSTARTED Enable Enable Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled			Enabled	1		Read: Enabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled J RW TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enable Note: 1 to enable interrupt for event TXSTARTED Read: Disabled Read: Disabled Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Finabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled	I	RW RXSTARTED				Write '1' to enable interrupt for event RXSTARTED
Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled L RW TXSTOPPED Set 1 Enable Set 1 Read: Enabled Disabled 0 Read: Disabled Read: Enabled Mrite '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled			Set	1		Enable
Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Finabled 1 Read: Enabled Write '1' to enable interrupt for event TXSTOPPED Set Disabled 0 Read: Disabled			Disabled	0		Read: Disabled
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled L RW TXSTOPPED Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled			Enabled	1		Read: Enabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled L RW TXSTOPPED Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled	J	RW TXSTARTED				Write '1' to enable interrupt for event TXSTARTED
Enabled 1 Read: Enabled L RW TXSTOPPED Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled			Set	1		Enable
Write '1' to enable interrupt for event TXSTOPPED Set 1 Enable Disabled 0 Read: Disabled			Disabled	0		Read: Disabled
Set 1 Enable Disabled 0 Read: Disabled			Enabled	1		Read: Enabled
Disabled 0 Read: Disabled	L	RW TXSTOPPED				Write '1' to enable interrupt for event TXSTOPPED
			Set	1		Enable
Enabled 1 Read: Enabled			Disabled	0		Read: Disabled
			Enabled	1		Read: Enabled

6.25.9.20 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			L J I H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW CTS			Write '1' to disable interrupt for event CTS
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
B RW NCTS			Write '1' to disable interrupt for event NCTS
	Clear	1	Disable
	Disabled	0	Read: Disabled





Bit r	number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				L J I H G F E D C B
Res	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Enabled	1	Read: Enabled
С	RW RXDRDY			Write '1' to disable interrupt for event RXDRDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ENDRX			Write '1' to disable interrupt for event ENDRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ε	RW TXDRDY			Write '1' to disable interrupt for event TXDRDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW ENDTX			Write '1' to disable interrupt for event ENDTX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Н	RW RXTO			Write '1' to disable interrupt for event RXTO
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
ı	RW RXSTARTED			Write '1' to disable interrupt for event RXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW TXSTARTED			Write '1' to disable interrupt for event TXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW TXSTOPPED			Write '1' to disable interrupt for event TXSTOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
		==		

6.25.9.21 ERRORSRC

Address offset: 0x480

Error source

This register is read/write one to clear.



Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B A
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW OVERRUN			Overrun error
				A start bit is received while the previous data still lies in
				RXD. (Previous data is lost.)
		NotPresent	0	Read: error not present
		Present	1	Read: error present
В	RW PARITY			Parity error
				A character with bad parity is received, if HW parity check is
				enabled.
		NotPresent	0	Read: error not present
		Present	1	Read: error present
С	RW FRAMING			Framing error occurred
				A valid stop bit is not detected on the serial data input after
				all bits in a character have been received.
		NotPresent	0	Read: error not present
		Present	1	Read: error present
D	RW BREAK			Break condition
				The serial data input is '0' for longer than the length of a
				data frame. (The data frame length is 10 bits without parity
				bit, and 11 bits with parity bit).
		NotPresent	0	Read: error not present
		Present	1	Read: error present

6.25.9.22 ENABLE

Address offset: 0x500

Enable UART

В	t number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
10)			АААА
R	eset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
10				Description
Α	RW ENABLE			Enable or disable UARTE
		Disabled	0	Disable UARTE
		Enabled	8	Enable UARTE

6.25.9.23 PSEL.RTS

Address offset: 0x508

Pin select for RTS signal



Bit nu	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.24 PSEL.TXD

Address offset: 0x50C

Pin select for TXD signal

Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.25 PSEL.CTS

Address offset: 0x510

Pin select for CTS signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.26 PSEL.RXD

Address offset: 0x514

Pin select for RXD signal

Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	АААА
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect






6.25.9.27 BAUDRATE

Address offset: 0x524

Baud rate. Accuracy depends on the HFCLK source selected.

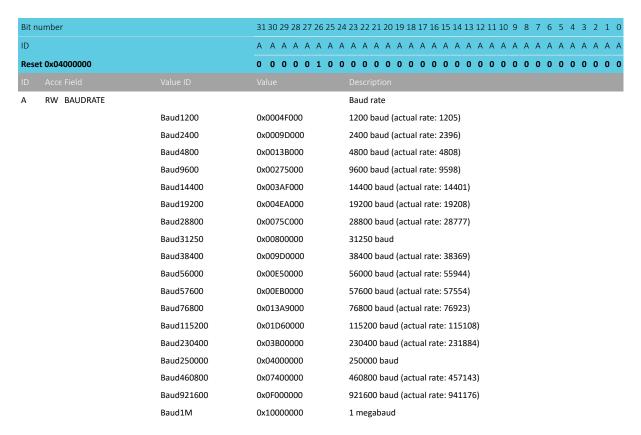

6.25.9.28 RXD.PTR

Address offset: 0x534

Data pointer



See the memory chapter for details about which memories are available for EasyDMA.

6.25.9.29 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer



Α	RW MAXCNT	[00x7FFF]		Maxii	mum ı	numb	er o	f bvte	s in r	ecei	ve b	uffe	r							
ID																				
Res	et 0x00000000	0 0 0 0 0 0	0 0	0 0	0 0	0 (0 0	0 0	0	0 0	0	0	0	0 (0	0	0	0 (0	0
ID									Α.	Δ Δ	A	Α	Α	A A	Δ Δ	A	Α	A A	Α	Α
Bit r	umber	31 30 29 28 27 26	6 25 24	23 22	21 20	19 1	.8 17	16 19	5 14 1	3 1	2 11	10	9	8 7	7 6	5	4	3 2	1	0

6.25.9.30 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction

Α	R AMOUNT	[00x7FFF]	Number of bytes transfe	ferred in the last transa	ction			
ID								
Res	et 0x00000000	0 0 0 0 0 0 0	00000000	0 0 0 0 0 0 0	0 0 0	0 0	0 (0 0 0
ID				A A A A A A	A A A	ΑА	. A /	ААА
Bit	number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16	6 15 14 13 12 11 10 9	8 7 6	5 4	3 :	2 1 0

6.25.9.31 TXD.PTR

Address offset: 0x544

Data pointer

A RW PTR		Data pointer				
ID Acce Field						
Reset 0x00000000	0 0 0 0 0 0 0	00000000	0 0 0 0 0 0 0	0 0 0 0 0	0 0 0	0 0
ID	A A A A A A A		A A A A A A	A A A A A	A A A	АА
Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 1	16 15 14 13 12 11 10	9 8 7 6 5	4 3 2	1 0

See the memory chapter for details about which memories are available for EasyDMA.

6.25.9.32 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

A RW MAXCNT	[00x7FFF] Maximum number of bytes in transmit buffer
ID Acce Field	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

6.25.9.33 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction


ID Acc€																			
Reset 0x00	000000	0 0 0 0	0 0 0	0 0	0 0	0 0	0 0	0 (0 0	0 (0	0 0	0	0	0	0 0	0	0 (0
ID									Α	A A	A A	A A	A	Α	A	А А	Α	A A	A A
Bit number		31 30 29 28 2	27 26 25	24 23	22 21	20 19	18 1	7 16 1	5 14	13 1	2 11	10 9	8	7	6	5 4	3	2 1	0



6.25.9.34 CONFIG

Address offset: 0x56C

Configuration of parity and hardware flow control

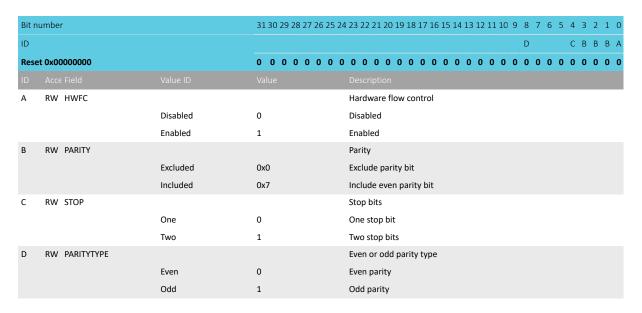

6.25.10 Electrical specification

6.25.10.1 UARTE electrical specification

Symbol	Description	Min.	Тур.	Max.	Units
f _{UARTE}	Baud rate for UARTE ³³ .			1000	kbps
t _{UARTE,CTSH}	CTS high time	1			μs
t _{UARTE,START}	Time from STARTRX/STARTTX task to transmission started		1		μs

6.26 USBD — Universal serial bus device

The USB device (USBD) controller implements a full speed USB device function that meets 2.0 revision of the USB specification.



High baud rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.

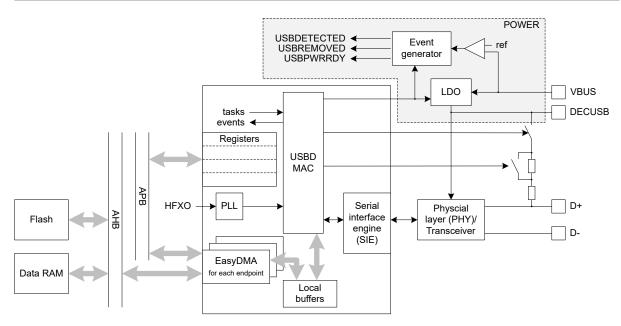


Figure 137: USB device block diagram

Listed here are the main features for USBD:

- Full-speed (12 Mbps) device fully compliant to Universal Serial Bus Specification Revision 2.0, including following engineering change notices (ECNs) issued by USB Implementers Forum:
 - Pull-up/pull-down Resistors ECN
 - 5V Short Circuit Withstand Requirement Change ECN
- USB device stack available in the Nordic SDK
- Integrated (on-chip) USB transceiver (PHY)
- Software controlled on-chip pull-up on D+
- Endpoints:
 - Two control (1 IN, 1 OUT)
 - 14 bulk/interrupt (7 IN, 7 OUT)
 - Two isochronous (1 IN, 1 OUT)
- Double buffering for isochronous (ISO) endpoints (IN/OUT) support
- USB suspend, resume, and remote wake-up support
- 64 bytes buffer size for each bulk/interrupt endpoint
- Up to 1023 bytes buffer size for ISO endpoints
- EasyDMA for all data transfers

6.26.1 USB device states

The behavior of a USB device can be modelled through a state diagram.

The USB 2.0 Specification (see Chapter 9 USB Device Framework) defines a number of states for a USB device, as shown in the following figure.



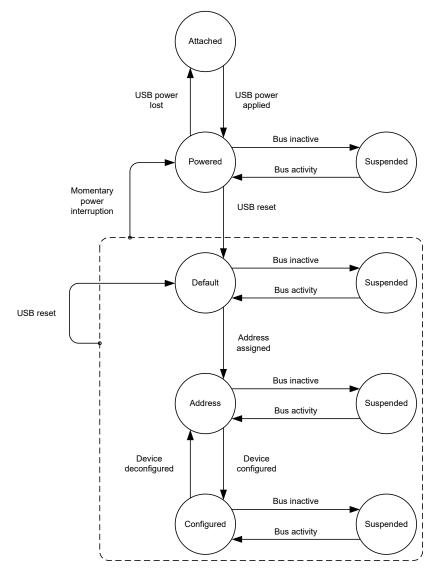


Figure 138: Device state diagram

The device must change state according to host-initiated traffic and USB bus states. It is up to the software to implement a state machine that matches the above definition. To detect the presence or absence of USB supply (VBUS), two events USBDETECTED and USBREMOVED can be used to implement the state machine. For more details on these events, see USB supply on page 57.

As a general rule when implementing the software, the host behavior shall never be assumed to be predictable. In particular the sequence of commands received during an enumeration. The software shall always react to the current bus conditions or commands sent by the host.

6.26.2 USB terminology

The USB specification defines bus states, rather than logic levels on the D+ and D- lines.

For a full speed device, the bus state where the D+ line is high and the D- line is low is defined as the J state. The bus state where D+ is low and D- high is called the K state.

An idle bus, where D+ and D- lines are only polarized through the pull-up on D+ and pull-downs on the host side, will be in J state.

Both lines low are called SEO (single-ended 0), and both lines high SE1 (single-ended 1).



6.26.3 USB pins

The USBD peripheral features a number of dedicated pins.

The dedicated USB pins can be grouped in two categories, signal and power. The signal pins consist of the D+ and D- pins, which are to be connected to the USB host. They are dedicated pins, and not available as standard GPIOs. The USBD peripheral is implemented according to the USB specification revision 2.0, 5V Short Circuit Withstand ECN Requirement Change, meaning these two pins are not 5 V tolerant.

The signal pins and the pull-up will operate only while VBUS is in its valid voltage range, and USBD is enabled through the ENABLE register. For details on the USB power supply and VBUS detection, see USB supply on page 57.

For more information about the pinout, see Pin assignments on page 418.

6.26.4 USBD power-up sequence

The physical layer interface (PHY)/USB transceiver is powered separately from the rest of the device (VBUS pin), which has some implications on the USBD power-up sequence.

The device is not able to properly signal its presence to the USB host and handle traffic from the host, unless the PHY's power supply is enabled and stable. Turning the PHY's power supply on/off is directly linked to register ENABLE. The device provides events that help synchronizing software to the various steps during the power-up sequence.

To make sure that all resources in USBD are available and the dedicated USB voltage regulator stabilized, the following is recommended:

- Enable USBD only after VBUS has been detected
- Turn the USB pull-up on after the following events have occurred:
 - USBPWRRDY
 - USBEVENT, with the READY condition flagged in EVENTCAUSE

The following sequence chart illustrates a typical handling of VBUS power-up:

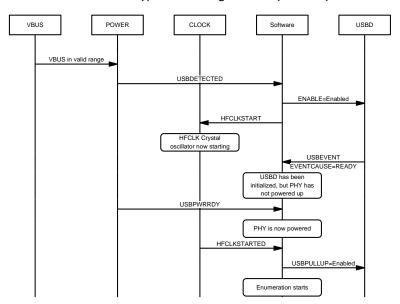


Figure 139: VBUS power-up sequence

Upon detecting VBUS removal, it is recommended to wait for ongoing EasyDMA transfers to finish before disabling USBD (relevant ENDEPIN[n], ENDISOIN, ENDEPOUT[n], or ENDISOOUT events, see EasyDMA on page 379). The USBREMOVED event, described in USB supply on page 57, signals when the VBUS is removed. Reading the ENABLE register will return Enabled until USBD is completely disabled.



6.26.5 USB pull-up

The USB pull-up serves two purposes: it indicates to the host that the device is connected to the USB bus, and it indicates the device's speed capability.

When no pull-up is connected to the USB bus, the host sees both D+ and D- lines low, as they are pulled down on the host side by 15 k Ω resistors. The device is not detected by the host, putting it in a detached state even if it is physically connected to the host. In this situation, the device is not allowed to draw current from VBUS, according to *USB 2.0 Specification*.

When a full-speed device connects its 1.5 k Ω pull-up to D+, the host sees the corresponding line high. The device is then in the attached state. During the enumeration process, the host attempts to determine if the full-speed device also supports higher speeds and initiates communication with the device to further identify it. The USBD peripheral implemented in this device supports only full-speed operation (12 Mbps), and thus ignores the negotiation for higher speeds in accordance with *USB 2.0 Specification*.

Register USBPULLUP enables software to connect or disconnect the pull-up on D+. This allows the software to control when USB enumeration takes place. It also allows to emulate a physical disconnect from the USB bus, for instance when re-enumeration is required. USBPULLUP has to be enabled to allow the USBD to handle USB traffic and generate appropriate events. This forbids the use of an external pull-up.

Note that disconnecting the pull-up through register USBPULLUP while connected to a host, will result in both D+ and D- lines to be pulled low by the host's pull-down resistors. However, as mentioned above, this will also inhibit the generation of the USBRESET event. The pull-up is disabled by default after a chip reset.

The pull-up shall only get connected after USBD has been enabled through register ENABLE. The USB pull-up value is automatically changed depending on the bus activity, as specified in *Resistor ECN* which amends the original *USB 2.0 Specification*. The user does not have access to this function as it is handled in hardware.

While they should never be used in normal traffic activity, lines D+ and D- may at any time be forced into state specified in register DPDMVALUE by the task DPDMDRIVE. The DPDMNODRIVE task stops driving them, and PHY returns to normal operation.

6.26.6 USB reset

The USB specification defines a USB reset, which is not be confused with a chip reset. The USB reset is a normal USB bus condition, and is used as part of the enumeration sequence, it does not reset the chip.

The USB reset results from a single-ended low state (SE0) on lines D+/D- for a $t_{USB,DETRST}$ amount of time. Only the host is allowed to drive a USB reset condition on the bus. The UBSD peripheral automatically interprets a SE0 longer than $t_{USB,DETRST}$ as a USB reset. When the device detects a USB reset and generates a USBRESET event, the device USB stack and related parts of the application shall re-initialize themselves, and go back to the default state.

Some of the registers in the USBD peripheral get automatically reset to a known state, in particular all data endpoints are disabled and the USBADDR reset to 0.

After the device has connected to the USB bus (i.e. after VBUS is applied), the device shall not respond to any traffic from the time the pull-up is enabled until it has seen a USB reset condition. This is automatically ensured by the USBD.

After a USB reset, the device shall be fully responsive after at most T_{RSTRCY} (according to chapter 7 in the USB specification). Software shall take into account this time that takes the hardware to recover from a USB reset condition.



6.26.7 USB suspend and resume

Normally, the host will maintain activity on the USB at least every millisecond according to USB specification. A USB device will enter suspend when there is no activity on the bus (idle) for a given time. The device will resume operation when it receives any non idle signalling.

To signal that the device shall go into low power mode (suspend), the host stops activity on the USB bus, which becomes idle. Only the device pull-up and host pull-downs act on D+ and D-, and the bus is thus kept at a constant J state. It is up to the device to detect this lack of activity, and enter the low power mode (suspend) within a specified time.

The USB host can decide to suspend or resume USB activity at any time. If remote wake-up is enabled, the device may signal to the host to resume from suspend.

6.26.7.1 Entering suspend

The USBD peripheral automatically detects lack of activity for more than a defined amount of time, and performs steps needed to enter suspend.

When no activity has been detected for longer than $t_{USB,SUSPEND}$, the USBD generates the USBEVENT event with SUSPEND bit set in register EVENTCAUSE. The software shall ensure that the current drawn from the USB supply line VBUS is within the specified limits before T_{2SUSP} , as defined in chapter 7 of the USB specification. In order to reduce idle current of USBD, the software must explicitly place the USBD in low power mode through writing LowPower to register LOWPOWER.

In order to save power, and provided that no other peripheral needs it, the crystal oscillator (HFXO) in CLOCK may be disabled by software during the USB suspend, while the USB pull-up is disconnected, or when VBUS is not present. Software must explicitly enable it at any other time. The USBD will not be able to respond to USB traffic unless HFXO is enabled and stable.

6.26.7.2 Host-initiated resume

Once the host resumes the bus activity, it has to be responsive to incoming requests on the USB bus within the time T_{RSMRCY} (as defined in chapter 7 of the USB specification) and revert to normal power consumption mode.

If the host resumes bus activity with or without a RESUME condition (in other words: bus activity is defined as any non-J state), the USBD peripheral will generate a USBEVENT event, with RESUME bit set in register EVENTCAUSE. If the host resumes bus activity simply by restarting sending frames, the USBD peripheral will generate SOF events.

6.26.7.3 Device-initiated remote wake-up

Assuming the remote wake-up is supported by the device and enabled by the host, the device can request the host to resume from suspend if wake-up condition is met.

To do so, the HFXO needs to be enabled first. After waking up the HFXO, the software must bring USBD out of the low power mode and into the normal power consumption mode through writing ForceNormal in register LOWPOWER. It can then instruct the USBD peripheral to drive a RESUME condition (K state) on the USB bus by triggering the DPDMDRIVE task, and hence attempt to wake up the host. By choosing Resume in DPDMVALUE, the duration of the RESUME state is under hardware control (t_{USB,DRIVEK}). By choosing J or K, the duration of that state is under software control (the J or K state is maintained until a DPDMNODRIVE task is triggered) and has to meet T_{DRSMUP} as specified in USB specification chapter 7.

Upon writing the ForceNormal in register LOWPOWER, a USBEVENT event is generated with the USBWUALLOWED bit set in register EVENTCAUSE.

The value in register DPDMVALUE on page 407 will only be captured and used when the DPDMDRIVE task is triggered. This value defines the state the bus will be forced into after the DPDMDRIVE task.



The device shall ensure that it does not initiate a remote wake-up request before T_{WTRSM} (according to USB specification chapter 7) after the bus has entered idle state. Using the recommended resume value in DPDMVALUE (rather than K) takes care of this, and postpones the RESUME state accordingly.

6.26.8 EasyDMA

The USBD peripheral implements EasyDMA for accessing memory without CPU involvement.

Each endpoint has an associated set of registers, tasks and events. EasyDMA and traffic on USB are tightly related. A number of events provide insight of what is happening on the USB bus with a number of tasks allowing an automated response to the traffic.

Note: Endpoint 0 (IN and OUT) are implemented as control endpoint. For more information, see Control transfers on page 380.

Registers

Enabling endpoints is controlled through the EPINEN and EPOUTEN registers.

The following registers define the memory address of the buffer for a specific IN or OUT endpoint:

- EPIN[n].PTR, (n=0..7)
- EPOUT[n].PTR, (n=0..7)
- ISOIN.PTR
- ISOOUT.PTR

The following registers define the amount of bytes to be sent on USB for next transaction:

- EPIN[n].MAXCNT, (n=0..7)
- ISOIN.MAXCNT

The following registers define the length of the buffer (in bytes) for next transfer of incoming data:

- EPOUT[n].MAXCNT, (n=1..7)
- ISOOUT.MAXCNT

Since the host decides how many bytes are sent over USB, the MAXCNT value can be copied from register SIZE.EPOUT[n] (n=1..7) or register SIZE.ISOOUT.

Register EPOUT[0].MAXCNT defines the length of the OUT buffer (in bytes) for the control endpoint 0. Register SIZE.EPOUT[0] shall indicate the same value as MaxPacketSize from the device descriptor or wLength from the SETUP command, whichever is the least.

The .AMOUNT registers indicate how many bytes actually have been transferred over EasyDMA during the last transfer.

Stalling bulk/interrupt endpoints is controlled through the EPSTALL register.

Note: Due to USB specification requirements, the effect of the stalling control endpoint 0 may be overridden by hardware, in particular when a new SETUP token is received.

EasyDMA will not copy the SETUP data to memory (it will only transfer data from the data stage). The following are separate registers in the USBD peripheral that have setup data.

- BMREQUESTTYPE
- BREQUEST
- WVALUEL
- WVALUEH
- WINDEXL
- WINDEXH



- WLENGTHL
- WLENGTHH

The EVENTCAUSE register provides details on what caused a given USBEVENT event, for instance if a CRC error is detected during a transaction, or if bus activity stops or resumes.

Tasks

Tasks STARTEPIN[n], STARTEPOUT[n] (n=0..7), STARTISOIN, and STARTISOOUT capture the values for .PTR and .MAXCNT registers. For IN endpoints, a transaction over USB gets automatically triggered when the EasyDMA transfer is complete. For OUT endpoints, it is up to software to allow the next transaction over USB. See the examples in Control transfers on page 380, Bulk and interrupt transactions on page 383, and Isochronous transactions on page 385.

For the control endpoint 0, OUT transactions are allowed through the EPORCVOUT task. The EPOSTATUS task allows a status stage to be initiated, and the EPOSTALL task allows stalling further traffic (data or status stage) on the control endpoint.

Events

The STARTED event confirms that the values of the .PTR and .MAXCNT registers of the endpoints flagged in register EPSTATUS have been captured. Those can then be modified by software for the next transfer.

Events ENDEPIN[n], ENDEPOUT[n] (n=0..7), ENDISOIN, and ENDISOOUT events indicate that the entire buffer has been consumed. The buffer can be accessed safely by the software.

Only a single EasyDMA transfer can take place in USBD at any time. Software must ensure that tasks STARTEPIN[n] (n=0..7), STARTISOIN, STARTEPOUT[n] (n=0..7), or STARTISOOUT are not triggered before events ENDEPIN[n] (n=0..7), ENDISOIN, ENDEPOUT[n] (n=0..7), or ENDISOOUT are received from an ongoing transfer.

The EPDATA event indicates that a successful (acknowledged) data transaction has occurred on the data endpoint(s) flagged in register EPDATASTATUS. A successful (acknowledged) data transaction on endpoint 0 is signalled by the EPODATADONE event.

At any time a USBEVENT event may be sent, with details provided in EVENTCAUSE register.

The EPOSETUP event indicates that a SETUP token has been received on the control endpoint 0, and that the setup data is available in the setup data registers.

6.26.9 Control transfers

The USB specification mandates every USB device to implement endpoint 0 IN and OUT as control endpoints.

A control transfer consists of two or three stages:

- Setup stage
- Data stage (optional)
- Status stage

Each control transfer can be one of following types:

- Control read
- Control read no data
- Control write
- Control write no data

An EPOSETUP event indicates that the data in the setup stage (following the SETUP token) is available in registers.



The data in the data stage (following the IN or OUT token) is transferred from or to the desired location using EasyDMA.

The control endpoint buffer can be of any size.

After receiving the SETUP token, the USB controller will not accept (NAK) any incoming IN or OUT tokens until the software has finished decoding the command, determined the type of transfer, and prepared for the next stage (data or status) appropriately.

The software can stall a command when in the data and status stages, through the EPOSTALL task, when the command is not supported or if its wValue, wIndex or wLength parameters are wrong. The following shows a stalled control read transfer, but the same mechanism (tasks) applies to stalling a control write transfer.

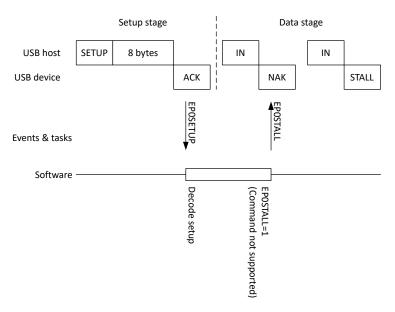


Figure 140: Control read gets stalled

See the USB 2.0 Specification and relevant class specifications for rules on stalling commands.

Note: The USBD peripheral handles the SetAddress transfer by itself. As a consequence, the software shall not process this command other than updating its state machine (see Device state diagram), nor initiate a status stage. If necessary, the address assigned by the host can be read out from the USBADDR register after the command has been processed.

6.26.9.1 Control read transfer

This section describes how the software behaves when responding to a control read transfer.

As mentioned earlier, the USB controller will not accept (NAK) any incoming IN tokens until software has finished decoding the command, determining the type of transfer, and preparing for the next stage (data or status) appropriately.

For a control read, transferring the data from memory into USBD will trigger a valid, acknowledged (ACK) IN transaction on USB.

The software has to prepare EasyDMA by pointing to the buffer containing the data to be transferred. If no other EasyDMA transfers are on-going with USBD, the software can send the STARTEPINO task, which will initiate the data transfer and transaction on USB.

A STARTED event (with EPINO bit set in the EPSTATUS register) will be generated as soon as the EPIN[0].PTR and .MAXCNT registers have been captured. Software may then prepare them for the next data transaction.

NORDIC

An ENDEPIN[0] event will be generated when the data has been transferred from memory to the USBD peripheral.

Finally, an EPODATADONE event will be generated when the data has been transmitted over USB and acknowledged by the host.

The software can then either prepare and transmit the next data transaction by repeating the above sequence, or initiate the status stage through the EPOSTATUS task.

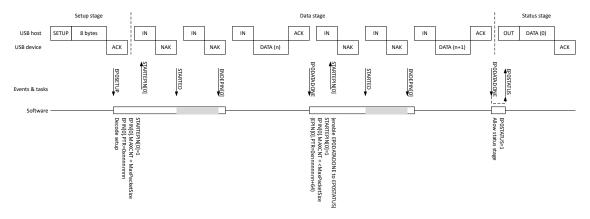


Figure 141: Control read transfer

It is possible to enable a shortcut from the EPODATADONE event to the EPOSTATUS task, typically if the data stage is expected to take a single transfer. If there is no data stage, the software can initiate the status stage through the EPOSTATUS task right away, as as shown in the following figure.

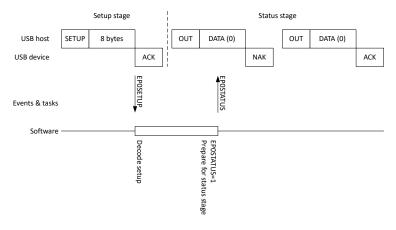


Figure 142: Control read no data transfer

6.26.9.2 Control write transfer

This section describes how the software responds to a control write transfer.

The software has to prepare EasyDMA by pointing to the buffer in memory that shall contain the incoming data. If no other EasyDMA transfers are ongoing with USBD, the software can then send the EPORCVOUT task, which will make USBD acknowledge (ACK) the first OUT+DATA transaction from the host.

An EPODATADONE event will be generated when a new OUT+DATA has been transmitted over USB, and is about to get acknowledged by the device.

After receiving the first transaction, a STARTED event (the EPOUT0 bit set in the EPSTATUS register) is generated when the EPOUT[0].PTR and .MAXCNT registers have been captured. Software may then prepare them for the next data transaction.



An ENDEPOUT[0] event will be generated when the data has been transferred from the USBD peripheral to memory. The software can then either prepare to receive the next data transaction by repeating the above sequence, or initiate the status stage through the EPOSTATUS task. Until then, further incoming OUT +DATA transactions get a NAK response by the device.

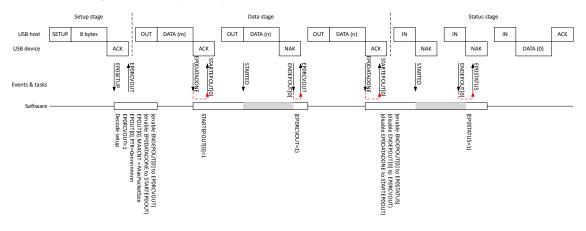


Figure 143: Control write transfer

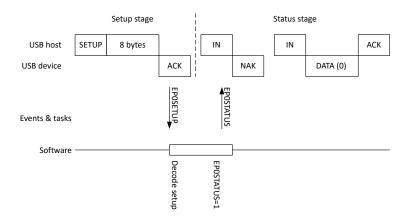


Figure 144: Control write no data transfer

6.26.10 Bulk and interrupt transactions

The USBD peripheral implements seven pairs of bulk/interrupt endpoints.

The bulk/interrupt endpoints have a fixed USB endpoint number, summarized in the following table.

Bulk endpoint #	USB IN endpoint	USB OUT endpoint
[1]	0x81	0x01
[2]	0x82	0x02
[3]	0x83	0x03
[4]	0x84	0x04
[5]	0x85	0x05
[6]	0x86	0x06
[7]	0x87	0x07

Table 110: Bulk/interrupt endpoint numbering

A bulk/interrupt transaction consists of a single data stage. Two consecutive, successful transactions are distinguished through alternating leading process ID (PID): DATA0 follows DATA1, DATA1 follows DATA0, etc. A repeated transaction is detected by re-using the same PID as previous transaction, i.e DATA0 follows DATA0, or DATA1 follows DATA1.

The USBD controller automatically toggles DATAO/DATA1 PIDs for every bulk/interrupt transaction.



If incoming data is corrupted (CRC does not match), the USBD controller automatically prevents DATAO/DATA1 from toggling, to request the host to resend the data.

In some specific cases, the software may want to force a data toggle (usually reset) on a specific IN endpoint, or force the expected toggle on an OUT endpoint, for instance as a consequence of the host issuing ClearFeature, SetInterface, or selecting an alternate setting. Controlling the data toggle of data IN or OUT endpoint n (n=1..7) is done through register DTOGGLE.

The bulk/interrupt transaction in USB full-speed can be of any size up to 64 bytes. It must be a multiple of four bytes and 32-bit aligned in memory.

When the USB transaction has completed, an EPDATA event is generated. Until new data has been transferred by EasyDMA from memory to the USBD peripheral (signalled by the ENDEPIN[n] event), the hardware will automatically respond with NAK to all incoming IN tokens. Software has to configure and start the EasyDMA transfer once it is ready to send more data.

Each IN or OUT data endpoint has to be explicitly enabled by software through register EPINEN or EPOUTEN, according to the configuration declared by the device and selected by the host through the **SetConfig** command.

A disabled data endpoint will not respond to any traffic from the host. An enabled data endpoint will normally respond NAK or ACK (depending on the readiness of the buffers), or STALL (if configured in register EPSTALL), in which case the endpoint is asked to halt. The halted (or not) state of a given endpoint can be read back from register HALTED.EPIN[n] or HALTED.EPOUT[n]. The format of the returned 16-bit value can be copied as is, as a response to a GetStatusEndpoint request from the host.

Enabling or disabling an endpoint will not change its halted state. However, a USB reset will disable and clear the halted state of all data endpoints.

The control endpoint 0 IN and OUT can also be enabled and/or halted using the same mechanisms, but due to USB specification, receiving a SETUP will override its state.

6.26.10.1 Bulk and interrupt IN transaction

The host issues IN tokens to receive bulk/interrupt data. In order to send data, the software has to enable the endpoint and prepare an EasyDMA transfer on the desired endpoint.

Bulk/interrupt IN endpoints are enabled or disabled through their respective INn bit (n=1..7) in EPINEN register.

It is also possible to stall or resume communication on an endpoint through the EPSTALL register.

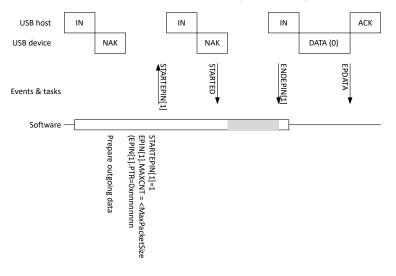


Figure 145: Bulk/interrupt IN transaction



It is possible (and in some situations it is required) to respond to an IN token with a zero-length data packet.

Note: On many USB hosts, not responding (DATA+ACK or NAK) to three IN tokens on an interrupt endpoint would have the host disable that endpoint as a consequence. Re-enumerating the device (unplug-replug) may be required to restore functionality. Make sure that the relevant data endpoints are enabled for normal operation as soon as the device gets configured through a **SetConfig** request.

6.26.10.2 Bulk and interrupt OUT transaction

When the host wants to transmit bulk/interrupt data, it issues an OUT token (packet) followed by a DATA packet on a given endpoint n (n=1..7).

A NAK is returned until the software writes any value to register SIZE.EPOUT[n], indicating that the content of the local buffer can be overwritten. Upon receiving the next OUT+DATA transaction, an ACK is returned to the host while an EPDATA event is generated (and the EPDATASTATUS register flags are set to indicate on which endpoint this happened). Once the EasyDMA is prepared and enabled, by writing the EPOUT[n] registers and triggering the STARTEPOUT[n] task, the incoming data will be transferred to memory. Until that transfer is finished, the hardware will automatically NAK any other incoming OUT+DATA packets. Only when the EasyDMA transfer is done (signalled by the ENDEPOUT[n] event), or as soon as any values are written by the software in register SIZE.EPOUT[n], the endpoint n will accept incoming OUT+DATA again.

It is allowed for the host to send zero-length data packets.

Bulk/interrupt OUT endpoints are enabled or disabled through their respective OUTn bit (n=1..7) in the EPOUTEN register. It is also possible to stall or resume communication on an endpoint through the EPSTALL register.

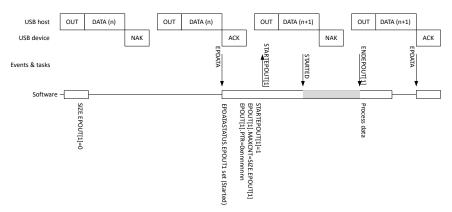


Figure 146: Bulk/interrupt OUT transaction

6.26.11 Isochronous transactions

The USBD peripheral implements isochronous (ISO) endpoints.

The ISO endpoints have a fixed USB endpoint number, summarized in the following table.



Table 111: Isochronous endpoint numbering

An isochronous transaction consists of a single, non-acknowledged data stage. The host sends out a start of frame at a regular interval (1 ms), and data follows IN or OUT tokens within each frame.



EasyDMA allows transferring ISO data directly from and to memory. EasyDMA transfers must be initiated by the software, which can synchronize with the SOF (start of frame) events.

Because the timing of the start of frame is very accurate, the SOF event can be used for jobs such as synchronizing a local timer through the SOF event and PPI. The SOF event gets synchronized to the 16 MHz clock prior to being made available to the PPI.

Every start of frame increments a free-running counter, which can be read by software through the FRAMECNTR register.

Each IN or OUT ISO data endpoint has to be explicitly enabled by software through register EPINEN or EPOUTEN, according to the configuration declared by the device and selected by the host through the SetConfig command. A disabled ISO IN data endpoint will not respond to any traffic from the host. A disabled ISO OUT data endpoint will ignore any incoming traffic from the host.

The USBD peripheral has an internal 1 kB buffer associated with ISO endpoints. The user can either allocate the full amount to the IN or the OUT endpoint, or split the buffer allocation between the two using register ISOSPLIT.

The internal buffer also sets the maximum size of the ISO OUT and ISO IN transfers: 1023 bytes when the full buffer is dedicated to either ISO OUT or ISO IN, and half when the buffer is split between the two.

6.26.11.1 Isochronous IN transaction

When the host wants to receive isochronous (ISO) data, it issues an IN token on the isochronous endpoint.

After the data has been transferred using the EasyDMA, the USB controller on the isochronous IN endpoint responds to the IN token with the transferred data using the ISOIN.MAXCNT for the size of the packet.

The ISO IN data endpoint has to be explicitly enabled by software through the ISOINO bit in register EPINEN.

When an ISO IN endpoint is enabled and no data transferred with EasyDMA, the response of the USBD depends on the setting of the RESPONSE field in register ISOINCONFIG. It can either provide no response to an IN token or respond with a zero-length data.

If the EasyDMA transfer on the isochronous endpoint is not completed before the next SOF event, the result of the transfer is undefined.

The maximum size of an ISO IN transfer in USB full-speed is 1023 bytes. The data buffer has to be a multiple of 4 bytes 32-bit aligned in memory. However, the amount of bytes transferred on the USB data endpoint can be of any size (up to 1023 bytes, if not shared with an OUT ISO endpoint).

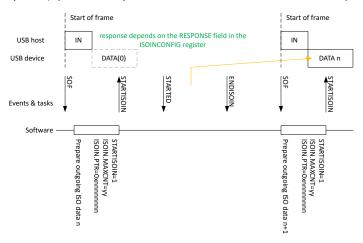


Figure 147: Isochronous IN transfer



6.26.11.2 Isochronous OUT transaction

When the host wants to send isochronous (ISO) data, it issues an OUT token on the isochronous endpoint, followed by data.

The ISO OUT data endpoint has to be explicitly enabled by software through the ISOOUT0 bit in register EPOUTEN.

The amount of last received ISO OUT data is provided in the SIZE.ISOOUT register. Software shall interpret the ZERO and SIZE fields as presented in the following table.

ZERO	SIZE	Last received data size
Normal	0	No data received at all
Normal	11023	11023 bytes of data received
ZeroData	(not of interest)	Zero-length data packet received

Table 112: ISO OUT incoming data size

When EasyDMA is prepared and started, triggering a STARTISOOUT task initiates an EasyDMA transfer to memory. Software shall synchronize ISO OUT transfers with the SOF events. EasyDMA uses the address in ISOOUT.PTR and size in ISOOUT.MAXCNT for every new transfer.

If the EasyDMA transfer on the isochronous endpoint is not completed before the next SOF event, the result of the transfer is undefined.

The maximum size of an isochronous OUT transfer in USB full-speed is 1023 bytes. The data buffer has to be a multiple of 4 bytes and 32-bit aligned in Data RAM. However, the amount of bytes transferred on the USB data endpoint can be of any size (up to 1023 bytes if not shared with an IN ISO endpoint).

If the last received ISO data packet is corrupted (wrong CRC), the USB controller generates an USBEVENT event (at the same time as SOF) and indicates a CRC error on ISOOUTCRC in register EVENTCAUSE. EasyDMA will transfer the data anyway if it has been set up properly.

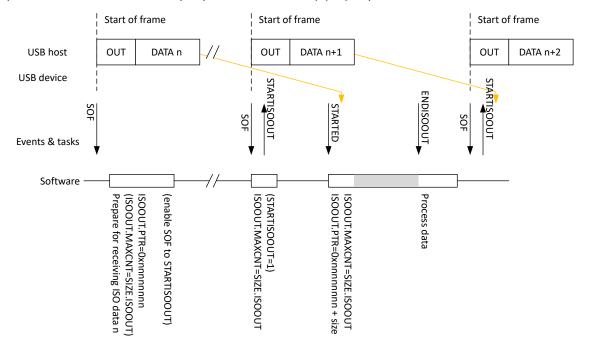


Figure 148: Isochronous OUT transfer



6.26.12 USB register access limitations

Some of the registers in USBD cannot be accessed in specific conditions.

This may be the case when USBD is not enabled (using the ENABLE register) and ready (signalled by the READY bit in EVENTCAUSE after a USBEVENT event), or when USBD is in low power mode while the USB bus is suspended.

Triggering any tasks, including the tasks triggered through the PPI, is affected by this behavior. In addition, the following registers are affected:

- HALTED.EPIN[0..7]
- HALTED.EPOUT[0..7]
- USBADDR
- BMREQUESTTYPE
- BREQUEST
- WVALUEL
- WVALUEH
- WINDEXL
- WINDEXH
- WLENGTHL
- WLENGTHH
- SIZE.EPOUT[0..7]
- SIZE.ISOOUT
- USBPULLUP
- DTOGGLE
- EPINEN
- EPOUTEN
- EPSTALL
- ISOSPLIT
- FRAMECNTR

6.26.13 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40027000	USBD	USBD	Universal serial bus device		

Table 113: Instances

Register	Offset	Description
TASKS_STARTEPIN[0]	0x004	Captures the EPIN[0].PTR and EPIN[0].MAXCNT registers values, and enables endpoint IN 0 to
		respond to traffic from host
TASKS_STARTEPIN[1]	0x008	Captures the EPIN[1].PTR and EPIN[1].MAXCNT registers values, and enables endpoint IN 1 to
		respond to traffic from host
TASKS_STARTEPIN[2]	0x00C	Captures the EPIN[2].PTR and EPIN[2].MAXCNT registers values, and enables endpoint IN 2 to
		respond to traffic from host
TASKS_STARTEPIN[3]	0x010	Captures the EPIN[3].PTR and EPIN[3].MAXCNT registers values, and enables endpoint IN 3 to
		respond to traffic from host
TASKS_STARTEPIN[4]	0x014	Captures the EPIN[4].PTR and EPIN[4].MAXCNT registers values, and enables endpoint IN 4 to
		respond to traffic from host
TASKS_STARTEPIN[5]	0x018	Captures the EPIN[5].PTR and EPIN[5].MAXCNT registers values, and enables endpoint IN 5 to
		respond to traffic from host



Register	Offset	Description
TASKS_STARTEPIN[6]	0x01C	Captures the EPIN[6].PTR and EPIN[6].MAXCNT registers values, and enables endpoint IN 6 to
		respond to traffic from host
TASKS_STARTEPIN[7]	0x020	Captures the EPIN[7].PTR and EPIN[7].MAXCNT registers values, and enables endpoint IN 7 to
		respond to traffic from host
TASKS_STARTISOIN	0x024	Captures the ISOIN.PTR and ISOIN.MAXCNT registers values, and enables sending data on ISO
_		endpoint
TASKS STARTEPOUT[0]	0x028	Captures the EPOUT[0].PTR and EPOUT[0].MAXCNT registers values, and enables endpoint 0 to
_		respond to traffic from host
TASKS_STARTEPOUT[1]	0x02C	Captures the EPOUT[1].PTR and EPOUT[1].MAXCNT registers values, and enables endpoint 1 to
		respond to traffic from host
TASKS_STARTEPOUT[2]	0x030	Captures the EPOUT[2].PTR and EPOUT[2].MAXCNT registers values, and enables endpoint 2 to
		respond to traffic from host
TASKS_STARTEPOUT[3]	0x034	Captures the EPOUT[3].PTR and EPOUT[3].MAXCNT registers values, and enables endpoint 3 to
		respond to traffic from host
TASKS_STARTEPOUT[4]	0x038	Captures the EPOUT[4].PTR and EPOUT[4].MAXCNT registers values, and enables endpoint 4 to
		respond to traffic from host
TASKS STARTEPOUT[5]	0x03C	Captures the EPOUT[5].PTR and EPOUT[5].MAXCNT registers values, and enables endpoint 5 to
	0,000	respond to traffic from host
TASKS_STARTEPOUT[6]	0x040	Captures the EPOUT[6].PTR and EPOUT[6].MAXCNT registers values, and enables endpoint 6 to
//S/(S_S////(LF OO /[O]	0,040	respond to traffic from host
TASKS_STARTEPOUT[7]	0x044	Captures the EPOUT[7].PTR and EPOUT[7].MAXCNT registers values, and enables endpoint 7 to
IASKS_STARTEFOOT[7]	0.044	respond to traffic from host
TASKS_STARTISOOUT	0x048	Captures the ISOOUT.PTR and ISOOUT.MAXCNT registers values, and enables receiving of data
1A3K3_31AK1130001	0.040	on ISO endpoint
TASKS_EPORCVOUT	0x04C	Allows OUT data stage on control endpoint 0
TASKS EPOSTATUS	0x050	Allows status stage on control endpoint 0
TASKS_EPOSTALL	0x054	Stalls data and status stage on control endpoint 0
TASKS_DPDMDRIVE	0x054	Forces D+ and D- lines into the state defined in the DPDMVALUE register
TASKS_DPDMNODRIVE	0x05C	Stops forcing D+ and D- lines into any state (USB engine takes control)
EVENTS_USBRESET	0x100	Signals that a USB reset condition has been detected on USB lines
EVENTS_STARTED	0x100	Confirms that the EPIN[n].PTR and EPIN[n].MAXCNT, or EPOUT[n].PTR and EPOUT[n].MAXCNT
EVENTS_STARTED	0.104	registers have been captured on all endpoints reported in the EPSTATUS register
EVENTS ENDEPIN[0]	0x108	The whole EPIN[0] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPIN[1]	0x108 0x10C	The whole EPIN[1] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPIN[2]	0x10C	The whole EPIN[2] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPIN[3]	0x110	The whole EPIN[3] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS ENDEPIN[4]	0x114 0x118	The whole EPIN[4] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS ENDEPIN[5]	0x116	The whole EPIN[5] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPIN[6]	0x120	The whole EPIN[6] buffer has been consumed. The buffer can be accessed safely by software.
_	0x120	The whole EPIN[7] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPIN[7]		
EVENTS_EPODATADONE	0x128	An acknowledged data transfer has taken place on the control endpoint
EVENTS_ENDISOIN	0x12C	The whole ISOIN buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPOUT[0]	0x130	The whole EPOUT[0] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPOUT[1]	0x134	The whole EPOUT[1] buffer has been consumed. The buffer can be accessed safely by
		software.
EVENTS_ENDEPOUT[2]	0x138	The whole EPOUT[2] buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_ENDEPOUT[3]	0x13C	The whole EPOUT[3] buffer has been consumed. The buffer can be accessed safely by
EVENTS_ENDEROUT[5]	OVIDC	software.
EVENTS_ENDEPOUT[4]	0x140	The whole EPOUT[4] buffer has been consumed. The buffer can be accessed safely by
		software.



Register	Offset	Description
EVENTS_ENDEPOUT[5]	0x144	The whole EPOUT[5] buffer has been consumed. The buffer can be accessed safely by
		software.
EVENTS_ENDEPOUT[6]	0x148	The whole EPOUT[6] buffer has been consumed. The buffer can be accessed safely by
		software.
EVENTS_ENDEPOUT[7]	0x14C	The whole EPOUT[7] buffer has been consumed. The buffer can be accessed safely by
		software.
EVENTS_ENDISOOUT	0x150	The whole ISOOUT buffer has been consumed. The buffer can be accessed safely by software.
EVENTS_SOF	0x154	Signals that a SOF (start of frame) condition has been detected on USB lines
EVENTS_USBEVENT	0x158	An event or an error not covered by specific events has occurred. Check EVENTCAUSE register
		to find the cause.
EVENTS_EPOSETUP	0x15C	A valid SETUP token has been received (and acknowledged) on the control endpoint
EVENTS_EPDATA	0x160	A data transfer has occurred on a data endpoint, indicated by the EPDATASTATUS register
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
EVENTCAUSE	0x400	Details on what caused the USBEVENT event
HALTED.EPIN[0]	0x420	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[1]	0x424	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[2]	0x428	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[3]	0x42C	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[4]	0x430	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[5]	0x434	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[6]	0x434	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPIN[7]	0x43C	IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPOUT[0]	0x444	· · · · · · · · · · · · · · · · · · ·
HALIED.EPOOT[0]	UX444	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.
HALTED.EPOUT[1]	0x448	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
HALIED.EFOOT[1]	0.440	
HALTED.EPOUT[2]	0x44C	endpoint.
HALIED.EPOUT[2]	UX44C	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
HALTED EDOLIT[3]	0.450	endpoint.
HALTED.EPOUT[3]	0x450	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
HALTED EDOLLT[4]	0.454	endpoint.
HALTED.EPOUT[4]	0x454	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
		endpoint.
HALTED.EPOUT[5]	0x458	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
		endpoint.
HALTED.EPOUT[6]	0x45C	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
		endpoint.
HALTED.EPOUT[7]	0x460	OUT endpoint halted status. Can be used as is as response to a GetStatus() request to
		endpoint.
EPSTATUS	0x468	Provides information on which endpoint's EasyDMA registers have been captured
EPDATASTATUS	0x46C	Provides information on which endpoint(s) an acknowledged data transfer has occurred
		(EPDATA event)
USBADDR	0x470	Device USB address
BMREQUESTTYPE	0x480	SETUP data, byte 0, bmRequestType
BREQUEST	0x484	SETUP data, byte 1, bRequest
WVALUEL	0x488	SETUP data, byte 2, LSB of wValue
WVALUEH	0x48C	SETUP data, byte 3, MSB of wValue
WINDEXL	0x490	SETUP data, byte 4, LSB of windex
WINDEXH	0x494	SETUP data, byte 5, MSB of windex
WLENGTHL	0x498	SETUP data, byte 6, LSB of wLength
WLENGTHH	0x49C	SETUP data, byte 7, MSB of wLength



SIZE.EPOUT[0] Ox4A0 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[1] Ox4A4 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[2] Ox4A8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[3] Ox4AC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[4] Ox4B0 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[5] Ox4B4 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[6] Ox4B8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[8] Ox500 Enable USB DEDMITED Ox500 Enable USB SIZE.EPOUT[8] Ox500 Enable USB Deliver on this ISO OUT data endpoint EPINALE Ox508 State 0+ and 0- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGEL Ox500 Data toggle control and status EPINALE Ox501 Endpoint IN enable EPINALE Ox502 Endpoint IN enable EPINALE Ox503 STALL endpoints ISOSPUT Ox510 Controls the split of ISO buffers FRAMECNTR Ox502 Returns the current value of the start of frame counter LOWPOWER Ox504 Controls the response of the ISO IN endpoint to an IN token when no data is	
SIZE.EPOUT[2] 0x488 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[3] 0x4AC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[4] 0x4B0 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[5] 0x4B4 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[6] 0x4B8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] 0x4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.SOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes number of bytes to transfer SIZE.ISOOUT 0x4C0 Number of bytes to transfer SIZE.ISOUT 0x5C0 Number of bytes to transfer SIZE.ISOUT 0x4C0 Number of bytes to transfer SIZE.ISOUT 0x4C0 Number of bytes transferred in the last transaction EPIN[0].MAXCNT 0x6C1 Number of bytes transferred in the last transaction EPIN[1].AMACNT 0x6C2 Maximum number of bytes to transfer EPIN[2].PTR 0x6C0 Number of bytes transferred in the last transaction EPIN[2].PTR 0x6C0 Number of bytes transferred in the last transaction EPIN[2].PTR 0x6C0 Number of bytes transferred in the last transaction	
SIZE.EPOUT[2] 0x4A8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[3] 0x4AC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[4] 0x4B0 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[5] 0x4B4 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[6] 0x4B8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] 0x4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last on this ISO OUT data endpoint ENABLE 0x500 Enable USB USBPULLUP 0x504 Control of the USB pull-up DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPUT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].PTR 0x604 Maximum number of bytes to transfer EPIN[1].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[2].PTR 0x628 Data pointer EPIN[2].PTR 0x628 Data pointer EPIN[2].PTR 0x620 Maximum number of bytes to transfer EPIN[2].PTR 0x620 Number of bytes transferred in the last transaction EPIN[2].PTR 0x620 Number of bytes transferred in the last transaction	
SIZE.EPOUT[3] 0x4AC Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[4] 0x4B0 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[5] 0x4B4 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[6] 0x4B8 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] 0x4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.SOOUT 0x4C0 Number of bytes received last in the data stage of this OUT endpoint SIZE.SOOUT 0x4C0 Number of bytes received last on this ISO OUT data endpoint ENABLE 0x500 Enable USB USBPULLUP 0x504 Control of the USB pull-up DPDMVALUE 0x505 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPUT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].PTR 0x601 Maximum number of bytes to transfer EPIN[0].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].PTR 0x614 Data pointer EPIN[2].PTR 0x628 Data pointer EPIN[2].PTR 0x628 Data pointer EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x630 Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x630 Number of bytes transferred in the last transaction	
SIZE.EPOUT[4] 0x480 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[5] 0x484 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[6] 0x488 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] 0x48C Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4CO Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4CO Number of bytes received last on this ISO OUT data endpoint ENABLE 0x500 Enable USB USBPULLUP 0x504 Control of the USB pull-up DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPOUTEN 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].PTR 0x604 Maximum number of bytes to transfer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x612 Data pointer EPIN[1].PTR 0x62 Data pointer EPIN[2].PTR 0x62 Data pointer EPIN[2].MAXCNT 0x62 Maximum number of bytes to transfer EPIN[2].MAXCNT 0x62 Maximum number of bytes to transfer EPIN[2].MAXCNT 0x63 Number of bytes transferred in the last transaction	
SIZE.EPOUT[5] Ox484 Number of bytes received last in the data stage of this OUT endpoint SIZE.EPOUT[7] Ox48C Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT Ox4CO Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT Ox4CO Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT Ox4CO Number of bytes received last on this ISO OUT data endpoint ENABLE Ox500 Enable USB USBPULLUP Ox504 Control of the USB pull-up DPDMVALUE Ox508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE Ox50C Data toggle control and status EPINEN Ox510 Endpoint IN enable EPOUTEN Ox514 Endpoint OUT enable EPSTALL Ox518 STALL endpoints ISOSPLIT Ox51C Controls the split of ISO buffers FRAMECNTR Ox520 Returns the current value of the start of frame counter LOWPOWER Ox52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG Ox530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR Ox600 Data pointer EPIN[0].MAXCNT Ox604 Maximum number of bytes to transfer EPIN[1].PTR Ox614 Data pointer EPIN[1].PTR Ox616 Number of bytes transferred in the last transaction EPIN[2].PTR Ox628 Data pointer EPIN[2].AMOUNT Ox620 Maximum number of bytes to transfer EPIN[2].PTR Ox620 Maximum number of bytes to transfer EPIN[2].MAXCNT Ox630 Number of bytes to transfered in the last transaction	
SIZE.EPOUT[7] 0x4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last on this ISO OUT data endpoint ENABLE 0x500 Enable USB USBPULLUP 0x504 Control of the USB pull-up DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x614	
SIZE.EPOUT[7] 0x4BC Number of bytes received last in the data stage of this OUT endpoint SIZE.ISOOUT 0x4C0 Number of bytes received last on this ISO OUT data endpoint ENABLE 0x500 Enable USB USBPULLUP 0x504 Control of the USB pull-up DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x614	
SIZE.ISOOUT Ox4CO Number of bytes received last on this ISO OUT data endpoint ENABLE Ox500 Enable USB USBPULLUP Ox504 Control of the USB pull-up DPDMVALUE Ox508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE Ox50C Data toggle control and status EPINEN Ox510 Endpoint IN enable EPOUTEN Ox514 Endpoint OUT enable EPSTALL Ox518 STALL endpoints ISOSPLIT Ox51C Controls the split of ISO buffers FRAMECNTR Ox520 Returns the current value of the start of frame counter LOWPOWER Ox52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG Ox530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR Ox600 Data pointer EPIN[0].MAXCNT Ox604 Maximum number of bytes to transfer EPIN[1].PTR Ox614 Data pointer EPIN[1].PTR Ox614 Data pointer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].AMOUNT Ox62C Maximum number of bytes to transfer EPIN[2].PTR Ox62C Maximum number of bytes to transfer EPIN[2].PTR Ox62C Maximum number of bytes to transfer EPIN[2].MAXCNT Ox62C Maximum number of bytes to transfer EPIN[2].MAXCNT Ox630 Number of bytes transferred in the last transaction EPIN[2].PTR Ox62C Maximum number of bytes to transfer EPIN[2].AMOUNT Ox630 Number of bytes transferred in the last transaction	
ENABLE USBPULLUP Ox504 Control of the USB pull-up DPDMVALUE Ox508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE Ox50C Data toggle control and status EPINEN Ox510 Endpoint IN enable EPOUTEN Ox514 Endpoint OUT enable EPSTALL Ox518 STALL endpoints ISOSPLIT Ox51C Controls the split of ISO buffers FRAMECNTR Ox520 Returns the current value of the start of frame counter LOWPOWER Ox52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG Ox530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR Ox600 Data pointer EPIN[0].MAXCNT Ox604 Maximum number of bytes to transfer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].AMOUNT Ox610 Number of bytes transferred in the last transaction EPIN[1].PTR Ox612 Data pointer EPIN[1].AMOUNT Ox613 Data pointer EPIN[1].AMOUNT Ox62C Maximum number of bytes to transfer EPIN[2].PTR Ox62B Data pointer EPIN[2].MAXCNT Ox62C Maximum number of bytes to transfer EPIN[2].AMOUNT Ox62C Maximum number of bytes to transfer EPIN[2].AMOUNT Ox630 Number of bytes transferred in the last transaction	
DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].AMACNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x614 Data pointer EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x610 Number of bytes transferred in the last transaction EPIN[1].AMOUNT 0x610 Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x620 Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
DPDMVALUE 0x508 State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].AMACNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x614 Data pointer EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x610 Number of bytes transferred in the last transaction EPIN[1].PTR 0x610 Number of bytes transferred in the last transaction EPIN[1].AMOUNT 0x611 Number of bytes transferred in the last transaction EPIN[2].PTR 0x622 Maximum number of bytes to transfer EPIN[2].MAXCNT 0x623 Number of bytes transferred in the last transaction EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
reverts the control of the lines to MAC IP (no forcing). DTOGGLE 0x50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].AMACNT 0x604 Maximum number of bytes to transfer EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x610 Data pointer EPIN[1].AMOUNT 0x611 Data pointer EPIN[1].AMOUNT 0x612 Data pointer EPIN[1].AMOUNT 0x613 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x614 Data pointer EPIN[2].AMOUNT 0x615 Number of bytes transferred in the last transaction EPIN[2].AMOUNT 0x620 Maximum number of bytes to transfer EPIN[2].MAXCNT 0x620 Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
DTOGGLE Dx50C Data toggle control and status EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].AMAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x62B Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].MAXCNT 0x630 Number of bytes transferred in the last transaction	
EPINEN 0x510 Endpoint IN enable EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x630 Number of bytes to transfer EPIN[2].MAXCNT 0x630 Number of bytes to transfer	
EPOUTEN 0x514 Endpoint OUT enable EPSTALL 0x518 STALL endpoints ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x630 Number of bytes to transfer EPIN[2].MAXCNT 0x630 Number of bytes to transfer	
EPSTALL ISOSPLIT Ox51C Controls the split of ISO buffers FRAMECNTR Ox520 Returns the current value of the start of frame counter LOWPOWER Ox52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG Ox530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR Ox600 Data pointer EPIN[0].MAXCNT Ox604 Maximum number of bytes to transfer EPIN[0].AMOUNT Ox608 Number of bytes transferred in the last transaction EPIN[1].PTR Ox614 Data pointer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].AMOUNT Ox61C Number of bytes transferred in the last transaction EPIN[2].PTR Ox628 Data pointer EPIN[2].MAXCNT Ox620 Maximum number of bytes to transfer EPIN[2].MAXCNT Ox620 Maximum number of bytes to transfer EPIN[2].AMOUNT Ox630 Number of bytes transferred in the last transaction	
ISOSPLIT 0x51C Controls the split of ISO buffers FRAMECNTR 0x520 Returns the current value of the start of frame counter LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].MAXCNT 0x630 Number of bytes transferred in the last transaction	
FRAMECNTR Ox520 Returns the current value of the start of frame counter LOWPOWER Ox52C Controls USBD peripheral low power mode during USB suspend ISOINCONFIG Ox530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR Ox600 Data pointer EPIN[0].MAXCNT Ox604 Maximum number of bytes to transfer EPIN[0].AMOUNT Ox608 Number of bytes transferred in the last transaction EPIN[1].PTR Ox614 Data pointer EPIN[1].MAXCNT Ox618 Maximum number of bytes to transfer EPIN[1].AMOUNT Ox61C Number of bytes transferred in the last transaction EPIN[2].PTR Ox628 Data pointer EPIN[2].MAXCNT Ox62C Maximum number of bytes to transfer EPIN[2].AMOUNT Ox630 Number of bytes transferred in the last transaction	
LOWPOWER 0x52C Controls USBD peripheral low power mode during USB suspend SOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes to transfer	
ISOINCONFIG 0x530 Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[0].PTR 0x600 Data pointer EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[0].MAXCNT 0x604 Maximum number of bytes to transfer EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[0].AMOUNT 0x608 Number of bytes transferred in the last transaction EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[1].PTR 0x614 Data pointer EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[1].MAXCNT 0x618 Maximum number of bytes to transfer EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[1].AMOUNT 0x61C Number of bytes transferred in the last transaction EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[2].PTR 0x628 Data pointer EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[2].MAXCNT 0x62C Maximum number of bytes to transfer EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[2].AMOUNT 0x630 Number of bytes transferred in the last transaction	
EPIN[3].PTK UXO3C Data pointer	
EPIN[3].MAXCNT 0x640 Maximum number of bytes to transfer	
**	
EPIN[4].PTR 0x650 Data pointer EDIN[4].NANCNIT 0x654 Maximum number of bytes to transfer	
EPIN[4].MAXCNT 0x654 Maximum number of bytes to transfer	
EPIN[4].AMOUNT 0x658 Number of bytes transferred in the last transaction	
EPIN[5].PTR 0x664 Data pointer	
EPIN[5].MAXCNT 0x668 Maximum number of bytes to transfer	
EPIN[5].AMOUNT 0x66C Number of bytes transferred in the last transaction	
EPIN[6].PTR 0x678 Data pointer	
EPIN[6].MAXCNT 0x67C Maximum number of bytes to transfer	
EPIN[6].AMOUNT 0x680 Number of bytes transferred in the last transaction	
EPIN[7].PTR 0x68C Data pointer	
EPIN[7].MAXCNT 0x690 Maximum number of bytes to transfer	
EPIN[7].AMOUNT 0x694 Number of bytes transferred in the last transaction	
ISOIN.PTR 0x6A0 Data pointer	
ISOIN.MAXCNT 0x6A4 Maximum number of bytes to transfer	
ISOIN.AMOUNT 0x6A8 Number of bytes transferred in the last transaction	
EPOUT[0].PTR 0x700 Data pointer	
EPOUT[0].MAXCNT 0x704 Maximum number of bytes to transfer	
EPOUT[0].AMOUNT 0x708 Number of bytes transferred in the last transaction	
EPOUT[1].PTR 0x714 Data pointer	
EPOUT[1].MAXCNT 0x718 Maximum number of bytes to transfer	




Register Offset Description EPOUT[1].AMOUNT 0x71C Number of bytes transferred in the last transaction EPOUT[2].PTR 0x728 Data pointer EPOUT[2].MAXCNT 0x72C Maximum number of bytes to transfer EPOUT[2].AMOUNT 0x730 Number of bytes transferred in the last transaction EPOUT[3].PTR 0x73C Data pointer EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer EPOUT[4].MAXCNT 0x754 Maximum number of bytes to transfer	
EPOUT[2].PTR 0x728 Data pointer EPOUT[2].MAXCNT 0x72C Maximum number of bytes to transfer EPOUT[2].AMOUNT 0x730 Number of bytes transferred in the last transaction EPOUT[3].PTR 0x73C Data pointer EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer	
EPOUT[2].MAXCNT 0x72C Maximum number of bytes to transfer EPOUT[2].AMOUNT 0x730 Number of bytes transferred in the last transaction EPOUT[3].PTR 0x73C Data pointer EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer	
EPOUT[2].AMOUNT 0x730 Number of bytes transferred in the last transaction EPOUT[3].PTR 0x73C Data pointer EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer	
EPOUT[3].PTR 0x73C Data pointer EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer	
EPOUT[3].MAXCNT 0x740 Maximum number of bytes to transfer EPOUT[3].AMOUNT 0x744 Number of bytes transferred in the last transaction EPOUT[4].PTR 0x750 Data pointer	
EPOUT[4].PTR 0x750 Data pointer Number of bytes transferred in the last transaction Data pointer	
EPOUT[4].PTR 0x750 Data pointer	
EPOUT[4].MAXCNT 0x754 Maximum number of bytes to transfer	
EPOUT[4].AMOUNT 0x758 Number of bytes transferred in the last transaction	
EPOUT[5].PTR 0x764 Data pointer	
EPOUT[5].MAXCNT 0x768 Maximum number of bytes to transfer	
EPOUT[5].AMOUNT 0x76C Number of bytes transferred in the last transaction	
EPOUT[6].PTR 0x778 Data pointer	
EPOUT[6].MAXCNT 0x77C Maximum number of bytes to transfer	
EPOUT[6].AMOUNT 0x780 Number of bytes transferred in the last transaction	
EPOUT[7].PTR 0x78C Data pointer	
EPOUT[7].MAXCNT 0x790 Maximum number of bytes to transfer	
EPOUT[7].AMOUNT 0x794 Number of bytes transferred in the last transaction	
ISOOUT.PTR 0x7A0 Data pointer	
ISOOUT.MAXCNT 0x7A4 Maximum number of bytes to transfer	
ISOOUT.AMOUNT 0x7A8 Number of bytes transferred in the last transaction	

Table 114: Register overview

6.26.13.1 TASKS_STARTEPIN[n] (n=0..7)

Address offset: $0x004 + (n \times 0x4)$

Captures the EPIN[n].PTR and EPIN[n].MAXCNT registers values, and enables endpoint IN n to respond to traffic from host

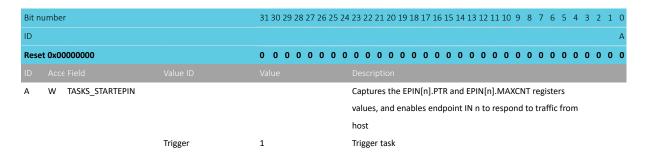

6.26.13.2 TASKS_STARTISOIN

Address offset: 0x024

Captures the ISOIN.PTR and ISOIN.MAXCNT registers values, and enables sending data on ISO endpoint




Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0	$0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \ 0 \$
ID Acce Field Value ID		Description
A W TASKS_STARTISOIN		Captures the ISOIN.PTR and ISOIN.MAXCNT registers values,
		and enables sending data on ISO endpoint
Trigger	1	Trigger task

6.26.13.3 TASKS_STARTEPOUT[n] (n=0..7)

Address offset: $0x028 + (n \times 0x4)$


Captures the EPOUT[n].PTR and EPOUT[n].MAXCNT registers values, and enables endpoint n to respond to traffic from host

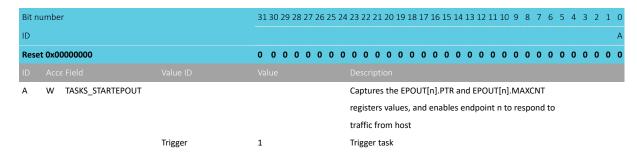

6.26.13.4 TASKS STARTISOOUT

Address offset: 0x048


Captures the ISOOUT.PTR and ISOOUT.MAXCNT registers values, and enables receiving of data on ISO endpoint

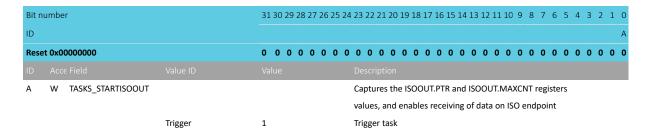

6.26.13.5 TASKS_EPORCVOUT

Address offset: 0x04C

Allows OUT data stage on control endpoint 0






6.26.13.6 TASKS_EPOSTATUS

Address offset: 0x050


Allows status stage on control endpoint 0

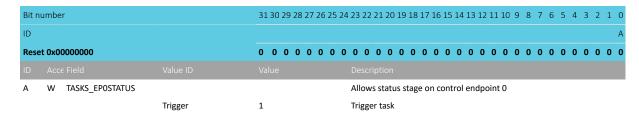

6.26.13.7 TASKS EPOSTALL

Address offset: 0x054


Stalls data and status stage on control endpoint 0

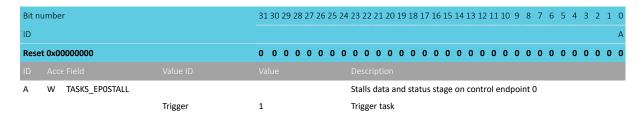

6.26.13.8 TASKS_DPDMDRIVE

Address offset: 0x058


Forces D+ and D- lines into the state defined in the DPDMVALUE register

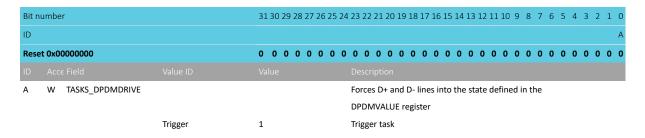

6.26.13.9 TASKS_DPDMNODRIVE

Address offset: 0x05C

Stops forcing D+ and D- lines into any state (USB engine takes control)

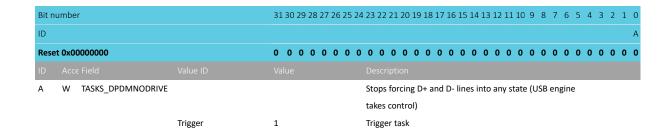




6.26.13.10 EVENTS_USBRESET

Address offset: 0x100


Signals that a USB reset condition has been detected on USB lines

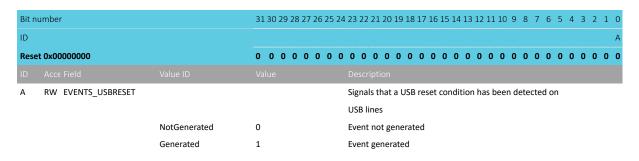

6.26.13.11 EVENTS_STARTED

Address offset: 0x104


Confirms that the EPIN[n].PTR and EPIN[n].MAXCNT, or EPOUT[n].PTR and EPOUT[n].MAXCNT registers have been captured on all endpoints reported in the EPSTATUS register

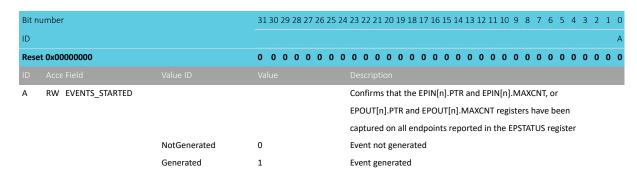

6.26.13.12 EVENTS_ENDEPIN[n] (n=0..7)

Address offset: $0x108 + (n \times 0x4)$

The whole EPIN[n] buffer has been consumed. The buffer can be accessed safely by software.

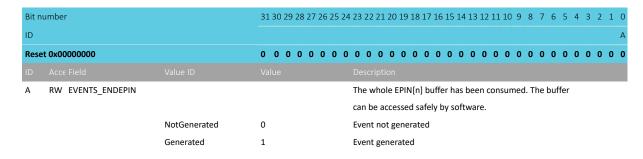

6.26.13.13 EVENTS_EPODATADONE

Address offset: 0x128


An acknowledged data transfer has taken place on the control endpoint

Bit n	umber		313	0 29	9 28	27	26	25	24	23 2	22 2	21 2	20 :	19 1	8 1	7 1	6 1	5 14	4 13	3 12	11	10	9	8	7	6	5	4	3 2	2 1	0
ID																															Α
Rese	t 0x00000000		0 (0	0	0	0	0	0	0	0	0	0	0 () () (0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0
ID										Des																					
Α	RW EVENTS_EPODATADONE									An a	ack	no	wle	dge	d d	ata	tra	nsf	er l	nas	tak	en p	olac	e o	n t	he					
										con	tro	ol er	ndp	oin	t																
		NotGenerated	0							Eve	nt ı	not	ge	ner	ateo	b															
		Generated	1							Eve	nt į	gen	era	ted																	

6.26.13.14 EVENTS ENDISOIN

Address offset: 0x12C


The whole ISOIN buffer has been consumed. The buffer can be accessed safely by software.

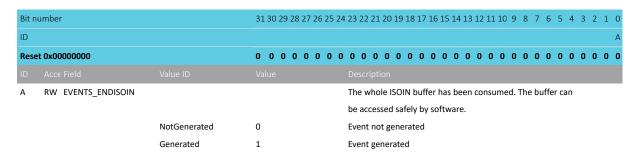

6.26.13.15 EVENTS_ENDEPOUT[n] (n=0..7)

Address offset: $0x130 + (n \times 0x4)$


The whole EPOUT[n] buffer has been consumed. The buffer can be accessed safely by software.

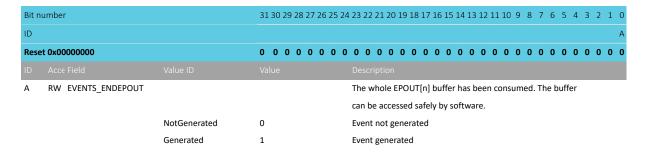

6.26.13.16 EVENTS ENDISOOUT

Address offset: 0x150

The whole ISOOUT buffer has been consumed. The buffer can be accessed safely by software.

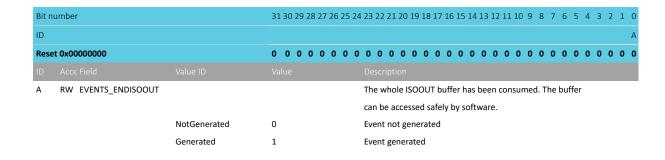




6.26.13.17 EVENTS_SOF

Address offset: 0x154


Signals that a SOF (start of frame) condition has been detected on USB lines

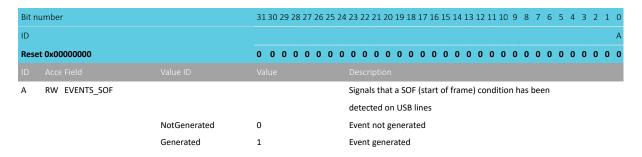

6.26.13.18 EVENTS_USBEVENT

Address offset: 0x158


An event or an error not covered by specific events has occurred. Check EVENTCAUSE register to find the cause.

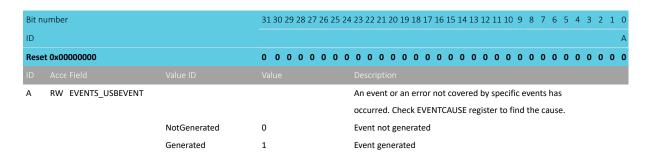

6.26.13.19 EVENTS EPOSETUP

Address offset: 0x15C

A valid SETUP token has been received (and acknowledged) on the control endpoint

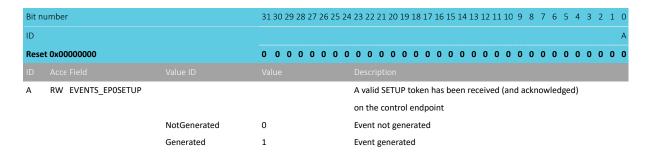

6.26.13.20 EVENTS_EPDATA

Address offset: 0x160

4463_156 v1.4

A data transfer has occurred on a data endpoint, indicated by the EPDATASTATUS register



Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_EPDATA			A data transfer has occurred on a data endpoint, indicated
			by the EPDATASTATUS register
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.26.13.21 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

ID E D C B	Bit number	21:	30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
Reset 0x00000000000000000000000000000000000		31.	
ID Acce Field Value ID Value Description A RW EPODATADONE_STARTEPINO Shortcut between event EPODATADONE and task STARTEPIN[0] Disabled 0 Disable shortcut Enabled 1 Enable shortcut B RW EPODATADONE_STARTEP Shortcut Disable shortcut Disabled 0 Disable shortcut Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut	ID		E D C B
A RW EPODATADONE_STARTEPINO Shortcut between event EPODATADONE and task STARTEPIN[0] Disabled 0 Disable shortcut Enabled 1 Enable shortcut B RW EPODATADONE_STARTEP Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut	Reset 0x00000000	0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
STARTEPIN[0] Disabled 0 Disable shortcut Enabled 1 Enables shortcut B RW EPODATADONE_STARTEP Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut			
Disabled 0 Disable shortcut Enabled 1 Enable shortcut B RW EPODATADONE_STARTEP Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut	A RW EPODATADONE_STAR	EPINO	Shortcut between event EPODATADONE and task
Enabled 1 Enable shortcut B RW EPODATADONE_STARTEP Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut			STARTEPIN[0]
B RW EPODATADONE_STARTEP Shortcut between event EPODATADONE and task STARTEPOUT[0] Disabled 0 Disable shortcut		Disabled 0	Disable shortcut
STARTEPOUT[0] Disabled 0 Disable shortcut		Enabled 1	Enable shortcut
Disabled 0 Disable shortcut	B RW EPODATADONE_STAR	:P	Shortcut between event EPODATADONE and task
			STARTEPOUT[0]
Enabled 1 Enable shortcut		Disabled 0	Disable shortcut
		Enabled 1	Enable shortcut
C RW EPODATADONE_EPOSTATUS Shortcut between event EPODATADONE and task EPOSTATUS	C RW EPODATADONE_EPOS	NTUS	Shortcut between event EPODATADONE and task EPOSTATUS
Disabled 0 Disable shortcut		Disabled 0	Disable shortcut
Enabled 1 Enable shortcut		Enabled 1	Enable shortcut
D RW ENDEPOUT0_EPOSTATUS Shortcut between event ENDEPOUT[0] and task EPOSTATUS	D RW ENDEPOUTO_EPOSTA	JS	Shortcut between event ENDEPOUT[0] and task EPOSTATUS
Disabled 0 Disable shortcut		Disabled 0	Disable shortcut
Enabled 1 Enable shortcut		Enabled 1	Enable shortcut
E RW ENDEPOUT0_EPORCVOUT Shortcut between event ENDEPOUT[0] and task EPORCVOUT	E RW ENDEPOUTO_EPORCV	UT	Shortcut between event ENDEPOUT[0] and task EPORCVOUT
Disabled 0 Disable shortcut		Disabled 0	Disable shortcut
Enabled 1 Enable shortcut		Enabled 1	Enable shortcut

6.26.13.22 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit n	umber		31	30 2	9 28	3 27	26	25	24	23	22	21 2	20 19	9 18	17	16	15	14	13 :	12 1	111	0 9	8	7	6	5	4 3	3 2	1	0
ID									Υ	Χ	W	V	U T	S	R	Q	Р	0	N I	М	L k	J	1	Н	G	F	E C) C	В	Α
Rese	t 0x00000000		0	0 (0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0	0	0	0	0	0 (0	0	0
ID																														
Α	RW USBRESET									Ena	able	e or	disa	ble	inte	erru	pt 1	for	eve	nt	USB	RES	ΕT							
		Disabled	0							Dis	abl	e																		
		Enabled	1							Ena	able	Э																		
В	RW STARTED									Ena	able	e or	disa	ble	inte	erru	pt 1	for	eve	nt	STAI	RTE)							
		Disabled	0							Dis	abl	e																		
		Enabled	1							Ena	able	е																		
C-J	RW ENDEPIN[i] (i=07)									Ena	able	e or	disa	ble	inte	erru	pt 1	for	eve	nt	END	EPII	N[i]							
		Disabled	0							Dis	abl	e																		



Bit number		31 30 29	28 2	7 26 2	25 24	23	3 22 2	21 2	0 1	9 18	3 17	16	15 1	L4 :	13 1	2 1:	1 10	9	8	7	6	5	4 3	2	1	0
ID					Υ	Х	W١	Vι	JT	S	R	Q	Р	0	N N	1 L	K	J	1	Н	G	F	E D	С	В	Α
Reset 0x00000000		0 0 0	0 0	0	0 0	0	0 (0 (0 0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0 0	0	0	0
	Enabled	1				En	nable																			
K RW EPODATADONE						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	POD	ATA	DO	NE						
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
L RW ENDISOIN						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	NDI:	SOI	N							
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
M-T RW ENDEPOUT[i] (i=07)						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	NDE	РО	UT[i]						
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
U RW ENDISOOUT						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	NDI:	soc	DUT							
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
V RW SOF						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt S	OF									
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
W RW USBEVENT						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt U	SBE	VEI	ΝT							
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			
X RW EPOSETUP						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	POS	ETU	ΙP							
	Disabled	0				Di	sable	9																		
	Enabled	1					nable																			
Y RW EPDATA						En	nable	or	disa	ble	inte	erru	ıpt f	or	ever	nt E	PDA	TA								
	Disabled	0				Di	sable	9																		
	Enabled	1				En	nable																			

6.26.13.23 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			Y	XWVUTSRQPONMLKJIHGFEDCBA
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW USBRESET			Write '1' to enable interrupt for event USBRESET
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW STARTED			Write '1' to enable interrupt for event STARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C-J	RW ENDEPIN[i] (i=07)			Write '1' to enable interrupt for event ENDEPIN[i]
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
K	RW EPODATADONE			Write '1' to enable interrupt for event EPODATADONE
		Set	1	Enable



Bit nu	ımber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 C
ID			Y	X W V U T S R Q P O N M L K J I H G F E D C B A
Rese	: 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW ENDISOIN			Write '1' to enable interrupt for event ENDISOIN
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
M-T	RW ENDEPOUT[i] (i=07)			Write '1' to enable interrupt for event ENDEPOUT[i]
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
U	RW ENDISOOUT			Write '1' to enable interrupt for event ENDISOOUT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
V	RW SOF			Write '1' to enable interrupt for event SOF
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
W	RW USBEVENT			Write '1' to enable interrupt for event USBEVENT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
X	RW EPOSETUP			Write '1' to enable interrupt for event EPOSETUP
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Υ	RW EPDATA			Write '1' to enable interrupt for event EPDATA
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.26.13.24 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			Y	Y X W V U T S R Q P O N M L K J I H G F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW USBRESET			Write '1' to disable interrupt for event USBRESET
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW STARTED			Write '1' to disable interrupt for event STARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C-J	RW ENDEPIN[i] (i=07)			Write '1' to disable interrupt for event ENDEPIN[i]



Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				Y X W V U T S R Q P O N M L K J I H G F E D C B A
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
K	RW EPODATADONE			Write '1' to disable interrupt for event EPODATADONE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW ENDISOIN			Write '1' to disable interrupt for event ENDISOIN
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
M-T	RW ENDEPOUT[i] (i=07)			Write '1' to disable interrupt for event ENDEPOUT[i]
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
U	RW ENDISOOUT			Write '1' to disable interrupt for event ENDISOOUT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
V	RW SOF			Write '1' to disable interrupt for event SOF
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
W	RW USBEVENT			Write '1' to disable interrupt for event USBEVENT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Х	RW EPOSETUP			Write '1' to disable interrupt for event EPOSETUP
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Υ	RW EPDATA			Write '1' to disable interrupt for event EPDATA
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.26.13.25 EVENTCAUSE

Address offset: 0x400

Details on what caused the USBEVENT event

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				E D C B A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW ISOOUTCRC			CRC error was detected on isochronous OUT endpoint 8.
				Write '1' to clear.
		NotDetected	0	No error detected
		Detected	1	Error detected






Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
D			E D C B A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
			Description
RW SUSPEND			Signals that USB lines have been idle long enough for the
			device to enter suspend. Write '1' to clear.
	NotDetected	0	Suspend not detected
	Detected	1	Suspend detected
RW RESUME			Signals that a RESUME condition (K state or activity restart)
			has been detected on USB lines. Write '1' to clear.
	NotDetected	0	Resume not detected
	Detected	1	Resume detected
D RW USBWUALLOWED			USB MAC has been woken up and operational. Write '1' to
			clear.
	NotAllowed	0	Wake up not allowed
	Allowed	1	Wake up allowed
RW READY			USB device is ready for normal operation. Write '1' to clear.
	NotDetected	0	USBEVENT was not issued due to USBD peripheral ready
			USBD peripheral is ready

6.26.13.26 HALTED.EPIN[n] (n=0..7)

Address offset: $0x420 + (n \times 0x4)$

IN endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.

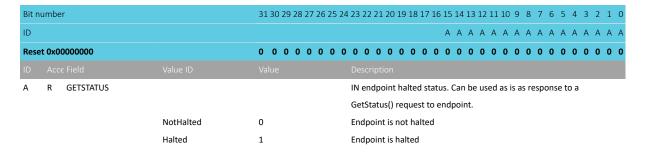

6.26.13.27 HALTED.EPOUT[n] (n=0..7)

Address offset: $0x444 + (n \times 0x4)$

OUT endpoint halted status. Can be used as is as response to a GetStatus() request to endpoint.

Bit nu	umb	er		31	30	29 2	28 2	7 26	5 25	5 24	23	3 22	21	20	19	18 1	.7 1	6 1	5 14	1 13	12	11	10	9 8	3 7	' 6	5	4	3	2	1 0
ID																		A	A	Α	Α	Α	Α	Α /	A A	. Δ	A	A	Α	Α	АА
Reset	t OxC	00000000		0	0	0	0 (0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0 () (0	0	0	0	0	0 0
ID																															
Α	R	GETSTATUS									Οl	UT 6	end	lpoi	nt h	alte	ed s	tatı	ıs. (Can	be	use	d as	is	as r	esp	ons	e			
											to	a G	SetS	Stat	us()	rec	ue:	st to	er	dp	oint										
			NotHalted	0							En	ndp	oint	t is r	not	halt	ted														
			Halted	1							En	ndp	oint	t is l	nalt	ed															

6.26.13.28 EPSTATUS

Address offset: 0x468

Provides information on which endpoint's EasyDMA registers have been captured



Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		F	R Q P O N M L K J I H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-I RW EPIN[i] (i=08)			Captured state of endpoint's EasyDMA registers. Write '1' to
			clear.
	NoData	0	EasyDMA registers have not been captured for this endpoint
	DataDone	1	EasyDMA registers have been captured for this endpoint
J-R RW EPOUT[i] (i=08)			Captured state of endpoint's EasyDMA registers. Write '1' to
			clear.
	NoData	0	EasyDMA registers have not been captured for this endpoint
	DataDone	1	EasyDMA registers have been captured for this endpoint
	DataDone	1	EasyDMA registers have been captured for this endpoint

6.26.13.29 EPDATASTATUS


Address offset: 0x46C

Provides information on which endpoint(s) an acknowledged data transfer has occurred (EPDATA event)

Bit number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			N M L K J I H G F E D C B A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-G RW EPIN[i] (i=17)			Acknowledged data transfer on this IN endpoint. Write '1' to
			clear.
	NotDone	0	No acknowledged data transfer on this endpoint
	DataDone	1	Acknowledged data transfer on this endpoint has occurred
H-N RW EPOUT[i] (i=17)			Acknowledged data transfer on this OUT endpoint. Write '1'
			to clear.
	NotStarted	0	No acknowledged data transfer on this endpoint
	Started	1	Acknowledged data transfer on this endpoint has occurred

6.26.13.30 USBADDR

Address offset: 0x470
Device USB address



6.26.13.31 BMREQUESTTYPE

Address offset: 0x480

SETUP data, byte 0, bmRequestType



Bit n	umbe	er		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					СВВАААА
Rese	et OxO	0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
Α	R	RECIPIENT			Data transfer type
			Device	0	Device
			Interface	1	Interface
			Endpoint	2	Endpoint
			Other	3	Other
В	R	TYPE			Data transfer type
			Standard	0	Standard
			Class	1	Class
			Vendor	2	Vendor
С	R	DIRECTION			Data transfer direction
			HostToDevice	0	Host-to-device
			DeviceToHost	1	Device-to-host

6.26.13.32 BREQUEST

Address offset: 0x484


SETUP data, byte 1, bRequest

Bit nu	umbe	er		31 30	29	28 2	7 26	25 2	24 2	3 2:	2 21	. 20	19 1	.8 1	7 16	5 1	5 14	13	12	11 1	10 9	8	7	6	5	4	3	2 1	. 0
ID																							Α	Α	Α	Α.	Α.	A A	A A
Rese	t 0x0	0000000		0 0	0	0 (0 0	0 (0 0	0	0	0	0	0 (0 0	C	0	0	0	0	0 0	0	0	0	0	0	0	0 (0
ID																													
Α	R	BREQUEST							S	ETL	JP d	ata	, byt	e 1,	bRe	equ	ıest	. Va	lues	s pro	ovide	ed fo	or s	tan	dar	d			
									re	equ	ests	on	ly, u	ser	mus	st i	mpl	eme	ent	clas	s and	d ve	:nd	or					
									V	alu	es.																		
			STD_GET_STATUS	0					S	tan	darc	d re	ques	t G	ET_	STA	ATU:	S											
			STD_CLEAR_FEATURE	1					S	tan	darc	d re	ques	t C	LEA	R_I	EAT	TUR	E										
			STD_SET_FEATURE	3					S	tan	darc	d re	ques	t S	ET_F	EΑ	TUF	RE											
			STD_SET_ADDRESS	5					S	tan	darc	d re	ques	t S	ET_/	٩DI	DRE	SS											
			STD_GET_DESCRIPTOR	6					S	tan	darc	d re	ques	t G	ET_	DE	SCR	IPTO	OR										
			STD_SET_DESCRIPTOR	7					S	tan	darc	d re	ques	t S	ET_I	DES	CRI	PTC	R										
			STD_GET_CONFIGURATI	O8N					S	tan	darc	d re	ques	t G	ET_	СО	NFI	GUF	RATI	ION									
			STD_SET_CONFIGURATION	D B I					S	tan	darc	d re	ques	t S	ET_C	COI	NFIC	SUR	ATI	ON									
			STD_GET_INTERFACE	10					S	tan	darc	d re	ques	t G	ET_	IN٦	ERF	ACI	Ε										
			STD_SET_INTERFACE	11					S	tan	darc	d re	ques	t S	ET_I	NT	ERF	ACE											
			STD_SYNCH_FRAME	12					S	tan	darc	d re	ques	t S'	YNC	н_	FRA	ME											

6.26.13.33 WVALUEL

Address offset: 0x488

SETUP data, byte 2, LSB of wValue








6.26.13.34 WVALUEH

Address offset: 0x48C

SETUP data, byte 3, MSB of wValue



6.26.13.35 WINDEXL

Address offset: 0x490

SETUP data, byte 4, LSB of windex

Α	R WINDEXL							SET	ΓUΡ	data	a, by	rte 4	, LSE	3 of	wln	dex										
ID																										
Res	et 0x00000000	0 (0 0	0	0	0 0	0	0	0	0 0	0	0	0 0	0	0	0	0 0	0	0	0	0 (0	0	0	0	0 0
ID																				,	۸ ,	Δ Δ	Α	Α	Α	A A
Bit r	umber	313	0 29	9 28	27 2	26 25	5 24	23	22 2	21 2	0 19	18 1	17 1	6 15	14	13 1	12 1:	l 10	9	8	7	5 5	4	3	2	1 0

6.26.13.36 WINDEXH

Address offset: 0x494

SETUP data, byte 5, MSB of windex

Α	R WINDEXH	SETUP data, byte 5, MSB of windex
ID		
Res	et 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A
Bit	number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.26.13.37 WLENGTHL

Address offset: 0x498

SETUP data, byte 6, LSB of wLength


Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value Description
A R WLENGTHL	SETUP data, byte 6, LSB of wLength

6.26.13.38 WLENGTHH

Address offset: 0x49C

SETUP data, byte 7, MSB of wLength






6.26.13.39 SIZE.EPOUT[n] (n=0..7)

Address offset: $0x4A0 + (n \times 0x4)$

Number of bytes received last in the data stage of this OUT endpoint


Write to any value to accept further OUT traffic on this endpoint, and overwrite the intermediate buffer



6.26.13.40 SIZE.ISOOUT

Address offset: 0x4C0

Number of bytes received last on this ISO OUT data endpoint

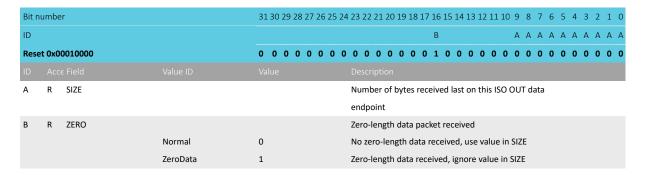


6.26.13.41 ENABLE

Address offset: 0x500

Enable USB

After writing Disabled to this register, reading the register will return Enabled until USBD is completely disabled.

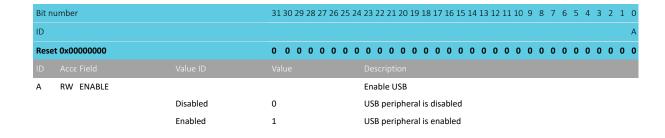




6.26.13.42 USBPULLUP

Address offset: 0x504


Control of the USB pull-up

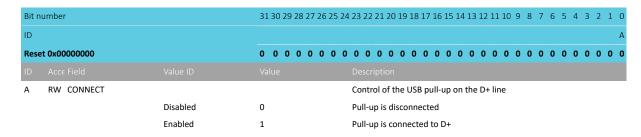

6.26.13.43 DPDMVALUE

Address offset: 0x508

State D+ and D- lines will be forced into by the DPDMDRIVE task. The DPDMNODRIVE task reverts the control of the lines to MAC IP (no forcing).

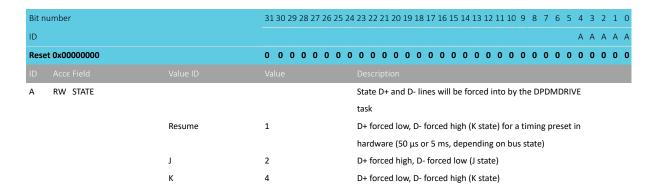

6.26.13.44 DTOGGLE

Address offset: 0x50C

Data toggle control and status

First write this register with VALUE=Nop to select the endpoint, then either read it to get the status from VALUE, or write it again with VALUE=Data0 or Data1



Bit n	number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ССВ ААА
Rese	et 0x00000100		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW EP			Select bulk endpoint number
В	RW IO			Selects IN or OUT endpoint
		Out	0	Selects OUT endpoint
		In	1	Selects IN endpoint
С	RW VALUE			Data toggle value
		Nop	0	No action on data toggle when writing the register with this
				value
		Data0	1	Data toggle is DATAO on endpoint set by EP and IO
		Data1	2	Data toggle is DATA1 on endpoint set by EP and IO

6.26.13.45 EPINEN

Address offset: 0x510 Endpoint IN enable

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			IHGFEDCBA
Reset 0x00000001		0 0 0 0 0 0	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $
ID Acce Field			
A-H RW IN[i] (i=07)			Enable IN endpoint i
	Disable	0	Disable endpoint IN i (no response to IN tokens)
	Enable	1	Enable endpoint IN i (response to IN tokens)
I RW ISOIN			Enable ISO IN endpoint
	Disable	0	Disable ISO IN endpoint 8
	Enable	1	Enable ISO IN endpoint 8

6.26.13.46 EPOUTEN

Address offset: 0x514 Endpoint OUT enable


Bit number		31 30 29 28 27 2	6 25 2	4 23 22 21	L 20 1	19 18	17 1	.6 15	5 14	113	12 :	11 10	9	8	7	6	5	4 3	2	1 0
ID														1	Н	G	F	E C) С	ВА
Reset 0x00000001		0 0 0 0 0	0 0	0 0 0	0 (0 0	0	0 0	0	0	0	0 0	0	0	0	0	0	0 (0	0 1
ID Acce Field																				
A-H RW OUT[i] (i=07)				Enable (OUT e	endpo	oint	i												
	Disable	0		Disable	endp	oint (TUC	i (no	o re	spor	nse	to C	UT t	toke	ns)					
	Enable	1		Enable 6	endpo	oint C	DUT	i (re	spo	nse	to C	DUT	toke	ns)						
I RW ISOOUT				Enable I	so o	UT er	ndpo	oint	8											
	Disable	0		Disable	ISO O	OUT e	ndp	oint	8											
	Enable	1		Enable I	so o	UT er	ndpo	oint	8											

6.26.13.47 EPSTALL

Address offset: 0x518

STALL endpoints




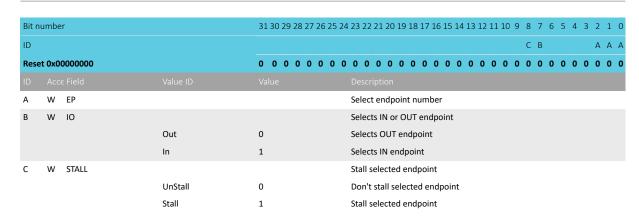

6.26.13.48 ISOSPLIT

Address offset: 0x51C


Controls the split of ISO buffers

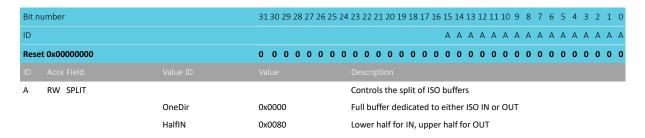

6.26.13.49 FRAMECNTR

Address offset: 0x520

Returns the current value of the start of frame counter



6.26.13.50 LOWPOWER

Address offset: 0x52C

Controls USBD peripheral low power mode during USB suspend

NORDIC SEMICONDUCTOR

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW LOWPOWER			Controls USBD peripheral low-power mode during USB
				suspend
		ForceNormal	0	Software must write this value to exit low power mode and
				before performing a remote wake-up
		LowPower	1	Software must write this value to enter low power mode
				after DMA and software have finished interacting with the
				USB peripheral

6.26.13.51 ISOINCONFIG

Address offset: 0x530


Controls the response of the ISO IN endpoint to an IN token when no data is ready to be sent

Bit r	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW RESPONSE			Controls the response of the ISO IN endpoint to an IN token
				when no data is ready to be sent
		NoResp	0	Endpoint does not respond in that case
		ZeroData	1	Endpoint responds with a zero-length data packet in that
				case

6.26.13.52 EPIN[n].PTR (n=0..7)

Address offset: $0x600 + (n \times 0x14)$


Data pointer

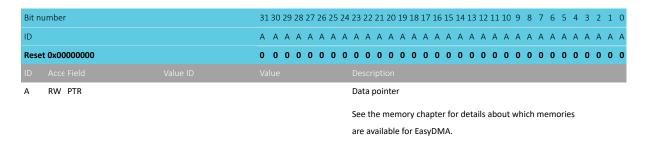

6.26.13.53 EPIN[n].MAXCNT (n=0..7)

Address offset: $0x604 + (n \times 0x14)$

Maximum number of bytes to transfer








6.26.13.54 EPIN[n].AMOUNT (n=0..7)

Address offset: $0x608 + (n \times 0x14)$

Number of bytes transferred in the last transaction



6.26.13.55 ISOIN.PTR

Address offset: 0x6A0

Data pointer

Bit no	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	1 0
ID		A A A A A A A A A A A A A A A A A A A	А А
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0
ID			
Α	RW PTR	Data pointer	

See the memory chapter for details about which memories are available for EasyDMA.

6.26.13.56 ISOIN.MAXCNT

Address offset: 0x6A4

Maximum number of bytes to transfer

Α	RW MAXCNT	[10231]	Maximum ni	umber of	bytes 1	to tran	sfer								
ID															
Rese	t 0x00000000	0 0 0 0 0 0 0	0 0 0 0	0 0 0	0 0	0 0 0	0 (0	0	0	0 0	0	0	0 0	0
ID								Α	Α	A .	А А	Α	Α .	A A	Α
Bit n	umber	31 30 29 28 27 26 25 24	4 23 22 21 20 :	19 18 17 1	16 15 1	4 13 1	2 11 1	0 9	8	7	6 5	4	3	2 1	0

6.26.13.57 ISOIN.AMOUNT

Address offset: 0x6A8

Number of bytes transferred in the last transaction

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	$\begin{smallmatrix} 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 $
ID Acce Field Value ID	Value Description
A R AMOUNT	Number of bytes transferred in the last transaction

6.26.13.58 EPOUT[n].PTR (n=0..7)

Address offset: $0x700 + (n \times 0x14)$

Data pointer



ID Acce Field							
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0	0 0 0 0 0	0 0 0	0 0 0	0 0 0
ID	A A A A A A	A A A A A A	AAAAA	A A A A	A A A	A A A	A A A
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18	8 17 16 15 14	13 12 11 10 9	8 7 6	5 4 3	2 1 0

See the memory chapter for details about which memories are available for EasyDMA.

6.26.13.59 EPOUT[n].MAXCNT (n=0..7)

Address offset: $0x704 + (n \times 0x14)$ Maximum number of bytes to transfer

ID Acce Field Value ID Value Description	
Reset 0x000000000 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	A A A A A A
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 3	8 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.26.13.60 EPOUT[n].AMOUNT (n=0..7)

Address offset: $0x708 + (n \times 0x14)$

Number of bytes transferred in the last transaction

A R AMOUNT		Number of bytes transferred in the last transaction
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.26.13.61 ISOOUT.PTR

Address offset: 0x7A0

Data pointer

A A A A A A A A A A	
ID A A A A A A A A A A A A A A A A A A A	
	0 0 0 0 0 0 0
	A A A A A A A
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8	7 6 5 4 3 2 1

See the memory chapter for details about which memories are available for EasyDMA.

6.26.13.62 ISOOUT.MAXCNT

Address offset: 0x7A4

Maximum number of bytes to transfer


NORDIC

Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 1 0 1 0 10 10 10 10 10 10 10 10 10 10	A RW MAXCNT		Maximum number of bytes to transfer
ID A A A A A A A A A A A A A A A A A A A	ID Acce Field		
	Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	ID		A A A A A A A A A A A A A A A A A A A
	Bit number	31 30 29 28 27 20	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.26.13.63 ISOOUT.AMOUNT

Address offset: 0x7A8

Number of bytes transferred in the last transaction



6.26.14 Electrical specification

6.26.14.1 USB Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
R _{USB,PU,ACTIVE}	Value of pull-up on D+, bus active (upstream device	1425	2300	3090	Ω
	transmitting)				
R _{USB,PU,IDLE}	Value of pull-up on D+, bus idle	900	1200	1575	Ω
t _{USB,DETRST}	Minimum duration of an SEO state to be detected as a USB				μs
	reset condition				
f _{USB,CLK}	Frequency of local clock, USB active		48		MHz
$f_{USB,TOL}$	Accuracy of local clock, USB active ³⁴			±1000	ppm
T _{USB,JITTER}	Jitter on USB local clock, USB active			±1	ns

6.27 WDT — Watchdog timer

A countdown watchdog timer using the low-frequency clock source (LFCLK) offers configurable and robust protection against application lock-up.

The watchdog timer is started by triggering the START task.

The watchdog can be paused during long CPU sleep periods for low power applications and when the debugger has halted the CPU. The watchdog is implemented as a down-counter that generates a TIMEOUT event when it wraps over after counting down to 0. When the watchdog timer is started through the START task, the watchdog counter is loaded with the value specified in the CRV register. This counter is also reloaded with the value specified in the CRV register when a reload request is granted.

The watchdog's timeout period is given by the following equation:

```
timeout [s] = (CRV + 1) / 32768
```



The local clock can be stopped during USB suspend

When started, the watchdog will automatically force the 32.768 kHz RC oscillator on as long as no other 32.768 kHz clock source is running and generating the 32.768 kHz system clock, see chapter CLOCK — Clock control on page 72.

6.27.1 Reload criteria

The watchdog has eight separate reload request registers, which shall be used to request the watchdog to reload its counter with the value specified in the CRV register. To reload the watchdog counter, the special value 0x6E524635 needs to be written to all enabled reload registers.

One or more RR registers can be individually enabled through the RREN register.

6.27.2 Temporarily pausing the watchdog

By default, the watchdog will be active counting down the down-counter while the CPU is sleeping and when it is halted by the debugger. It is possible to configure the watchdog to automatically pause while the CPU is sleeping as well as when it is halted by the debugger.

6.27.3 Watchdog reset

A TIMEOUT event will automatically lead to a watchdog reset.

See Reset on page 60 for more information about reset sources. If the watchdog is configured to generate an interrupt on the TIMEOUT event, the watchdog reset will be postponed with two 32.768 kHz clock cycles after the TIMEOUT event has been generated. Once the TIMEOUT event has been generated, the impending watchdog reset will always be effectuated.

The watchdog must be configured before it is started. After it is started, the watchdog's configuration registers, which comprise registers CRV, RREN, and CONFIG, will be blocked for further configuration.

The watchdog can be reset from several reset sources, see Reset behavior on page 61.

When the device starts running again, after a reset, or waking up from OFF mode, the watchdog configuration registers will be available for configuration again.

6.27.4 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40010000	WDT	WDT	Watchdog timer	

Table 115: Instances

Register	Offset	Description
TASKS_START	0x000	Start the watchdog
EVENTS_TIMEOUT	0x100	Watchdog timeout
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
RUNSTATUS	0x400	Run status
REQSTATUS	0x404	Request status
CRV	0x504	Counter reload value
RREN	0x508	Enable register for reload request registers
CONFIG	0x50C	Configuration register
RR[0]	0x600	Reload request 0
RR[1]	0x604	Reload request 1
RR[2]	0x608	Reload request 2
RR[3]	0x60C	Reload request 3
RR[4]	0x610	Reload request 4



Register	Offset	Description
RR[5]	0x614	Reload request 5
RR[6]	0x618	Reload request 6
RR[7]	0x61C	Reload request 7

Table 116: Register overview

6.27.4.1 TASKS_START

Address offset: 0x000 Start the watchdog

Bit no	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	W TASKS_START			Start the watchdog
		Trigger	1	Trigger task

6.27.4.2 EVENTS_TIMEOUT

Address offset: 0x100 Watchdog timeout

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_TIMEOUT			Watchdog timeout
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.27.4.3 INTENSET

Address offset: 0x304 Enable interrupt

Bit n	Bit number 31 30 29 28 27 26 25 2		4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	
ID			A	
Rese	et 0x00000000	0 0 0 0 0 0 0		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Α	RW TIMEOUT			Write '1' to enable interrupt for event TIMEOUT
A	RW TIMEOUT	Set	1	Write '1' to enable interrupt for event TIMEOUT Enable
A	RW TIMEOUT	Set Disabled	1 0	·

6.27.4.4 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number	31 30 29 28	27 26 25 24	23 22 21 20 1	19 18 17	16 15 :	14 13	12 11	10 9	8	7	6 !	5 4	- 3	2	1 0
ID															Α
Reset 0x00000000	0 0 0 0	0 0 0 0	0 0 0 0	0 0 0	0 0	0 0	0 0	0 0	0	0	0 (0 0	0	0 (0 0
ID Acce Field Value I	D Value														
A RW TIMEOUT			Write '1' to d	lisable in	terrup	for e	vent	TIMEC	UT						
Clear	1		Disable												
Disable	ed 0		Read: Disable	ed											
Enable	d 1		Read: Enable	ed											

6.27.4.5 RUNSTATUS

Address offset: 0x400

Run status

Bit n	umber		31 30 29 28 27 26 25 24	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	
ID				А	
Rese	et 0x00000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID				Description	
Α	R RUNSTATUS			Indicates whether or not the watchdog is running	
		NotRunning	0	Watchdog not running	
		Running	1	Watchdog is running	

6.27.4.6 REQSTATUS

Address offset: 0x404

Request status

Bit number 31 30 29 28 27 26 25 2			23 22 21 20 19 18 17	16 15 14 13 12 11	10 9 8 7	6 5	4 3 2	2 1 0
ID					Н	G F	E D (ВА
Reset 0x00000001 0 0 0 0 0 0		0 0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	0 0 0 0	0 0	0 0 (0 0 1
ID Acce Field Val								
A-H R RR[i] (i=07)			Request status for RR[i] register					
Dis	sabledOrRequested 0	O RR[i] register is not enabled, or are already requesting						
			reload					
En:	abledAndUnrequested 1		RR[i] register is enabled, and are not yet requesting reload					

6.27.4.7 CRV

Address offset: 0x504 Counter reload value

Bit r	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			Value Description
Α	A RW CRV [0xF0xFFFFFFF]		[0xF0xFFFFFFFF] Counter reload value in number of cycles of the 32.768 kHz
			clock

6.27.4.8 RREN

Address offset: 0x508

Enable register for reload request registers

NORDIC*

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	
ID			HGFEDCBA	
Reset 0x00000001		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID Acce Field			Description	
A-H RW RR[i] (i=07)			Enable or disable RR[i] register	
	Disabled	0	Disable RR[i] register	
	Enabled	1	Enable RR[i] register	

6.27.4.9 CONFIG

Address offset: 0x50C Configuration register

Bit n	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0		
ID				C A	
Rese	t 0x0000001		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID				Description	
Α	RW SLEEP			Configure the watchdog to either be paused, or kept	
				running, while the CPU is sleeping	
		Pause	0	Pause watchdog while the CPU is sleeping	
		Run	1	Keep the watchdog running while the CPU is sleeping	
С	RW HALT			Configure the watchdog to either be paused, or kept	
				running, while the CPU is halted by the debugger	
		Pause	0	Pause watchdog while the CPU is halted by the debugger	
		Run	1 Keep the watchdog running while the CPU is halted by the		
				debugger	

6.27.4.10 RR[n] (n=0..7)

Address offset: $0x600 + (n \times 0x4)$

Reload request n

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x00000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A W RR		Reload request register
Reload		0x6E524635 Value to request a reload of the watchdog timer

6.27.5 Electrical specification

6.27.5.1 Watchdog Timer Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{WDT}	Time out interval	458 μs		36 h	



7 Hardware and layout

7.1 Pin assignments

The pin assignment figures and tables describe the pinouts for the product variants of the chip.

The nRF52820 device provides flexibility regarding GPIO pin routing and configuration. However, some pins have limitations or recommendations for pin configurations and uses.

7.1.1 QFN40 pin assignments

The pin assignment figure and table describe the assignments for this variant of the chip.

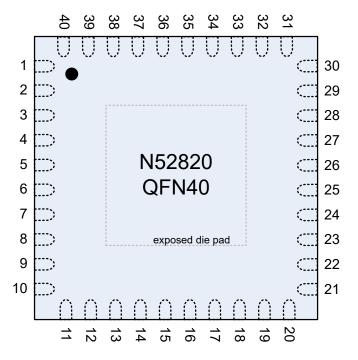


Figure 149: QFN40 pin assignments, top view



Pin	Name	Function	Description	Recommended usage
Left side of	the chip			
1	DEC1	Power	1.1 V Digital supply decoupling	
2	P0.00	Digital I/O	General purpose I/O	
	XL1	Analogianut	Connection for 22 769 kHz existed	
3	P0.01	Analog input	Connection for 32.768 kHz crystal	
3	P0.01	Digital I/O	General purpose I/O	
	XL2	Analog input	Connection for 32.768 kHz crystal	
4	P0.04	Digital I/O	General purpose I/O	
	AIN2	Analog input	Analog input	
5	P0.05	Digital I/O	General purpose I/O	
	AIN3	Analog input	Analog input	
6	P0.06	Digital I/O	General purpose I/O	
7	P0.07	Digital I/O	General purpose I/O	
8	VDD	Power	Power supply	
9	VDDH	Power	High voltage power supply	
10	VBUS	Power	5 V input for USB 3.3 V regulator	
Bottom sid	e of the chip			
11	DECUSB	Power	USB 3.3 V regulator supply decoupling	
12	D-	USB	USB D-	
13	D+	USB	USB D+	
14	P0.14	Digital I/O	General purpose I/O	
15	P0.15	Digital I/O	General purpose I/O	
16	P0.18	Digital I/O	General purpose I/O	
	nRESET		Configurable as pin RESET	
17	P0.20	Digital I/O	General purpose I/O	
18	VDD	Power	Power supply	
19	SWDIO	Debug	Serial wire debug I/O for debug and programming	
20	SWDCLK	Debug	Serial wire debug clock input for debug and	
			programming	
Right side o	of the chip			
21	DEC5	Power	1.3 V regulator supply decoupling for build codes	
	Not connected		Cxx and earlier.	
			Not connected for build codes Dxx and later.	
22	P0.16	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only
23	P0.17	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only
24	ANT	RF	Single-ended radio antenna connection	See Reference circuitry on page
				423 for guidelines on how to
				ensure good RF performance
25	VSS_PA	Power	Ground (radio supply)	
26	DEC6	Power	1.3 V regulator supply decoupling	Must be connected to DEC4 (pin
				38)
27	DEC3	Power	Power supply, decoupling	
28	XC1	Analog input	Connection for 32 MHz crystal	
29	XC2	Analog input	Connection for 32 MHz crystal	
30	VDD	Power	Power supply	
Top side of	-			
31	P0.08	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
22	DC 22	D: 11 11/0	0 1 1/2	only
32	P0.29	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only





Pin	Name	Function	Description	Recommended usage
33	P0.30	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only
34	P0.28	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only
35	P0.03	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
	AIN1	Analog input	Analog input	only
36	P0.02	Digital I/O	General purpose I/O	
	AIN0	Analog input	Analog input	
37	VSS	Power	Ground	
38	DEC4	Power	1.3 V regulator supply decoupling	Must be connected to DEC6 (pin
				26)
39	DCC	Power	DC/DC converter output	
40	VDD	Power	Power supply	
Backside of t	he the chip			
Die pad	VSS	Power	Ground pad	Exposed die pad must be
				connected to ground (VSS) for
				proper device operation

Table 117: QFN40 pin assignments

For more information on standard drive, see GPIO-General purpose input/output on page 130. Low frequency I/O is a signal with a frequency up to 10 kHz.

7.1.2 WLCSP ball assignments

The ball assignment figure and table describe the assignments for this variant of the chip.

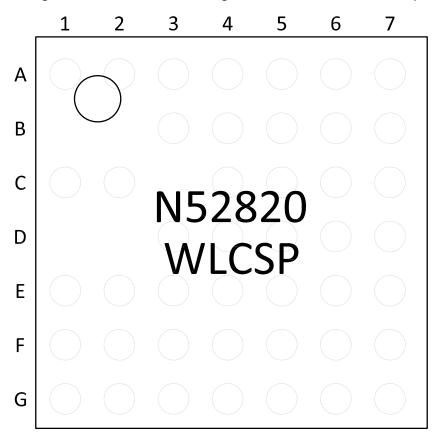


Figure 150: WLCSP ball assignments, top view



Pin	Name	Function	Description	Recommended usage
A1	XC1	Analog input	Connection for 32 MHz crystal	
A2	XC2	Analog input	Connection for 32 MHz crystal	
A3	VDD	Power	Power supply	
A4	VSS	Power	Ground	
A5	DEC4	Power	1.3 V regulator supply decoupling	Must be connected to DEC6 (ball C2)
A6	DCC	Power	DC/DC converter output	
A7	DEC1	Power	1.1 V Digital supply decoupling	
В3	P0.08	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
B4	P0.30	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
B5	P0.03	Digital I/O	General purpose I/O pin	Standard drive, low frequency I/O
	AIN1	Analog input	Analog input	only
В6	P0.02	Digital I/O	General purpose I/O pin	
	AIN0	Analog input	Analog input	
В7	VDD	Power	Power supply	
C1	VSS_PA	Power	Ground (radio supply)	
C2	DEC6	Power	1.3 V regulator supply decoupling	Must be connected to DEC4 (ball
				A5)
C4	P0.29	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
C5	P0.28	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
C6	P0.04	Digital I/O	General purpose I/O pin	
	AIN2	Analog input	Analog input	
C7	P0.00	Digital I/O	General purpose I/O pin	
	XL1	Analog input	Connection for 32.768 kHz crystal	
D3	VSS	Power	Ground	
D4	VSS	Power	Ground	
D5	VSS	Power	Ground	
D6	P0.05	Digital I/O	General purpose I/O pin	
	AIN3	Analog input	Analog input	
D7	P0.01	Digital I/O	General purpose I/O pin	
	XL2	Analog input	Connection for 32.768 kHz crystal	
E1	ANT	RF	Single-ended radio antenna connection	See Reference circuitry on page 423 for guidelines on how to ensure good RF performance
E2	P0.17	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
E3	P0.16	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only
E4	VSS	Power	Ground	
E5	VSS	Power	Ground	
E6	P0.06	Digital I/O	General purpose I/O	
E7	VDD	Power	Power supply	
F1	DEC5	Power	1.3 V regulator supply decoupling for build co	des
	Not connecte	d	Cxx and earlier.	
			Not connected for build codes Dxx and later.	
F2	P0.20	Digital I/O	General purpose I/O	Standard drive, low frequency I/O only





Pin	Name	Function	Description	Recommended usage
F3	P0.15	Digital I/O	General purpose I/O	Standard drive, low frequency I/O
				only
F4	P0.14	Digital I/O	General purpose I/O	
F5	VSS	Power	Ground	
F6	P0.07	Digital I/O	General purpose I/O	
F7	VDDH	Power	High voltage power supply	
G1	SWDIO	Debug	Serial wire debug I/O for debug and programming	
G2	SWDCLK	Debug	Serial wire debug clock input for debug and	
			programming	
G3	P0.18	Digital I/O	General purpose I/O	
	nRESET		Configurable as pin RESET	
G4	D-	USB	USB D-	
G5	D+	USB	USB D+	
G6	DECUSB	Power	USB 3.3 V regulator supply decoupling	
G7	VBUS	Power	5 V input for USB 3.3 V regulator	

Table 118: WLCSP ball assignments

For more information on standard drive, see GPIO — General purpose input/output on page 130. Low frequency I/O is a signal with a frequency up to 10 kHz.

7.2 Mechanical specifications

The mechanical specifications for the packages show the dimensions in millimeters.

7.2.1 QFN40 5 x 5 mm package

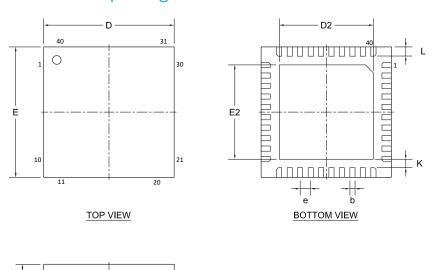


Figure 151: QFN40 5 x 5 mm package



4463_156 v1.4 422

SIDE VIEW

	Α	A1	А3	b	D, E	D2, E2	е	K	L
Min.	0.80	0.00		0.15	4.90	3.50		0.20	0.30
Nom.	0.85	0.035	0.203	0.20	5.00	3.60	0.40		0.35
Max.	0.90	0.05		0.25	5.10	3.70			0.40

Table 119: QFN40 dimensions in millimeters

7.2.2 WLCSP 2.531 x 2.531 mm package

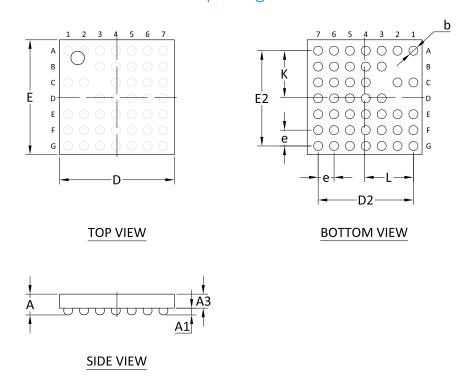


Figure 152: WLCSP 2.531 x 2.531 mm package

	Α	A1	А3	b	D	E	D2	E2	K	L	е
Min.	0.468	0.148	0.309	0.184							
Nom.	0.491		0.327		2.531	2.531	2.100	2.100	1.025	1.075	0.350
Max.	0.514	0.180	0.345	0.244							

Table 120: WLCSP dimensions in millimeters

7.3 Reference circuitry

To ensure good RF performance when designing PCBs, it is highly recommended to use the PCB layouts and component values provided by Nordic Semiconductor.

Documentation for the different package reference circuits, including Altium Designer files, PCB layout files, and PCB production files can be downloaded from the product page for the nRF52820 on www.nordicsemi.com.

In this section there are reference circuits for QDAA QFN40 package, and CFAA WLCSP, showing the components and component values to support on-chip features in a design.

NORDIC SEMICONDUCTOR

Note: This is not a complete list of configurations, but all required circuitry is shown for further configurations.

Some general guidance is summarized here:

- When supplying power from a USB source only, VBUS must be connected to VDDH if USB is to be used.
- Components required for DC/DC function are only needed if DC/DC mode is enabled for that regulator.
- USB can be used in any configuration as long as VBUS is supplied by the USB host.
- The schematics include an optional series resistor on the USB supply for improved immunity to transient overvoltage during VBUS connection. Using the series resistor is recommended for new designs.

Circuit configurations for QDAA QFN40

Config no. Supply configuration			Features that can be enabled for each configuration example		
	VDDH	VDD	DCDCEN1	USB	
Config. 1	USB (VDDH = VBUS)	N/A	No	Yes	
Config. 2	N/A	Battery/Ext. regulator	Yes	Yes	
Config. 3	N/A	Battery/Ext. regulator	No	Yes	
Config. 4	N/A	Battery/Ext. regulator	No	No	

Table 121: Circuit configurations

Circuit configurations for CFAA WLCSP

Config no. Supply configuration			Features that can be enabled for each configuration example		
	VDDH	VDD	DCDCEN1	USB	
Config. 1	USB (VDDH = VBUS)	N/A	No	Yes	
Config. 2	N/A	Battery/Ext. regulator	Yes	Yes	
Config. 3	N/A	Battery/Ext. regulator	No	Yes	
Config. 4	N/A	Battery/Ext. regulator	No	No	

Table 122: Circuit configurations

7.3.1 Circuit configuration no. 1 for QDAA QFN40

This section contains a configuration summary, a schematic, and bill of materials table for QDAA QFN40 circuit configuration number 1.

Config no.	Supply configuration	Enabled features		
	VDDH	VDD	DCDCEN1	USB
Config. 1	USB (VDDH = VBUS)	N/A	No	Yes

Table 123: Configuration summary for circuit configuration no. 1



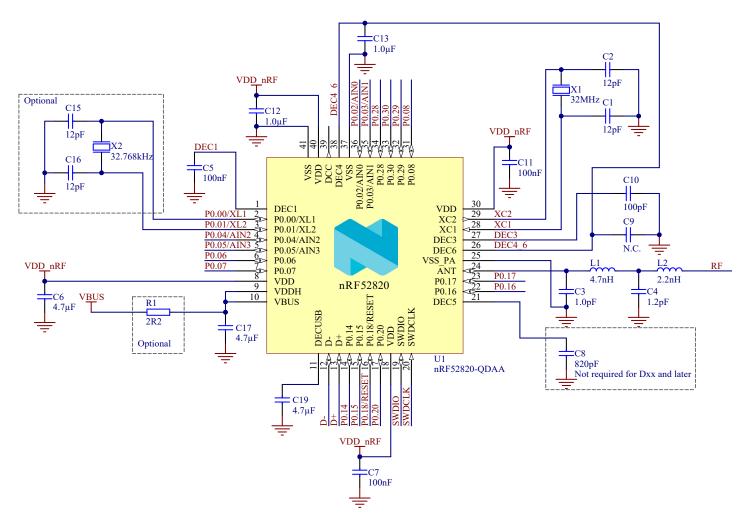


Figure 153: Circuit configuration no. 1 schematic for QDAA QFN40

Note: For PCB reference layouts, see the product page for the nRF52820 on www.nordicsemi.com.



Designator	Value	Description	Footprint
C1, C2, C15, C16	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4	1.2 pF	Capacitor, NPO, ±5%	0201
C5, C7, C11	100 nF	Capacitor, X7S, ±10%	0201
C6, C19	4.7 μF	Capacitor, X7R, ±10%	0603
C8	820 pF	Capacitor, X7R, ±10%	0201
		Not required for Dxx and later	
C9	N.C.	Not mounted	0201
C10	100 pF	Capacitor, NPO, ±5%	0201
C12, C13	1.0 μF	Capacitor, X7S, ±10%	0402
C17	4.7 μF	Capacitor, X7S, ±10%	0603
L1	4.7 nH	High frequency chip inductor, ±5%	0201
L2	2.2 nH	High frequency chip inductor, ±5%	0201
R1	2R2	Resistor ±1%, 0.05 W	0201
U1	nRF52820- QDAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	QFN-40
X1	32 MHz	Crystal SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	Crystal SMD 2012, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 124: Bill of material for circuit configuration no. 1

7.3.2 Circuit configuration no. 2 for QDAA QFN40

This section contains a configuration summary, a schematic, and bill of materials table for QDAA QFN40 circuit configuration number 2.

Config no.	Config no. Supply configuration			res
	VDDH	VDD	DCDCEN1	USB
Config. 2	N/A	Battery/Ext. regulator	Yes	Yes

Table 125: Configuration summary for circuit configuration no. 2



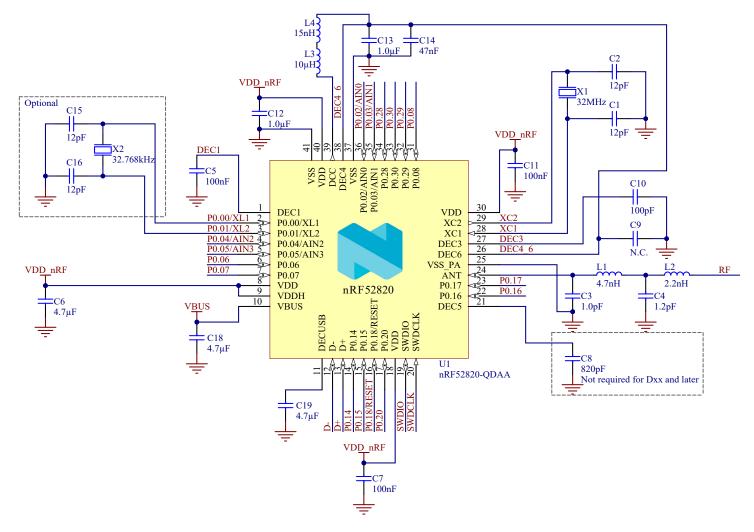


Figure 154: Circuit configuration no. 2 schematic for QDAA QFN40

Note: For PCB reference layouts, see the product page for the nRF52820 on www.nordicsemi.com.



Designator	Value	Description	Footprint
C1, C2, C15, C16	12 pF	Capacitor, NPO, ±2%	0201
С3	1.0 pF	Capacitor, NPO, ±5%	0201
C4	1.2 pF	Capacitor, NPO, ±5%	0201
C5, C7, C11	100 nF	Capacitor, X7S, ±10%	0201
C6, C19	4.7 μF	Capacitor, X7R, ±10%	0603
C8	820 pF	Capacitor, X7R, ±10%	0201
		Not required for Dxx and later	
C9	N.C.	Not mounted	0201
C10	100 pF	Capacitor, NPO, ±5%	0201
C12, C13	1.0 μF	Capacitor, X7S, ±10%	0402
C14	47 nF	Capacitor, X7S, ±10%	0201
C18	4.7 μF	Capacitor, X7S, ±10%	0603
L1	4.7 nH	High frequency chip inductor, ±5%	0201
L2	2.2 nH	High frequency chip inductor, ±5%	0201
L3	10 μΗ	Chip inductor, IDC,min = 50 mA, ±20%	0603
L4	15 nH	High frequency chip inductor, ±10%	0402
U1	nRF52820- QDAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	QFN-40
X1	32 MHz	Crystal SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	Crystal SMD 2012, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 126: Bill of material for circuit configuration no. 2

7.3.3 Circuit configuration no. 3 for QDAA QFN40

This section contains a configuration summary, a schematic, and bill of materials table for QDAA QFN40 circuit configuration number 3.

Config no.	Supply configuration	Enabled featu	res	
	VDDH	VDD	DCDCEN1	USB
Config. 3	N/A	Battery/Ext. regulator	No	Yes

Table 127: Configuration summary for circuit configuration no. 3



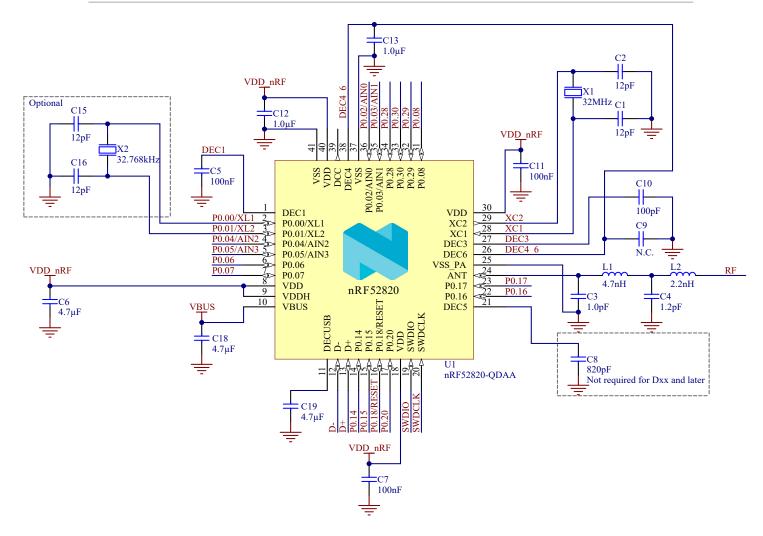


Figure 155: Circuit configuration no. 3 schematic for QDAA QFN40

Note: For PCB reference layouts, see the product page for the nRF52820 on www.nordicsemi.com.



Designator	Value	Description	Footprint
C1, C2, C15, C16	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4	1.2 pF	Capacitor, NPO, ±5%	0201
C5, C7, C11	100 nF	Capacitor, X7S, ±10%	0201
C6, C19	4.7 μF	Capacitor, X7R, ±10%	0603
C8	820 pF	Capacitor, X7R, ±10%	0201
		Not required for Dxx and later	
C9	N.C.	Not mounted	0201
C10	100 pF	Capacitor, NPO, ±5%	0201
C12, C13	1.0 μF	Capacitor, X7S, ±10%	0402
C18	4.7 μF	Capacitor, X7S, ±10%	0603
L1	4.7 nH	High frequency chip inductor, ±5%	0201
L2	2.2 nH	High frequency chip inductor, ±5%	0201
U1	nRF52820- QDAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	QFN-40
X1	32 MHz	Crystal SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	Crystal SMD 2012, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 128: Bill of material for circuit configuration no. 3

7.3.4 Circuit configuration no. 4 for QDAA QFN40

This section contains a configuration summary, a schematic, and bill of materials table for QDAA QFN40 circuit configuration number 4.

Config no.	. Supply configuration		Enabled features	
	VDDH	VDD	DCDCEN1	USB
Config. 4	N/A	Battery/Ext. regulator	No	No

Table 129: Configuration summary for circuit configuration no. 4



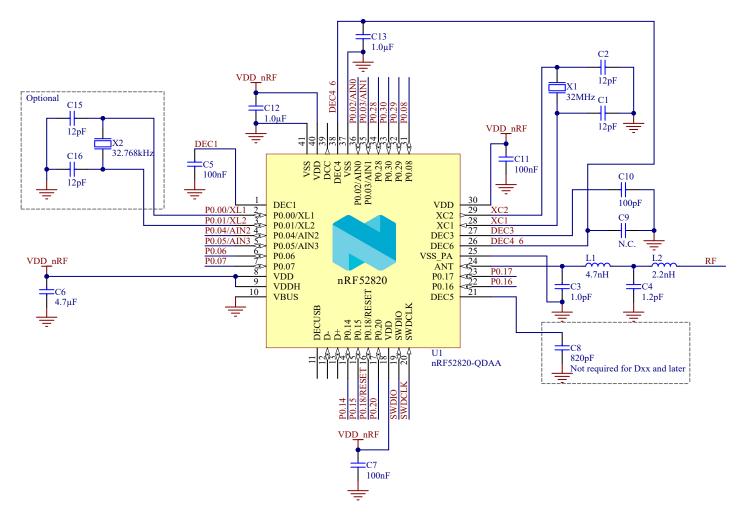


Figure 156: Circuit configuration no. 4 schematic for QDAA QFN40

Note: For PCB reference layouts, see the product page for the nRF52820 on www.nordicsemi.com.



Designator	Value	Description	Footprint
C1, C2, C15, C16	12 pF	Capacitor, NPO, ±2%	0201
С3	1.0 pF	Capacitor, NPO, ±5%	0201
C4	1.2 pF	Capacitor, NPO, ±5%	0201
C5, C7, C11	100 nF	Capacitor, X7S, ±10%	0201
C6	4.7 μF	Capacitor, X7R, ±10%	0603
C8	820 pF	Capacitor, X7R, ±10%	0201
		Not required for Dxx and later	
С9	N.C.	Not mounted	0201
C10	100 pF	Capacitor, NPO, ±5%	0201
C12, C13	1.0 μF	Capacitor, X7S, ±10%	0402
L1	4.7 nH	High frequency chip inductor, ±5%	0201
L2	2.2 nH	High frequency chip inductor, ±5%	0201
U1	nRF52820- QDAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	QFN-40
X1	32 MHz	Crystal SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	Crystal SMD 2012, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 130: Bill of material for circuit configuration no. 4

7.3.5 Circuit configuration no. 1 for CFAA WLCSP

This section contains a configuration summary, a schematic, and bill of materials table for CFAA WLCSP circuit configuration number 1.

Config no.	nfig no. Supply configuration		Enabled features	
	VDDH	VDD	DCDCEN1	USB
Config. 1	USB (VDDH = VBUS)	N/A	No	Yes

Table 131: Configuration summary for circuit configuration no. 1



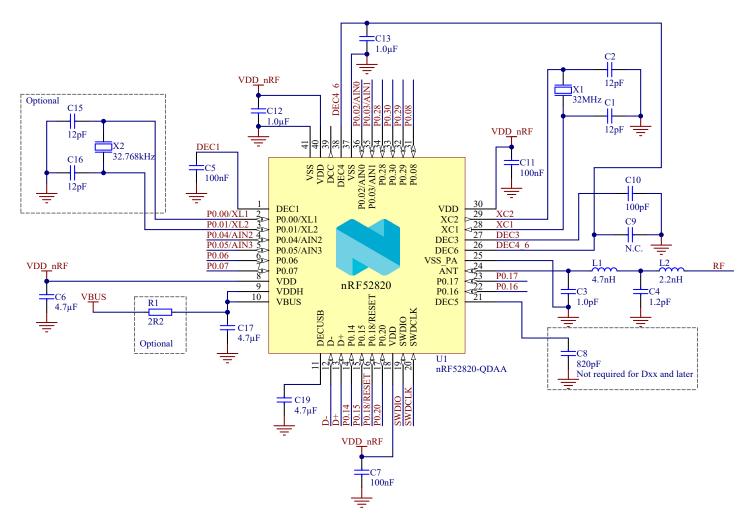


Figure 157: Circuit configuration no. 1 schematic for CFAA WLCSP



Designator	Value	Description	Footprint
C1, C2, C11, C12	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4, C7	100 nF	Capacitor, X7S, ±10%	0201
C5, C14	4.7 μF	Capacitor, X7R, ±10%	0603
C6	820 pF	Capacitor, X7R, ±10% Not required for Dxx and later	0201
C8, C9	1.0 μF	Capacitor, X7S, ±10%	0402
C13	4.7 μF	Capacitor, X7S, ±10%	0603
L1	3.9 nH	High frequency chip inductor ±5%	0201
L2	4.7 nH	High frequency chip inductor ±5%	0201
R1	2R2	Resistor, ±1%, 0.05W	0201
U1	nRF52820-CFAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	WLCSP-44
X1	32 MHz	Crystal SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768kHz	Crystal SMD 1610, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_1610

Table 132: Bill of material for circuit configuration no. 1

7.3.6 Circuit configuration no. 2 for CFAA WLCSP

This section contains a configuration summary, a schematic, and bill of materials table for CFAA WLCSP circuit configuration number 2.

Config no.	. Supply configuration		Enabled features	
	VDDH	VDD	DCDCEN1	USB
Config. 2	N/A	Battery/Ext. regulator	Yes	Yes

Table 133: Configuration summary for circuit configuration no. 2



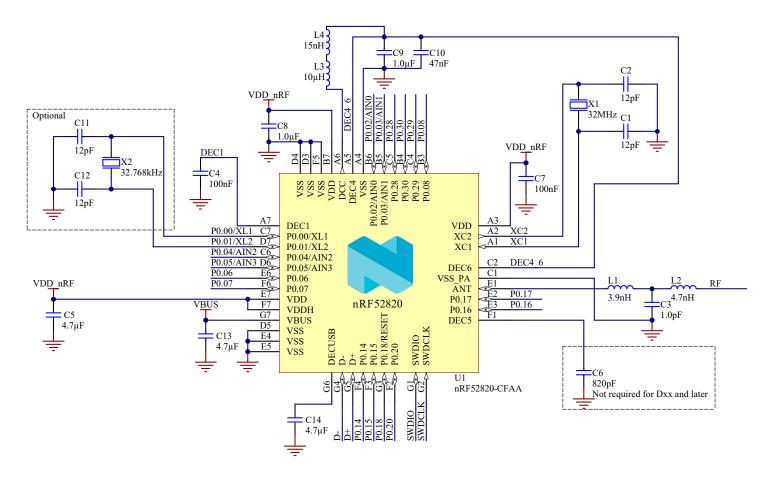


Figure 158: Circuit configuration no. 2 schematic for QFAA WLCSP



Designator	Value	Description	Footprint
C1, C2, C11, C12	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4, C7	100 nF	Capacitor, X7S, ±10%	0201
C5, C14	4.7 μF	Capacitor, X7R, ±10%	0603
C6	820 pF	Capacitor, X7R, ±10%	0201
		Not required for Dxx and later	
C8, C9	1.0 μF	Capacitor, X7S, ±10%	0402
C10	47 nF	Capacitor, X7S, ±10%	0201
C13	4.7 μF	Capacitor, X7S, ±10%	0603
L1	3.9 nH	High frequency chip inductor ±5%	0201
L2	4.7 nH	High frequency chip inductor ±5%	0201
L3	10 μΗ	Chip inductor, IDC,min = 50 mA, ±20%	0603
L4	15 nH	Inductor, 250 mA, ±5%	0201
U1	nRF52820-CFAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	WLCSP-44
X1	32 MHz	XTAL SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	XTAL SMD 1610, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_1610

Table 134: Bill of material for circuit configuration no. 2

7.3.7 Circuit configuration no. 3 for CFAA WLCSP

This section contains a configuration summary, a schematic, and bill of materials table for CFAA WLCSP circuit configuration number 3.

Config no.	Supply configuration	Enabled featur	res	
	VDDH	VDD	DCDCEN1	USB
Config. 3	N/A	Battery/Ext. regulator	No	Yes

Table 135: Configuration summary for circuit configuration no. 3



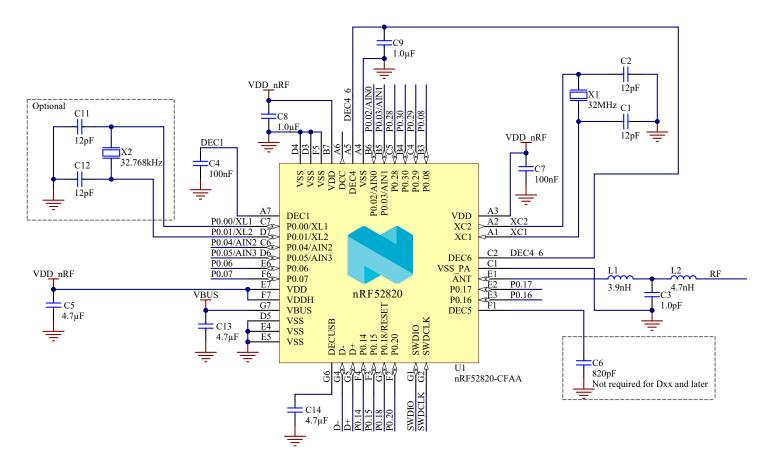


Figure 159: Circuit configuration no. 3 schematic for CFAA WLCSP



Designator	Value	Description	Footprint
C1, C2, C11, C12	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4, C7	100 nF	Capacitor, X7S, ±10%	0201
C5, C14	4.7 μF	Capacitor, X7R, ±10%	0603
C6	820 pF	Capacitor, X7R, ±10% Not required for Dxx and later	0201
C8, C9	1.0 μF	Capacitor, X7S, ±10%	0402
C13	4.7 μF	Capacitor, X7S, ±10%	0603
L1	3.9 nH	High frequency chip inductor ±5%	0201
L2	4.7 nH	High frequency chip inductor ±5%	0201
U1	nRF52820-CFAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	WLCSP-44
X1	32 MHz	XTAL SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	XTAL SMD 1610, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_1610

Table 136: Bill of material for circuit configuration no. 3

7.3.8 Circuit configuration no. 4 for CFAA WLCSP

This section contains a configuration summary, a schematic, and bill of materials table for CFAA WLCSP circuit configuration number 4.

Config no.	Supply configuration		Enabled featu	res
	VDDH	VDD	DCDCEN1	USB
Config. 4	N/A	Battery/Ext. regulator	No	No

Table 137: Configuration summary for circuit configuration no. 4



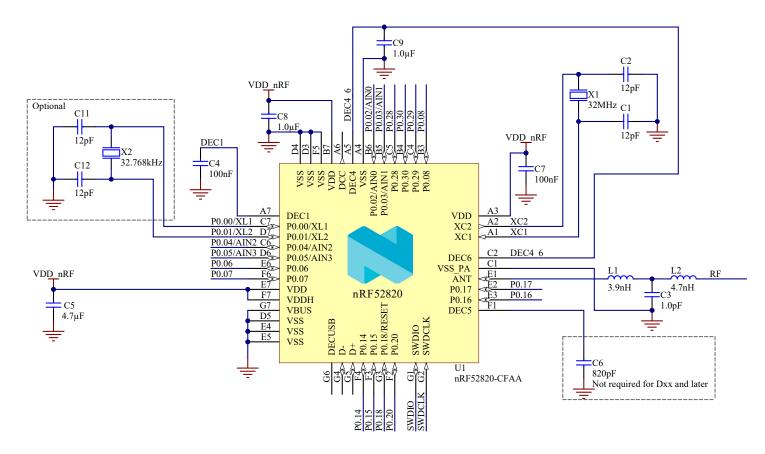


Figure 160: Circuit configuration no. 4 schematic for CFAA WLCSP



Designator	Value	Description	Footprint
C1, C2, C11, C12	12 pF	Capacitor, NPO, ±2%	0201
C3	1.0 pF	Capacitor, NPO, ±5%	0201
C4, C7	100 nF	Capacitor, X7S, ±10%	0201
C5	4.7 μF	Capacitor, X7R, ±10%	0603
C6	820 pF	Capacitor, X7R, ±10% Not required for Dxx and later	0201
C8, C9	1.0 μF	Capacitor, X7S, ±10%	0402
L1	3.9 nH	High frequency chip inductor ±5%	0201
L2	4.7 nH	High frequency chip inductor ±5%	0201
U1	nRF52820-CFAA	Multiprotocol <i>Bluetooth</i> [®] Low Energy, IEEE 802.15.4, ANT, and 2.4 GHz proprietary System on Chip	WLCSP-44
X1	32 MHz	XTAL SMD 1612, 32 MHz, Cl=8 pF, Total Tol: ±40 ppm	XTAL_1612
X2	32.768 kHz	XTAL SMD 1610, 32.768 kHz, Cl=9 pF, Total Tol: ±50 ppm	XTAL_1610

Table 138: Bill of material for circuit configuration no. 4

7.3.9 PCB guidelines

A well designed PCB is necessary to achieve good RF performance. Poor layout can lead to loss in performance or functionality.

A qualified RF layout for the device and its surrounding components, including matching networks, can be downloaded from www.nordicsemi.com.

To ensure optimal performance it is essential that you follow the schematics and layout references closely. Especially in the case of the antenna matching circuitry (components between device pin ANT and the antenna), any changes to the layout can change the behavior, resulting in degradation of RF performance or a need to change component values. All reference circuits are designed for use with a 50 Ω single-ended antenna.

A PCB with a minimum of four layers, including a ground plane, is recommended for optimal performance. On the inner layers, put a keep-out area on the inner layers directly below the antenna matching circuitry (components between device pin ANT and the antenna) to reduce the stray capacitances that influence RF performance.

A matching network is needed between the RF pin ANT and the antenna, to match the antenna impedance (normally $50~\Omega$) to the optimum RF load impedance for the chip. For optimum performance, the impedance for the matching network should be set as described in the recommended package reference circuitry in Reference circuitry on page 423.

The DC supply voltage should be decoupled as close as possible to the VDD pins with high performance RF capacitors. See the schematics for recommended decoupling capacitor values. The supply voltage for the chip should be filtered and routed separately from the supply voltages of any digital circuitry.

Long power supply lines on the PCB should be avoided. All device grounds, VDD connections, and VDD bypass capacitors must be connected as close as possible to the device. For a PCB with a topside RF

NORDIC SEMICONDUCTOR

ground plane, the VSS pins should be connected directly to the ground plane. For a PCB with a bottom ground plane, the best technique is to have via holes as close as possible to the VSS pads. A minimum of one via hole should be used for each VSS pin.

Fast switching digital signals should not be routed close to the crystal or the power supply lines. Capacitive loading of fast switching digital output lines should be minimized in order to avoid radio interference.

7.3.10 PCB layout example

The PCB layout shown in the following figures is a reference layout for the QFN package with internal LDO setup and VBUS supply.

Note: Pay attention to how the capacitor C3 is grounded. It is not directly connected to the ground plane, but grounded via VSS_PA pin 25. This is done to create additional filtering of harmonic components.

For all available reference layouts, see the product page for the nRF52820 on www.nordicsemi.com.

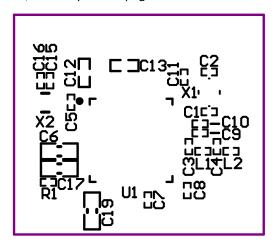


Figure 161: Top silk layer

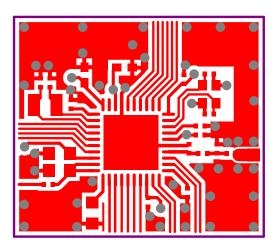


Figure 162: Top layer



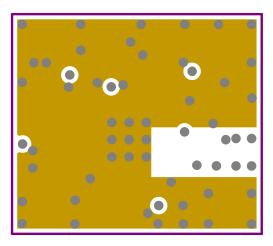


Figure 163: Mid layer 1

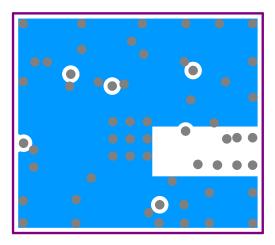


Figure 164: Mid layer 2

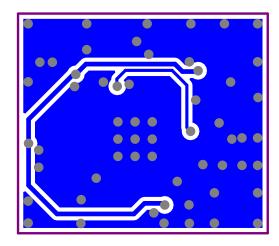


Figure 165: Bottom layer

Note: No components in bottom layer.

7.3.11 PMIC support

The nRF52 Series is comprehensively supported by Nordic Semiconductor's own range of PMICs (Power Management Integrated Circuits). These PMICs are meticulously designed to enhance the performance and efficiency of the nRF52 Series devices. This integration ensures the longest battery life and the highest reliability for the end application. The synergy between the nRF52 Series and the Nordic PMICs highlights



Nordic Semiconductor's commitment to providing a complete and cohesive solution for their customers' needs in wireless technology applications.

7.4 Package thermal characteristics

The thermal characteristics for the available device packages are found in the following table.

Symbol	Package	Тур.	Unit
θ _{JA,QFN40}	QFN40	136.59	°C/W

Table 139: Package thermal characteristics

Values obtained by simulation following the EIA/JESD51-2 for still air condition.



8

Recommended operating conditions

The operating conditions are the physical parameters that the chip can operate within.

Symbol	Parameter	Min.	Nom.	Max.	Units
VDD	VDD supply voltage, independent of DCDC enable	1.7	3.0	3.6	V
VDD_{POR}	VDD supply voltage needed during power-on reset	1.75			V
VDDH	VDDH supply voltage	2.5	3.7	5.5	V
VBUS	VBUS USB supply voltage	4.35	5.0	5.5	V
t_{R_VDD}	Supply rise time (0 V to 1.7 V)			60	ms
t _{R_VDDH}	Supply rise time (0 V to 3.7 V)			100	ms
TA	Operating temperature	-40	25	85	°C
TA _{EXT}	Extended operating temperature	85		105	°C
T _J	Junction temperature			110	°C

Table 140: Recommended operating conditions

Note: The on-chip power-on reset circuitry may not function properly for rise times longer than the specified maximum.

8.1 Extended Operating Temperature

The operating temperature range for the device is defined in Recommended operating conditions on page 444. The range extends from TA minimum to TA_{EXT} maximum.

Some electrical parameters are valid only for the TA operating temperature conditions. When this is the case, an additional parameter for the TA_{EXT} extended operating temperature condition is provided.

Note: When running the device in the extended operating temperature conditions range, the register LFXODEBOUNCE on page 84 must be set to Extended.

To avoid surpassing the maximum die juntion temperature, see Recommended operating conditions on page 444, it is important to minimize current consumption when operating in the extended operating temperature conditions. To achieve this, it is recommended to use the device in Normal Voltage mode with DC/DC enabled. See POWER — Power supply on page 52 for details about main supply modes.

8.2 WLCSP light sensitivity

All WLCSP package variants are sensitive to visible and close-range infrared light. This means that a final product design must shield the chip properly, either by final product encapsulation or by shielding/coating of the WLCSP device.

Some WLCSP package variants have a backside coating, where the marking side of the device is covered with a light absorbing film, while the side edges and the ball side of the device are still exposed and need to be protected. Other WLCSP package variants do not have any such protection.

The WLCSP package variant CFAA has a backside coating.



9 Absolute maximum ratings

Maximum ratings are the extreme limits to which the chip can be exposed for a limited amount of time without permanently damaging it. Exposure to absolute maximum ratings for prolonged periods of time may affect the reliability of the device.³⁵

	Note	Min.	Max.	Unit
Supply voltages				
VDD		-0.3	+3.9	V
VDDH		-0.3	+5.8	V
VBUS		-0.3	+5.8	V
VSS			0	V
I/O pin voltage				
$V_{I/O}$, VDD \leq 3.6 V		-0.3	VDD + 0.3	V
V _{I/O} , VDD >3.6 V		-0.3	3.9	V
Environmental QFN40 package				
Storage temperature		-40	+125	°C
MSL	Moisture Sensitivity Level		2	
ESD HBM	Human Body Model		3	kV
ESD HBM Class	Human Body Model Class		2	
ESD CDM	Charged Device Model		1	kV
Environmental WLCSP 2.531 x 2.531 mm pa	ckage			
Storage temperature		-40	+125	°C
MSL	Moisture Sensitivity Level		1	
ESD HBM	Human Body Model		3	kV
ESD HBM Class	Human Body Model Class		2	
ESD CDM	Charged Device Model		1	kV
Flash memory				
Endurance		10 000		write/erase cycles
Retention at 85 °C		10		years
Retention at 105 °C	Limited to 1000 write/erase cycles	3		years
Retention at 105 °C-85 °C, execution split	Limited to 1000 write/erase cycles	6.7		years

75% execution time at 85 °C or less

Table 141: Absolute maximum ratings





For accelerated life time testing (HTOL, etc) supply voltage should not exceed the recommended operating conditions max value, see Recommended operating conditions on page 444.

10 Ordering information

This chapter contains information on device marking, ordering codes, and container sizes.

10.1 Device marking

The nRF52820 package is marked as shown in the following figure. Only the first two characters of the function variant code are used in the <VV> entry.

N	5	2	8	2	0
<p< td=""><td>P></td><td><v< td=""><td>V></td><td><h></h></td><td><p></p></td></v<></td></p<>	P>	<v< td=""><td>V></td><td><h></h></td><td><p></p></td></v<>	V>	<h></h>	<p></p>
<y< td=""><td>Y></td><td><w< td=""><td>W></td><td><l< td=""><td>L></td></l<></td></w<></td></y<>	Y>	<w< td=""><td>W></td><td><l< td=""><td>L></td></l<></td></w<>	W>	<l< td=""><td>L></td></l<>	L>

Figure 166: Package marking

10.2 Box labels

The following figures show the box labels used for nRF52820.

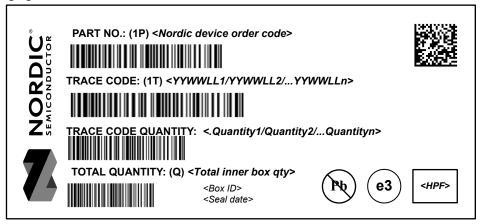


Figure 167: Inner box label



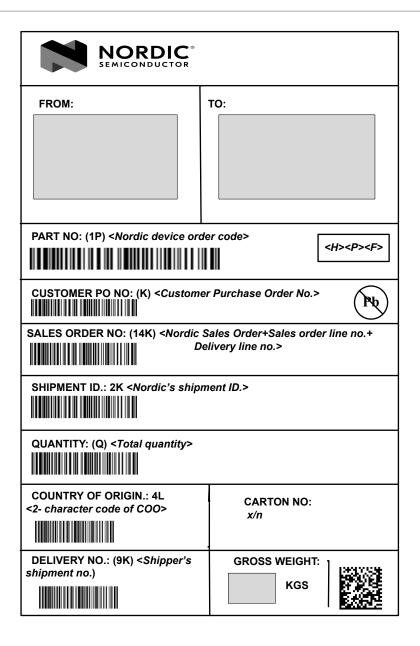


Figure 168: Outer box label

10.3 Order code

The following are the order codes and definitions for nRF52820.




Figure 169: Order code



Abbrevitation	Definition and implemented codes
N52/nRF52	nRF52 Series product
820	Part code
<pp></pp>	Package variant code
<vv></vv>	Function variant code
<h><p><f></f></p></h>	Build code H - Hardware version code P - Production configuration code (production site, etc.) F - Firmware version code (only visible on shipping container label)
<yy><ww><ll></ll></ww></yy>	Tracking code YY - Year code WW - Assembly week number LL - Wafer lot code
<cc></cc>	Container code

Table 142: Abbreviations

10.4 Code ranges and values

Defined here are the nRF52820 code ranges and values.

<pp></pp>	Package	Size (mm)	Pin/Ball count	Pitch (mm)
QD	QFN	5 x 5	40	0.4
CF	WLCSP	2.531 x 2.531	44	0.35

Table 143: Package variant codes

<vv></vv>	Flash (kB)	RAM (kB)	Access port protection
AA	256	32	Controlled by hardware
AA-D	256	32	Controlled by hardware and software

Table 144: Function variant codes

<h></h>	Description
[A Z]	Hardware version/revision identifier (incremental)

Table 145: Hardware version codes



<p></p>	Description
[09]	Production device identifier (incremental)
[A Z]	Engineering device identifier (incremental)

Table 146: Production configuration codes

<f></f>	Description
[A N, P Z]	Version of preprogrammed firmware
[0]	Delivered without preprogrammed firmware

Table 147: Production version codes

<yy></yy>	Description
[0099]	Production year: 2000 to 2099

Table 148: Year codes

<ww></ww>	Description
[152]	Week of production

Table 149: Week codes

<ll></ll>	Description
[AA ZZ]	Wafer production lot identifier

Table 150: Lot codes

<cc></cc>	Description
R7	7" Reel
R	13" Reel

Table 151: Container codes

10.5 Product options

Defined here are the nRF52820 product options.



Order code	MOQ ³⁶	Comment
nRF52820-QDAA-R7	1500	Not recommended for new designs
nRF52820-QDAA-R	4000	Not recommended for new designs
nRF52820-QDAA-D-R7	1500	
nRF52820-QDAA-D-R	4000	
nRF52820-CFAA-D-R7	1500	
nRF52820-CFAA-D-R	7000	

Table 152: nRF52820 order codes

NORDIC SEMICONDUCTOR

³⁶ Minimum Ordering Quantity

11 Legal notices

By using this documentation you agree to our terms and conditions of use. Nordic Semiconductor may change these terms and conditions at any time without notice.

Liability disclaimer

Nordic Semiconductor ASA reserves the right to make changes without further notice to the product to improve reliability, function, or design. Nordic Semiconductor ASA does not assume any liability arising out of the application or use of any product or circuits described herein.

Nordic Semiconductor ASA does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. If there are any discrepancies, ambiguities or conflicts in Nordic Semiconductor's documentation, the Product Specification prevails.

Nordic Semiconductor ASA reserves the right to make corrections, enhancements, and other changes to this document without notice.

Customer represents that, with respect to its applications, it has all the necessary expertise to create and implement safeguards that anticipate dangerous consequences of failures, monitor failures and their consequences, and lessen the likelihood of failures that might cause harm, and to take appropriate remedial actions.

Nordic Semiconductor ASA assumes no liability for applications assistance or the design of customers' products. Customers are solely responsible for the design, validation, and testing of its applications as well as for compliance with all legal, regulatory, and safety-related requirements concerning its applications.

Nordic Semiconductor ASA's products are not designed for use in life-critical medical equipment, support appliances, devices, or systems where malfunction of Nordic Semiconductor ASA's products can reasonably be expected to result in personal injury. Customer may not use any Nordic Semiconductor ASA's products in life-critical medical equipment unless adequate design and operating safeguards by customer's authorized officers have been made. Customer agrees that prior to using or distributing any life-critical medical equipment that include Nordic Semiconductor ASA's products, customer will thoroughly test such systems and the functionality of such products as used in such systems.

Customer will fully indemnify Nordic Semiconductor ASA and its representatives against any damages, costs, losses, and/or liabilities arising out of customer's non-compliance with this section.

RoHS and REACH statement

Refer to www.nordicsemi.com for complete hazardous substance reports, material composition reports, and latest version of Nordic's RoHS and REACH statements.

Trademarks

All trademarks, service marks, trade names, product names, and logos appearing in this documentation are the property of their respective owners.

Copyright notice

© 2023 Nordic Semiconductor ASA. All rights are reserved. Reproduction in whole or in part is prohibited without the prior written permission of the copyright holder.





